

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4102,A,B,C, DISTRIBUTOR PARTS LIST
D,E,-1 & -2

IGS-4102,A,B,C,
D,E,-1 & -2

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	*	1	Drive Shaft & Gov. Assy.
IG-680	1	Lock Spring Ring	IG-1456	2	Weight Assembly
*	1	Thrust Washer	*	1	Weight Spring Set
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY	*	1	Drive Shaft Assembly
IG-514	1	Contact Spring Plunger	*	1	Breaker Plate Assembly
IG-515	1	Contact Spring	IA-131	1	Breaker Arm Spring Clip
IGS-32	1	Rubber Plug	IG-3927A	1	CONDENSER ASSEMBLY
IGH-28	1	Cam Sleeve Felt Wick	IGE-15	1	#6 Plain Washer
*	1	Washer	† IGP-3028	1	Breaker Arm Assembly
IGS-18	2	Bearing Clamp	IGP-30	1	Breaker Arm Spring
IGS-19S	1	Drive Shaft Collar	IGS-59A	1	Lead Assembly
IGS-21†	1	Advance Pointer	IGS-55	1	Terminal
IGS-23	1	Vacuum Chamber Bracket	X-936	1	Terminal
IGS-34	1	Terminal Slot Cover	IGS-89	1	Lead Assembly
IGS-1016	1	ROTOR	IGS-88	2	Terminal
IGS-1020S††	1	Advance Control Arm Assy.	*	1	Breaker Plate Part Assy.
*	1	Cam & Stop Plate - 6 Cyl. R.H.	IGS-1082R	1	Breaker Sub Plate Assy.
*	1	Vacuum Chamber Assembly	† IGS-1086RM1	1	Breaker Point
VC-14	1	Gasket - 1/32" Thick	8X-350	1	#8 Plain Washer
VC-15	1	Plug	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
VC-46	+	Washer - .032" Thick	8X-323	1	#6-32x5/16 Rd- Hd. Screw
VC-46A	+	Washer - .010" Thick	X-1012	4	#6 Lock Washer
VC-46B	+	Washer - .065" Thick	8X-1546	4	#6-32x5/32 Fill. Hd. Screw
*	1	Spring	SW-213	1	Distributor Drive Rivet
IGS-2028	1	Distributor Base Assembly	8X-311	2	#10-32x3/8 Rd. Hd. Screw
IG-579A	2	Absorbent Bronze Brg.	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IG-694	2	Dist. Cap Spring	8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-382	1	1/8 Grease Cup	X-1270	6	#10 Skpf. Washer
X-1448	2	Hinge Pin			1 2 3 4 5

(Issued 7-31-40)

Assembly No.	Thrust Washer	Washer	Cam Assembly	Vacuum Chamber	Plunger Spring	Dr. Shaft & Gov.
IGS-4102,-1	IGB-162	IGK-26	IGS-1022RH	IGT-1023ES	VC-45 (Red)	IGS-2081RB
IGS-4102A,-2	IGB-162	IGK-26	IGS-1022RU	IGS-1023DS	VC-55 (Black)	IGS-2081RC-1
IGS-4102B,-2	IGB-162	IGK-26	IGS-1022RH	IGS-1023DS	VC-55 (Black)	IGS-2081RB
IGS-4102C,-1	IGB-162	IGK-26	IGS-1022RH	IGS-1023HS	VC-73 (Maroon)	IGS-2081RB
IGS-4102D,-1	IGB-162	IGK-26	IGS-1022RH	IGS-1023JS	VC-45 (Red)	IGS-2081RB
IGS-4102E,-2	IGS-104	IGS-99	IGS-1100R	IGS-1023DS	VC-55 (Black)	IGS-2081RD

Assembly No.	Spring Set	Dr. Shaft Assembly	Brkr. Plate Assembly	Brkr. Plate Part Assy.
IGS-4102,-1	IGB-292SS	IGS-1081RB	IGS-3004A	IGS-1004E
IGS-4102A,-2	IG-636HS	IGS-1081RB	IGS-3004	IGS-1004
IGS-4102B,-2	IGB-292SS	IGS-1081RB	IGS-3004	IGS-1004
IGS-4102C,-1	IGB-292SS	IGS-1081RB	IGS-3004A	IGS-1004E
IGS-4102D,-1	IGB-292SS	IGS-1081RB	IGS-3004D	IGS-1004G
IGS-4102E,-2	IG-636SS	IGS-1081RB	IGS-3004	IGS-1004


+ Use as required.
 * See table following parts list for part number applying to assembly wanted.
 † SERVICE BREAKER POINT SET IGP-3028ES.
 † Used with assemblies having the suffix "-1".
 †† Used with assemblies having the suffix "-1" or "-2".

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4102A,B,C,D,E, -1 & -2 DISTRIBUTOR ILLUSTRATION

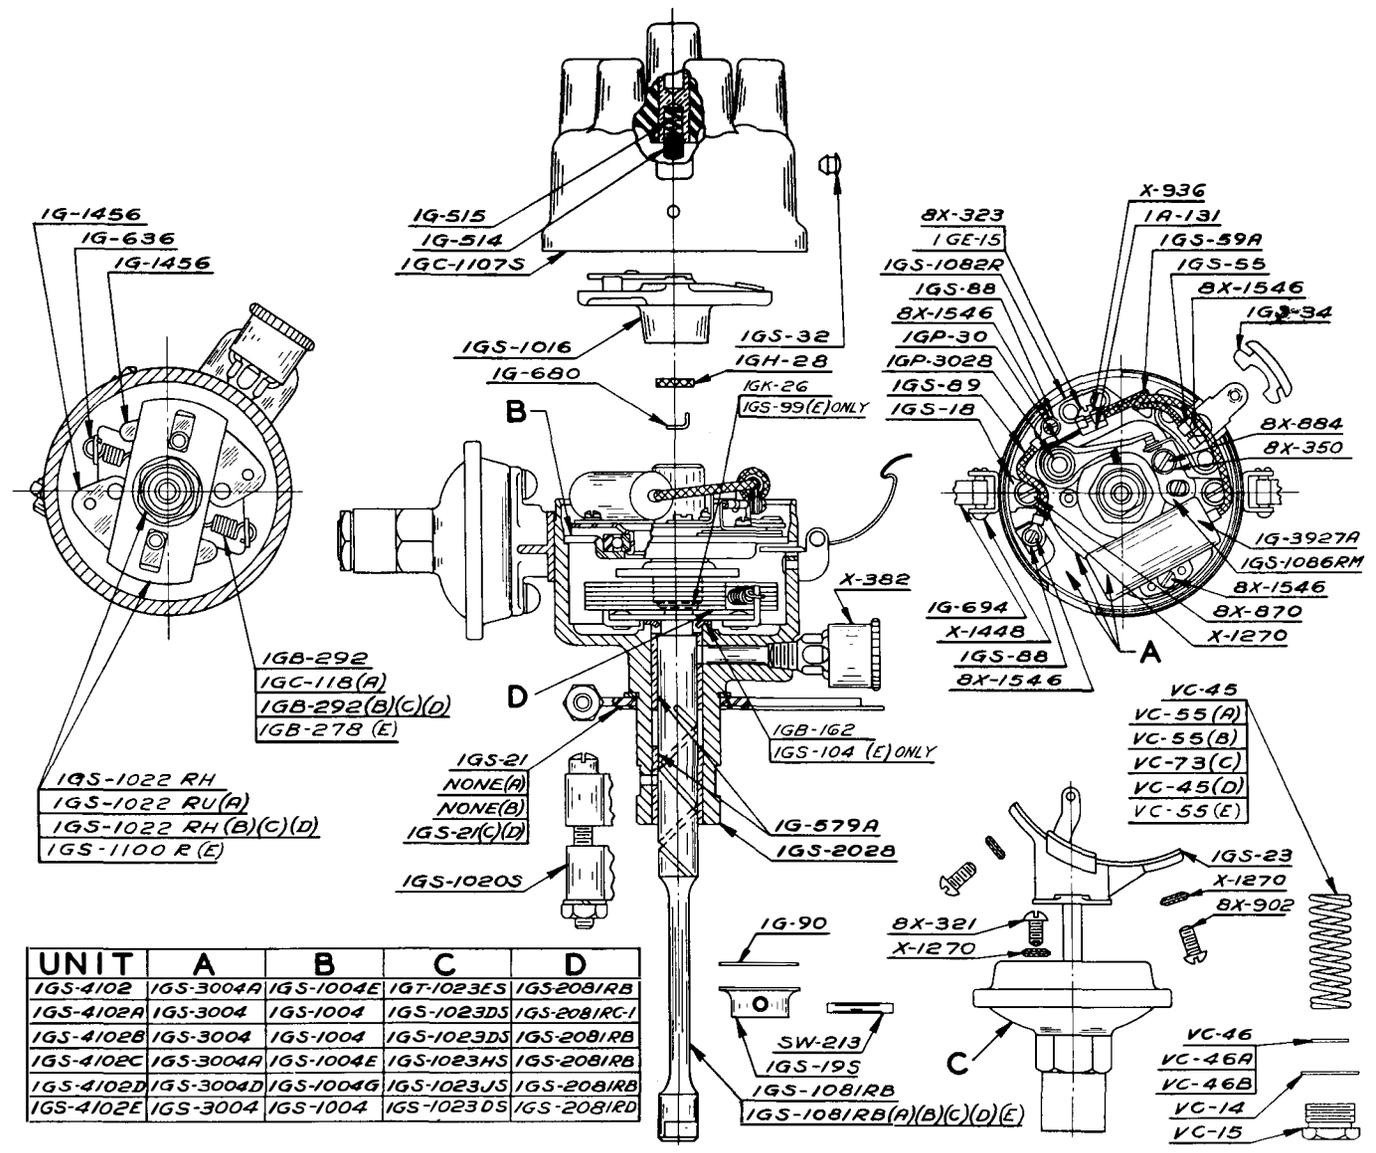

UNIT	A	B	C	D
IGS-4102	IGS-3004A	IGS-1004E	IGT-1023ES	IGS-2081RB
IGS-4102A	IGS-3004	IGS-1004	IGS-1023DS	IGS-2081RC-1
IGS-4102B	IGS-3004	IGS-1004	IGS-1023DS	IGS-2081RB
IGS-4102C	IGS-3004A	IGS-1004E	IGS-1023HS	IGS-2081RB
IGS-4102D	IGS-3004D	IGS-1004G	IGS-1023JS	IGS-2081RB
IGS-4102E	IGS-3004	IGS-1004	IGS-1023DS	IGS-2081RD

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4103,A,B,-1 DISTRIBUTOR PARTS LIST

IGS-4103,A,
B,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGS-3004	1	Breaker Plate Assy.
IG-680	1	Lock Spring Ring			± Identified by 10.
IGB-162	1	Thrust Washer	IA-131	1	Breaker Arm Spring Clip
IGC-1107S	1	DISTRIBUTOR CAP ASSY.	IG-3927A	1	CONDENSER ASSY.
IG-514	1	Contact Spring Plunger	IGP-3028†	1	Breaker Arm Assy.
IG-515	1	Contact Spring	IGP-30	1	Breaker Arm Spring
IGS-32	1	Rubber Plug	IGS-59A	1	Lead Assembly
IGH-28	1	Cam Sleeve Felt Wick	IGS-55	1	Terminal
IGK-26	1	Washer - .020" Thick	X-936	1	Terminal
IGS-18	2	Bearing Clamp	IGS-89	1	Lead Assembly
IGS-19	1	Drive Shaft Collar	IGS-88	2	Terminal
IGS-23	1	Vacuum Chamber Bracket	IGS-1004	1	Brkr. Plate Part Assy.
IGS-34	1	Terminal Slot Cover	IGS-1082R	1	Brkr. Sub Plate Assy.
IGS-1016	1	ROTOR	IGS-1086RM†	1	Breaker Point
IGS-1020S†	1	Advance Control Arm Assy.	8X-350	1	#8 Plain Washer
IG-816C†	1	Thrust Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-135†	1	1/4-20x2 Fill. Hd. Screw	8X-323	1	#6-32x5/16 Rd. Hd. Sc.
8X-146†	1	1/4-20 Hex. Nut	X-1012	5	#6 Lock Washer
12X-199†	1	1/4 Lock Washer	8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
*	1	Cam & Stop Plate - 6 Cyl. - R.H.	SW-213	1	Dist. Drive Rivet
*	1	Vacuum Chamber Assy.	8X-311	2	#10-32x3/8 Rd. Hd. Screw
VC-14	1	Gasket - 1/32" Thick	8X-321	2	#10-32x5/16 Rd. Hd. Screw
VC-15	1	Plug	8X-870	2	#10-32x5/16 Fill. Hd. Screw
VC-46	**	Washer - .032" Thick	X-1270	6	#10 Skpf. Washer
VC-46A	**	Washer - .010" Thick			1 2 3 4 5
VC-46B	**	Washer - .065" Thick			(Issued 5-22-39)
*	1	Spring			
*	1	Drive Shaft & Gov. Assy.			
IG-636	1	Weight Spring			
IG-1456	2	Weight Assy.			
*	1	Weight Spring			
IGS-1025RC	1	Drive Shaft Assy.			
IGS-2028	1	Distributor Base Assy.			
IG-579A	2	Absorbent Bronze Brg.			
IG-694	2	Distributor Cap Spring			
X-382	1	1/8 Grease Cup			
X-1448	2	Hinge Pin			
		1 2 3 4 5			

† Used on assemblies having the suffix "-1".
 ** Use as required.
 * See table following parts list for part number applying to assembly wanted.
 † Service BREAKER POINT SET IGP-3028ES.
 ± See Manual Bulletin IG-11.

Assembly No.	Shaft & Gov. Assy.	Weight Spring	Weight Spr. Set	Cam & Stop Plate	Vacuum Chamber	Spring
IGS-4103	IGS-2025RF	IGB-278	IG-636SS	IGS-1022RG	IGS-1023CS	VC-49 (Blue)
IGS-4103-1	IGS-2025RF	IGB-278	IG-636SE	IGS-1022RG	IGS-1023CS	VC-49 (Blue)
IGS-4103A	IGS-2025RF	IGB-278	IG-636SS	IGS-1022RG	IGS-1023GS	VC-50 (Orange)
IGS-4103A-1	IGS-2025RF	IGB-278	IG-636SE	IGS-1022RG	IGS-1023GS	VC-50 (Orange)
IGS-4103B	IGS-2025RG	IGC-118	IG-636HS	IGS-1022RH	IGS-1023DS	VC-55 (Black)
IGS-4103B-1	IGS-2025RG	IGC-118	IG-636HS	IGS-1022RH	IGS-1023DS	VC-55 (Black)


UNIT	APPLICATION
IGS-4103,-1	Dodge, Plymouth
IGS-4103A,-1	Dodge, Dodge Truck, Plymouth, Fargo Truck
IGS-4103B,-1	Dodge Truck, Fargo Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4103,A,B,-1 DISTRIBUTOR ILLUSTRATION

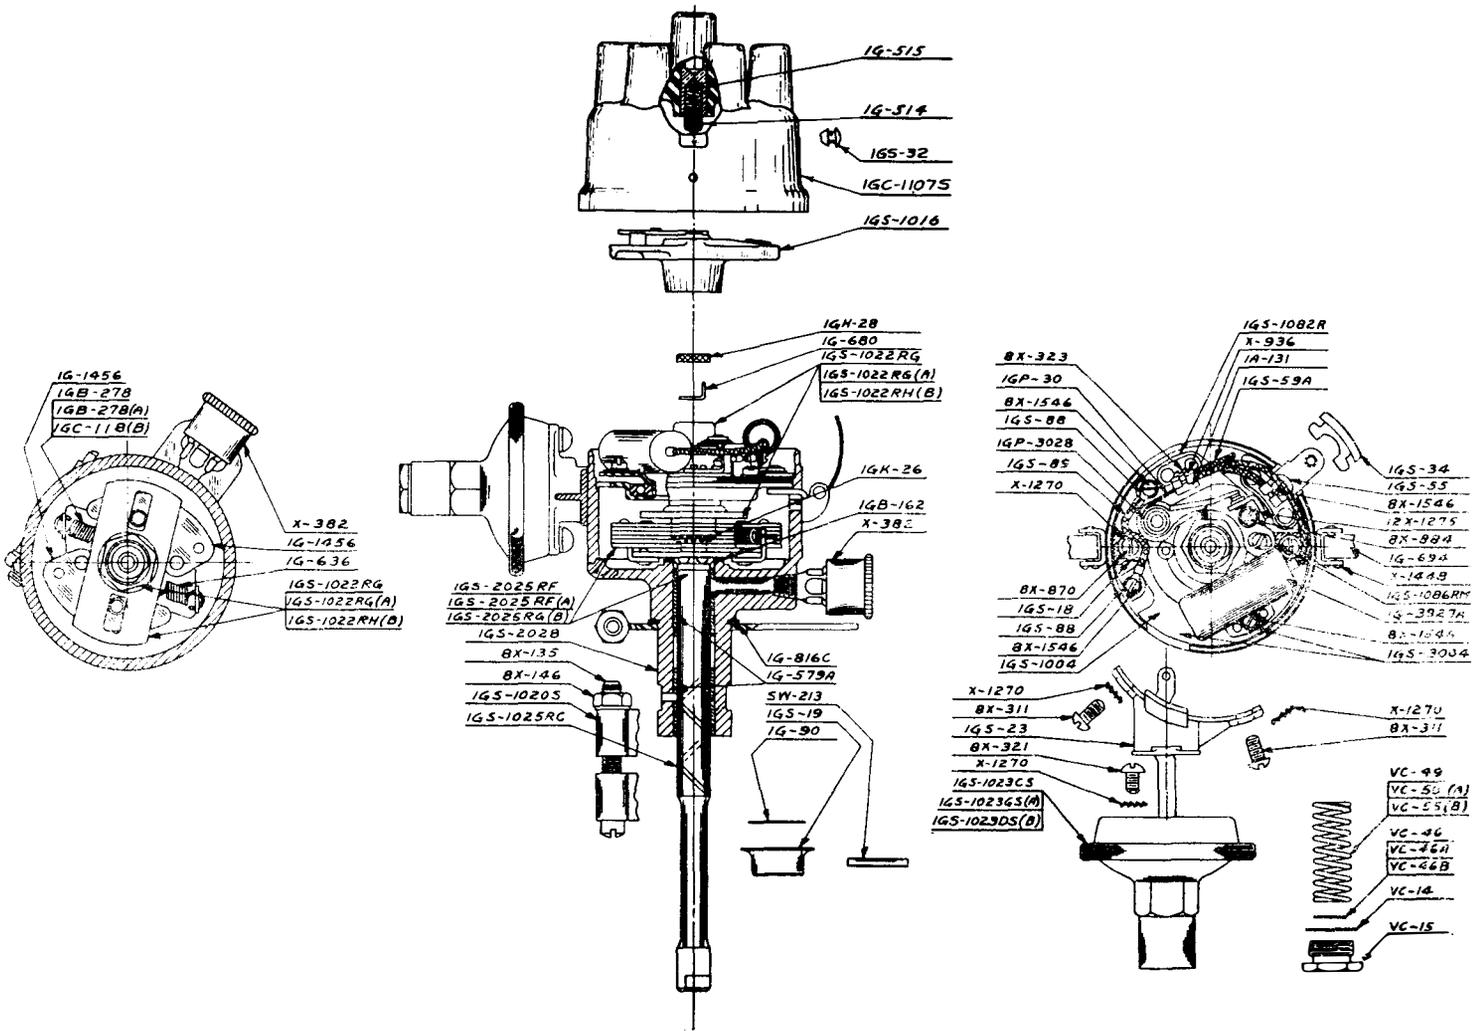

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4104 DISTRIBUTOR PARTS LIST

IGS-4104

Part No.	No. Used	Name of Part	1	2	3	4	5
IG-90	1	Thrust Washer					
IG-94	7	H. T. Wire Terminal					
IG-447	1	Dist. Drive Sleeve					
IG-680	1	Lock Spring Ring					
IGB-162	1	Thrust Washer					
IGB-1271-1	1	Advance Control Arm Assy.					
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY					
IG-514	1	Contact Spring Plunger					
IG-515	1	Contact Spring					
IGS-32	1	Rubber Plug					
IGH-28	1	Cam Sleeve Felt Wick					
IGS-17	1	Lock Spring Ring					
IGS-18	2	Bearing Clamp					
IGS-23	1	Vacuum Chamber Bracket					
IGS-34	1	Terminal Slot Cover					
IGS-99	1	Washer					
IGS-1016	1	ROTOR					
IGS-1023FS	1	Vacuum Chamber Assembly					
VC-14	1	Gasket - 1/32" Thick					
VC-15	1	Plug					
VC-46	*	Washer - .032" Thick					
VC-46A	*	Washer - .010" Thick					
VC-46B	*	Washer - .065" Thick					
VC-73	1	Spring (Maroon)					
IGS-1100RG	1	Cam & Stop Plate - 6 cyl. R.H.					
IGS-2070RA	1	Drive Shaft & Gov. Assy.					
IG-1456	2	Weight Assembly					
IGB-292†	2	Weight Spring					
IGS-1070R	1	Drive Shaft Assembly					
IGS-2091	1	Distributor Base Assembly					
IG-511	1	Name Plate					
IG-579A	2	Absorbent Bronze Brg.					
IG-694	2	Dist. Cap Spring					
X-490	1	Press in - Sleeve Oiler					
X-1201	2	.10x1/4 Tubular Rivet					
X-1448	2	Hinge Pin					
IGS-3092R	1	Breaker Plate Assembly ‡ Identified by 5.5					
IA-131	1	Breaker Arm Spring Clip					
IG-2671F	1	CONDENSER ASSEMBLY					
IGE-15	1	#6 Plain Washer					
IGP-3028‡	1	Breaker Arm Assembly					
IGP-30	1	Breaker Arm Spring					

Part No.	No. Used	Name of Part	1	2	3	4	5
IGS-59A	1	Lead Assembly					
IGS-55	1	Terminal					
X-936	1	Terminal					
IGS-89	1	Lead Assembly					
IGS-88	2	Terminal					
IGS-1004F	1	Breaker Plate Part Assy.					
IGS-1092R	1	Breaker Sub Plate Assy.					
IGS-1086RM‡	1	Breaker Point					
8X-350	1	#8 Plain Washer					
8X-884	1	#8-32x3/16 Fill. Hd. Sc.					
8X-323	1	#6-32x5/16 Rd. Hd. Screw					
X-1012	4	#6 Lock Washer					
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.					
IGT-70	1	Governor Control Spring					
SW-213	1	Distributor Drive Rivet					
X-196	1	#10 Lock Washer					
8X-321	2	#10-32x5/16 Rd. Hd. Screw					
8X-870	2	#10-32x5/16 Fill. Hd. Screw					
8X-872	1	#10-32x1/4 Fill. Hd. Screw					
8X-902	2	#10-32x3/8 Fill. Hd. Screw					
X-1270	6	#10 Skpf. Washer					

(Issued 8-16-40)

‡ Service BREAKER POINT SET IGP-3028ES & Service Weight Spring Set IGB-292S.

± See Manual Bulletin No. IG-11.

* Use as required.

UNIT	APPLICATION
IGS-4104	Nash

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4104X DISTRIBUTOR PARTS LIST

IGS-4104X

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGS-89	1	Lead Assembly
IG-447	1	Dist. Drive Sleeve	IGS-88	2	Terminal
IG-680	1	Lock Spring Ring	IGS-1004F	1	Breaker Plate Part Assy.
IGB-162	1	Thrust Washer	IGS-1092R	1	Breaker Sub Plate Assy.
IGB-1271	1	Hold Down Arm Assy.	IGS-1086RM†	1	Breaker Point
8X-146	1	1/4-20 Hex. Nut	8X-350	1	#8 Plain Washer
X-199	1	1/4 Lock Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.	8X-323	1	#6-32x5/16 Rd. Hd. Sc.
IGC-1123	1	DIST. CAP ASSEMBLY	X-1012	5	#6 Lock Washer
IG-514	1	Contact Spring Plunger	8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IG-515	1	Contact Spring	SW-213	1	Dist. Drive Rivet
IGC-1124	1	DIST. CAP COVER ASSY.	X-196	1	#10 Lock Washer
IGB-230	3	Gasket	8X-311	2	#10-32x3/8 Rd. Hd. Screw
IGE-35	1	Governor Control Spring	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IGH-28	1	Cam Sleeve Felt Wick	8X-870	2	#10-32x5/16 Fill. Hd. Sc.
IGK-26	1	Washer - .020" Thick	8X-872	1	#10-32x1/4 Fill. Hd. Sc.
IGS-17	1	Lock Spring Ring	X-1270	6	#10 Skpf. Washer
IGS-18	2	Bearing Clamp	8X-1340	3	#8-32x3/4 Ctsk. Hd. Screw
IGS-23	1	Vacuum Chamber Bracket			1 2 3 4 5
IGS-34	1	Terminal Slot Cover			
IGS-1016X	1	ROTOR			
IGS-1022RR	1	Cam & Stop Plate - 6 Cyl. R.H.			(Issued 3-16-39)
IGS-1023FS	1	Vacuum Chamber Assy.			
VC-14	1	Gasket - 1/32" Thick			
VC-15	1	Plug			
VC-46	*	Washer - .032" Thick			
VC-46A	*	Washer - .010" Thick			
VC-46B	*	Washer - .065" Thick			
VC-73	1	Spring (Maroon)			
IGS-207ORA	1	Drive Shaft & Gov. Assy.			
IG-1456	2	Weight Assy.			
IGB-292†	2	Weight Spring			
IGS-107OR	1	Drive Shaft Assy.			
IGS-2091	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
IG-694	2	Dist. Cap Spring			
X-490	1	Press In Sleeve Oiler			
X-1201	2	.10x1/4 Tubular Rivet			
X-1448	2	Hinge Pin			
IGS-3092R	1	Breaker Plate Assy.			
IA-131	1	± Identified by 5.5 Breaker Arm Spring Clip			
IG-2671F	1	CONDENSER ASSEMBLY			
IGP-3028†	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
IGS-59A	1	Lead Assembly			
IGS-55	1	Terminal			
X-936	1	Terminal			
		1 2 3 4 5			

* Use as required.

± See Manual Bulletin IG-11.

† SERVICE BREAKER POINT SET IGP-3028ES & Service Weight Spring Set IGB-292S.


UNIT	APPLICATION
IGS-4104X	Nash

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4104X DISTRIBUTOR ILLUSTRATION

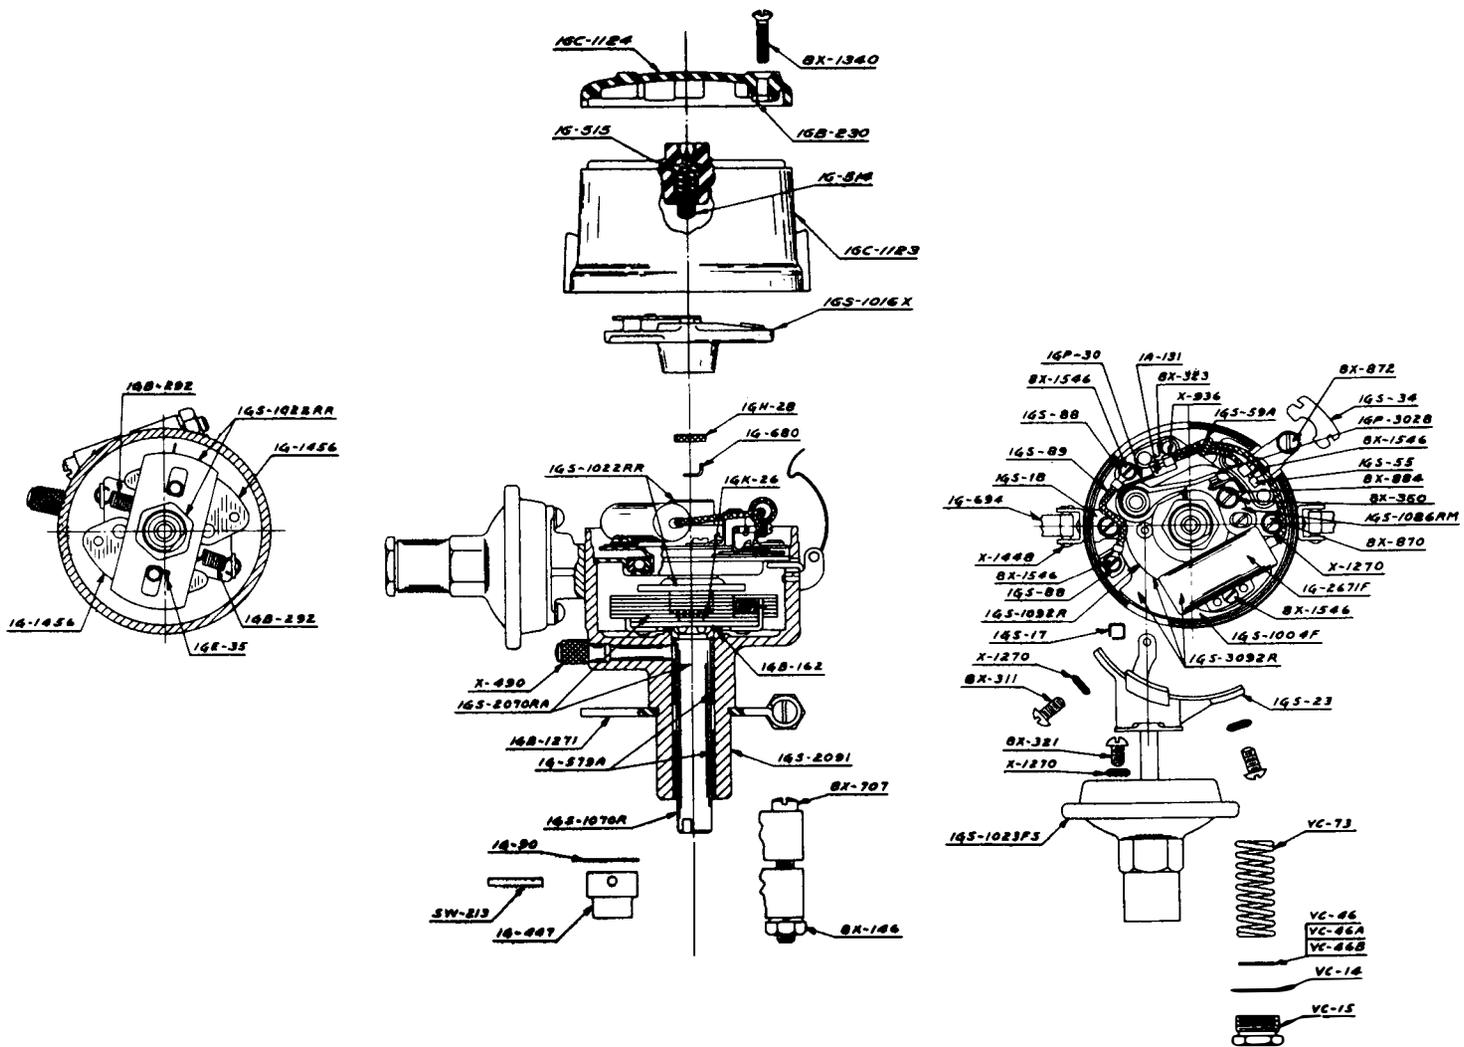

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4107,A, & -1 DISTRIBUTOR PARTS LIST

IGS-4107,A, & -1


Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower	IGT-1023GS	1	Chamber Assy., Vacuum Advance
IG-680	1	Snap Ring, Cam Retaining	VC-14	1	Gasket, Spring Seat Plug
IGC-1107S	1	Cap Assy., Dist.	VC-15	1	Plug, Spring Seat
IG-514	1	Contact, Plunger	VC-46	**	Washer, Tension Adj., .032" thick
IG-515	1	Spring, Contact	VC-46A	**	Washer, Tension Adj., .010" thick
IGS-32	1	Plug, Vent. Hole, Rubber	VC-46B	**	Washer, Tension Adj., .065" thick
IGH-28	1	Wick, Felt, Cam Sleeve	VC-73	1	Spring, Maroon
IGS-18	2	Clamp, Bearing, Sub Plate	SW-213	1	Rivet, Collar, Drive Shaft
IGS-19S	1	Collar, Shaft	8X-321	2	Screw, Rd. hd., #10-32x5/16
IGS-23	1	Bracket, Vacuum Chamber	8X-870	2	Screw, Attaching, Breaker Plate, Fil. hd., #10-32x5/16
IGS-34	1	Cover, Terminal, Slot	8X-902	2	Screw, Fil. hd., #10-32x3/8
IGS-99	1	Spacer, Cam	X-1270	6	Washer, Skpf., #10
IGS-104	1	Washer, Thrust, Drive Shaft, Upper			1 2 3 4 5
IGS-1016B	1	Rotor			(Issued 3-3-44)
IGS-1020St	1	Arm, Advance			
*	1	Cam, & Stop Plate, 6 Cyl., R.H.			
*	1	Shaft & Gov. Assy.			
IG-1456	2	Weight, Governor			
*	1	Spring Set, Gov. Weight			
IGS-1024RD	1	Shaft, Drive			
IGS-2096	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze	Assembly No.	Cam, & Stop Plate, 6 Cyl., R.H.	Shaft & Gov. Assy.
IG-694	2	Spring, Clamp, Cap			Spring Set Gov. Weight
X-382	1	Grease Cup, 1/8			
X-1448	2	Pin, Hinge, Cap Spring	IGS-4107	IGS-1100RA	IGS-2024RH IGB-292SS
IGS-3004B	1	Plate Assy., Breaker	IGS-4107A	IGS-1100RB	IGS-2024RJ IG-636HS
		Identified by 8			
IA-131	1	Clip, Spring, Contact Arm			
IG-3927A	1	Condenser			
IGE-15	1	Washer, Plain, Clamp Screw, #6			
IGP-3028†	1	Arm Assy., Breaker			
IGP-30	1	Spring			
IGS-59A	1	Lead Assy.			
IGS-55	1	Terminal			
X-936	1	Terminal			
IGS-89	1	Lead Assy.			
IGS-88	2	Terminal			
IGS-1004A	1	Plate, Breaker			
IGS-1082R	1	Plate Assy., Sub			
IGS-1086RM†	1	Contact, Breaker			
8X-350	1	Washer, Plain, Contact			
		Lock Sc., #8			
8X-884	1	Screw, Lock, Breaker			
		Contact, Fil. hd., #8-32x3/16			
8X-323	1	Screw, Spring Clamp, Rd. hd., #6-32x5/16			
X-1012	4	Washer, Lock, #6			
8X-1546	4	Screw, Fil. hd., #6-32x5/32			
		1 2 3 4 5			

* See table following parts list for part number applying to assembly wanted.
 ** Use as required.

† Used with assemblies having a suffix "-1".

‡ Contact Set, Service, IGP-3028ES.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

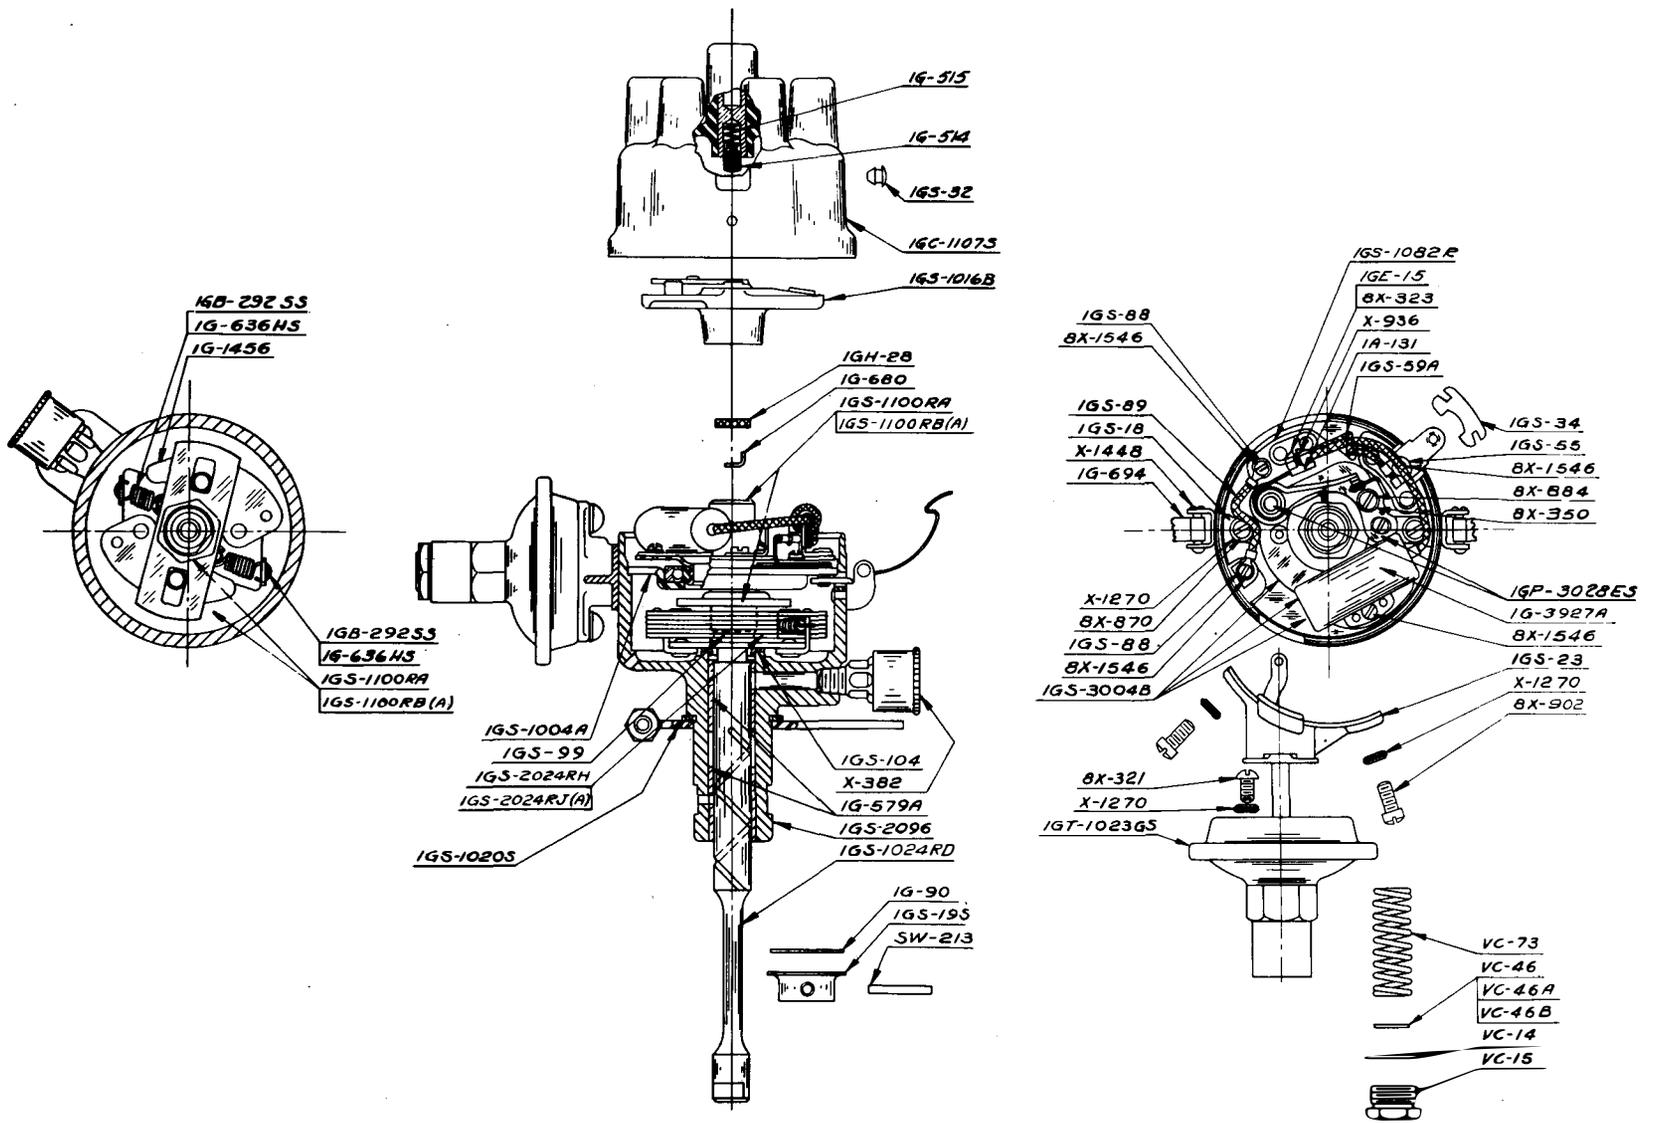

IGS-4107 A & -1 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4108,A,B, DISTRIBUTOR PARTS LIST
C,D,-1

IGS-4108,A,B,
C,D,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	*	1	Drive Shaft & Gov. Assy.
IG-680	1	Lock Spring Ring	IG-636	1	Weight Spring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY	IG-1456	2	Weight Assembly
IG-514	1	Contact Spring Plunger	*	1	Weight Spring
IG-515	1	Contact Spring	IGS-1102R	1	Drive Shaft Assembly
IGS-32	1	Rubber Plug	*	1	Breaker Plate Assembly
IGH-28	1	Cam Sleeve Felt Wick	IA-131	1	Breaker Arm Spring Clip
IGS-18	2	Bearing Clamp	IG-3927A	1	CONDENSER ASSEMBLY
IGS-19	1	Drive Shaft Collar	IGE-15	1	#6 Plain Washer
*	1	Advance Pointer	IGP-3028†	1	Breaker Arm Assembly
IGS-23	1	Vacuum Chamber Bracket	IGP-30	1	Breaker Arm Spring
IGS-34	1	Terminal Slot Cover	IGS-59A	1	Lead Assembly
IGS-99	1	Washer	IGS-55	1	Terminal
IGS-104	1	Thrust Washer	X-936	1	Terminal
IGS-1016	1	ROTOR	IGS-89	1	Lead Assembly
IGS-1020S†	1	Advance Control Arm Assy.	IGS-88	2	Terminal
*	1	Vacuum Chamber Assembly	*	1	Breaker Plate Part Assy.
VC-14	1	Gasket - 1/32" Thick	IGS-1082R	1	Breaker Sub Plate Assy.
VC-15	1	Plug	IGS-1086RM‡	1	Breaker Point
VC-46	+	Washer - .032" Thick	8X-350	1	#8 Plain Washer
VC-46A	+	Washer - .010" Thick	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
VC-46B	+	Washer - .065" Thick	8X-323	1	#6-32x5/16 Rd. Hd. Screw
*	1	Spring	X-1012	4	#6 Lock Washer
*	1	Cam & Stop Plate - 6 cyl. R. H.	8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IGS-2096	1	Distributor Base Assembly	SW-213	1	Distributor Drive Rivet
IG-579A	2	Absorbent Bronze Brg.	8X-311	2	#10-32x3/8 Rd. Hd. Screw
IG-694	2	Dist. Cap Spring	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IGS-16	1	Name Plate	8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-382	1	1/8 Grease Cup	X-1270	6	#10 Skpf. Washer
X-1201	2	.10x1/4 Tubular Rivet			1 2 3 4 5
X-1448	2	Hinge Pin			(Issued 5-27-40)
		1 2 3 4 5			

Assembly No.	Vacuum Chamber	Spring	Cam & Stop Plate	Dr. Shaft & Gov. Assy.	Weight Spring	Spring Set
IGS-4108,-1	IGS-1023HS	VC-73 (Maroon)	IGS-1100RA	IGS-2102R	IGB-292	IGB-292SS
IGS-4108A,-1	IGS-1023JS	VC-45 (Red)	IGS-1100RA	IGS-2102R	IGB-292	IGB-292SS
IGS-4108B,-1	IGS-1023DS	VC-55 (Black)	IGS-1100RA	IGS-2102R	IGB-292	IGB-292SS
IGS-4108C,-1	IGS-1023DS	VC-55 (Black)	IGS-1100R	IGS-2102RB	IGB-278	IG-636SS
IGS-4108D,-1	IGT-1023GS	VC-73 (Maroon)	IGS-1100RB	IGS-2102RC	IGC-118	IG-636HS
	Assembly No.	Breaker Plate Assy.	Identified By ±	Brkr. Plate Part Assembly	Advance Pointer	
	IGS-4108	IGS-3004A	7	IGS-1004E	None	
	IGS-4108-1	IGS-3004A	7	IGS-1004E	IGS-21	
	IGS-4108A	IGS-3004D	11	IGS-1004G	None	
	IGS-4108A-1	IGS-3004D	11	IGS-1004G	None	
	IGS-4108B	IGS-3004	10	IGS-1004	None	
	IGS-4108B-1	IGS-3004	10	IGS-1004	None	
	IGS-4108C	IGS-3004	10	IGS-1004	None	
	IGS-4108C-1	IGS-3004	10	IGS-1004	None	
	IGS-4108D	IGS-3004B	8	IGS-1004A	None	
	IGS-4108D-1	IGS-3004B	8	IGS-1004A	None	

- + Use as required.
- † Used with assemblies having suffix "-1".
- ‡ Service BREAKER POINT SET IGP-3028ES.
- ± See Manual Bulletin IG-11.
- * See table following parts list for part number applying to assembly wanted.


UNIT	APPLICATION
IGS-4108,A,-1	Chrysler, DeSoto, Dodge Truck, Fargo Truck
IGS-4108B,-1	Dodge Truck, Fargo Truck
IGS-4108C,-1	Dodge Truck, Fargo Truck
IGS-4108D,-1	Dodge Truck, Fargo Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4108,A,B,C,D,1 DISTRIBUTOR ILLUSTRATION

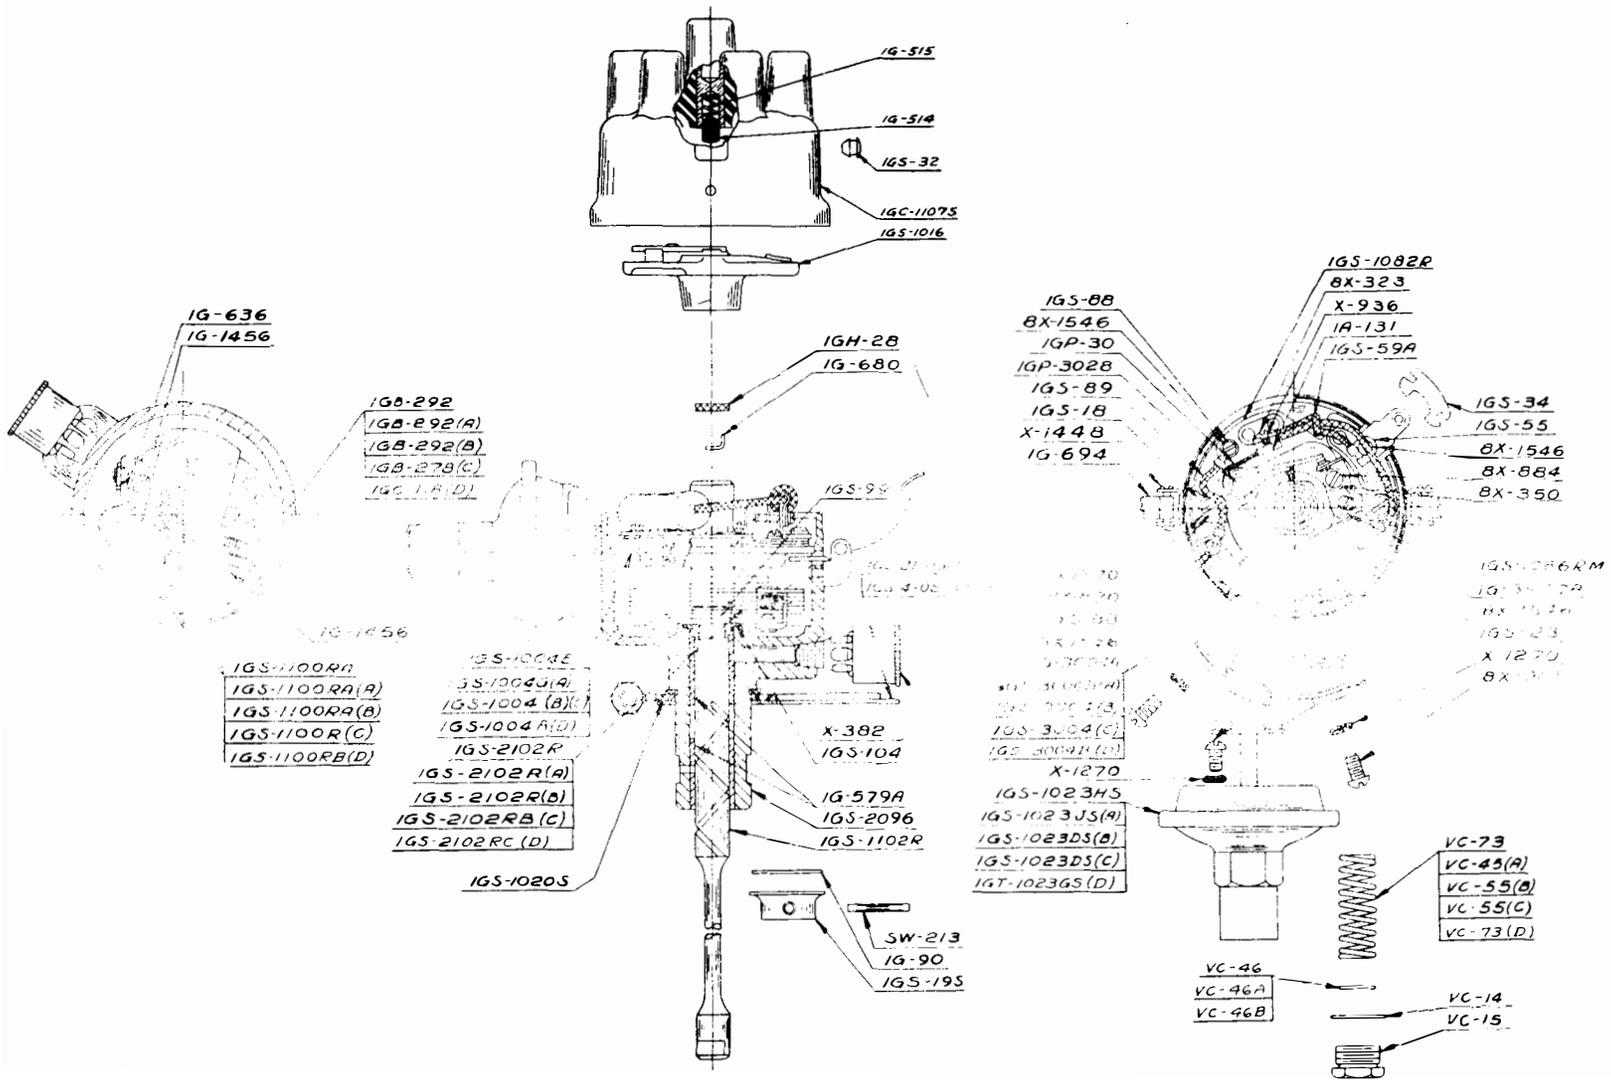

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4109,-1 DISTRIBUTOR PARTS LIST

IGS-4109,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 Thrust Washer	IGS-3004	1	1 Breaker Plate Assy.
IG-680	1	1 Lock Spring Ring			± Identified by 10
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY	IA-131	1	1 Breaker Arm Spring Clip
IG-514	1	1 Contact Spring Plunger	IG-3927A	1	1 CONDENSER ASSEMBLY
IG-515	1	1 Contact Spring	IGP-3028†	1	1 Breaker Arm Assembly
IGS-32	1	1 Rubber Plug	IGP-30	1	1 Breaker Arm Spring
IGH-28	1	1 Cam Sleeve Felt Wick	IGS-59A	1	1 Lead Assembly
IGS-18	2	2 Bearing Clamp	IGS-55	1	1 Terminal
IGS-19	1	1 Drive Shaft Collar	X-936	1	1 Terminal
IGS-23	1	1 Vacuum Chamber Bracket	IGS-89	1	1 Lead Assembly
IGS-34	1	1 Terminal Slot Cover	IGS-88	2	2 Terminal
IGS-99	1	1 Washer	IGS-1004	1	1 Breaker Plate Part Assy.
IGS-104	1	1 Thrust Washer	IGS-1082R	1	1 Breaker Sub Plate Assy.
IGS-1016	1	1 ROTOR	IGS-1086RM†	1	1 Breaker Point
IGS-1020S†	1	1 Advance Control Arm Assy.	8X-350	1	1 #8 Plain Washer
IG-816C†	1	1 Thrust Washer	8X-884	1	1 #8-32x3/16 Fill. Hd. Sc.
8X-135†	1	1 1/4-20x2 Fill. Hd. Sc.	8X-323	1	1 #6-32x5/16 Rd. Hd. Screw
8X-146†	1	1 1/4-20 Hex. Nut	X-1012	5	5 #6 Lock Washer
12K-199†	1	1 1/4 Lock Washer	8X-1546	4	4 #6-32x5/32 Fill. Hd. Sc.
IGS-1023GS	1	1 Vacuum Chamber Assy.	SW-213	1	1 Distributor Drive Rivet
VC-14	2	2 Gasket - 1/32" Thick	8X-311	2	2 #10-32x3/8 Rd. Hd. Screw
VC-15	1	1 Plug	8X-321	2	2 #10-32x5/16 Rd. Hd. Screw
VC-46	*	Washer - .032" Thick	8X-870	2	2 #10-32x5/16 Fill. Hd. Screw
VC-46A	*	Washer - .010" Thick	X-1270	6	6 #10 Skpf. Washer
VC-46B	*	Washer - .065" Thick			1 2 3 4 5
VC-50	1	1 Spring (Orange)			
IGS-1100R	1	1 Cam & Stop Plate - 6 Cyl. R. H.			(Issued 8-3-39)
IGS-2096	1	1 Distributor Base Assembly			
IG-579A	2	2 Absorbent Bronze Brg.			
IG-694	2	2 Dist. Cap Spring			
IGS-16	1	1 Name Plate			
X-382	1	1 1/8 Grease Cup			
X-1201	2	2 .10x1/4 Tubular Rivet			
X-1448	2	2 Hinge Pin			
IGS-2097R	1	1 Drive Shaft & Gov. Assy.			
IG-636†	1	1 Weight Spring			
IG-1456	2	2 Weight Assembly			
IGB-278†	1	1 Weight Spring			
IGS-1097R	1	1 Drive Shaft Assy.			
		1 2 3 4 5			

† Service BREAKER POINT SET IGP-3028ES & Service Weight Spring Set IG-636SS.

* Use as required.

± See Manual Bulletin No. IG-11.

† Used with assemblies having the suffix "-1".


UNIT	APPLICATION
IGS-4109,-1	Dodge, Plymouth, Dodge Truck, Fargo Truck, Plymouth Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4109,-1 DISTRIBUTOR ILLUSTRATION

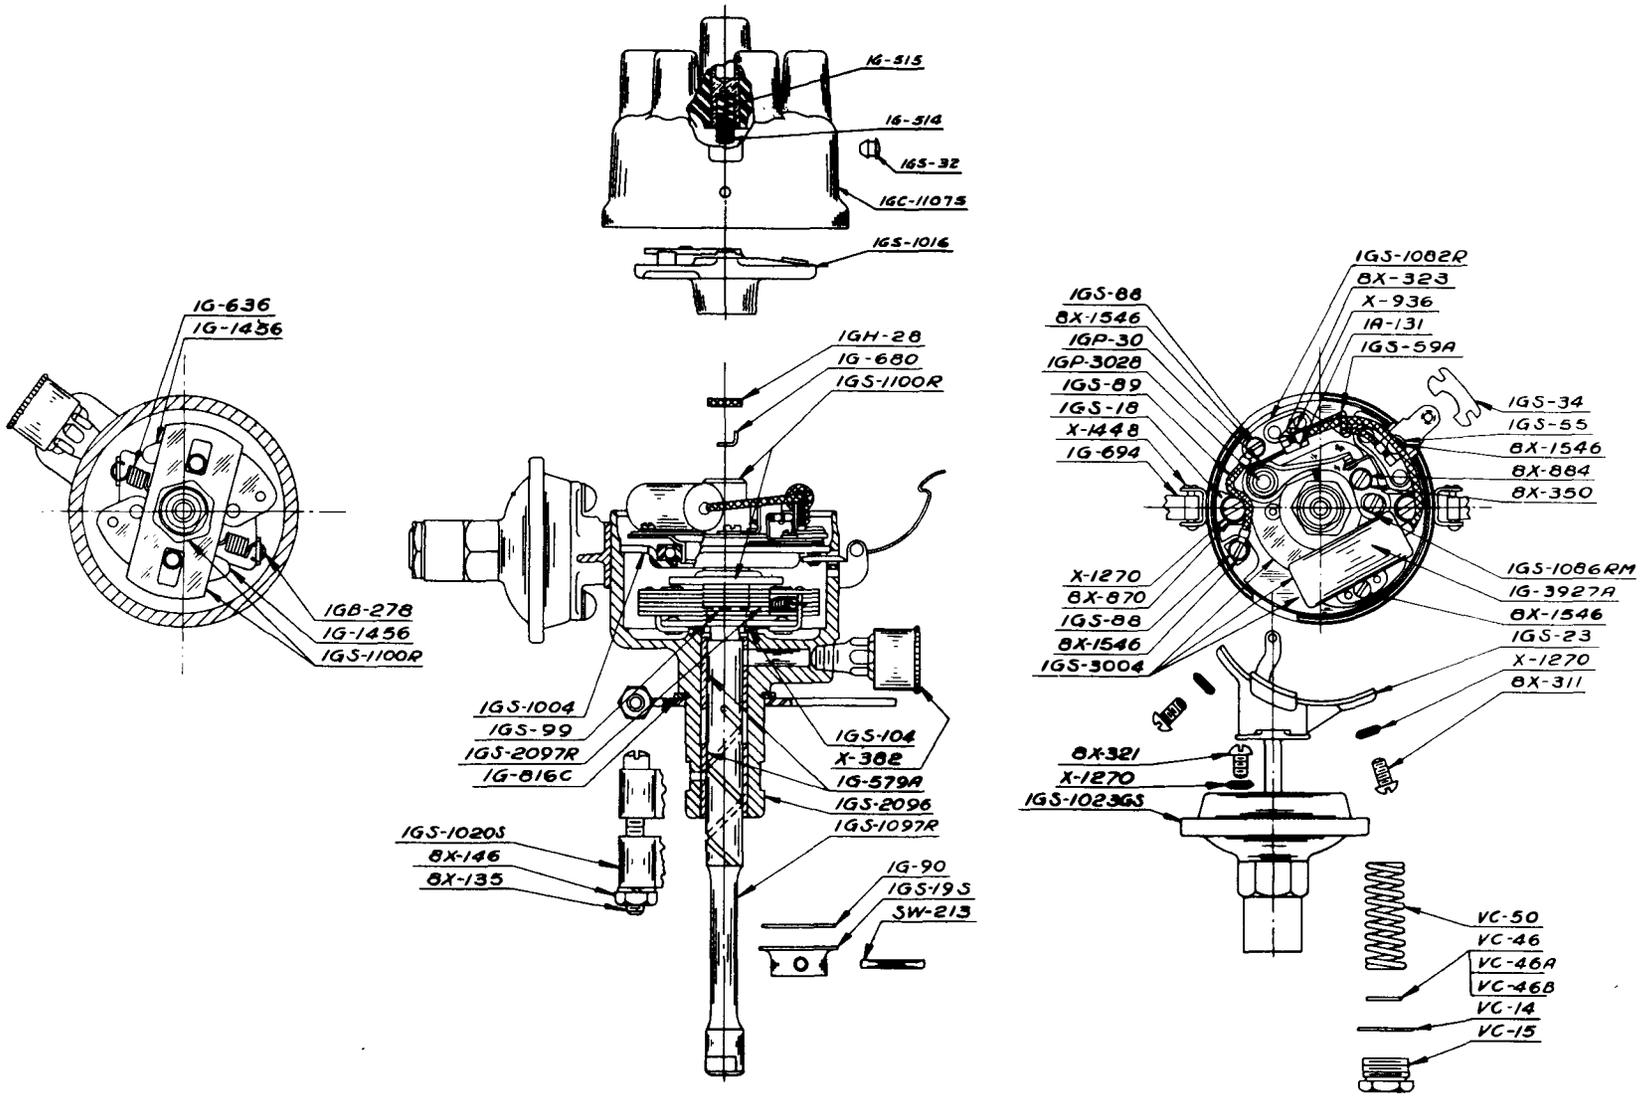

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4110,-1 DISTRIBUTOR PARTS LIST

IGS-4110,-1

PRELIMINARY

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1	Thrust Washer				
IG-680	1	Lock Spring Ring				
IGC-1107S	1	DIST. CAP ASSEMBLY				
IG-514	1	Contact Spring Plunger				
IG-515	1	Contact Spring				
IGS-32	1	Rubber Plug				
IGH-28	1	Cam Sleeve Felt Wick				
IGS-18	2	Bearing Clamp				
IGS-19S	1	Drive Shaft Collar				
IGS-34	1	Terminal Slot Cover				
IGS-99	1	Washer				
IGS-104	1	Thrust Washer				
IGS-107	1	Vacuum Chamber Bracket				
IGS-1016B	1	ROTOR				
IGS-1020S†	1	Advance Control Arm Assy.				
IGS-1100R	1	Cam & Stop Plate - 6 cyl. R.H.				
IGS-1106	1	Dist. Base Shield				
IGS-108	2	#8-32 Stud				
12X-1024	2	#8 Lock Washer				
X-1577	2	#8-32 Wing Nut				
IGS-1107S	1	Vacuum Chamber Assy.				
VC-14	1	Gasket-1/32" Thick				
VC-15	1	Plug				
VC-46	*	Washer-.032" Thick				
VC-46A	*	Washer-.010" Thick				
VC-46B	*	Washer-.065" Thick				
VC-50	1	Spring (Orange)				
IGS-2097R	1	Drive Shaft & Gov. Assy.				
IG-636SS	1	Weight Spring Set				
IG-1456	2	Weight Assembly				
IGS-1097R	1	Drive Shaft Assy.				
IGS-2105	1	Dist. Base Assembly				
IG-579A	2	Absorbent Bronze Brg.				
IG-694	2	Dist. Cap Spring				
X-1448	2	Hinge Pin				
IGS-3004	1	Breaker Plate Assy. Identified by 10				
IA-131	1	Breaker Arm Spring Clip				
IG-3927A	1	CONDENSER ASSEMBLY				
IGE-15	1	#6 Plain Washer				
IGP-3028†	1	Breaker Arm Assy.				
IGP-30	1	Breaker Arm Spring				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IGS-59A	1	Lead Assembly				
IGS-55	1	Terminal				
X-936	1	Terminal				
IGS-89	1	Lead Assembly				
IGS-88	2	Terminal				
IGS-1004	1	Breaker Plate Part Assy.				
IGS-1082R	1	Breaker Sub Plate Assy.				
IGS-1086RM†	1	Breaker Point				
8X-350	1	#8 Plain Washer				
8X-884	1	#8-32x3/16 Fill. Hd. Sc.				
8X-323	1	#6-32x5/16 Rd. Hd. Screw				
X-1012	4	#6 Lock Washer				
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.				
SW-213	1	Dist. Drive Rivet				
8X-56	4	#8-32x7/16 Rd. Hd. Screw				
12X-195	4	#8 Lock Washer				
8X-321	2	#10-32x5/16 Rd. Hd. Screw				
X-382	1	1/8 Grease Cup				
8X-870	2	#10-32x5/16 Fill. Hd. Screw				
8X-902	2	#10-32x3/8 Fill. Hd. Screw				
X-1270	6	#10 Skpf. Washer				
		1	2	3	4	5

(Issued 3-3-41)

† Used with assemblies having the suffix -1.

* Use as required.

† Service BREAKER POINT SET IGP-3028ES.

UNIT	APPLICATION
IGS-4110,-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking such parts the complete part can be assembled as needed."


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4111,-1 DISTRIBUTOR PARTS LIST

IGS-4111,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower	IGS-1004	1	Plate, Breaker
IG-680	1	Snap Ring, Cam Retaining	IGS-1082R	1	Plate Assy., Sub.
IGC-1107S	1	Cap Assy., Dist.	IGS-1086RM†	1	Contact, Breaker
IG-514	1	Contact, Plunger	8X-350	1	Washer, Plain, Contact
IG-515	1	Spring, Contact			Lock Screw, #8
IGS-32	1	Plug, Vent. Hole, Rubber	8X-884	1	Screw, Lock, Breaker
IGH-28	1	Wick, Felt, Cam Sleeve			Contact, Fil. hd., #8-32x3/16
IGS-18	2	Clamp, Bearing, Sub Plate	8X-323	1	Screw, Spring Clamp, Rd. hd., #6-32x5/16
IGS-19S	1	Collar, Shaft	X-1012	4	Washer, Lock, #6
IGS-23	1	Bracket, Vacuum Chamber	8X-1546	4	Screw, Fil. hd., #6-32x5/32
IGS-34	1	Cover, Terminal Slot	SW-213	1	Rivet, Collar, Drive Shaft
IGS-99	1	Spacer, Cam	SW-634†	1	Washer, Plain, Advance Arm
IGS-104	1	Washer, Thrust, Drive Shaft, Upper			Mtg. Screw
IGS-114†	1	Arm, Advance	8X-86†	1	Screw, Attaching, Advance Arm, Hex. hd., 1/4-20x5/8
IGS-1016B	1	Rotor	12X-199†	1	Washer, Lock, Advance Arm Mtg. Screw, 1/4
IGS-1023GS	1	Chamber Assy., Vacuum Advance	8X-321	2	Screw, Attaching, Vacuum Chamber Rd. hd., #10-32x5/16
VC-14	1	Gasket, Spring Seat Plug	8X-870	2	Screw, Attaching, Breaker Plate, Fil. hd., #10-32x5/16
VC-15	1	Plug, Spring Seat	8X-902	2	Screw, Attaching, Vacuum Chamber Bracket, Fil. hd., #10-32x3/8
VC-46	*	Washer, Tension Adj., .032" Thick	X-1270	6	Washer, Skpf., #10
VC-46A	*	Washer, Tension Adj., .010" Thick			1 2 3 4 5
VC-46B	*	Washer, Tension Adj., .065" Thick			
VC-50	1	Spring, Orange			
IGS-1100R	1	Cam, & Stop Plate, 6 Cyl., R.H.			(Issued 5-26-44)
IGS-2111	1	Base Assy., Dist.			
IG-579A	1	Bearing, Lower, Absorbent Bronze			
IG-579D	1	Bearing, Upper, Absorbent Bronze			
IG-694	2	Spring, Clamp, Cap			
IGS-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler, Press in Elbow, 1/4			
IGS-2116R	1	Shaft & Gov. Assy.			
IG-636SS	1	Spring Set, Gov. Weight			
IG-1455	2	Weight, Governor			
IGS-1116R	1	Shaft, Drive			
IGS-3004	1	Plate Assy., Breaker Identified by 10			
IA-131	1	Clip, Spring, Contact Arm			
IG-3927A	1	Condenser			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028†	1	Arm Assy. Breaker			
IGP-30	1	Spring			
IGS-59A	1	Lead Assy.			† Used with assemblies having a suffix "-1"
IGS-55	1	Terminal			
X-936	1	Terminal			† Contact Set, Service, IGP-3028ES.
IGS-89	1	Lead Assy.			
IGS-88	2	Terminal			* Use as required.
		1 2 3 4 5			

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

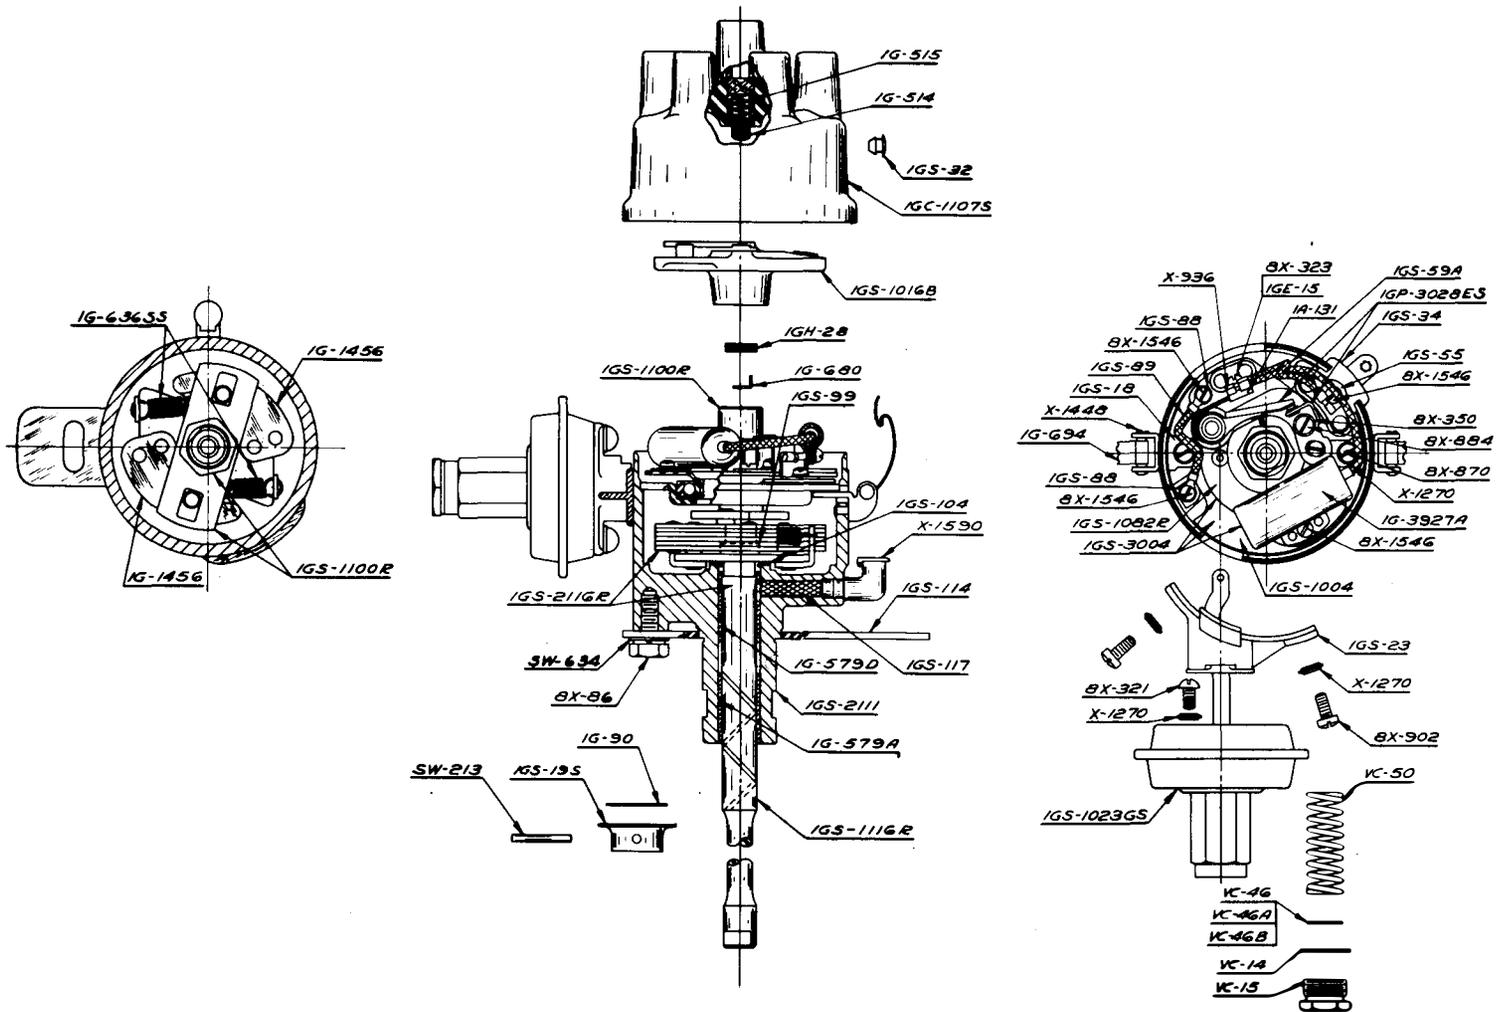

IGS-411, -1 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4112,-1 DISTRIBUTOR PARTS LIST

IGS-4112,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGS-1004A	1	Breaker Plate Part Assy.
IG-680	1	Lock Spring Ring	IGS-1082R	1	Breaker Sub Plate Assy.
IGC-1107S	1	DISTRIBUTOR CAP ASSY.	IGS-1086RM†	1	Breaker Point
IG-514	1	Contact Spring Plunger	8X-350	1	#8 Plain Washer
IG-515	1	Contact Spring	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGS-32	1	Rubber Plug	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IGH-28	1	Cam Sleeve Felt Wick	X-1012	4	#6 Lock Washer
IGS-18	2	Bearing Clamp	8X-1546	4	#6-32x5/32 Fill. Hd. Screw
IGS-19S	1	Drive Shaft Collar	IGT-1023GS	1	Vacuum Chamber Assy.
IGS-23	1	Vacuum Chamber Bracket	VC-14	1	Gasket-1/32" Thick
IGS-34	1	Terminal Slot Cover	VC-15	1	Plug
IGS-99	1	Washer	VC-46	*	Washer-.032" Thick
IGS-104	1	Thrust Washer	VC-46A	*	Washer-.010" Thick
IGS-114†	1	Advance Control Arm	VC-46B	*	Washer-.065" Thick
IGS-115†	1	Advance Pointer	VC-73	1	Spring (Maroon)
IGS-1016B	1	ROTOR	SW-213	1	Distributor Drive Rivet
IGS-1100RA	1	Cam & Stop Plate - 6 cyl. R.H.	8X-85†	1	1/4-20x1/2 Hex. Hd. Screw
IGS-2111	1	Dist. Base Assy.	12X-199†	1	1/4 Lock Washer
IG-579A	1	Absorbent Bronze Brg. - Lower	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IG-579D	1	Absorbent Bronze Brg. - Upper	8X-357†	1	#14 Plain Washer
IG-694	2	Dist. Cap Spring	8X-870	2	#10-32x5/16 Fill. Hd. Screw
IGS-117	1	Felt Wick	8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1448	2	Hinge Pin	X-1270	6	#10 Skpf. Washer
X-1590	1	1/4 Oiler-Press in Elbow			1 2 3 4 5
IGS-2113R	1	Drive Shaft & Gov. Assy.			
IG-1456	2	Weight Assembly			
IGB-292SS	1	Weight Spring Set			
IGS-1113R	1	Drive Shaft Assy.			
IGS-3004B	1	Breaker Plate Assembly ‡ Identified by 8			
IA-131	1	Breaker Arm Spring Clip			
IG-3927A	1	CONDENSER ASSEMBLY			
IGE-15	1	#6 Plain Washer			
IGP-3028†	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
IGS-59A	1	Lead Assembly			
IGS-55	1	Terminal			
X-936	1	Terminal			
IGS-89	1	Lead Assembly			
IGS-88	2	Terminal			
		1 2 3 4 5			

(Issued 7-29-40)

† Service BREAKER POINT SET IGP-3028ES.

* Use as required.

‡ See Manual Bulletin IG-11.

† Used with assemblies having the suffix "-1".

UNIT	APPLICATION
IGS-4112,-1	Dodge

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4113,-1 DISTRIBUTOR PARTS LIST

IGS-4113,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGS-59A	1	Lead Assembly
IG-680	1	Lock Spring Ring	IGS-55	1	Terminal
IGC-1107S	1	DISTRIBUTOR CAP ASSY.	X-936	1	Terminal
IG-514	1	Contact Spring Plunger	IGS-89	1	Lead Assembly
IG-515	1	Contact Spring	IGS-88	2	Terminal
IGS-32	1	Rubber Plug	IGS-1004E	1	Breaker Plate Part Assy.
IGH-28	1	Cam Sleeve Felt Wick	IGS-1082R	1	Breaker Sub Plate Assy.
IGS-18	2	Bearing Clamp	IGS-1086RM†	1	Breaker Point
IGS-19S	1	Drive Shaft Collar	8X-350	1	#8 Plain Washer
IGS-23	1	Vacuum Chamber Bracket	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGS-34	1	Terminal Slot Cover	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IGS-99	1	Washer	X-1012	4	#6 Lock Washer
IGS-104	1	Thrust Washer	8X-1546	4	#6-32x5/32 Fill. Hd. Screw
IGS-114†	1	Advance Control Arm	SW-213	1	Distributor Drive Rivet
IGS-115†	1	Advance Pointer	8X-85†	1	1/4-20x1/2 Hex. Hd. Screw
IGS-1016B	1	ROTOR	12X-199†	1	1/4 Lock Washer
IGS-1023HS	1	Vacuum Chamber Assy.	8X-321	2	#10-32x5/16 Rd. Hd. Screw
VC-14	1	Gasket-1/32" Thick	8X-357†	1	#14 Plain Washer
VC-15	1	Plug	8X-870	2	#10-32x5/16 Fill. Hd. Screw
VC-46	*	Washer-.032" Thick	8X-902	2	#10-32x3/8 Fill. Hd. Screw
VC-46A	*	Washer-.010" Thick	X-1270	6	#10 Skpf. Washer
VC-46B	*	Washer-.065" Thick			1 2 3 4 5
VC-73	1	Spring (Maroon)			
IGS-1100RA	1	Cam & Stop Plate - 6 cyl. R.H.			(Issued 7-29-40)
IGS-2111	1	Dist. Base Assy.			
IG-579A	1	Absorbent Bronze Brg. - Lower			
IG-579D	1	Absorbent Bronze Brg. - Upper			
IG-694	2	Dist. Cap Spring			
IGS-117	1	Felt Wick			
X-1448	2	Hinge Pin			
X-1590	1	1/4 Oiler-Press in Elbow			
IGS-2112R	1	Drive Shaft & Gov. Assy.			
IG-1456	2	Weight Assembly			
IGB-292SS	1	Weight Spring Set			
IGS-1112R	1	Drive Shaft Assy.			
IGS-3004A	1	Breaker Plate Assy. † Identified by 7			
IA-131	1	Breaker Arm Spring Clip			
IG-3927A	1	CONDENSER ASSEMBLY			
IGE-15	1	#6 Plain Washer			
IGP-3028†	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

† Service BREAKER POINT SET IGP-3028ES.


* Use as required.

† See Manual Bulletin IG-11.

† Used with assemblies having the suffix "-1".

UNIT	APPLICATION
IGS-4113,-1	Chrysler, De Soto

IGS-4113,-1 DISTRIBUTOR ILLUSTRATION

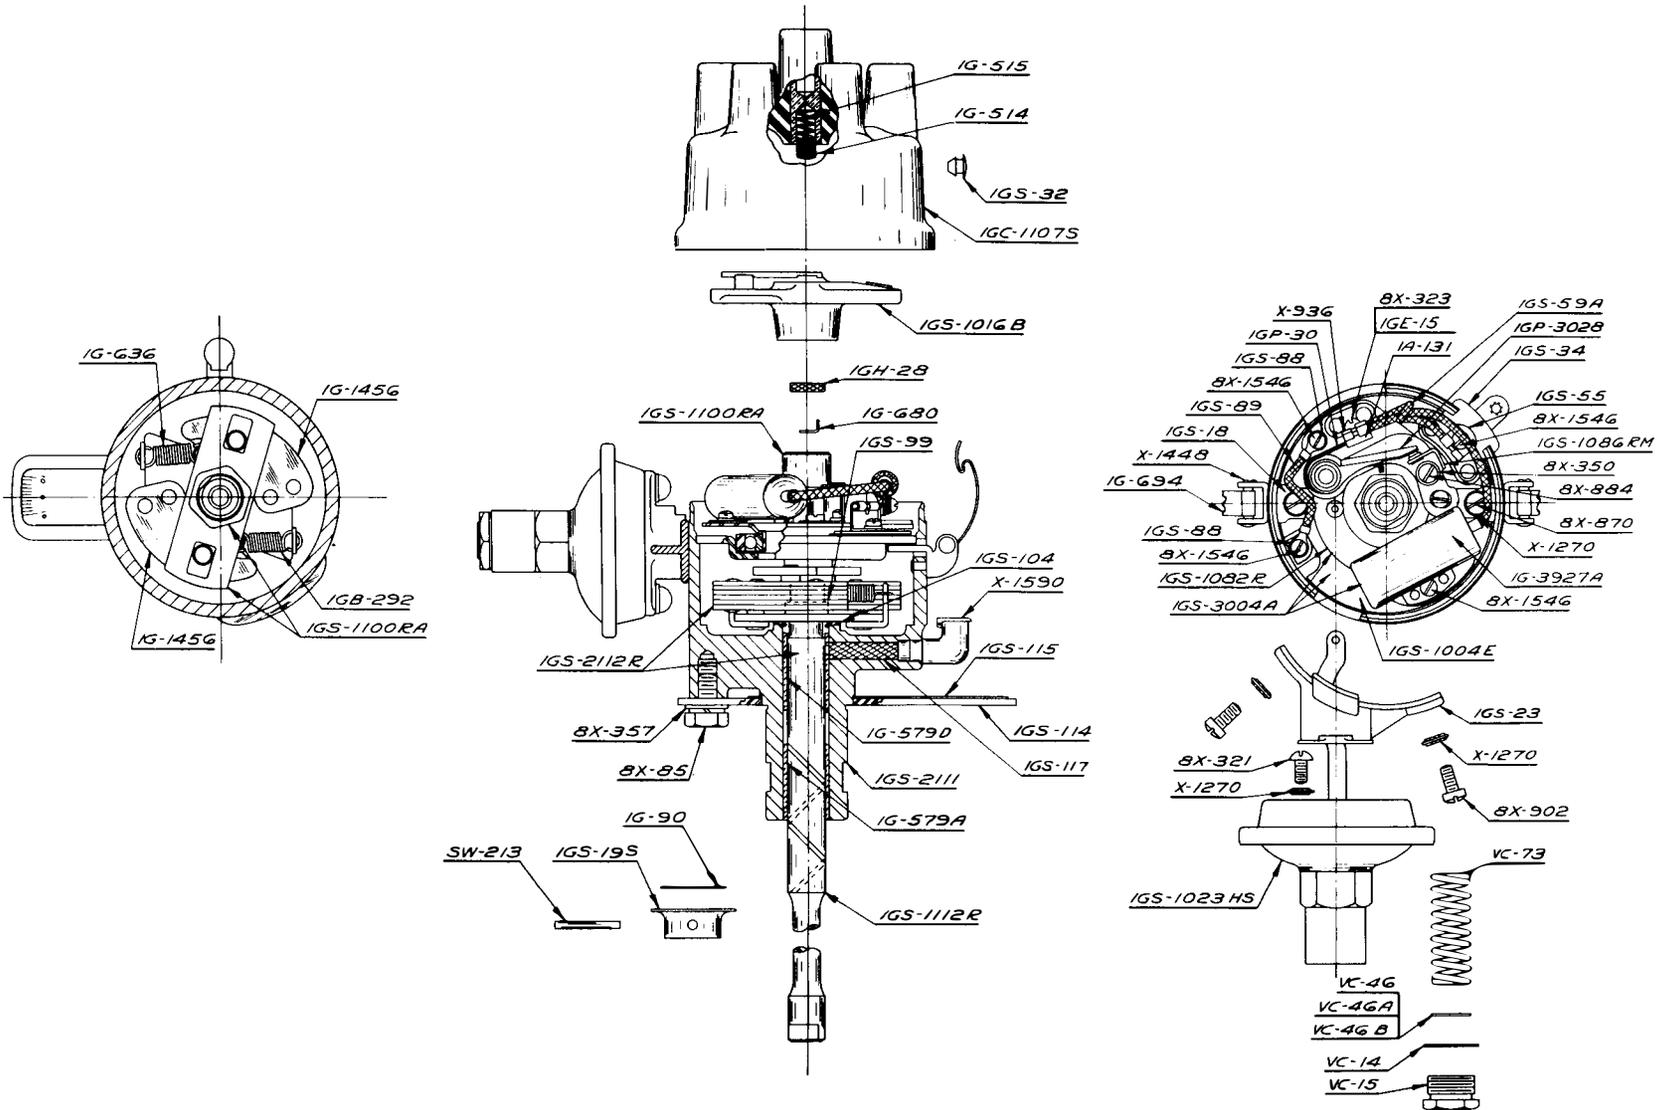

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4114,-1 DISTRIBUTOR PARTS LIST

IGS-4114,-1

PRELIMINARY

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IA-78	1	Felt Wick				
IG-90	1	Thrust Washer				
IG-680	1	Lock Spring Ring				
IGC-1107S	1	DIST. CAP ASSEMBLY				
IG-514	1	Contact Spring Plunger				
IG-515	1	Contact Spring				
IGS-32	1	Rubber Plug				
IGH-28	1	Cam Sleeve Felt Wick				
IGS-18	2	Bearing Clamp				
IGS-19S	1	Drive Shaft Collar				
IGS-34	1	Terminal Slot Cover				
IGS-99	1	Washer				
IGS-104	1	Thrust Washer				
IGS-107	1	Vacuum Chamber Bracket				
IGS-114†	1	Advance Control Arm				
IGS-1016B	1	ROTOR				
IGS-1100RA	1	Cam & Stop Plate - 6 cyl. R.H.				
IGS-1106	1	Dist. Base Shield				
IGS-108	2	#8-32 Stud				
12X-1024	2	#8 Lock Washer				
X-1577	2	#8-32 Wing Nut				
IGS-1107AS	1	Vacuum Chamber Assy.				
VC-14	1	Gasket-1/32" Thick				
VC-15	1	Plug				
VC-46	*	Washer-.032" Thick				
VC-46A	*	Washer-.010" Thick				
VC-46B	*	Washer-.065" Thick				
VC-73	1	Spring (Maroon)				
IGS-2113R	1	Drive Shaft & Gov. Assy.				
IG-1456	2	Weight Assembly				
IGB-292SS	1	Weight Spring Set				
IGS-1113R	1	Drive Shaft Assy.				
IGS-2118	1	Dist. Base Assembly				
IG-579A	1	Absorbent Bronze Brg.- Lower				
IG-579D	1	Absorbent Bronze Brg.- Upper				
IG-694	2	Dist. Cap Spring				
X-1448	2	Hinge Pin				
IGS-3004B	1	Breaker Plate Assy. Identified by 8				
IA-131	1	Breaker Arm Spring Clip				
IG-3927A	1	CONDENSER ASSEMBLY				
IGE-15	1	#6 Plain Washer				
IGP-3028†	1	Breaker Arm Assy.				
IGP-30	1	Breaker Arm Spring				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IGS-59A	1	Lead Assembly				
IGS-55	1	Terminal				
X-936	1	Terminal				
IGS-89	1	Lead Assembly				
IGS-88	2	Terminal				
IGS-1004A	1	Breaker Plate Part Assy.				
IGS-1082R	1	Breaker Sub Plate Assy.				
IGS-1086RM†	1	Breaker Point				
8X-350	1	#8 Plain Washer				
8X-884	1	#8-32x3/16 Fill. Hd. Sc.				
8X-323	1	#6-32x5/16 Rd. Hd. Screw				
X-1012	4	#6 Lock Washer				
8X-1546	4	#6-32x5/32 Fill. Hd. Screw				
SW-213	1	Dist. Drive Rivet				
SW-634†	1	Plain Washer				
8X-56	4	#8-32x7/16 Rd. Hd. Screw				
8X-86†	1	1/4-20x5/8 Hex. Hd. Screw				
12X-195	4	#8 Lock Washer				
12X-199†	1	1/4 Lock Washer				
8X-321	2	#10-32x5/16 Rd. Hd. Screw				
8X-870	2	#10-32x5/16 Fill. Hd. Screw				
8X-902	2	#10-32x3/8 Fill. Hd. Screw				
X-1270	6	#10 Skpf. Washer				
X-1596	1	Oiler				
		1	2	3	4	5

(Issued 3-3-41)

† Used with assemblies having the suffix "-1".

* Use as required.

† Service BREAKER POINT SET IGP-3028ES.

UNIT	APPLICATION
IGS-4114,-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4115 DISTRIBUTOR PARTS LIST

IGS-4115

PRELIMINARY

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1	Thrust Washer				
IG-94	7	H. T. Wire Terminal				
IG-644	1	Dist. Drive - Coupling				
IG-680	1	Lock Spring Ring				
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY				
IG-514	1	Contact Spring Plunger				
IG-515	1	Contact Spring				
IGS-32	1	Rubber Plug				
IGH-28	1	Cam Sleeve Felt Wick				
IGS-18	2	Bearing Clamp				
IGS-23	1	Vacuum Chamber Bracket				
IGS-34	1	Terminal Slot Cover				
IGS-99	1	Washer				
IGS-104	1	Thrust Washer				
IGS-1016B	1	ROTOR				
IGS-1023NS	1	Vacuum Chamber Assembly				
VC-14	1	Gasket - 1/32" Thick				
VC-15	1	Plug				
VC-46	*	Washer - .032" Thick				
VC-46A	*	Washer - .010" Thick				
VC-46B	*	Washer - .065" Thick				
VC-49	1	Spring (Blue)				
IGS-1100RV	1	Cam & Stop Plate - 6 Cyl. R.H.				
IGS-2095RA	1	Drive Shaft & Gov. Assy.				
IG-1456	2	Weight Assembly				
IGB-208S	1	Weight Spring Set				
IGS-1095RA	1	Drive Shaft Assembly				
IGS-2121	1	Distributor Base Assembly				
IG-579A	2	Absorbent Bronze Brg.				
IG-694	2	Dist. Cap Spring				
X-382	1	1/8 Grease Cup				
X-1448	2	Hinge Pin				
IGS-3004G	1	Breaker Plate Assembly ± Identified by 6.5				
IA-131	1	Breaker Arm Spring Clip				
IG-2671F	1	CONDENSER ASSEMBLY				
IGE-15	1	#6 Plain Washer				
IGP-3028†	1	Breaker Arm Assembly				
IGP-30	1	Breaker Arm Spring				
IGS-59A	1	Lead Assembly				
IGS-55	1	Terminal				
X-936	1	Terminal				
IGS-89	1	Lead Assembly				
IGS-88	2	Terminal				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IGS-1004K	1	Breaker Plate Part Assy.				
IGS-1082R	1	Breaker Sub Plate Assy.				
IGS-1086RM†	1	Breaker Point				
8X-350	1	#8 Plain Washer				
8X-884	1	#8-32x3/16 Fill. Hd. Sc.				
8X-323	1	#6-32x5/16 Rd. Hd. Screw				
X-1012	4	#6 Lock Washer				
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.				
IGT-70	1	Anti-Rattle Spring				
SW-213	1	Distributor Drive Rivet				
X-196	1	#10 Lock Washer				
8X-321	2	#10-32x5/16 Rd. Hd. Screw				
8X-870	2	#10-32x5/16 Fill. Hd. Screw				
8X-872	1	#10-32x1/4 Fill. Hd. Screw				
8X-902	2	#10-32x3/8 Fill. Hd. Screw				
X-1270	6	#10 Skpf. Washer				
		1	2	3	4	5

(Issued 5-21-41)

† SERVICE CONTACT SET IGP-3028ES.

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4115	Connecticut Rwy.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4116 DISTRIBUTOR PARTS LIST

IGS-4116

PRELIMINARY

Part No.	No. Used	Name of Part					
			1	2	3	4	5
IG-90	1	Thrust Washer					
IG-94	7	H. T. Wire Terminal					
IG-644	1	Dist. Drive Coupling					
IG-680	1	Lock Spring Ring					
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY					
IG-514	1	Contact Spring Plunger					
IG-515	1	Contact Spring					
IGS-32	1	Rubber Plug					
IGH-28	1	Cam Sleeve Felt Wick					
IGS-18	2	Bearing Clamp					
IGS-34	1	Terminal Slot Cover					
IGS-50	1	Vacuum Chamber Bracket					
IGS-99	1	Washer					
IGS-104	1	Thrust Washer					
IGS-1016B	1	ROTOR					
IGS-1100LD	1	Cam & Stop Plate - 6 Cyl. L.H.					
IGS-2095L	1	Drive Shaft & Gov. Assy.					
IG-2456	2	Weight Assembly					
IGB-208S	1	Weight Spring Set					
IGS-1095L	1	Drive Shaft Assy.					
IGS-2122	1	Distributor Base Assembly					
IG-579A	2	Absorbent Bronze Brg.					
IG-694	2	Dist. Cap Spring					
X-382	1	1/8 Grease Cup					
X-1448	2	Hinge Pin					
IGS-3004LA	1	Breaker Plate Assembly ± Identified by 6.5L					
IA-131	1	Breaker Arm Spring Clip					
IG-2671K	1	CONDENSER ASSEMBLY					
IGE-15	1	#6 Plain Washer					
IGP-3028Lt	1	Breaker Arm Assembly					
IGP-30L	1	Breaker Arm Spring					
IGS-78	1	Lead Assembly					
IGS-77	1	Terminal					
X-1484	1	Terminal					
IGS-89	1	Lead Assembly					
IGS-88	2	Terminal					
IGS-1044E	1	Breaker Plate Part Assy.					
			1	2	3	4	5

Part No.	No. Used	Name of Part					
			1	2	3	4	5
IGS-1082L	1	Breaker Sub Plate Assy.					
IGS-1086LM†	1	Breaker Point					
8X-350	1	#8 Plain Washer					
8X-884	1	#8-32x3/16 Fill. Hd. Sc.					
8X-323	1	#6-32x5/16 Rd. Hd. Screw					
X-1012	4	#6 Lock Washer					
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.					
IGT-69	1	Anti-Rattle Spring					
IGT-1028FS	1	Vacuum Chamber Assembly					
VC-14	1	Gasket - 1/32" Thick					
VC-15	1	Plug					
VC-46	*	Washer - .032" Thick					
VC-46A	*	Washer - .010" Thick					
VC-46B	*	Washer - .065" Thick					
VC-49	1	Spring (Blue)					
SW-213	1	Distributor Drive Rivet					
X-196	1	#10 Lock Washer					
8X-321	2	#10-32x5/16 Rd. Hd. Screw					
8X-870	2	#10-32x5/16 Fill. Hd. Sc.					
8X-872	1	#10-32x1/4 Fill. Hd. Screw					
8X-902	2	#10-32x3/8 Fill. Hd. Screw					
X-1270	6	#10 Skpf. Washer					
			1	2	3	4	5

(Issued 5-21-41)

† SERVICE CONTACT SET IGP-3028JS.

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4116	Connecticut Rwy.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4117,-1 DISTRIBUTOR PARTS LIST

IGS-4117,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver	IGS-59A	1	Lead Assy., Primary
GE-48	1	Gear, Tachometer, Follower	IGS-55	1	Terminal
IG-90	2	Washer, Thrust, Drive Shaft, Lower	X-936	1	Terminal
IG-680	1	Snap Ring, Cam Retaining	IGS-89	1	Lead Assy., Ground
IGC-1107S	1	Cap Assembly, Dist.	IGS-88	2	Terminal
IG-514	1	Contact, Plunger	IGS-1004E	1	Plate, Breaker
IG-515	1	Spring, Contact	IGS-1082R	1	Plate Assy., Sub
IGS-32	1	Plug, Vent. Hole, Rubber	IGS-1086RM†	1	Contact, Breaker
IGH-28	1	Wick, Felt, Cam Sleeve	8X-350	1	Washer, Plain, Contact Lock Screw, #8
IGS-18	2	Clamp, Bearing, Sub Plate	8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
IGS-19S	1	Collar, Shaft	8X-323	1	Screw, Spring Clamp, Rd. Hd., #6-32x5/16
IGS-21†	1	Pointer, Advance Arm	X-1012	4	Washer, Lock, Condenser & Lead Screw, #6
IGS-23	1	Bracket, Vacuum Chamber	8X-1546	4	Screw, Condenser Mtg. & Lead, Fil. Hd., #6-32x5/32
IGS-34	1	Cover, Terminal Slot	SW-213	2	Rivet, Gear & Collar
IGS-37	1	Shaft, Drive, Tachometer	X-294	1	Bearing, Ball, SAE #202
IGS-38	1	Cover, Housing, Tach. Shaft	8X-321	2	Screw, Attaching, Vacuum Chamber Rd. Hd., #10-32x5/16
IGS-39	1	Washer, Thrust, Tach. Drive Shaft	8X-902	2	Screw, Attaching, Vacuum Chamber Bracket, Fil. Hd., #10-32x3/8
IGS-99	1	Spacer, Cam	8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
IGS-1016B	1	Rotor	X-1270	6	Washer, Skpf., Breaker Plate Mtg. & Vacuum Chamber Attaching Screws, #10
IGS-1020S‡	1	Arm, Advance			1 2 3 4 5
IGS-1023HS	1	Chamber Assy., Vacuum Advance			(Issued 5-15-45)
VC-14	1	Gasket, Spring Seat Plug			
VC-15	1	Plug, Spring Seat			
VC-46	*	Washer, Tension Adjusting, .032" Thick			
VC-46A	*	Washer, Tension Adjusting, .010" Thick			
VC-46B	*	Washer, Tension Adjusting, .065" Thick			
VC-73	1	Spring, Maroon			
IGS-1100RA	1	Cam, & Stop Plate, 6 cyl., R.H.			
IGS-2123	1	Base Assembly, Dist.			
IG-579A	1	Bearing, Absorbent Bronze			
IG-694	2	Spring, Clamp, Cap			
X-382	1	Grease Cup, 1/8			
X-1448	2	Pin, Hinge, Cap Spring			
IGS-2124R	1	Shaft & Gov. Assy.			
IG-1456	2	Weight, Governor			
IGB-292SS	1	Spring Set, Gov. Weight			
IGS-1124R	1	Shaft, Drive			
IGS-3004A	1	Plate Assy., Breaker Identified by 7			
IA-131	1	Clip, Spring, Contact Arm			
IG-3927A	1	Condenser			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028†	1	Arm Assy., Breaker			
IGP-30	1	Spring			
		1 2 3 4 5			

‡ Used with assemblies having suffix "-1".


* Use as required.

† Contact Set, Service IGP-3028ES.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

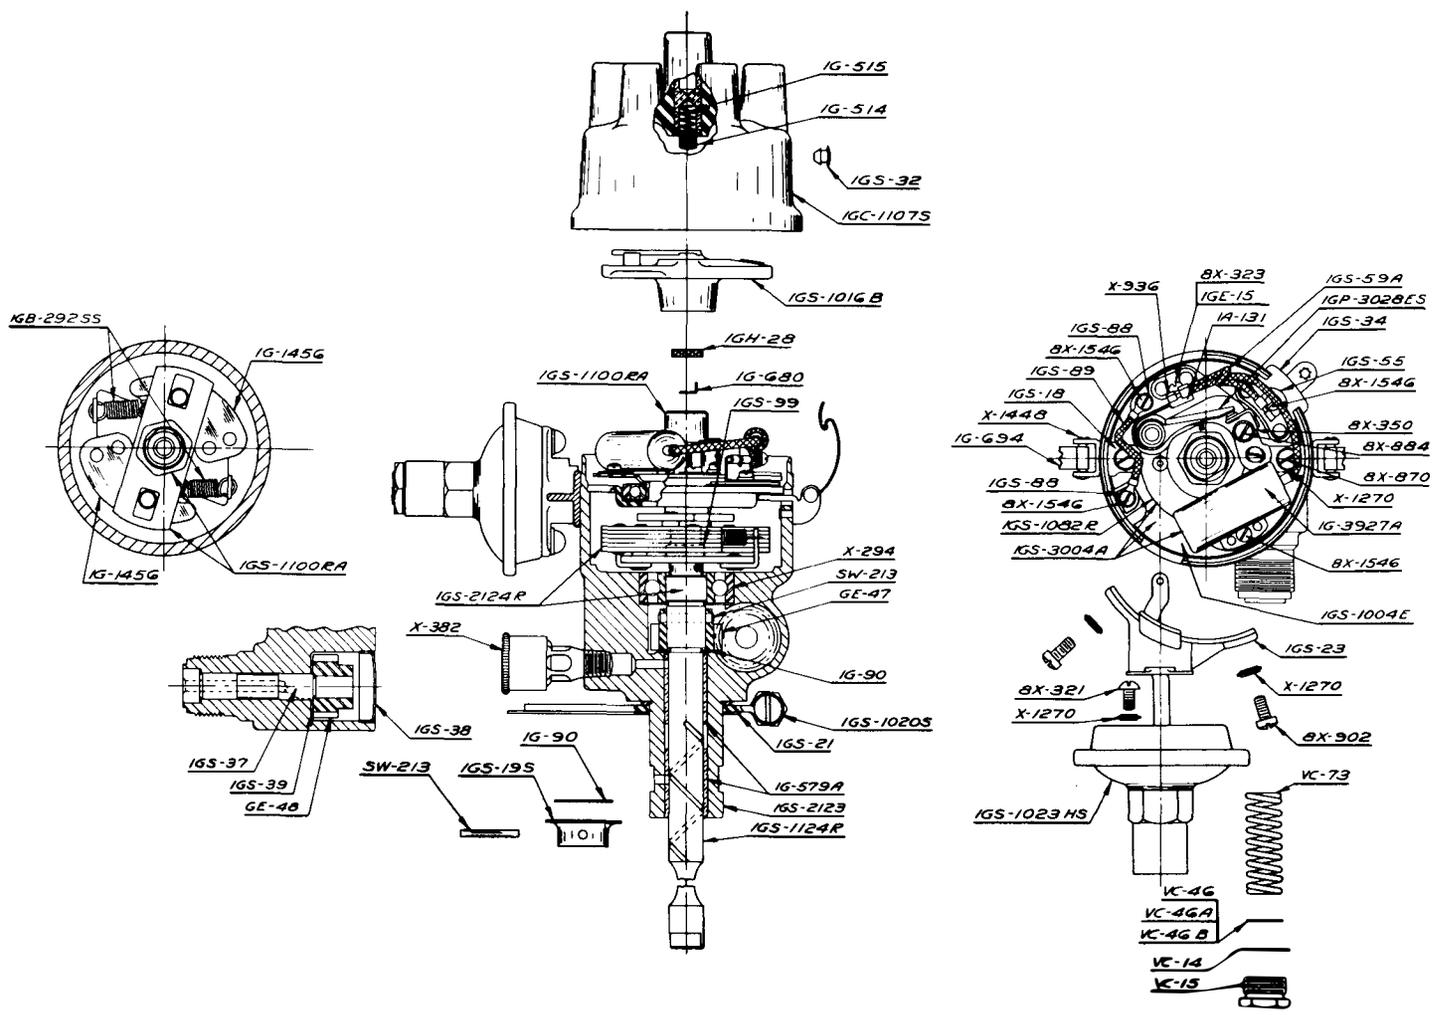

IGS-4117, -1 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4201 DISTRIBUTOR PARTS LIST

IGS-4201

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGT-2034LC	1	Drive Shaft & Gov. Assy.
IG-94	7	H. T. Wire Terminal	IG-2456	2	Weight Assembly
IG-680	1	Lock Spring Ring	IGB-210†	1	Weight Spring
IGB-162	1	Thrust Washer	IGB-222†	1	Weight Spring
IGC-1107S	1	DIST. CAP ASSEMBLY	IGT-1034LA	1	Drive Shaft Assy.
IG-514	1	Contact Spring Plunger	S†-213	1	Dist. Drive Rivet
IG-515	1	Contact Spring	VC-3082	1	Vacuum Chamber Assy.
IGS-32	1	Rubber Plug	VC-14	1	Gasket - 1/32" Thick
IGE-36	1	Governor Control Spring	VC-15	1	Plug
IGH-28	1	Cam Sleeve Felt Wick	VC-46	*	Washer - .032" Thick
IGH-53B	1	Drive Shaft Extension	VC-46A	*	Washer - .010" Thick
IGH-54	1	Dist. Drive Sleeve	VC-46B	*	Washer - .065" Thick
IGH-55	1	Drive Shaft Pin	VC-50	1	Spring (Orange)
IGK-26	1	Washer - .020" Thick	X-196	1	#10 Lock Washer
IGS-18	2	Bearing Clamp	8X-312	2	#10-32x1/4 Rd. Hd. Screw
IGS-34	1	Terminal Slot Cover	8X-870	2	#10-32x5/16 Fill. Hd. Sc.
IGS-1016	1	ROTOR	8X-872	1	#10-32x1/4 Fill. Hd. Sc.
IGS-1022LC	1	Cam & Stop Plate - 6 cyl. L.H.	X-1270	4	#10 Skpf. Washer
					1 2 3 4 5
IGS-2093	1	Dist. Base Assembly			(Issued 3-2-39)
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
IG-694	2	Dist. Cap Spring			
X-382	1	1/8 Grease Cup			
X-1201	2	.10x1/4 Tubular Rivet			
X-1448	2	Hinge Pin			
IGS-3004L	1	Breaker Plate Assy. + Identified by 7.5L			
IA-131	1	Breaker Arm Spring Clip			
IG-2671K	1	CONDENSER ASSY.			
IGP-3028L†	1	Breaker Arm Assy.			
IGP-30L	1	Breaker Arm Spring			
IGS-78	1	Lead Assembly			
IGS-77	1	Terminal			
X-1484	1	Terminal			
IGS-89	1	Lead Assembly			
IGS-88	2	Terminal			
IGS-1044B	1	Breaker Plate Part Assy.			
IGS-1082L	1	Breaker Sub Plate Assy.			
IGS-1086LM†	1	Breaker Point			
8X-884	1	#8-32x3/16 Fill. Hd. Screw			
12X-1275	1	#8 Lock Washer			
8X-323	1	#6-32x5/16 Rd. Hd. Sc.			
X-1012	5	#6 Lock Washer			
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.			
		1 2 3 4 5			

* Use as required.
 + See Manual Bulletin IG-11.
 † SERVICE BREAKER POINT SET IGP-3028JS & Service Weight Spring Set IGB-210AS.

UNIT	APPLICATION
IGS-4201	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4202,A,B, DISTRIBUTOR PARTS LIST
C,-1

IGS-4202,A,B,
C,-1

PRELIMINARY

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGS-59A	1	Lead Assembly
IG-680	1	Lock Spring Ring	IGS-55	1	Terminal
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY	X-936	1	Terminal
IG-514	1	Contact Spring Plunger	IGS-89	1	Lead Assembly
IG-515	1	Contact Spring	IGS-88	2	Terminal
IGS-32	1	Rubber Plug	*	1	Breaker Plate Part Assy.
IGH-28	1	Cam Sleeve Felt Wick	IGS-1082R	1	Breaker Sub Plate Assy.
IGS-18	2	Bearing Clamp	IGS-1086RM†	1	Breaker Point
IGS-19S	1	Drive Shaft Collar	8X-350	1	#8 Plain Washer
IGS-34	1	Terminal Slot Cover	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGS-99	1	Washer	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IGS-104	1	Thrust Washer	X-1012	4	#6 Lock Washer
IGS-114†	1	Advance Control Arm	8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IGS-115†	1	Advance Pointer	SW-213	1	Distributor Drive Rivet
IGS-1016B	1	ROTOR	SW-634†	1	Plain Washer
*	1	Cam & Stop Plate - 6 Cyl. R.H.	*	1	Vacuum Chamber Assembly
*	1	Drive Shaft & Gov. Assy.	VC-14	1	Gasket - 1/32" Thick
IG-1456	2	Weight Assembly	VC-15	1	Plug
*	1	Weight Spring Set	VC-46	+	Washer - .032" Thick
IGS-1112R	1	Drive Shaft Assembly	VC-46A	+	Washer - .010" Thick
IGS-2126	1	Distributor Base Assembly	VC-46B	+	Washer - .065" Thick
IG-579A	1	Absorbent Bronze Brg.-Lower	*	1	Spring
IG-579D	1	Absorbent Bronze Brg.-Upper	8X-86†	1	1/4-20x5/8 Hex. Hd. Screw
IG-694	2	Dist. Cap Spring	12X-199†	1	1/4 Lock Washer
IGS-117	1	Felt Wick	8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-144B	2	Hinge Pin	8X-872	2	#10-32x1/4 Fill. Hd. Screw
X-1590	1	1/4 Oiler - Press in Elbow	X-1270	4	#10 Skpf. Washer
*	1	Breaker Plate Assembly			1 2 3 4 5
IA-131	1	Breaker Arm Spring Clip			(Issued 10-6-41)
IG-3927A	1	CONDENSER ASSEMBLY			† SERVICE CONTACT SET IGP-3028ES.
IGE-15	1	#6 Plain Washer			† Used with assemblies having suffix "-1"
IGP-3028†	1	Breaker Arm Assembly			+ Use as required.
IGP-30	1	Breaker Arm Spring			* See table following parts list for part number applying to assembly wanted.
		1 2 3 4 5			± See Manual Bulletin IG-11.

Assembly No.	Cam & Stop Plate	Dr. Shaft & Gov.	Weight Spr. Set	Breaker Plate Assy.	Identified By ±
IGS-4202	IGS-1100RA	IGS-2112R	IGB-292SS	IGS-3004A	7
IGS-4202A	IGS-1100R	IGS-2112RA	IG-636NS	IGS-3004M	6
IGS-4202B	IGS-1100RA	IGS-2112RB	IG-636JS	IGS-3004K	9
IGS-4202C	IGS-1100R	IGS-2112RA	IG-636NS	IGS-3004K	9
	Assembly No.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring	
	IGS-4202	IGS-1004E	VC-3082RBS	VC-73 (Cadmium Plate & Green)	
	IGS-4202A	IGS-1004J	VC-3082RES	VC-50 (Orange)	
	IGS-4202B	IGS-1004M	VC-3082RFS	VC-45 (Red)	
	IGS-4202C	IGS-1004M	VC-3082RHS	VC-119 (Cadmium Plate)	

UNIT	APPLICATION
IGS-4202,-1	DeSoto, Chrysler
IGS-4202A,-1	DeSoto
IGS-4202B,-1	Chrysler
IGS-4202C,-1	DeSoto

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4203,A,B, DISTRIBUTOR PARTS LIST
C,-1

IGS-4203,A,B,
C,-1

PRELIMINARY

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGS-59A	1	Lead Assembly
IG-680	1	Lock Spring Ring	IGS-55	1	Terminal
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY	X-936	1	Terminal
IG-514	1	Contact Spring Plunger	IGS-89	1	Lead Assembly
IG-515	1	Contact Spring	IGS-88	2	Terminal
IGS-32	1	Rubber Plug	*	1	Breaker Plate Part Assy.
IGH-28	1	Cam Sleeve Felt Wick	IGS-1082R	1	Breaker Sub Plate Assy.
IGS-18	2	Bearing Clamp	IGS-1086RM†	1	Breaker Point
IGS-19S	1	Drive Shaft Collar	8X-350	1	#8 Plain Washer
IGS-34	1	Terminal Slot Cover	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGS-99	1	Washer	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IGS-104	1	Thrust Washer	X-1012	4	#6 Lock Washer
IGS-114†	1	Advance Control Arm	8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IGS-1016B	1	ROTOR	SW-213	1	Distributor Drive Rivet
*	1	Cam & Stop Plate - 6 Cyl. R.H.	SW-634†	1	Plain Washer
*	1	Drive Shaft & Gov. Assy.	*	1	Vacuum Chamber Assembly
IG-1456	2	Weight Assembly	VC-14	1	Gasket - 1/32" Thick
*	1	Weight Spring Set	VC-15	1	Plug
IGS-1113R	1	Drive Shaft Assembly	VC-46	+	Washer - .032" Thick
IGS-2126	1	Distributor Base Assembly	VC-46A	+	Washer - .010" Thick
IG-579A	1	Absorbent Bronze Brg.- Lower	VC-46B	+	Washer - .065" Thick
IG-579D	1	Absorbent Bronze Brg.- Upper	*	1	Spring
IG-694	2	Dist. Cap Spring	8X-86†	1	1/4-20x5/8 Hex. Hd. Screw
IGS-117	1	Felt Wick	12X-199†	1	1/4 Lock Washer
X-1448	2	Hinge Pin	8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1590	1	1/4 Oiler-Press in Elbow	8X-872	2	#10-32x1/4 Fill. Hd. Screw
*	1	Breaker Plate Assembly	X-1270	4	#10 Skpf. Washer
IA-131	1	Breaker Arm Spring Clip			1 2 3 4 5
IG-3927A	1	CONDENSER ASSEMBLY			(Issued 10-6-41)
IGE-15	1	#6 Plain Washer			† SERVICE CONTACT SET IGP-3028ES.
IGP-3028†	1	Breaker Arm Assembly			† Used with assemblies having suffix "-1".
IGP-30	1	Breaker Arm Spring			+ Use as required.
		1 2 3 4 5			* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Dr. Shaft & Gov.	Weight Spr. Set	Breaker Plate Assy.	Identified By †
IGS-4203	IGS-1100RA	IGS-2113R	IGB-292SS	IGS-3004B	8
IGS-4203A	IGS-1100RW	IGS-2113R-1	IGB-292SS	IGS-3004K	9
IGS-4203B	IGS-1100RX	IGS-2113RA	IG-636HS	IGS-3004J	8.5
IGS-4203C	IGS-1100RX	IGS-2113RA	IG-636HS	IGS-3004N	7.5

Assembly No.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring
IGS-4203	IGS-1004A	VC-3082RAS	VC-73 (Cadmium Plate & Green)
IGS-4203A	IGS-1004M	VC-3082RDS	VC-45 (Red)
IGS-4203B	IGS-1004L	VC-3082RCS	VC-50 (Orange)
IGS-4203C	IGS-1004D	VC-3082RJS	VC-50 (Orange)

UNIT	APPLICATION
IGS-4203,-1	Dodge
IGS-4203A,-1	Dodge, Plymouth
IGS-4203B,-1	Dodge
IGS-4203C,-1	Dodge, Plymouth

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4204,-1 DISTRIBUTOR PARTS LIST

IGS-4204,-1

PRELIMINARY

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1					Thrust Washer
IG-680	1					Lock Spring Ring
IGC-1107S	1					DISTRIBUTOR CAP ASSEMBLY
IG-514	1					Contact Spring Plunger
IG-515	1					Contact Spring
IGS-32	1					Rubber Plug
IGH-28	1					Cam Sleeve Felt Wick
IGS-18	2					Bearing Clamp
IGS-19S	1					Drive Shaft Collar
IGS-34	1					Terminal Slot Cover
IGS-99	1					Washer
IGS-104	1					Thrust Washer
IGS-114†	1					Advance Control Arm
IGS-1016B	1					ROTOR
IGS-1100R	1					Cam & Stop Plate - 6 Cyl. R.H.
IGS-2116R	1					Drive Shaft & Gov. Assy.
IG-636SS	1					Weight Spring Set
IG-1456	2					Weight Assembly
IGS-1116R	1					Drive Shaft Assembly
IGS-2126	1					Distributor Base Assembly
IG-579A	1					Absorbent Bronze Brg. - Lower
IG-579D	1					Absorbent Bronze Brg. - Upper
IG-694	2					Dist. Cap Spring
IGS-117	1					Felt Wick
X-1448	2					Hinge Pin
X-1590	1					1/4 Oiler - Press in Elbow
IGS-3004	1					Breaker Plate Assembly ‡ Identified by 10
IA-131	1					Breaker Arm Spring Clip
IG-3927A	1					CONDENSER ASSEMBLY
IGE-15	1					#6 Plain Washer
IGP-3028†	1					Breaker Arm Assembly
IGP-30	1					Breaker Arm Spring
IGS-59A	1					Lead Assembly
IGS-55	1					Terminal
X-936	1					Terminal
IGS-89	1					Lead Assembly
IGS-88	2					Terminal
IGS-1004	1					Breaker Plate Part Assy.
IGS-1082R	1					Breaker Sub Plate Assy.
IGS-1086RM†	1					Breaker Point
8X-350	1					#8 Plain Washer
8X-884	1					#8-32x3/16 Fill. Hd.Sc.
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-323	1					#6-32x5/16 Rd. Hd. Screw
X-1012	4					#6 Lock Washer
8X-1546	4					#6-32x5/32 Fill. Hd. Sc.
SW-213	1					Distributor Drive Rivet
SW-6341	1					Plain Washer
VC-3082RS	1					Vacuum Chamber Assembly
VC-14	1					Gasket - 1/32" Thick
VC-15	1					Plug
VC-46	*					Washer - .032" Thick
VC-46A	*					Washer - .010" Thick
VC-46B	*					Washer - .065" Thick
VC-50	1					Spring (Orange)
8X-83†	1					1/4-20x5/8 Hex. Hd. Screw
12X-199†	1					1/4 Lock Washer
8X-870	2					#10-32x5/16 Fill. Hd. Screw
8X-872	2					#10-32x1/4 Fill. Hd. Screw
X-1270	4					#10 Skpf. Washer
		1	2	3	4	5

(Issued 7-3-41)

† SERVICE CONTACT SET IGP-3028ES.

‡ Used with assemblies having the suffix "-1".

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4204,-1	Plymouth

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4205, A,B DISTRIBUTOR PARTS LIST

IGS-4205, A,B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft Lower	8X-350	1	Washer, Plain, Contact Lock Screw, #8
IG-680	1	Snap Ring., Cam Retaining	8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IG-816C	1	Washer, Thrust, Advance Arm.	8X-323	1	Screw, Spring Clamp Rd. Hd., #6-32x5/16
IG-853	1	Collar, Shaft, Dist.	12X-1012	4	Lockwasher, #6
IGC-1107S	1	Cap Assy., Dist.	8X-1546	4	Screw, Fil. Hd., #6-32x5/32
IG-514	1	Contact, Plunger	*	1	Spring, Anti-Rattle
IG-515A	1	Spring, Contact	SW-213	1	Rivet, Collar, Drive Shaft
IGS-32	1	Plug, Vent. Hole Rubber	VC-14	1	Gasket 1/32" Thick
IGE-1048A	1	Arm, Advance	VC-15	1	Plug
IGH-28	1	Wick, Felt, Cam Sleeve	VC-46	**	Washer, .032" Thick
IGS-17	1	Ring, Lock	VC-46A	**	Washer, .010" Thick
IGS-18	2	Clamp, Bearing, Sub Plate	VC-46B	**	Washer, .035" Thick
IGS-34	1	Cover, Terminal Slot	VC-77	1	Spring
IGS-99	1	Spacer, Cam	VC-2082R	1	Vacuum Chamber
IGS-104	1	Washer, Thrust, Drive Shaft Upper	X-196	1	Lockwasher, Term. Screw #10
IGS-1016B	1	Rotor	8X-870	2	Screw, Breaker, Plate, Mtg. Fil. Hd., #10-32x5/16
*	1	Cam & Stop Plate, 6 Cyl. R.H.	8X-872	3	Screw, Term. & Vac. Chamber Mtg., Fil. Hd. #10-32x1/4
*	1	Shaft & Gov. Assy.	X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10
*	1	Spring, Set, Gov. Weight			1 2 3 4 5
IG-1456	2	Weight, Governor			
IGS-1131R	1	Shaft, Drive			
IGS-2132	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze			
IG-694	2	Spring, Clamp Cap			
IGS-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler, Press in Elbow, 1/4			
IGS-3092RA	1	Plate Assy., Breaker ‡ Identified by 6			
IA-131	1	Clip, Spring, Contact Arm			
IG-2671F	1	Condenser			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028ES	1	Contact Set, Breaker			
IGS-89	1	Lead Assy.			
IGS-88	2	Terminal			
IGS-181	1	Lead Assy.			
IGS-88	2	Terminal			
IGS-1004J	1	Plate Breaker			
IGS-1092RS	1	Plate Assy., Sub			

** Used As Required

‡ See Manual Bulletin No. IG-11

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Shaft & Gov. Assy.	Spring Set Gov. Weight	Spring Anti-Rattle
IGS-4205	IGS-1100RW	IGS-2131R	IG-636HS	None
IGS-4205A	IGS-1100RA	IGS-2131R-1	IG-636HS	None
IGS-4205B	IGS-1100RH	IGS-2131RA	IGB-208AS	IGT-70

UNIT	APPLICATION
IGS-4205, A,B	Nash

(Issued 10-8-47)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4207-1,A-1,B-1 DISTRIBUTOR PARTS LIST

IGS-4207-1,
A-1, B-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower	IGS-1082RS	1	Plate Assy., Sub, Breaker
IG-680	1	Snap Ring, Cam Retaining	8X-350	1	Washer, Plain, Contact Lock Screw, #8
IG-1456	2	Weight, Governor	8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
*	1	Spring Set, Gov. Weight	X-194	4	Lockwasher, #6
IGC-1107S	1	Cap Assy., Dist.	8X-1546	4	Screw, Fil. Hd., #6-32x5/32
IG-514	1	Contact, Plunger	SW-213	1	Rivet, Collar, Drive Shaft
IG-515A	1	Spring, Contact	SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
IGS-32	1	Plug, Vent. Hole, Rubber	VC-14	1	Gasket, Spring Seat Plug
IGH-28	1	Wick, Felt, Cam Sleeve	VC-15	1	Plug, Spring Seat
IGS-18	2	Clamp, Bearing, Sub Plate	*	1	Spring
IGS-19S	1	Collar, Shaft	VC-46	**	Washer, .032" Thick
IGS-34	1	Cover, Terminal Slot	VC-46A	**	Washer, .010" Thick
IGS-99	1	Spacer, Cam	VC-46B	**	Washer, .065" Thick
IGS-104	1	Washer, Thrust, Drive Shaft, Upper	VC-2082R	1	Vacuum Chamber
IGS-114	1	Arm, Advance	8X-86	1	Screw, Advance Arm, Hex. Hd., 1/4-20x5/8
IGS-1016B	1	Rotor	12X-199	1	Lockwasher, Advance Arm., 1/4
*	1	Cam, & Stop Plate, 6 Cyl., R.H.	8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
IGS-1113R	1	Shaft, Drive	8X-872	2	Screw, Vacuum Chamber, Mtg., Fil. Hd., #10-32x1/4
IGS-2158	1	Base Assy., Dist.	X-1270	4	Washer, Breaker Plate Mtg. & Vacuum Chamber Mtg. Sc., Skpf., #10
IG-579A	2	Bearing, Absorbent Bronze, Lower			
IG-694	2	Spring, Clamp, Cap			
IGS-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler			
*	1	Plate Assy., Breaker			
IA-131	1	Clip, Spring, Contact Arm			
IG-3927G	1	Condenser			
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028ES	1	Contact Set, Breaker			
IGS-89	1	Lead Assy.			
IGS-181	1	Lead Assy.			
*	1	Plate, Breaker			

* See table following parts list for part number applying to assembly wanted.

** Use as required.

± See Manual Bulletin IG-11.


Assembly No.	Cam & Stop Plate	Spring Set Gov. Weight	Plate Assy., Identified Breaker	By ±	Plate Breaker	Spring
IGS-4207-1	IGS-1100RW	IGB-292SS	IGS-3004	10	IGS-1004	VC-49 (Blue)
IGS-4207A-1	IGS-1100RX	IG-636HS	IGS-3004J	8.5	IGS-1004L	VC-45 (Red)
IGS-4207B-1	IGS-1100RX	IGB-353BS	IGS-3004B	8	IGS-1004A	VC-119

(Issued 6-15-49)

Printed in U. S. A.

File in
Equipment & Parts List Binder

 "NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4208-1,A-1,B-1 DISTRIBUTOR PARTS LIST

IGS-4208-1,
A-1, B-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower	IGS-89	1	Lead Assy.
*	1	Spring Set, Gov. Weight	IGS-181	1	Lead Assy.
IG-680	1	Snap Ring, Cam Retaining	*	1	Plate, Breaker
IG-1456	2	Weight, Governor	IGS-1082RS	1	Plate Assy., Sub Breaker
IGC-1107S	1	Cap Assy., Dist.	8X-350	1	Washer, Plain, Contact Lock Screw, #8
IG-514	1	Contact, Plunger	8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd. #8-32x3/16
IG-515A	1	Spring, Contact	X-194	4	Lockwasher, #6
IGS-32	1	Plug, Vent. Hole, Rubber	8X-1546	4	Screw, Fil. Hd., #6-32x5/32
IGH-28	1	Wick, Felt, Cam Sleeve	SW-213	1	Rivet, Collar, Drive Shaft
IGS-18	2	Clamp, Bearing, Sub Plate	SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
IGS-19S	1	Collar, Shaft	VC-14	1	Gasket, Spring Seat Plug
IGS-34	1	Cover, Terminal Slot	VC-15	1	Plug, Spring Seat
IGS-99	1	Spacer, Cam	VC-46	**	Washer, .032" Thick
IGS-104	1	Washer, Thrust, Drive Shaft, Upper	VC-46A	**	Washer, .010" Thick
IGS-114	1	Arm, Advance	VC-46B	**	Washer, .065" Thick
IGS-115	1	Pointer, Advance Arm	*	1	Spring
IGS-1016B	1	Rotor	VC-2082R	1	Chamber Assy., Vacuum Advance
*	1	Cam, & Stop Plate, 6 Cyl., R.H.	8X-86	1	Screw, Attaching, Advance Arm, Hex. Hd., 1/4-20x5/8
IGS-1112R	1	Shaft, Drive	12X-199	1	Lockwasher, Advance Arm Sc., 1/4
IGS-2158	1	Base Assy., Dist.	8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
IG-579A	2	Bearing, Absorbent Bronze, Lower	8X-872	2	Screw, Attaching, Vacuum Chamber, Fil. Hd., #10-32x1/4
IG-694	2	Spring, Clamp, Cap	X-1270	4	Washer, Breaker Plate Mtg. & Vacuum Chamber Mtg. Sc., Skpf. #10
IGS-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler			
*	1	Plate Assy., Breaker			
IA-131	1	Clip, Spring, Contact Arm			
IG-3927G	1	Condenser			
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028ES	1	Contact, Set, Breaker			

* See table following parts list for part number applying to assembly wanted.

** Use as required.

± See Manual Bulletin IG-11.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Plate Assy., Breaker	Identified By ±	Plate Breaker	Spring
IGS-4208-1	IGS-1100R	IG-636NS	IGS-3004M	6	IGS-1004J	VC-50 (Orange)
IGS-4208A-1	IGS-1100RA	IG-636QS	IGS-3004K	9	IGS-1004M	VC-45 (Red)
IGS-4208B-1	IGS-1100RA	IGB-292SS	IGS-3004A	7	IGS-1004E	VC-73 (Green)

(Issued 6-15-49)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

)

)

)

)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4213-1,A-1 DISTRIBUTOR PARTS LIST

IGS-4213-1,A-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower	SW-213	1	Rivet, Collar, Drive Shaft
IG-94	7	Terminal, H.T. Wire	SW-634	1	Washer, Plain, Adv. Arm
IG-680	1	Snap Ring, Cam Retaining	VC-14	1	Gasket - 1/32" Thick
**	1	Spring Set, Gov. Weight	**	1	Plug
IG-1456	2	Weight, Governor	**	*	Washer
IGC-1107S	1	CAP ASSY., DIST.	**	1	Spring
IG-514	1	Contact, Plunger	VC-2082R	1	VACUUM CHAMBER
IG-515A	1	Spring, Contact	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IGS-32	1	Plug, Vent. Hole, Rubber	12X-199	1	Lockwasher, Advance Arm, 1/4
IGH-28	1	Wick, Felt, Cam Sleeve	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IGS-17	1	Ring, Lock	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x5/16
IGS-18	2	Clamp, Bearing, Sub Plate	X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10
IGS-19S	1	Collar, Shaft			
IGS-34	1	Cover, Terminal Stud			
IGS-99	1	Spacer, Cam			
IGS-104	1	Washer, Thrust, Drive Shaft, Upper			
IGS-114	1	Arm, Advance			
IGS-115	1	Pointer, Advance Arm			
IGS-1016B	1	ROTOR			
**	1	Cam & Stop Plate, R.H. 6 Cyl.			
IGS-1183R	1	Shaft, Drive			
IGS-2184	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze			
IG-694	2	Spring, Clamp, Cap			
IGS-117	1	Wick, Felt			
X-1448	2	Pin, Hinge Cap Spring			
X-1590	1	Oiler, Elbow, Press In, 1/4			
IGS-3092RB	1	Plate Assy., Breaker († Identified by 3.5)			
IA-131	1	Clip, Spring, Contact Arm			
IG-3927G	1	CONDENSER			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028ES	1	CONTACT SET, BREAKER			
IGS-89	1	Lead Assy.			
IGS-181	1	Lead Assy.			
IGS-1004N	1	Plate, Breaker			
IGS-1092RS	1	Plate Assy., Sub, Breaker			
8X-350	1	Washer, Plain, Contact Lock Sc., #8			
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16			
12X-194	4	Lockwasher, #6			
8X-323	1	Screw, Spring Clamp, Rd. Hd. #6-32x5/16			
8X-1546	4	Screw, Fill. Hd. #6-32x5/32			

* Use as Required
 ** See table following parts list for part number applying to assembly wanted.
 † See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4213-1,A-1	Hudson

Unit	Cam & Stop Plate	Gov. Weight Spring Set	Plug	Washer	Spring
IGS-4213-1	IGS-1100RA	IG-863S	VC-15	VC-46 - .032" Thick VC-46A - .010" Thick VC-46B - .065" Thick	VC-150 (Yellow)
IGS-4213A-1	IGS-1100RW	IGB-339S	VC-98	VC-154 - .032" Thick	VC-155 (Cadmium Plate)

Printed in U. S. A. (Issued 1-31-49) File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4214 DISTRIBUTOR PARTS LIST

IGS-4214

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower	SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
IG-94	7	Terminal, H.T. Wire	VC-14	*	Gasket 1/32" Thick
IG-644A	1	Coupling Drive, Dist.	VC-14A	*	Gasket
IG-680	1	Snap Ring, Cam Retaining	VC-15	1	Plug
IGB-222S	1	Spring Set, Gov. Weight	VC-46	*	Washer, .032" Thick
IGC-1107S	1	CAP ASSY., DIST.	VC-46A	*	Washer, .010" Thick
IG-514	1	Contact, Plunger	VC-46B	*	Washer, .065" Thick
IG-515A	1	Spring, Contact	VC-55	1	Spring
IGS-32	1	Plug, Vent. Hole, Rubber	VC-2082A	1	VACUUM CHAMBER
IGC-2168L	2	Weight, Governor	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IGH-28	1	Wick, Felt, Cam Sleeve	12X-196	1	Lockwasher, Terminal Screw, #10
IGS-18	2	Clamp, Bearing, Sub Plate	12X-199	1	Lockwasher, Advance Arm, 1/4
IGS-34	1	Cover, Terminal Slot	8X-870	2	Screw, Breaker Plate Mtg. Fill. Hd. #10-32x5/16
IGS-99	1	Spacer, Cam	8X-872	3	Screw, Terminal & Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IGS-104	1	Washer, Thrust, Drive Shaft, Upper	X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg. Sc., Skpf. #10
IGS-169	1	Arm, Advance	* Use as Required.		
IGS-1016B	1	ROTOR			
IGS-1100LQ	1	Cam & Stop Plate, 6 Cyl., L.H.			
IGS-1180L	1	Shaft, Drive			
IGS-2170	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze			
IG-694	2	Spring, Clamp, Cap			
IGS-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler, Elbow, Press in, 1/4			
IGS-3004LC	1	Plate Assy., Breaker			
		Identified by 5L			
IA-131	1	Clip, Spring, Contact Arm			
IG-2671K	1	Condenser			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028JS	1	CONTACT SET, BREAKER			
IGS-89	1	Lead Assy.			
IGS-181	1	Lead Assy.			
IGS-1044C	1	Plate, Breaker			
IGS-1082LS	1	Plate Assy., Sub, Breaker			
8X-350	1	Washer, Plain, Contact Lock Sc., #8			
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16			
8X-323	1	Screw, Spring Clamp, Rd. Hd., #6-32x5/16			
12X-1012	4	Lockwasher, Cond. & Lead Sc., #6			
8X-1546	4	Screw, Condenser & Lead, Fill. Hd. #6-32x5/32			
IGT-69	1	Spring, Anti-Rattle			
SW-213	1	Rivet, Coupling, Drive Shaft			

UNIT	APPLICATION
IGS-4214	Kaiser, Frazer

(Issued 9-27-48)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4001,A,
B,C,D,E,F, DISTRIBUTOR PARTS LIST
G,J,K & -1

IGT-4001,A,
B,C,D,E,F,
G,J,K & -1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 2 3 4 5 Thrust Washer	*	1	1 2 3 4 5 Breaker Plate Assy.
IG-680	1	Lock Spring Ring	IA-131	1	Breaker Arm Spring Clip
IGB-199	1	Dist. Shaft Collar	IG-3927	1	CONDENSER ASSEMBLY
IGE-35	1	Governor Control Spring	IGP-3028†	1	Breaker Arm Assy.
IGH-28	1	Cam Sleeve Felt Wick	IGP-30	1	Breaker Arm Spring
IGP-1003	1	DISTRIBUTOR CAP ASSY.	IGS-52	1	Lead Clip
IG-514	1	Contact Spring Plunger	IGT-11A	1	Lead Assembly
IG-515	1	Contact Spring	X-935	1	Terminal
IGP-1016	1	ROTOR	X-936	1	Terminal
IGS-21†	1	Advance Pointer	*	1	Breaker Plate Part Assy.
IGS-34	1	Terminal Slot Cover	IGT-1012	1	Breaker Sub Plate Assy.
IGS-99	1	Washer	IB-23	1	Breaker Point Lock Nut
IGS-104	1	Thrust Washer	IGP-33†	1	Breaker Screw Point
IGS-1020S†	1	Advance Control Arm Assy.	IGT-14A	1	Lead Assembly
IG-816C†	1	Thrust Washer	X-936	2	Terminal
8X-135†	1	1/4-20x2 Fill. Hd. Screw	X-1012	1	#6 Lock Washer
8X-146†	1	1/4-20 Hex. Nut	8X-1546	1	#6-32x5/32 Fill. Hd. Sc.
12X-199†	1	1/4 Lock Washer	8X-323	1	#6-32x5/16 Rd. Hd. Sc.
IGT-18	2	Bearing Clamp	X-1012	4	#6 Lock Washer
IGT-23	1	Vacuum Chamber Bracket	8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
*	1	Cam & Stop Plate - 8 Cyl.R.H.	SW-213	1	Dist. Drive Rivet
*	1	Vacuum Chamber Assy.	8X-311	2	#10-32x3/8 Rd. Hd. Screw
VC-14	1	Gasket - 1/32" Thick	8X-321	2	#10-32x5/16 Rd. Hd. Screw
VC-15	1	Plug	8X-870	2	#10-32x5/16 Fill. Hd. Sc.
VC-46	+	Washer - .032" Thick	X-1270	8	#10 Skpf. Washer
VC-46A	+	Washer - .010" Thick			1 2 3 4 5
VC-46B	+	Washer - .065" Thick			
*	1	Spring			
IGT-2001	1	Distributor Base Assy.			(Issued 2-1-40)
IG-579A	2	Absorbent Bronze Brg.			+ Use as required.
IG-694	2	Dist. Cap Spring			† Used with assemblies having a suffix "-1".
X-382	1	1/8 Grease Cup			* See table following parts list for part number applying to assembly wanted.
X-1448	2	Hinge Pin			‡ SERVICE BREAKER POINT SET IGP-3028A.
*	1	Drive Shaft & Gov. Assy.			
IG-1456	2	Weight Assembly			
*	1	Weight Spring Set			
*	1	Drive Shaft Assy.			
		1 2 3 4 5			

Assembly No.	Cam Assembly	Vacuum Chamber	Spring	Dr. Shaft & Gov.	Dr. Shaft Assy.
IGT-4001	IGT-1021RC	IGT-1023AS	VC-45 (Red)	IGT-2002R	IGT-1002R
IGT-4001A	IGT-1021RD	IGT-1023BS	VC-45 (Red)	IGT-2002RA	IGT-1002R
IGT-4001B	IGT-1021RE	IGT-1023AS	VC-45 (Red)	IGT-2002RB	IGT-1002R
IGT-4001C	IGT-1021RD	IGT-1023CS	VC-52 (Green)	IGT-2002RD	IGT-1002R
IGT-4001D	IGT-1021RC	IGT-1023AS	VC-45 (Red)	IGT-2002RE	IGT-1002R
IGT-4001E	IGT-1021RD	IGT-1023AS	VC-45 (Red)	IGT-2002RF	IGT-1002R
IGT-4001F	IGT-1021RA	IGT-1023AS	VC-45 (Red)	IGT-2002RH	IGT-1002RB
IGT-4001G	IGT-1021RB	IGT-1023DS	VC-50 (Orange)	IGT-2002RE-1	IGT-1002R
IGT-4001J	IGT-1021RD	IGT-1023ES	VC-45 (Red)	IGT-2002RD	IGT-1002R
IGT-4001K	IGT-1021R	IGT-1023GS	VC-73 (Maroon)	IGT-2002RH-1	IGT-1002RB

Assembly No.	Weight Sp. Set	Bkr. Plate Assy.	Bkr. Plate Part Assy.
IGT-4001	IGB-284S	IGT-2004	IGT-1004
IGT-4001A	IGC-78S	IGT-2004A	IGT-1004A
IGT-4001B	IGE-29S	IGT-2004	IGT-1004
IGT-4001C	IGB-265S	IGT-2004B	IGT-1004B
IGT-4001D	IGB-392S	IGT-2004	IGT-1004
IGT-4001E	IGB-293S	IGT-2004	IGT-1004
IGT-4001F	IG-636BS	IGT-2004	IGT-1004
IGT-4001G	IGB-292S	IGT-2004	IGT-1004
IGT-4001J	IGB-265S	IGT-2004C	IGT-1004C
IGT-4001K	IG-636BS	IGT-2004A	IGT-1004A

UNIT	APPLICATION
IGT-4001,A,B, C,D,E	Chrysler
IGT-4001F	Chrysler, Chrysler Industrial
IGT-4001G,J,K	Chrysler


Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking such parts the complete part can be assembled as needed."

IGT-4001,A,B,C,D,E,F,G,J,K &-1 DISTRIBUTOR ILLUSTRATION

- IGT-1021 RC
- IGT-1021 RD(A)
- IGT-1021 RE(B)
- IGT-1021 RD(C)
- IGT-1021 RC(D)
- IGT-1021 RD(E)
- IGT-1021 RA(F)
- IGT-1021 RB(G)
- IGT-1021 RD(J)
- IGT-1021 R (K)

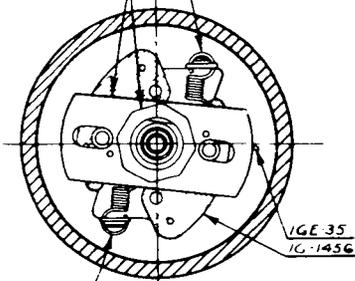

- IGB-284
- IGC-78 (A)
- IGE-29 (B)
- IGB-265(C)
- IGB-292(D)
- IGB-293(E)
- IG-636 (F)
- IGB-292(G)
- IGB-265 (J)
- IG-727 (A)

- IGB-284
- IGC-78 (A)
- IGE-29 (B)
- IGB-265(C)
- IGB-292(D)
- IGB-293(E)
- IG-727 (F)
- IGB-292(G)
- IGB-265(J)
- IG-636 (A)


- IGT-1004
- IGT-1004A (A)
- IGT-1004 (B)
- IGT-1004 B(C)
- IGT-1004 (D)
- IGT-1004 (E)
- IGT-1004 (F)
- IGT-1004 (G)
- IGT-1004C(J)
- IGT-1004A(K)

- IGS-99
- IGS-104

- IGT-2002R
- IGT-2002RA(A)
- IGT-2002RB(B)
- IGT-2002RD(C)
- IGT-2002RE(D)
- IGT-2002RF(E)
- IGT-2002RH(F)
- IGT-2002RE-1(G)
- IGT-2002RD(J)
- IGT-2002RH-1(K)

- IG-579A
- IGT-2001

- IGT-1002 R
- IGT-1002 R (A)
- IGT-1002 R (B)
- IGT-1002 R (C)
- IGT-1002 R (D)
- IGT-1002 R (E)
- IGT-1002 RB(F)
- IGT-1002 R (G)
- IGT-1002 R (J)
- IGT-1002RB(K)

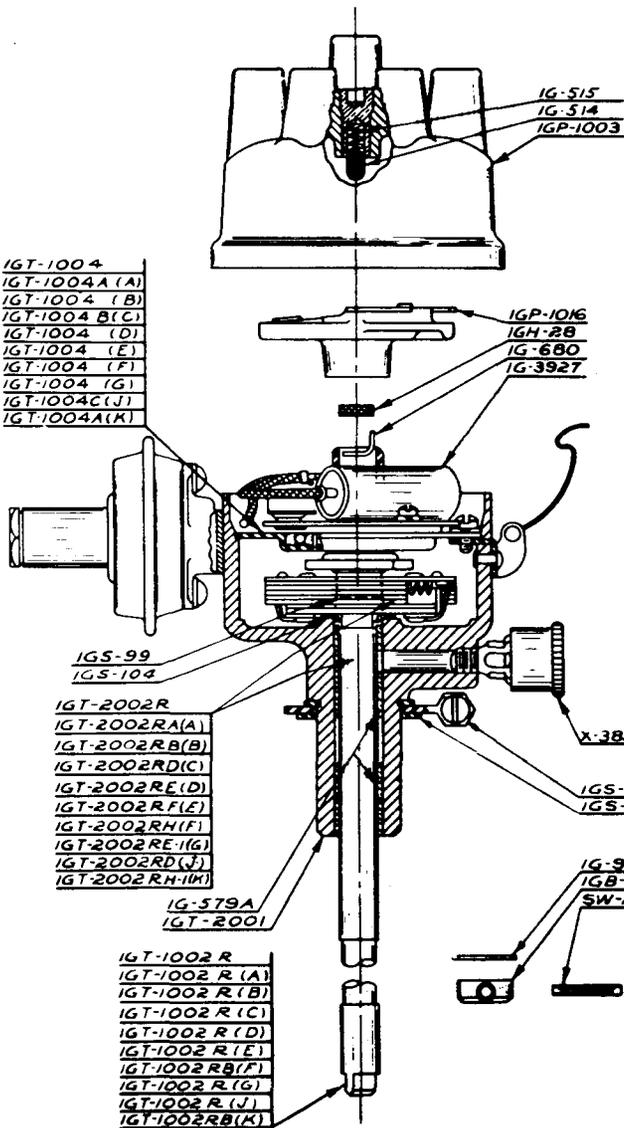

- IG-90
- IGB-199
- SW-213

- VC-15
- VC-14
- VC-46
- VC-46-A
- VC-46-B
- VC-45
- VC-45(A)
- VC-45(B)
- VC-52(C)
- VC-45(D)
- VC-45(E)
- VC-45(F)
- VC-50(G)
- VC-45(J)
- VC-73(K)


- IGT-1023 AS
- IGT-1023 AS(A)
- IGT-1023 AS(B)
- IGT-1023 CS(C)
- IGT-1023 AS(D)
- IGT-1023 AS(E)
- IGT-1023 AS(F)
- IGT-1023 DS(G)
- IGT-1023 ES(J)
- IGT-1023 GS(K)

- BX-311
- X-1270
- IGT-23
- X-936
- IA-131
- BX-323
- IGP-3020
- IGT-11A
- IGP-30

- IG-694
- IGS-52
- X-144B

- BX-1546
- X-935
- BX-1546
- BX-872
- IGS-34

- IGT-2004
- IGT-2004A (A)
- IGT-2004 (B)
- IGT-2004B (C)
- IGT-2004 (D)
- IGT-2004 (E)
- IGT-2004 (F)
- IGT-2004 (G)
- IGT-2004C (J)
- IGT-2004A (K)

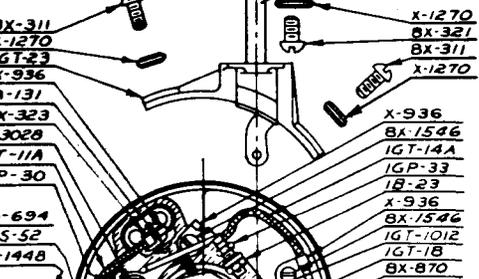

- X-1270
- BX-321
- BX-311
- X-1270
- X-936
- BX-1546
- IGT-14A
- IGP-33
- IB-23
- X-936
- BX-1546
- IGT-1012
- IGT-18
- BX-870

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4003,A DISTRIBUTOR PARTS LIST

IGT-4003,A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGT-1030	1	Breaker Plate Part Assy.
IG-94	9	H.T. Wire Terminal	IGT-1031	1	Breaker Sub Plate Assy.
IG-644	1	Dist. Drive Coupling	IB-23	1	Breaker Point Lock Nut
IG-690	1	Lock Spring Ring	IGP-33†	1	Breaker Screw Point
IG-816A	1	Thrust Washer	IGT-35	1	Lead Assy.
IGB-162	1	Thrust Washer	X-1484	2	Terminal
IGC-24N	1	Advance Control Arm	8X-317	1	#6-32x1/8 Rd. Hd. Sc.
IGE-36	1	Governor Control Spring	X-1012	1	#6 Lock Washer
IGH-28	1	Cam Sleeve Felt Wick	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IGK-26	1	Washer - .020" Thick	8X-873	3	#6-32x3/16 Fill. Hd. Sc.
IGP-1003B	1	Dist. Cap Assy.	X-1012	4	#6 Lock Washer
IG-514	1	Contact Spring Plunger	SW-213	1	Dist. Drive Rivet
IG-515	1	Contact Spring	8X-86	1	1/4-20x5/8 Hex. Hd. Screw
IGP-1016	1	Rotor	8X-146	1	1/4-20 Hex. Nut
IGS-34	1	Terminal Slot Cover	8X-163	1	1/4-20 Hex. Nut
IGT-18	2	Bearing Clamp	X-196	1	#10 Lock Washer
IGT-28	1	Vacuum Chamber Bracket	X-199	2	1/4 Lock Washer
IGT-1022L	1	Cam & Stop Plate - 8 Cyl. - L.H.	8X-311	2	#10-32x3/8 Rd. Hd. Screw
IGT-1028S	1	Vacuum Chamber	8X-321	2	#10-32x5/16 Rd. Hd. Screw
*	1	Drive Shaft & Gov. Assy.	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
*	1	Dist. Shaft Assy. L.H.	8X-870	2	#10-32x5/16 Fill. Hd. Sc.
IG-2456	2	Weight Assy.	8X-872	1	#10-32x1/4 Fill. Hd. Screw
*	2	Weight Spring	X-1270	6	#10 Skpf. Washer
IGT-2027	1	Dist. Base Assy.			1 2 3 4 5
IG-579A	2	Absorbent Bronze Arg.			(Issued 11-1-37)
IG-694	2	Dist. Cap Spring			
X-382	1	1/8 Grease Cup			
X-1448	2	Hinge Pin			
IGT-2030	1	Breaker Plate Assy. ▽ Identified by 10			
IA-131	1	Breaker Arm Spring Clip			
IG-2671J	1	Condenser Assy.			
IGP-3028L†	1	Breaker Arm Assy.			
IGP-30L	1	Breaker Arm Spring			
IGS-52	1	Lead Clip			
IGT-11A	1	Lead Assy.			
X-935	1	Terminal			
X-936	1	Terminal			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assembly	Weight Spring	Weight Sp. Set
IGT-4003	IGT-2024L	IGT-1024L	IGB-234 IGB-284	IGB-284SS
IGT-4003A	IGT-2024LA	IGT-1024LA	IG-636 IGB-284	IG-636AS

▽ See Manual Bulletin IG-11.

* See table following parts list for part number applying to assembly wanted.

† Service Breaker Point Set IGP-3028LS.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4004 DISTRIBUTOR PARTS LIST

IGT-4004

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGT-2032	1	Dist. Base Assy.
IG-94	9	H. T. Wire Terminal	IG-511	1	Name Plate
IG-680	1	Lock Spring Ring	IG-579A	2	Absorbent Bronze Erg.
IGB-162	1	Thrust Washer	IG-694	2	Dist. Cap Spring
IGE-36	1	Governor Control Spring	X-382	1	1/8 Grease Cup
IGH-28	1	Cam Sleeve Felt Wick	X-1201	2	.10x1/4 Tubular Rivet
IGH-53	1	Drive Shaft Extension	X-1448	2	Hinge Pin
IGH-54	1	Dist. Drive Sleeve	IGT-2034L	1	Drive Shaft & Gov. Assy.
IGH-55	1	Drive Shaft Pin	IG-2456	2	Weight Assy.
IGH-1060	1	Advance Control Arm	IGB-277†	2	Weight Spring
IGK-26	1	Washer - .020" Thick	IGT-1034L	1	Drive Shaft Assy.
IGP-1003	1	Dist. Cap Assy.	SW-213	1	Dist. Drive Rivet
IG-514	1	Contact Spring Plunger	X-196	1	#10 Lock Washer
IG-515	1	Contact Spring	8X-311	2	#10-32x3/8 Rd. Hd. Screw
IGP-1016	1	Rotor	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IGS-34	1	Terminal Slot Cover	8X-870	2	#10-32x5/16 Fill. Hd. Screw
IGT-18	2	Bearing Clamp	8X-872	1	#10-32x1/4 Fill. Hd. Screw
IGT-28	1	Vacuum Chamber Bracket	X-1270	6	#10 Skpf. Washer
IGT-1022LA	1	Cam & Stop Plate - 8 Cyl. L. H.			1 2 3 4 5
IGT-1028BS	1	Vacuum Chamber Assy.			(Issued 11-21-38)
VC-14	1	Gasket - 1/32" Thick			
VC-15	1	Plug			
VC-46	*	Washer - .032" Thick			
VC-46A	*	Washer - .010" Thick			
VC-46B	*	Washer - .065" Thick			
VC-50	1	Spring (Orange)			
IGT-2030A	1	Breaker Plate Assy. ‡ Identified by 7.5			
IA-131	1	Breaker Arm Spring Clip			
IG-2671J	1	Condenser Assy.			
IGP-3028L‡	1	Breaker Arm Assy.			
IGP-30L	1	Breaker Arm Spring			
IGS-52	1	Lead Clip			
IGT-11A	1	Lead Assy.			
X-935	1	Terminal			
X-936	1	Terminal			
IGT-1030A	1	Breaker Plate Part Assy.			
IGT-1031A	1	Breaker Sub Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGP-33‡	1	Breaker Screw Point			
IGT-35	1	Lead Assy.			
X-1484	2	Terminal			
8X-317	1	#6-32x1/8 Rd. Hd. Sc.			
X-1012	1	#6 Lock Washer			
8X-323	1	#6-32x5/16 Rd. Hd. Sc.			
8X-873	3	#6-32x3/16 Fill. Hd. Sc.			
X-1012	4	#6 Lock Washer			
		1 2 3 4 5			

‡ Service Breaker Point Set IGP-3028LS, & Service Weight Spring Set IGB-277S.

* Use as required.

‡ See Manual Bulletin IG-11.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4006, A DISTRIBUTOR PARTS LIST

IGT-4006, A


Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Thrust Washer	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IG-680	1	Lock Spring Ring	X-1012	4	#6 Lock Washer
IGB-162	1	Thrust Washer	8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
IGE-35	1	Governor Control Spring	IGT-2023S	1	Vacuum Chamber Assy.
IGH-28	1	Cam Sleeve Felt Wick	VC-14	1	Gasket - 1/32" Thick
IGH-1060A	1	Advance Control Arm	VC-15	1	Plug
IGK-26	1	Washer - .020" Thick	VC-46	+	Washer - .032" Thick
IGL-44	1	Distributor drive coupling	VC-46A	+	Washer - .010" Thick
IGP-1016	1	Rotor	VC-46B	+	Washer - .065" Thick
IGS-34	1	Terminal Slot Cover	VC-50	1	Spring (Orange)
IGT-18	2	Bearing Clamp	*	1	Drive Shaft & Gov. Assy.
IGT-23	1	Vacuum Chamber Bracket	IG-1456	2	Weight Assy.
IGT-42	1	Washer	*	2	Weight Spring
*	1	Lead Assy.	IGT-1036R	1	Drive Shaft Assy.
X-590	1	Terminal	IGT-2037	1	Dist. Base Assy.
X-1053	1	Terminal	IG-511	1	Name Plate
*	1	Cam & Stop Plate - 8 Cyl.R.H.	IG-579A	2	Absorbent Bronze Brg.
IGT-1039	1	Dist. Cap Assy.	IG-694	2	Dist. Cap Spring
IG-514	1	Contact Spring Plunger	X-382	1	1/8 Grease Cup
IG-515	1	Contact Spring	X-1201	2	.10x1/4 Tubular Rivet
IGT-1040	1	Dist. Cap Cover Assy.	X-1448	2	Hinge Pin
IGB-230	2	Gasket	S/W-213	1	Dist. Drive Rivet
IGT-1043	1	Secondary Screw Terminal	X-196	2	#10 Lock Washer
IGT-2004D	1	Breaker Plate Assy.	8X-311	2	#10-32x3/8 Rd. Hd. Screw
		± Identified by 5.5	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IA-131	1	Breaker Arm Spring Clip	8X-870	2	#10-32x5/16 Fill. Hd. Screw
IG-2671G	1	Condenser Assembly	8X-872	1	#10-32x1/4 Fill. Hd. Screw
IGP-3028†	1	Breaker Arm Assy.	X-1270	6	#10 Skpf. Washer
IGP-30	1	Breaker Arm Spring	8X-1340	2	#8-32x3/4 Ctsk. Hd. Screw
IGS-52	1	Lead Clip			1 2 3 4 5
IGT-11A	1	Lead Assy.			(Issued 9-26-38)
X-935	1	Terminal			
X-936	1	Terminal			
IGT-1004D	1	Breaker Plate Part Assy.			
IGT-1012	1	Breaker Sub Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGP-33‡	1	Breaker Screw Point			
IGT-14A	1	Lead Assy.			
X-936	2	Terminal			
X-1012	1	#6 Lock Washer			
8X-1546	1	#6-32x5/32 Fill. Hd. Sc.			
		1 2 3 4 5			

± See Manual Bulletin IG-11.
 ‡ Service Breaker Point Set IGP-3028A.
 + Use as required.
 * See table following parts list for part number applying to assembly wanted.

Assy. No.	Lead Assy.	Shaft & Gov. Assy.	Cam Assy.	Weight Spring	Weight Spring Set
IGT-4006	IGT-45	IGT-2036R	IGT-1022RC	IGB-293 (2)	IGB-293S
IGT-4006A	IGT-60	IGT-2036RA	IGT-1022RE	IGB-292 (1)	IGB-292AS
				IG-913 (1)	

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4006,A DISTRIBUTOR ILLUSTRATION

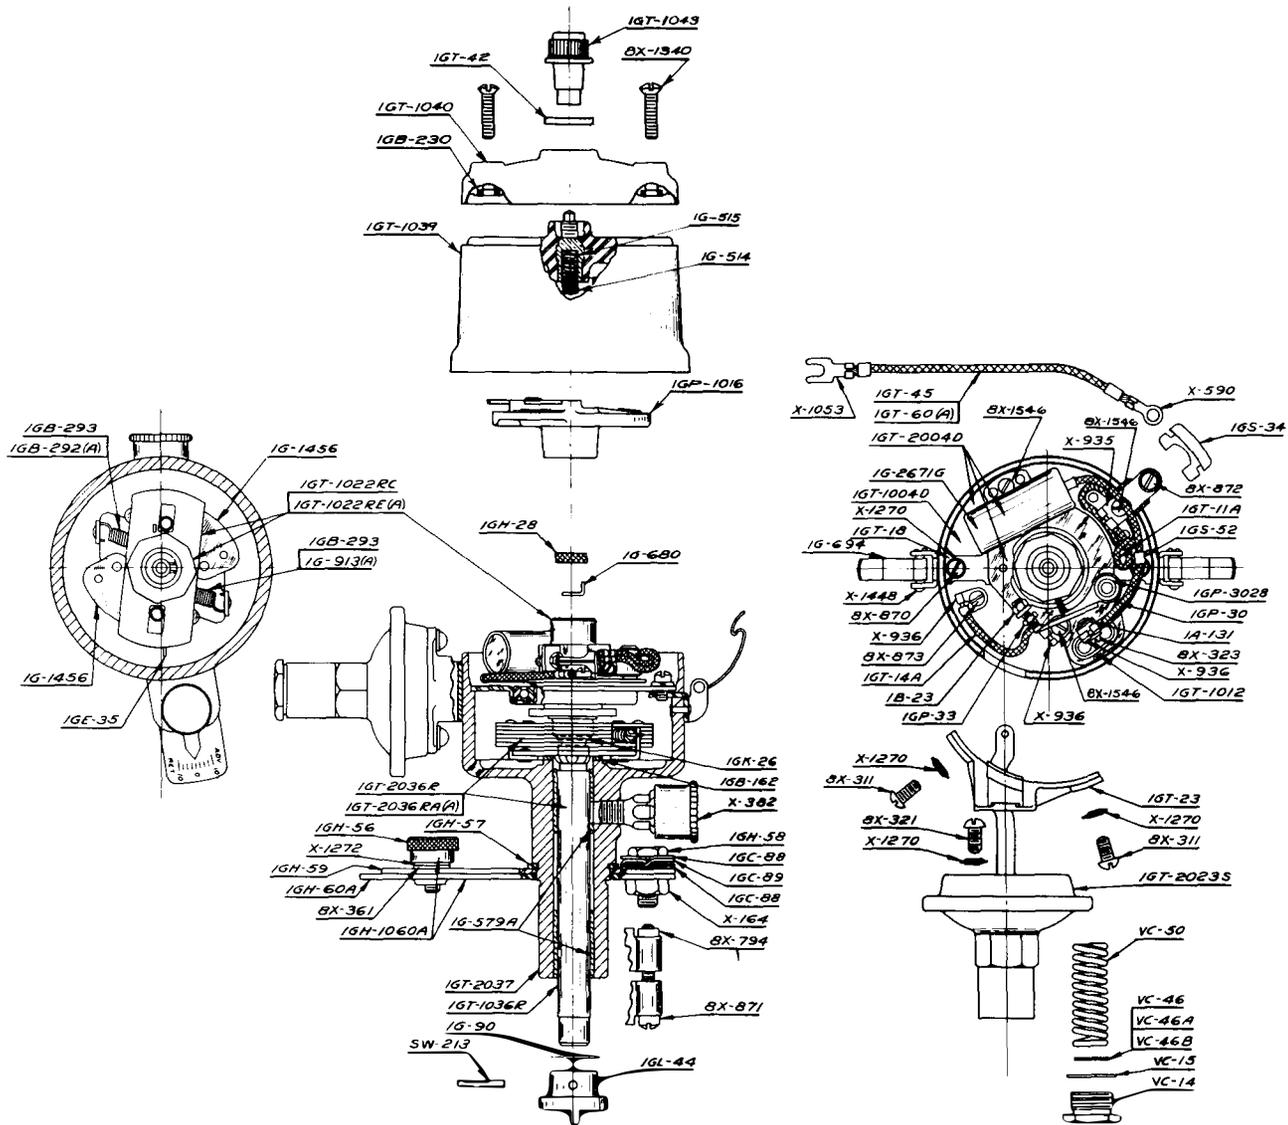

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4007, A DISTRIBUTOR PARTS LIST

IGT-4007, A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGT-11A	1	Lead Assembly
IG-94	9	H. T. Wire Terminal	X-935	1	Terminal
IG-680	1	Lock Spring Ring	X-936	1	Terminal
IGB-162	1	Thrust Washer	*	1	Breaker Plate Part Assy.
IGE-36	1	Anti-Rattle Spring	IGT-1031	1	Breaker Sub Plate Assy.
IGH-28	1	Cam Sleeve Felt Wick	IB-23	1	Breaker Point Lock Nut
IGH-53B	1	Drive Shaft Extension	IGP-33†	1	Breaker Screw Point
IGH-54	1	Dist. Drive Sleeve	IGT-35	1	Lead Assembly
IGH-55	1	Drive Shaft Pin	X-1484	2	Terminal
IGK-26	1	Washer - .020" Thick	8X-317	1	#6-32x1/8 Rd. Hd. Sc.
IGP-1003	1	DIST. CAP ASSEMBLY	X-1012	1	#6 Lock Washer
IG-514	1	Contact Spring Plunger	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IG-515	1	Contact Spring	X-1012	3	#6 Lock Washer
IGP-1016	1	ROTOR	8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
IGS-34	1	Terminal Slot Cover	IGT-2032	1	Dist. Base Assembly
IGT-18	2	Bearing Clamp	IG-511	1	Name Plate
IGT-28	1	Vacuum Chamber Bracket	IG-579A	2	Absorbent Bronze Brg.
IGT-1022LB	1	Cam & Stop Plate - 3 Cyl. L.H.	IG-694	2	Dist. Cap Spring
*	1	Vacuum Chamber Assy.	X-382	1	1/8 Grease Cup
VC-14	1	Gasket 1/32" Thick	X-1201	2	.10x1/4 Tubular Rivet
VC-15	1	Plug	X-1448	2	Hinge Pin
*	1	Spring	IGT-2034LB	1	Drive Shaft & Gov. Assy.
VC-46	‡	Washer - .032" Thick	IG-2456	2	Weight Assembly
VC-46A	‡	Washer - .010" Thick	IGB-210SS	1	Weight Spring Set
VC-46B	‡	Washer - .065" Thick	IGT-1034L	1	Drive Shaft Assy.
IGT-1044	1	Advance Control Arm Assy.	SW-213	1	Dist. Drive Rivet
*	1	Breaker Plate Assy.	X-196	1	#10 Lock Washer
IA-131	1	Breaker Arm Spring Clip	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IG-2671J	1	CONDENSER ASSY.	8X-870	2	#10-32x5/16 Fill. Hd. Sc.
IGE-15	1	#6 Plain Washer	8X-872	1	#10-32x1/4 Fill. Hd. Screw
IGP-3028L†	1	Breaker Arm Assy.	8X-902	2	#10-32x3/8 Fill. Hd. Screw
IGP-30L	1	Breaker Arm Spring	X-1270	6	#10 Skpf. Washer
IGS-52	1	Lead Clip			1 2 3 4 5
		1 2 3 4 5			(Issued 4-25-41)

Assembly No.	Vacuum Chamber	Spring	Bkr. Plate Assy.	Identified By ±	Bkr. Plate Part Assy.
IGT-4007	IGT-1028BS	VC-50 (Orange)	IGT-2030A	7.5	IGT-1030A
IGT-4007A	IGT-2028S	VC-45 (Red)	IGT-2030B	6	IGT-1030B

* See table following parts list for part number applying to assembly wanted.

‡ Use as required.

† Service CONTACT SET IGP-3028LS.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4007, A	Packard

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4008 DISTRIBUTOR PARTS LIST

IGT-4008

PRELIMINARY

Part No.	No. Used	Name of Part	1	2	3	4	5	Part No.	No. Used	Name of Part	1	2	3	4	5
IG-90	1	Thrust Washer						8X-323	1	#6-32x5/16 Rd. Hd. Screw					
IG-644	1	Dist. Drive Coupling						X-1012	3	#6 Lock Washer					
IG-680	1	Lock Spring Ring						8X-1546	3	#6-32x5/32 Fill. Hd. Sc.					
IGB-1154A	1	Advance Control Arm Assy.						IGT-2024RB	1	Drive Shaft & Gov. Assy.					
IGC-104	1	Advance Arm Pointer						IG-1456	2	Weight Assembly					
IGH-28	1	Cam Sleeve Felt Wick						IGB-265S	1	Weight Spring Set					
IGH-30	1	DIST. CAP COVER						IGT-1024R	1	Drive Shaft Assy.					
IGH-36	1	Dist. Cap Nut						IGT-2046	1	Dist. Base Assy.					
IGH-1041	1	ROTOR						IG-511	1	Name Plate					
IGH-1045	1	DIST. CAP ASSEMBLY						IG-579A	2	Absorbent Bronze Brg.					
IG-514	1	Contact Spring Plunger						IG-694	2	Dist. Cap Spring					
IG-515	1	Contact Spring						X-382	1	1/8 Grease Cup					
IGS-34	1	Terminal Slot Cover						X-1201	2	.10x1/4 Tubular Rivet					
IGS-99	1	Washer						X-1448	2	Hinge Pin					
IGS-104	1	Thrust Washer						SW-213	1	Dist. Drive Rivet					
IGT-18	2	Bearing Clamp						8X-183A	1	#10 Plain Washer					
IGT-23	1	Vacuum Chamber Bracket						X-196	2	#10 Lock Washer					
IGT-1021RJ	1	Cam & Stop Plate - 8 Cyl. R.H.						8X-321	2	#10-32x5/16 Rd. Hd. Screw					
IGT-1023BS	1	Vacuum Chamber Assy.						8X-870	2	#10-32x5/16 Fill. Hd. Screw					
VC-14	1	Gasket 1/32" Thick						8X-872	1	#10-32x1/4 Fill. Hd. Screw					
VC-15	1	Plug						8X-902	2	#10-32x3/8 Fill. Hd. Screw					
VC-45	1	Spring (Red)						X-1270	6	#10 Skpf. Washer					
VC-46	*	Washer - .032" Thick													
VC-46A	*	Washer - .010" Thick													
VC-46B	*	Washer - .065" Thick													
IGT-2004A	1	Breaker Plate Assy.													
		‡ Identified by 8													
IA-131	1	Breaker Arm Spring Clip													
IG-3927	1	CONDENSER ASSY.													
IGE-15	1	#6 Plain Washer													
IGP-3028†	1	Breaker Arm Assembly													
IGP-30	1	Breaker Arm Spring													
IGS-52	1	Lead Clip													
IGT-11A	1	Lead Assembly													
X-935	1	Terminal													
X-936	1	Terminal													
IGT-1004A	1	Breaker Plate Part Assy.													
IGT-1012	1	Breaker Sub Plate Assy.													
IB-23	1	Breaker Point Lock Nut													
IGP-33†	1	Breaker Screw Point													
IGT-14A	1	Lead Assembly													
X-936	2	Terminal													
X-1012	1	#6 Lock Washer													
8X-1546	1	#6-32x5/32 Fill. Hd. Screw													
			1	2	3	4	5								

(Issued 4-25-41)

† Service CONTACT SET IGP-3028A.

* Use as required.

‡ See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4008	Hupmobile

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4101,A, DISTRIBUTOR PARTS LIST
B,-1,-2

IGT-4101,A,
B,-1,-2

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	*	1	Breaker Plate Assy.
IG-680	1	Lock Spring Ring	IA-131	1	Breaker Arm Spring Clip
*	1	Thrust Washer	IG-3927	1	CONDENSER ASSEMBLY
IGB-199	1	Dist. Shaft Collar	IGP-3028†	1	Breaker Arm Assy.
IGE-35	1	Governor Control Spring	IGP-30	1	Breaker Arm Spring
IGH-28	1	Cam Sleeve Felt Wick	IGS-52	1	Lead Clip
IGP-1003	1	DISTRIBUTOR CAP ASSY.	IGT-11A	1	Lead Assembly
IG-514	1	Contact Spring Plunger	X-935	1	Terminal
IG-515	1	Contact Spring	X-936	1	Terminal
IGP-1016	1	ROTOR	*	1	Breaker Plate Part Assy.
*	1	Advance Pointer	IGT-1048R	1	Breaker Sub Plate Assy.
IGS-34	1	Terminal Slot Cover	IGT-52	1	Lead Assembly
IGS-99	1	Washer	X-936	1	Terminal
IGS-104	1	Thrust Washer	X-1052	1	Terminal
IGT-18	2	Bearing Clamp	IGT-1049RM†	1	Breaker Point
IGT-23	1	Vacuum Chamber Bracket	8X-59	2	#8-32x3/16 Rd. Hd. Sc.
IGT-1021R	1	Cam & Stop Plate	12X-195	1	#8 Lock Washer
*	1	Vacuum Chamber Assy.	8X-350	1	#8 Plain Washer
VC-14	1	Gasket - 1/32" Thick	8X-323	1	#6-32x5/16 Rd. Hd. Screw
VC-15	1	Plug	X-1012	4	#6 Lock Washer
VC-46	+	Washer - .032" Thick	8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
VC-46A	+	Washer - .010" Thick	SW-213	1	Dist. Drive Rivet
VC-46B	+	Washer - .065" Thick	8X-311	2	#10-32x3/8 Rd. Hd. Screw
*	1	Spring	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IGT-2001	1	Dist. Base Assembly	8X-870	2	#10-32x5/16 Fill. Hd. Screw
IG-579A	2	Absorbent Bronze Brg.	X-1270	6	#10 Skpf. Washer
IG-694	2	Dist. Cap Spring			1 2 3 4 5
X-382	1	1/8 Grease Cup			(Issued 2-1-40)
X-1448	2	Hinge Pin			
IGT-2002RJ	1	Drive Shaft & Gov. Assy.			† Service BREAKER POINT SET IGP-3028C & Service Weight Spring Set IGB-292SS.
IG-636†	1	Weight Spring			* See table following parts list for part number applying to assembly wanted.
IG-1456	2	Weight Assy.			+ Use as required.
IGB-292†	1	Weight Spring			
IGT-1002RB	1	Drive Shaft Assy.			
*	1	Advance Control Arm Assy.			
		1 2 3 4 5			

Assembly No.	Breaker Plate Assy.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring Plunger
IGT-4101	IGT-3004A	IGT-1004A	IGT-1023BS	VC-45 (Red)
IGT-4101-1	IGT-3004A	IGT-1004A	IGT-1023BS	VC-45 (Red)
IGT-4101A	IGT-3004A	IGT-1004A	IGT-1023HS	VC-77 (11 Coils)
IGT-4101A-1	IGT-3004A	IGT-1004A	IGT-1023HS	VC-77 (11 Coils)
IGT-4101A-2	IGT-3004A	IGT-1004A	IGT-1023HS	VC-77 (11 Coils)
IGT-4101B	IGT-3004	IGT-1004	IGT-1023JS	VC-78 (Silver)
IGT-4101B-1	IGT-3004	IGT-1004	IGT-1023JS	VC-78 (Silver)
IGT-4101B-2	IGT-3004	IGT-1004	IGT-1023JS	VC-78 (Silver)

Assembly No.	Adv. Arm Assembly	Thrust Washer	Advance Pointer
IGT-4101	None	None	None
IGT-4101-1	IGT-2066	IG-816C	None
IGT-4101A	None	None	None
IGT-4101A-1	IGT-2066	IG-816C	None
IGT-4101A-2	IGS-1020S	None	IGS-21
IGT-4101B	None	None	None
IGT-4101B-1	IGT-2066	IG-816C	None
IGT-4101B-2	IGS-1020S	None	IGS-21

UNIT	APPLICATION
IGT-4101	Chrysler, Dodge Export
IGT-4101A	Chrysler, Dodge Export
IGT-4101A-2	Chrysler
IGT-4101B	Chrysler

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGR-4001A DISTRIBUTOR PARTS LIST

IGR-4001A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
GK-36	1	Dist. Gear - Follower	IGR-1004	1	Breaker Plate Part Assy.
IG-90	1	Thrust Washer	IGR-1017	1	Breaker Sub Plate Assy.
IG-94	10	H. T. Wire Terminal	IB-23	1	Breaker Point Lock Nut
IG-680	1	Lock Spring Ring	IB-24	1	Breaker Point Screw
IG-816	1	Thrust Washer	X-195	2	#8 Lock Washer
IG-860A	1	Hold Down Arm	8X-302	1	#6-32x1/4 Rd. Hd. Screw
IGB-162	1	Thrust Washer	8X-305	2	#8-32x1/4 Rd. Hd. Screw
IGB-247	1	Dist. Drive Rivet	8X-312	1	#10-32x1/4 Rd. Hd. Screw
IGB-1025C	1	Condenser Assembly	8X-350	2	#8 Plain Washer
IGB-1025E	1	Condenser Assembly	X-537	1	#10 Lock Washer
IGH-28	1	Cam Sleeve Felt Wick	8X-873	1	#6-32x3/16 Fill. Hd. Sc.
IGH-2026RB	1	Drive Shaft & Gov. Assy.	8X-908	2	#6-32x1/4 Fill. Hd. Screw
IG-776	2	Weight Spring	X-1012	4	#6 Lock Washer
IG-1322	2	Weight Assy.	6X-86	1	1/4-20x5/8 Hex. Hd. Screw
IGH-1026R	1	Drive Shaft Assembly	6X-163	1	1/4-20 Hex. Nut
IGJ-1003	1	Distributor Cap Assy.	X-196	6	#10 Lock Washer
IA-213	1	Contact Spring	X-199	1	1/4 Lock Washer
IG-514	1	Contact Spring Plunger	6X-794	1	#10-32 Square Nut
IGJ-1022RA	1	Cam & Stop Plate - 4 cyl. R.H.	6X-870	2	#10-32x5/16 Fill. Hd. Screw
IGJ-2023	1	Distributor Base Assy.	6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
IG-352	2	Hinge Pin	6X-872	4	#10-32x1/4 Fill. Hd. Screw
IG-511	1	Name Plate	6X-888	2	#8-32x5/16 Fill. Hd. Screw
IG-579A	2	Absorbent Bronze Brg.	X-1276	4	#8 Skpf. Washer
IG-694	2	Dist. Cap Spring			1 2 3 4 5
X-374	2	3/32x1/4 Split Rivet			
X-490	1	Press in - Sleeve Oiler			
IGK-26	1	Washer - .020" Thick			
IGR-1016	1	Rotor Assembly			
IA-213	1	Contact Spring			
IA-218	1	Contact Spring Plunger			
IGR-2004	1	Breaker Plate Assy.			
GK-151	1	Plain Steel Washer			
IA-131	2	Breaker Arm Spring Clip			
IG-1839	1	Breaker Point			
IGE-14	1	Primary Connector Assy.			
IGB-132	2	Terminal			
IGH-3664	2	Breaker Arm Assembly			
IGB-209	2	Breaker Arm Spring			
		1 2 3 4 5			


(Issued 1-16-34)
(R-7-15-36)

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGR-4001A DISTRIBUTOR ILLUSTRATION

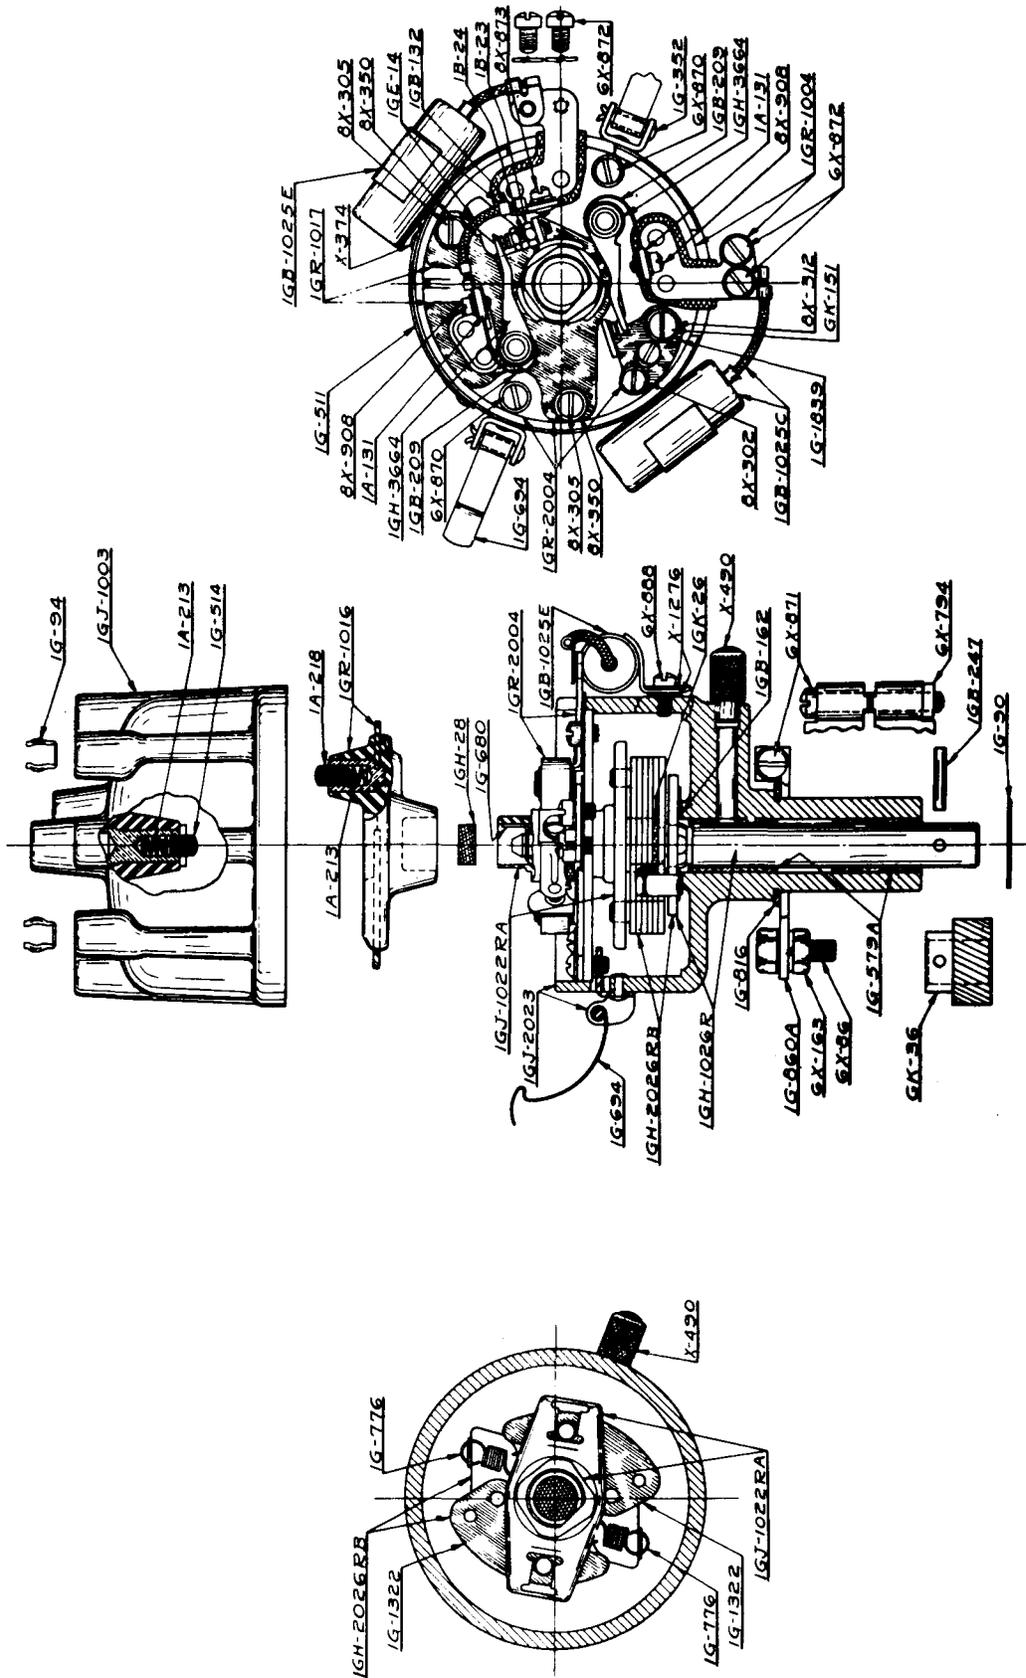

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4102 DISTRIBUTOR PARTS LIST

IGT-4102

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	2					Thrust Washer
IG-94	9					H. T. Wire Terminal
IG-680	1					Lock Spring Ring
IGE-36	1					Governor Control Spring
IGH-28	1					Cam Sleeve Felt Wick
IGH-53B	1					Drive Shaft Extension
IGH-54	1					Dist. Drive Sleeve
IGH-55	1					Drive Shaft Pin
IGP-1003	1					DISTRIBUTOR CAP ASSEMBLY
IG-514	1					Contact Spring Plunger
IG-515	1					Contact Spring
IGP-1016	1					ROTOR
IGS-34	1					Terminal Slot Cover
IGS-99	1					Washer
IGT-18	2					Bearing Clamp
IGT-28	1					Vacuum Chamber Bracket
IGT-1021L	1					Cam & Stop Plate - 8 Cyl. L.H.
IGT-1044	1					Advance Control Arm Assy.
8X-136	1					1/4-20x1 1/4 Fill. Hd. Sc.
12X-199	1					1/4 Lock Washer
8X-791	1					1/4-20 Square Nut
IGT-2020L	1					Drive Shaft & Gov. Assy.
IG-2456	2					Weight Assembly
IGB-284†	1					Weight Spring
IGB-308†	1					Weight Spring
IGT-1020L	1					Drive Shaft Assy.
IGT-2028BS	1					Vacuum Chamber Assy.
VC-14	1					Gasket - 1/32" Thick
VC-15	1					Plug
VC-46	*					Washer - .032" Thick
VC-46A	*					Washer - .010" Thick
VC-46B	*					Washer .065" Thick
VC-50	1					Spring (Orange)
IGT-2032	1					Distributor Base Assembly
IG-511	1					Name Plate
IG-579A	2					Absorbent Bronze Brg.
IG-694	2					Dist. Cap Spring
X-382	1					1/8 Grease Cup
X-1201	2					.10x1/4 Tubular Rivet
X-1448	2					Hinge Pin
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IGT-3030	1					Breaker Plate Assembly
						± Identified by 5.5
IA-131	1					Brkr. Arm Spring Clip
IG-2671J	1					CONDENSER ASSEMBLY
IGP-3028L†	1					Breaker Arm Assy.
IGP-30L	1					Brkr. Arm Spring
IGS-52	1					Lead Clip
IGT-11A	1					Lead Assembly
X-935	1					Terminal
X-936	1					Terminal
IGT-1030C	1					Brkr. Plate Part Assy.
IGT-1048L	1					Brkr. Sub Plate Assy.
IGT-68	1					Lead Assembly
X-1052	1					Terminal
X-1484	1					Terminal
IGT-1049LM†	1					Breaker Point
8X-59	2					#8-32x3/16 Rd. Hd. Sc.
12X-195	1					#8 Lock Washer
8X-350	1					#8 Plain Washer
8X-323	1					#6-32x5/16 Rd. Hd. Sc.
X-1012	4					#6 Lock Washer
8X-1546	3					#6-32x5/32 Fill. Hd. Sc.
SW-213	1					Dist. Drive Rivet
X-196	1					#10 Lock Washer
8X-311	2					#10-32x3/8 Rd. Hd. Screw
8X-321	2					#10-32x5/16 Rd. Hd. Screw
8X-870	2					#10-32x5/16 Fill. Hd. Sc.
8X-872	1					#10-32x1/4 Fill. Hd. Sc.
X-1270	6					#10 Skpf. Washer
		1	2	3	4	5

(Issued 6-27-39)

* Use as required.

± See Manual Bulletin IG-11.


† Service BREAKER POINT SET IGP-3028MS
Service Weight Spring Set IGB-284DS.

UNIT	APPLICATION
IGT-4102	Packard

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

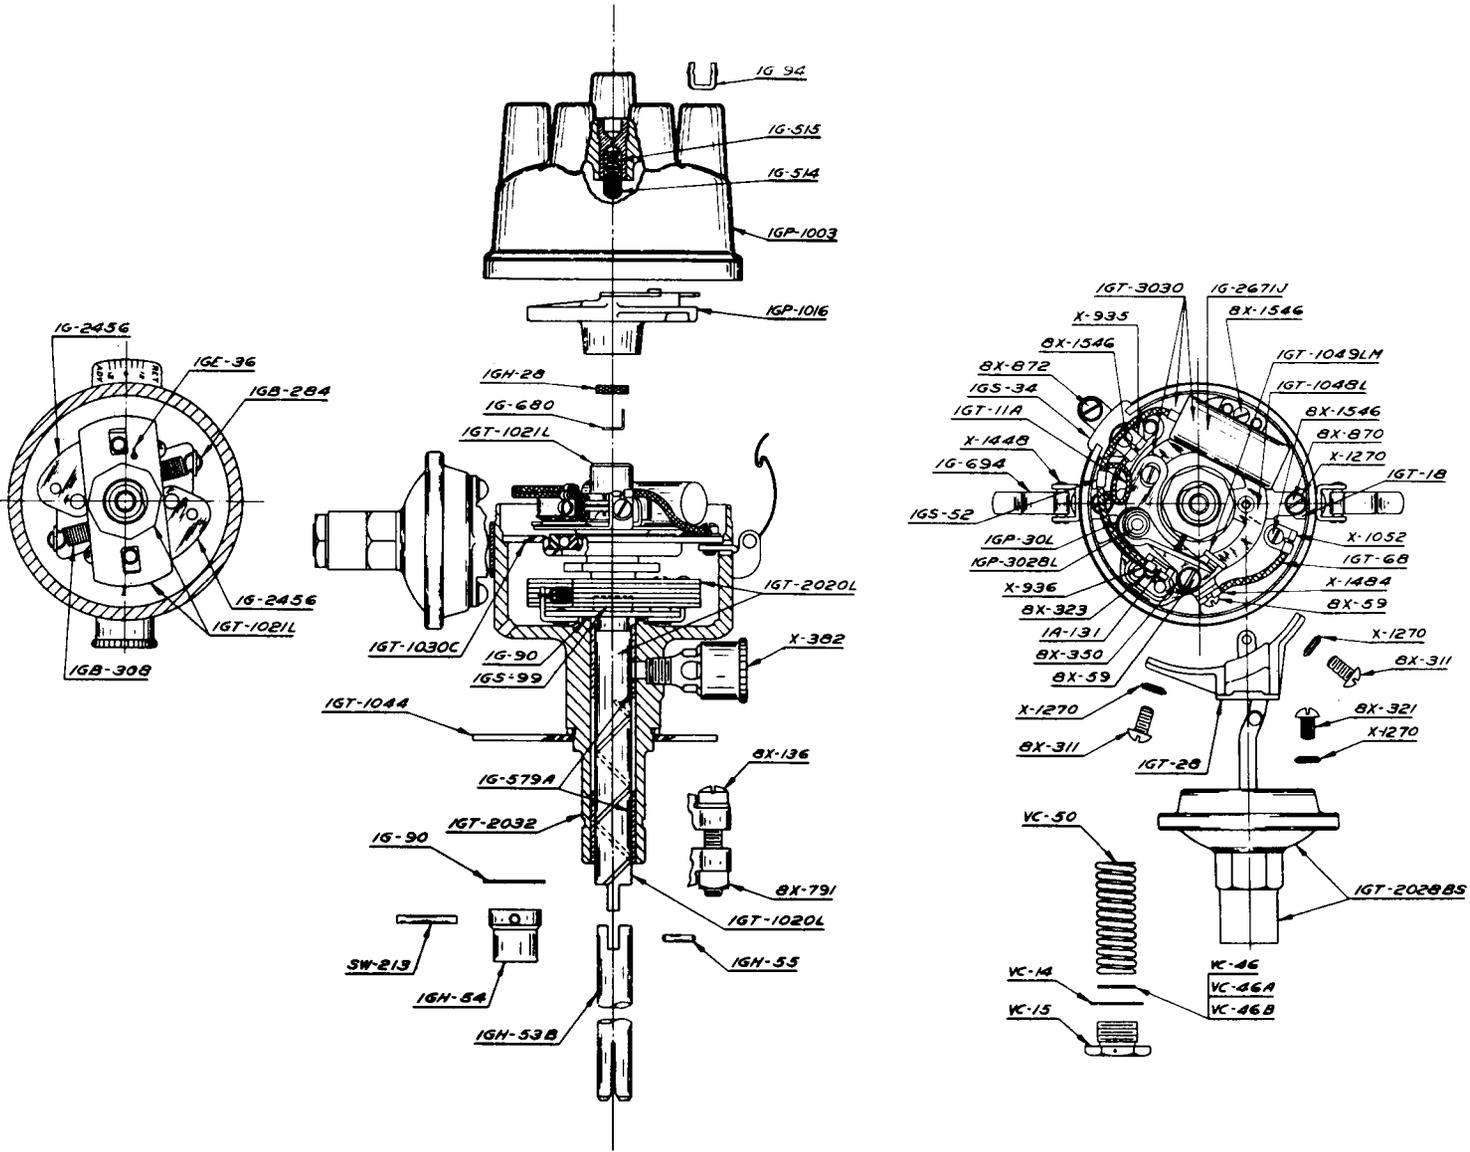

IGT-4102 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4103,-1, DISTRIBUTOR PARTS LIST
A,-1

IGT-4103,
A,-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	*	1	Breaker Plate Assy.
IG-680	1	Lock Spring Ring	IA-131	1	Breaker Arm Spring Clip
IGB-199	1	Dist. Shaft Collar	IG-3927	1	CONDENSER ASSEMBLY
IGH-28	1	Cam Sleeve Felt Wick	IGE-15	1	#6 Plain Washer
IGP-1003	1	DISTRIBUTOR CAP ASSY.	IGP-3028†	1	Breaker Arm Assembly
IG-514	1	Contact Spring Plunger	IGP-30	1	Breaker Arm Spring
IG-515	1	Contact Spring	IGS-52	1	Lead Clip
IGP-1016B	1	ROTOR	IGT-11A	1	Lead Assembly
IGS-34	1	Terminal Slot Cover	X-935	1	Terminal
IGS-99	1	Washer	X-936	1	Terminal
IGS-104	1	Thrust Washer	*	1	Breaker Plate Part Assy.
IGS-114†	1	Advance Control Arm	IGT-1048R	1	Breaker Sub Plate Assy.
IGS-115†	1	Advance Pointer	IGT-52	1	Lead Assembly
IGT-18	2	Bearing Clamp	X-936	1	Terminal
IGT-23	1	Vacuum Chamber Bracket	X-1052	1	Terminal
IGT-70	1	Governor Control Spring	IGT-1049RM†	1	Breaker Point
IGT-1021R	1	Cam & Stop Plate - 8 cyl. R.H.	8X-59	2	#8-32x3/16 Rd. Hd. Sc.
*	1	Vacuum Chamber Assy.	12X-195	1	#8 Lock Washer
VC-14	1	Gasket-1/32" Thick	8X-350	1	#8 Plain Washer
VC-15	1	Plug	8X-323	1	#6-32x5/16 Rd. Hd. Screw
VC-46	**	Washer-.032" Thick	X-1012	3	#6 Lock Washer
VC-46A	**	Washer-.010" Thick	8X-1546	3	#6-32x5/32 Fill. Hd. Screw
VC-46B	**	Washer-.065" Thick	SW-213	1	Distributor Drive Rivet
*	1	Spring	8X-85†	1	1/4-20x1/2 Hex. Hd. Screw
IGT-2071	1	Distributor Base Assy.	12X-199†	1	1/4 Lock Washer
IG-579A	1	Absorbent Bronze Brg. - Lower	8X-321	2	#10-32x5/16 Rd. Hd. Screw
IG-579D	1	Absorbent Bronze Brg. - Upper	8X-357†	1	#14 Plain Washer
IG-694	2	Dist. Cap Spring	8X-870	2	#10-32x5/16 Fill. Hd. Screw
IGT-117	1	Felt Wick	8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1448	2	Hinge Pin	X-1270	6	#10 Skpf. Washer
X-1590	1	1/4 Oiler-Press in Elbow			1 2 3 4 5
IGT-2072R	1	Drive Shaft & Gov. Assy.			(Issued 7-29-40)
IG-1456	2	Weight Assembly			
IGB-292SS	1	Weight Spring Set			
IGT-1072R	1	Drive Shaft Assy.			
		1 2 3 4 5			

Assembly No.	Vacuum Chamber	Spring	Breaker Plate Assy.	Identified By ±	Brkr. Plate Part Assy.
IGT-4103	IGT-1023HS	VC-77 (11 Coils)	IGT-3004A	8	IGT-1004A
IGT-4103A	IGT-1023JS	VC-78 (Silver)	IGT-3004	6	IGT-1004

† Service BREAKER POINT SET IGP-3028GS.

† Used with assemblies having the suffix "-1".


** Use as required.

* See table following parts list for part number applying to assembly wanted.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4103,A,-1	Chrysler

IGT-4103,A-1 DISTRIBUTOR ILLUSTRATION

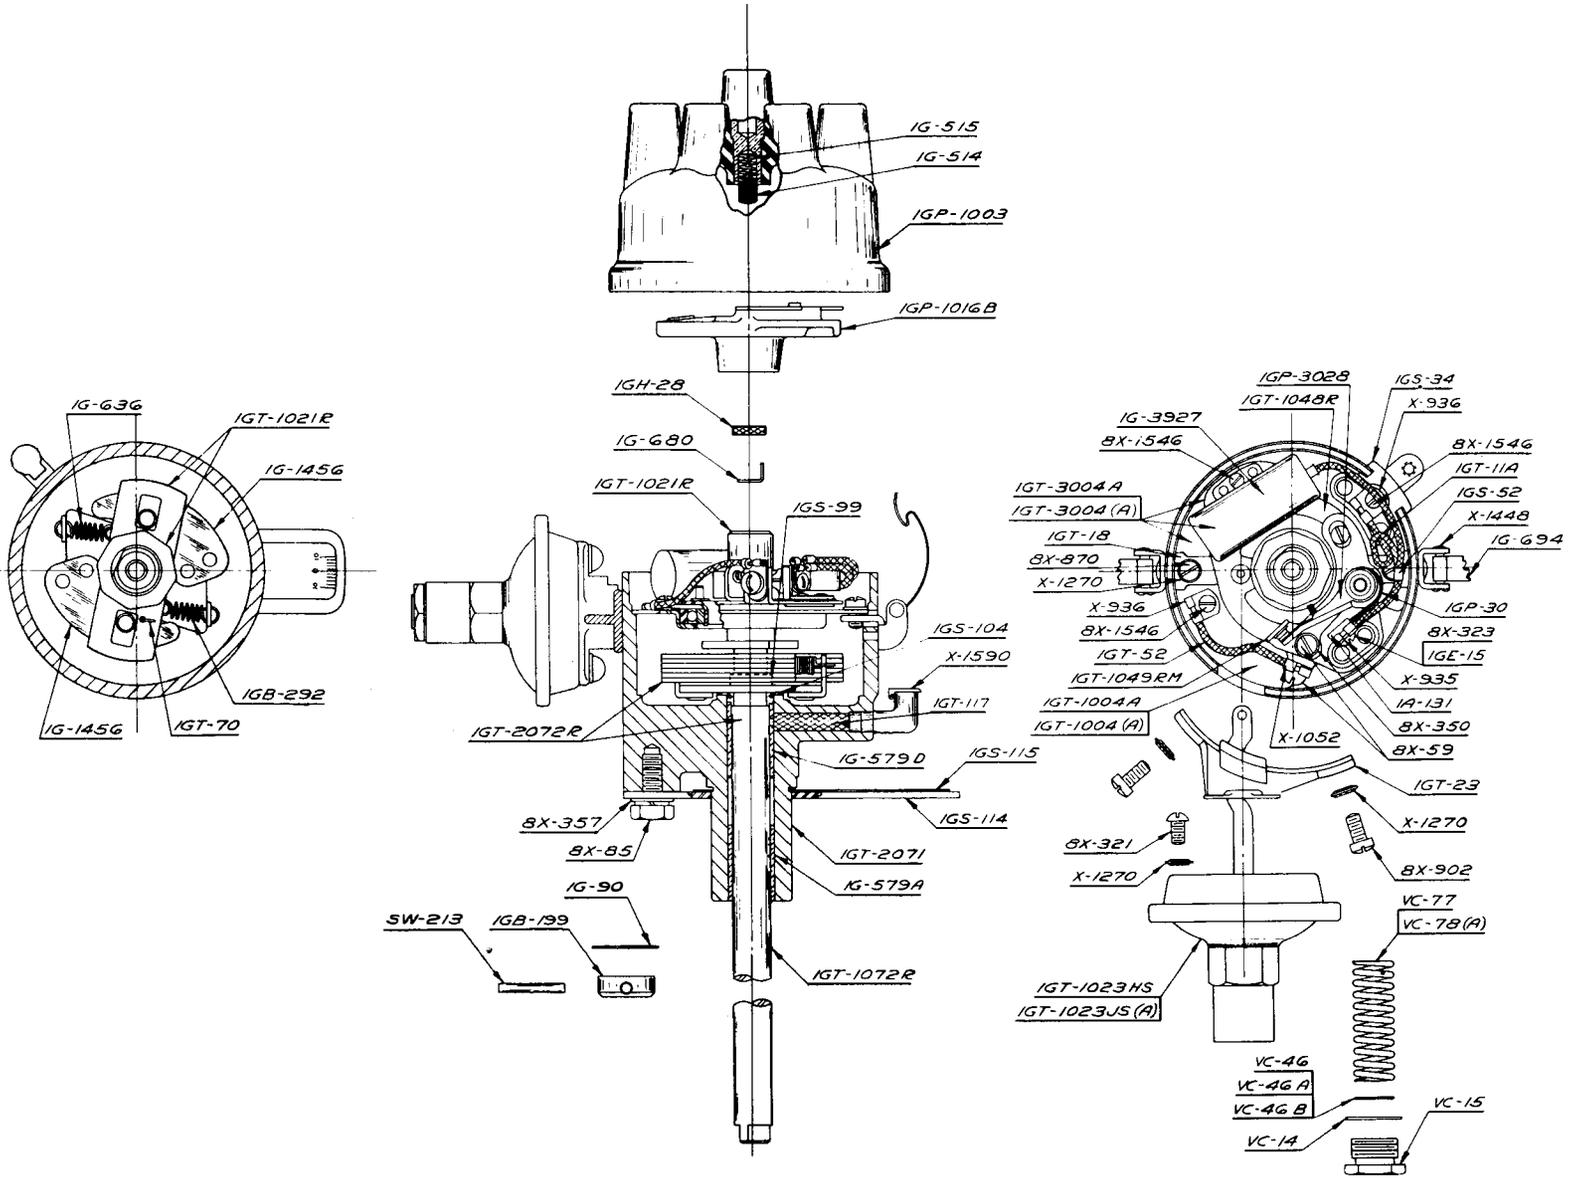

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4104 DISTRIBUTOR PARTS LIST

IGT-4104

PRELIMINARY

Part No.	No. Used	Name of Part					Part No.	No. Used	Name of Part				
		1	2	3	4	5			1	2	3	4	5
GE-47	1	TACHOMETER GEAR - Driver					IGT-11A	1	Lead Assembly				
GE-48	1	TACHOMETER GEAR - Follower					X-935	1	Terminal				
IG-90	2	Thrust Washer					X-936	1	Terminal				
IG-680	1	Lock Spring Ring					IGT-1004	1	Breaker Plate Part Assy.				
IGB-199	1	Distributor Shaft Collar					IGT-1048R	1	Breaker Sub Plate Assy.				
IGH-28	1	Cam Sleeve Felt Wick					IGT-52	1	Lead Assembly				
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY					X-936	1	Terminal				
IG-514	1	Contact Spring Plunger					X-1052	1	Terminal				
IG-515	1	Contact Spring					IGT-1049RM†	1	Breaker Point				
IGP-1016B	1	ROTOR					8X-59	2	#8-32x3/16 Rd. Hd. Sc.				
IGS-17	1	Lock Spring Ring					12X-195	1	#8 Lock Washer				
IGS-34	1	Terminal Slot Cover					8X-350	1	#8 Plain Washer				
IGS-37	1	Tachometer Drive Shaft					8X-323	1	#6-32x5/16 Rd. Hd. Screw				
IGS-38	1	Housing Cover					X-1012	3	#6 Lock Washer				
IGS-39	1	Thrust Washer					8X-1546	3	#6-32x5/32 Fill. Hd. Sc.				
IGS-99	1	Washer					SW-213	2	Distributor Drive Rivet				
IGT-18	2	Bearing Clamp					X-294	1	Ball Bearing - S.A.E. #202				
IGT-23	1	Vacuum Chamber Bracket					8X-321	2	#10-32x5/16 Rd. Hd. Screw				
IGT-70	1	Anti-Rattle Spring					8X-870	2	#10-32x5/16 Fill. Hd. Screw				
IGT-1021R	1	Cam & Stop Plate - 8 Cyl. R.H.					8X-902	2	#10-32x3/8 Fill. Hd. Screw				
IGT-1023JS	1	Vacuum Chamber Assembly					X-1270	6	#10 Skpf. Washer				
VC-14	1	Gasket - 1/32" Thick							1	2	3	4	5
VC-15	1	Plug											
VC-46	*	Washer - .032" Thick											
VC-46A	*	Washer - .010" Thick											
VC-46B	*	Washer - .065" Thick											
VC-78	1	Spring (Silver)											
IGT-2025RC	1	Drive Shaft & Gov. Assy.											
IG-1456	2	Weight Assembly											
IGB-292SS	1	Weight Spring Set											
IGT-1025RA	1	Drive Shaft Assembly											
IGT-2073	1	Distributor Base Assembly											
IG-579A	2	Absorbent Bronze Brg.											
IG-694	2	Distributor Cap Spring											
X-382	1	1/8 Grease Cup											
X-1448	2	Hinge Pin											
IGT-3004	1	Breaker Plate Assembly ± Identified by 6											
IA-131	1	Breaker Arm Spring Clip											
IG-3927	1	CONDENSER ASSEMBLY											
IGE-15	1	#6 Plain Washer											
IGP-3028†	1	Breaker Arm Assembly											
IGP-30	1	Breaker Arm Spring											
IGS-52	1	Lead Clip											

(Issued 5-1-41)

* Use as required.

± See Manual Bulletin IG-11.

† SERVICE CONTACT SET IGP-3028GS.

UNIT	APPLICATION
IGT-4104	Chrysler

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4201,A,
B,-1 DISTRIBUTOR PARTS LIST

IGT-4201,A,
B,-1

PRELIMINARY

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 2 3 4 5 Thrust Washer	IGS-52	1	1 2 3 4 5 Lead Clip
IG-680	1	Lock Spring Ring	IGT-11A	1	Lead Assembly
IGB-199	1	Dist. Shaft Collar	X-935	1	Terminal
IGH-28	1	Cam Sleeve Felt Wick	X-936	1	Terminal
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY	*	1	Breaker Plate Part Assy.
IG-514	1	Contact Spring Plunger	IGT-1048R	1	Breaker Sub Plate Assy.
IG-515	1	Contact Spring	IGT-52	1	Lead Assembly
IGP-1016B	1	ROTOR	X-936	1	Terminal
IGS-34	1	Terminal Slot Cover	X-1052	1	Terminal
IGS-99	1	Washer	IGT-1049RM†	1	Breaker Point
IGS-104	1	Thrust Washer	8X-59	2	#8-32x3/16 Rd. Hd. Sc.
IGS-114†	1	Advance Control Arm	12X-195	1	#8 Lock Washer
IGS-115†	1	Advance Pointer	8X-350	1	#8 Plain Washer
IGT-18	2	Bearing Clamp	8X-323	1	#6-32x5/16 Rd. Hd. Screw
IGT-70	1	Anti-Rattle Spring	X-1012	3	#6 Lock Washer
IGT-1021R	1	Cam & Stop Plate - 8 Cyl. R.H.	8X-1546	3	#6-32x5/32 Fill. Hd. Screw
IGT-2072R	1	Drive Shaft & Gov. Assy.	SW-213	1	Distributor Drive Rivet
IG-1456	2	Weight Assembly	SW-634†	1	Plain Washer
IGB-292SS	1	Weight Spring Set	*	1	Vacuum Chamber Assembly
IGT-1072R	1	Drive Shaft Assembly	VC-14	1	Gasket - 1/32" Thick
IGT-2074	1	Distributor Base Assembly	VC-15	1	Plug
IG-579A	1	Absorbent Bronze Brg.- Lower	VC-46	+	Washer - .032" Thick
IG-579D	1	Absorbent Bronze Brg.- Upper	VC-46A	+	Washer - .010" Thick
IG-694	2	Dist. Cap Spring	VC-46B	+	Washer - .065" Thick
IGT-117	1	Felt Wick	*	1	Spring
X-1448	2	Hinge Pin	8X-86†	1	1/4-20x5/8 Hex. Hd. Screw
X-1590	1	1/4 Oiler - Press in Elbow	12X-199†	1	1/4 Lock Washer
*	1	Breaker Plate Assembly	8X-870	2	#10-32x5/16 Fill. Hd. Screw
IA-131	1	Breaker Arm Spring Clip	8X-872	2	#10-32x1/4 Fill. Hd. Screw
IG-3927	1	CONDENSER ASSEMBLY	X-1270	4	#10 Skpf. Washer
IGE-15	1	#6 Plain Washer			1 2 3 4 5
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

(Issued 10-6-41)

† SERVICE CONTACT SET IGP-3028GS.

+ Use as required.

† Used with assemblies having suffix "-1".

± See Manual Bulletin IG-11.

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Breaker Plate Assembly	Idf. By ±	Brkr. Pl. Part Assy.	Vacuum Chamber	Spring
IGT-4201	IGT-3004A	8	IGT-1004A	VC-3117RS	VC-77 (Copper Plate & Green)
IGT-4201A	IGT-3004	6	IGT-1004	VC-3117RAS	VC-78 (Silver)
IGT-4201B	IGT-3004C	10	IGT-1004E	VC-3117RCS	VC-119 (Cadmium Plate)

UNIT	APPLICATION
IGT-4201,A, B,-1	Chrysler

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4202 DISTRIBUTOR PARTS LIST

IGT-4202

PRELIMINARY

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGT-1048R	1	Breaker Sub Plate Assy.
IG-680	1	Lock Spring Ring	IGT-52	1	Lead Assembly
IG-816C	1	Thrust Washer	X-936	1	Terminal
IG-853	1	Dist. Drive Sleeve	X-1052	1	Terminal
IGE-1048A	1	Hold Down Arm Assembly	IGT-1049RM†	1	Breaker Point
IGH-28	1	Cam Sleeve Felt Wick	8X-59	2	#8-32x3/16 Rd. Hd. Sc.
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY	12X-195	1	#8 Lock Washer
IG-514	1	Contact Spring Plunger	8X-350	1	#8 Plain Washer
IG-515	1	Contact Spring	8X-323	1	#6-32x5/16 Rd. Hd. Sc.
IGP-1016B	1	ROTOR	X-1012	3	#6 Lock Washer
IGS-34	1	Terminal Slot Cover	8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
IGS-99	1	Washer	SW-213	1	Distributor Drive Rivet
IGS-104	1	Thrust Washer	VC-3117RBS	1	Vacuum Chamber Assembly
IGT-18	2	Bearing Clamp	VC-14	1	Gasket - 1/32" Thick
IGT-70	1	Anti-Rattle Spring	VC-98	1	Plug
IGT-1021RC	1	Cam & Stop Plate- 8 Cyl. R.H.	VC-118	1	Spring (Copper Plate)
IGT-2075	1	Distributor Base Assembly	8X-870	2	#10-32x5/16 Fill. Hd. Sc.
IG-579A	2	Absorbent Bronze Brg.	8X-872	2	#10-32x1/4 Fill. Hd. Sc.
IG-694	2	Dist. Cap Spring	X-1270	4	#10 Skpf. Washer
X-488	1	1/4 Oiler-Press in Elbow			1 2 3 4 5
X-1448	2	Hinge Pin			
IGT-2076R	1	Drive Shaft & Gov. Assy.			(Issued 7-31-41)
IG-1456	2	Weight Assembly			
IGB-308SS	1	Weight Spring Set			
IGT-1076R	1	Drive Shaft Assembly			
IGT-3004B	1	Breaker Plate Assembly			
		± Identified by 6			
IA-131	1	Breaker Arm Spring Clip			
IG-2671G	1	CONDENSER ASSEMBLY			
IGE-15	1	#6 Plain Washer			
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
IGS-52	1	Lead Clip			
IGT-11A	1	Lead Assembly			
X-935	1	Terminal			
X-936	1	Terminal			
IGT-1004	1	Breaker Plate Part Assy.			
		1 2 3 4 5			

† SERVICE CONTACT SET IGP-3028GS.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4202	Nash

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4203 DISTRIBUTOR PARTS LIST

IGT-4203

PRELIMINARY

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGT-18	2	Bearing Clamp
IGT-69	1	Anti-Rattle Spring
IGT-1021L	1	Cam & Stop Plate-8 Cyl. L.H.
IGT-1044	1	Advance Arm Assembly
IGT-2020L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGB-284DS	1	Weight Spring Set
IGT-1020L	1	Drive Shaft Assembly
IGT-2078	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGT-3030	1	Breaker Plate Assembly
		± Identified by 5.5
IA-131	1	Breaker Arm Spring Clip
IG-2671J	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028L†	1	Breaker Arm Assembly
IGP-30L	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
IGT-1030C	1	Breaker Plate Part Assy.
IGT-1048L	1	Breaker Sub Plate Assy.
IGT-68	1	Lead Assembly
X-1052	1	Terminal
X-1484	1	Terminal
IGT-1049LM†	1	Breaker Contact
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
VC-3117LS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
SW-213	1	Distributor Drive Rivet
X-196	1	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	3	#10-32x1/4 Fill. Hd. Screw
X-1270	4	#10 Skpf. Washer
		1 2 3 4 5

(Issued 1-26-42)

* Use as required.

† SERVICE CONTACT SET IGP-3028MS.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4203	Packard

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4204A-1,B-1 DISTRIBUTOR PARTS LIST

IGT-4204A-1,B-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-40	1	GEAR, FOLLOWER	8X-323	1	Screw, Spring Clamp, Rd. Hd., #6-32x5/16
IG-90	1	Washer, Thrust, Drive Shaft, Lower	X-194	3	Lockwasher, Cond. & Lead Sc., #6
IG-94	9	Terminal, H.T. Wire	8X-1546	3	Screw, Cond. Mtg., & Lead, Fill. Hd., #6-32x5/32
IG-680	1	Snap Ring, Cam Retaining	SW-213	1	Rivet, Gear
IG-1456	2	Weight, Governor	VC-14	1	Gasket - 1/32" Thick
IGB-328KS	1	Spring, Set, Gov. Weight	**	1	Plug
IGB-1216	1	Arm, Advance	**	*	Washer
IGH-28	1	Wick, Felt, Cam Sleeve	**	1	Spring (White)
IGP-1003F	1	CAP ASSY., DIST.	VC-2117R	1	Vacuum Chamber
IG-514	1	Contact, Plunger	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd., #10-32x1/4
IG-515A	1	Spring, Contact	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IGP-1016B	1	ROTOR	X-1270	4	Washer, Breaker Plate, & Vac. Chamber Mtg., Skpf. #10
IGS-17	1	Ring, Lock			
IGS-34	1	Cover, Terminal Stud			
IGS-99	1	Spacer, Cam			
IGS-104	1	Washer, Thrust, Drive Shaft, Upper			
IGS-1185R	1	Shaft, Drive			
IGT-18	2	Clamp, Bearing, Sub, Plate			
IGT-70	1	Spring, Anti-Rattle			
IGT-1021RM	1	Cam & Stop Plate, 8 Cyl. R.H.			
IGT-2095	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze			
IG-694	2	Spring, Clamp, Cap			
IGT-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler, Elbow, Press In, 1/4			
**	1	Plate Assy., Breaker			
IA-131	1	Clip, Spring, Contact Arm			
IG-2671G	1	CONDENSER			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028GS	1	CONTACT SET, BREAKER			
IGS-52	1	Clip, Lead			
IGT-11A	1	Lead Assy.			
X-935	1	Terminal			
X-936	1	Terminal			
**	1	Plate, Breaker			
IGT-1048RS	1	Plate Assy., Sub, Breaker			
IGT-52	1	Lead Assy.			
X-936	1	Terminal			
X-1052	1	Terminal			
8X-59	2	Screw, Rd. Hd., #8-32x3/16			
12X-195	1	Lockwasher, #8			
X-350	1	Washer, Plain, #8			

* Use As Required.
 ** See table following parts list for part number applying to assembly wanted.
 † See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4204A-1,B-1	Hudson

Unit	† Breaker Plate Assy.	Breaker Plate Plug	Spring	Washer
IGT-4204A-1	IGT-3004D (Mrkd. 8.5)	IGT-1004F	VC-15	VC-150 (White) VC-46 (.032" Thick) VC-46A (.010" Thick) VC-46B (.065" Thick)
IGT-4204B-1	IGT-3004E (Mrkd. 3.5)	IGT-1004G	VC-98	VC-155 (Cadmium Plate) VC-154 (.032" Thick)

Printed in U. S. A.

(Issued 2-1-49)

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4302-1 DISTRIBUTOR PARTS LIST

IGT-4302-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower	8X-323	1	Screw, Spring Clamp, Rd. Hd. #6-32x5/16
IG-94	9	Terminal, H.T. Wire	12X-1012	3	Lockwasher, Cond., & Lead Sc., #6
IG-680	1	Snap Ring, Cam Retaining	8X-1546	3	Screw, Cond. Mtg., & Lead FL. Hd., #6-32x5/32
IGB-199	1	Collar, Shaft, Dist.	SW-213	1	Rivet, Collar, Drive Shaft
IGB-339BS	1	Spring Set, Gov. Weight	VC-14	1	Gasket 1/32" Thick
IGC-2168R	2	Weight, Governor	VC-46	*	Washer, .032" Thick
IGH-28	1	Wick, Felt, Cam Sleeve	VC-46A	*	Washer, .010" Thick
IGP-1003E	1	CAP ASSY., DIST.	VC-46B	*	Washer, .065" Thick
IG-514	1	Contact, Plunger	VC-138	1	Plug
IG-515A	1	Spring, Contact	VC-149	1	Spring
IGP-1016B	1	ROTOR	VC-2141R	1	VACUUM CHAMBER
IGS-17	1	Ring, Lock	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd., #10-32x5/16
IGS-34	1	Cover, Terminal Slot	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IGS-99	1	Spacer, Cam	X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10
IGS-104	1	Washer, Thrust, Drive Shaft, Upper			1 2 3 4 5
IGS-1186R	1	Shaft, Drive			
IGT-18	2	Clamp, Bearing, Sub Plate			
IGT-70	1	Spring, Anti-Rattle			
IGT-1021R	1	Cam & Stop Plate, 8 Cyl., R.H.			
IGT-1096	1	Arm, Advance			
IGT-2097	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze			
IG-694	2	Spring, Clamp, Cap			
IGT-117	1	Wick, Felt			
X-1448	2	Pin, Hinge, Cap Spring			
X-1590	1	Oiler, Elbow, Press in, 1/4			
IGT-3084RA	1	Plate Assy., Breaker			
	†	Identified by 7			
IA-131	1	Clip, Spring, Contact Arm			
IG-2671G	1	CONDENSER			
IGE-15	1	Washer, Plain, Clamp Sc., #6			
IGP-3028GS	1	CONTACT SET, BREAKER			
IGT-88	1	Lead Assembly			
IGS-55	1	Terminal			
X-936	1	Terminal			
IGT-1084RA	1	Plate, Breaker			
IGT-1087RS	1	Plate Assy., Sub, Breaker			
IGS-89	1	Lead Assy.			
8X-59	1	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16			
8X-350	1	Washer, Plain, Contact Lock Sc., #8			
12X-1012	1	Lockwasher, Lead Sc., #6			
8X-1546	1	Screw, Lead, Fill. Hd. #6-32x5/16			
	1	2 3 4 5			

* Used as Required.
† See Manual Bulletin IG-11

UNIT	APPLICATION
IGT-4302-1	Lincoln

(Issued 4-29-48)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGW-4000 SERIES DISTRIBUTOR PARTS LIST

IGW-4000 Series
(Issued 5-24-55)

Model No.	No. Cyl.	CUSTOMER
IGW-4001	6	Studebaker
IGW-4005	6	White
IGW-4005A	6	Diamond T, Gramm, White
IGW-4006B	6	Diamond T
IGW-4006C	6	Gramm, Hercules
IGW-4007	6	Brockway, Continental
IGW-4008	6	Brockway, Reo
IGW-4009A	6	Brockway
IGW-4010	6	Nash
IGW-4011	6	Reo
IGW-4012A	6	Hudson
IGW-4013A	6	Hudson
IGW-4014	6	Gray Marine
IGW-4015	6	Kermath
IGW-4015A	6	Autocar
IGW-4016	4	Duplex, Towmotor, Waukesha
IGW-4017	6	Brockway
IGW-4018	6	Chris Craft, Palmer, Regal, Reo
IGW-4019A	4	Indian, Palmer
IGW-4020	4	Reo
IGW-4022	4	Buchanan, Gray, Hercules, Kermath, Lathrop, U. S. Motors
IGW-4023	6	Chris Craft
IGW-4023A	6	Chris Craft
IGW-4024	6	Kermath, Star Marine, Worthington
IGW-4025	4	Kermath
IGW-4025B	4	Fairmont, Hercules
IGW-4026	6	Studebaker
IGW-4028	4	Chris Craft
IGW-4029	4	Gray Marine
IGW-4030	2	Kohler
IGW-4031A	6	Insley
IGW-4032A	6	Lycoming
IGW-4032B	6	Lycoming
IGW-4033	6	Galion, Hercules, Lathrop, Palmer, Ross Carrier, U. S. Motors
IGW-4034A	4	Gray Marine
IGW-4034B	4	Universal Motors
IGW-4034C	4	Universal Motors
IGW-4035	4	Lathrop, LeRoi
IGW-4036	6	Lathrop, Regal
IGW-4037	6	Kermath
IGW-4038	6	Kermath
IGW-4038A	6	Cullen, Hercules, Hough, Jaeger Mach. , Ross Carrier
IGW-4040A	6	Gray Marine, Towmotor
IGW-4040B	6	Universal Motors
IGW-4043A	4	Lycoming
IGW-4044	4	Continental
IGW-4044A	4	Hill Diesel, Towmotor
IGW-4044B	4	Towmotor, White Mtr.
IGW-4045A	6	Autocar
IGW-4046	2	Indian Motorcycle
IGW-4047A	4	Indian Motorcycle
IGW-4047B	4	Indian Motorcycle
IGW-4048A	2	Indian Motorcycle
IGW-4049	2	Indian Motorcycle
IGW-4050	4	Easthope
IGW-4051	2	Crocker Motorcycle
IGW-4052	3	Easthope
IGW-4053	2	Indian Motorcycle
IGW-4054A	4	Palmer
IGW-4055	2	Indian Motorcycle

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

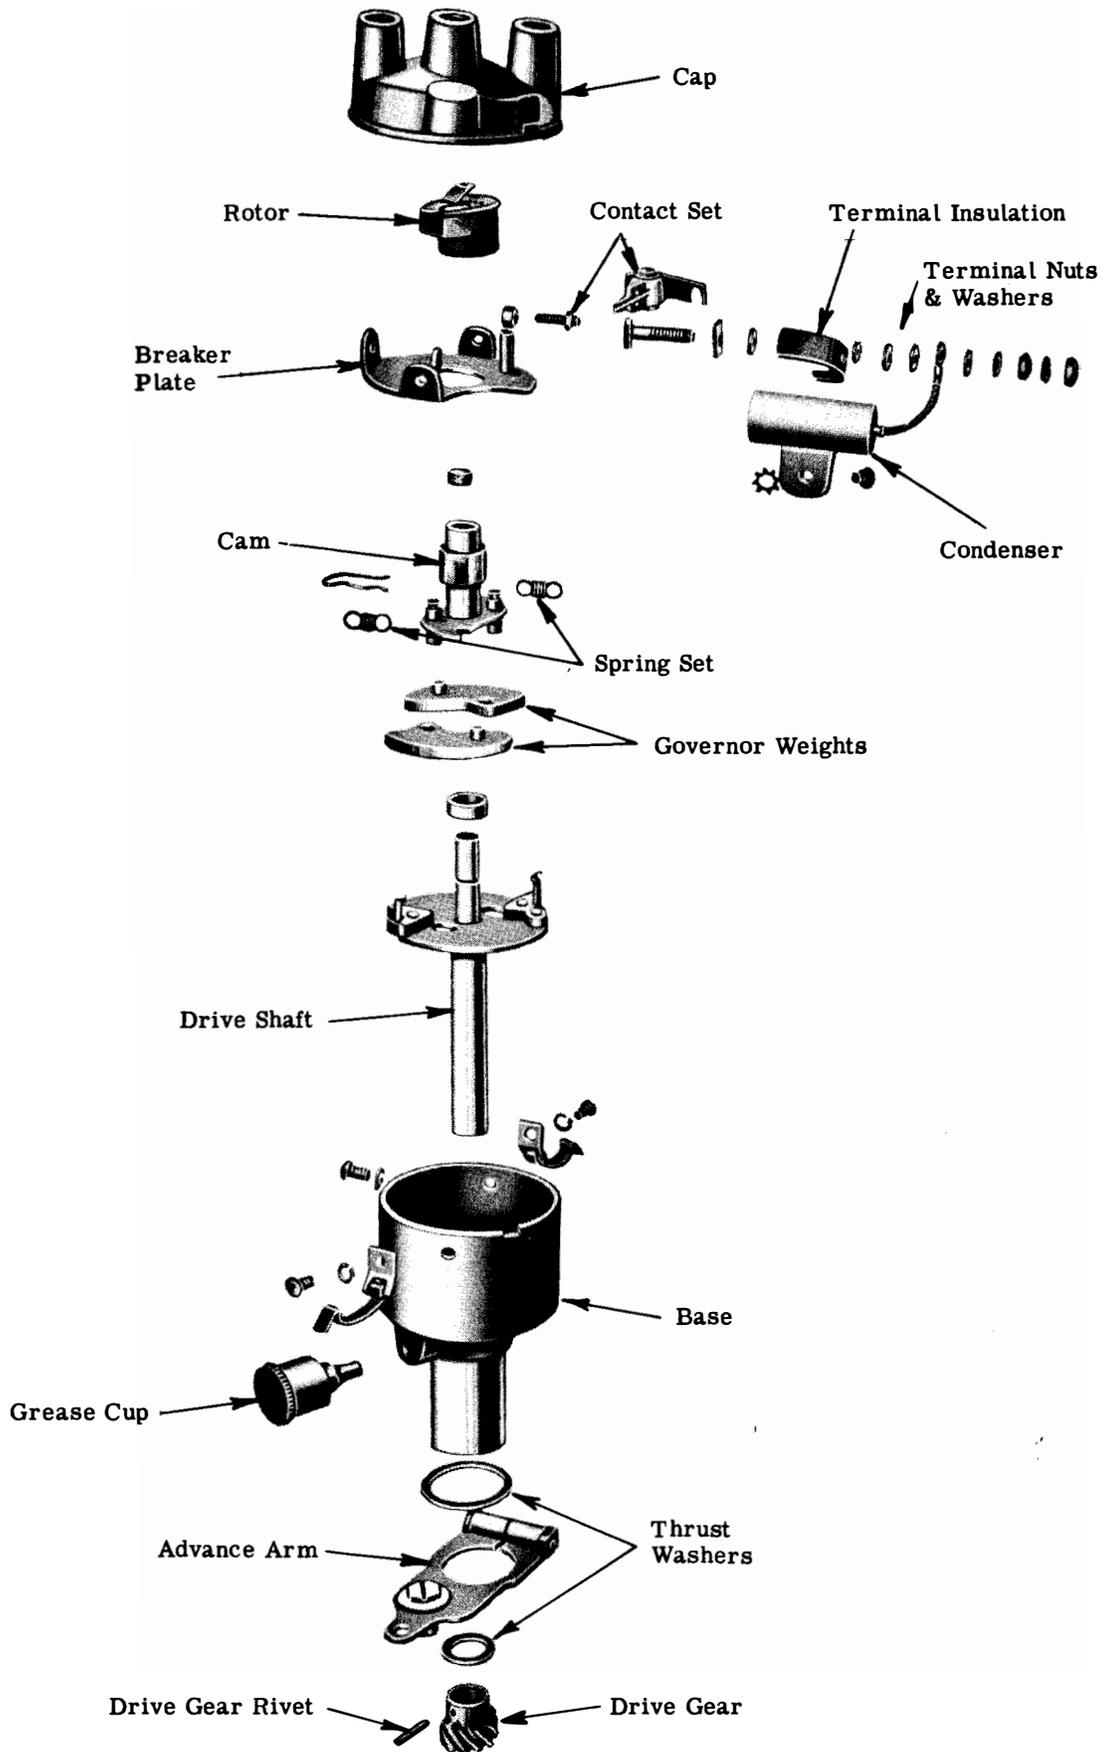



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate	Base Assy.	Bearings (2) Used	Drive Shaft	Weight SpringSet	Cam & Stop Plate	Gear or Coupling
IGW-4001	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2285A	IG-579A	IGW-2094L	IGB-291S	IGW-2100L	- - -
IGW-4005	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4005A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4006B	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RB	IGB-291S	IGW-2032R	GE-56
IGW-4006C	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RB	IGB-291S	IGW-2032R	GE-56
IGW-4007	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048RA	IG-897S	IGW-2032R	IG-644
IGW-4008	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048L	IGB-298S	IGW-2032L	IG-644
IGW-4009A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018R	IGB-301S	IGW-2032R	IG-517
IGW-4010	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2270A	IG-579A	IGW-2019R	IGB-165AS	IGW-2032R	- - -
IGW-4011	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048R	IGB-299S	IGW-2032R	IG-644
IGW-4012A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025J	IGB-1010	IGB-2214	IG-579A	IGW-2018RA	IGB-302BS	IGW-2032R	GE-40
IGW-4013A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025J	IGB-1010	IGB-2214	IG-579A	IGW-2018RA	IGB-302BS	IGW-2032R	GE-40
IGW-4014	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018L	IGB-306S	IGW-2032L	- - -
IGW-4015	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4015A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4016	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2051L	IGB-302ES	IGW-1050L	- - -
IGW-4017	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048RA	IG-897S	IGW-2032R	IG-644
IGW-4018	IGB-1240	IGB-1239	IGP-3028A	IGB-1025B	- - -	IGB-2309	IG-579A	IGW-1310L	- - -	- - -	IG-644
IGW-4019A	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1311R	- - -	- - -	IG-261
IGW-4020	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048LA	IGB-291S	IGW-1050L	IG-644
IGW-4022	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RA	IGB-299S	IGW-1050R	- - -
IGW-4023	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2024R	IG-897S	IGW-2032R	- - -
IGW-4023A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2024RC	IGB-312S	IGW-2100R	- - -
IGW-4024	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2254	IG-579A	IGW-2024RC	IGB-312S	IGW-2100R	- - -
IGW-4025	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RA	IGB-299S	IGW-1050R	- - -
IGW-4025B	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IGB-298S	IGW-1050R	- - -
IGW-4026	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2285A	IG-579A	IGW-2045L	IGB-291S	IGW-2032L	- - -
IGW-4028	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2254	IG-579A	IGW-2024RA	IGB-301S	IGW-1050R	- - -
IGW-4029	IGB-1225†	IGB-1239	IGW-3028S	IGB-1025E	IGB-1010	IGB-2313	IG-579A	IGW-2025L	IGB-315S	IGW-1050L	- - -
IGW-4030	IGB-1065A	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2314	IG-579A	IGW-2018RB	IGB-306S	IGW-1052R	- - -
IGW-4031A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RC	IGB-312S	IGW-2032R	GE-20
IGW-4032A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176B	IG-579A	IGW-2053R	IGB-297S	IGW-2032R	GK-36
IGW-4032B	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176B	IG-579A	IGW-2053R	IGB-297S	IGW-2032R	IG-261
IGW-4033	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4034A	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGW-2055	IG-579A	IGW-2018RD	IGB-315S	IGW-1050R	GK-36
IGW-4034B	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGW-2055	IG-579A	IGW-2018RH	IG-897S	IGW-1050R	GK-36
IGW-4034C	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGW-2055	IG-579A	IGW-2018RJ	IGB-300S	IGW-1050R	IG-261
IGW-4035	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1310LA	- - -	- - -	IG-644
IGW-4036	IGB-1240	IGB-1239	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1310R	- - -	- - -	IG-644
IGW-4037	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047LA	IGB-317S	IGW-2032L	- - -
IGW-4038	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RD	IGB-317S	IGW-2032R	- - -
IGW-4038A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RA	IGB-300S	IGW-2032R	- - -
IGW-4040A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RE	IGB-318S	IGW-2032R	GK-36
IGW-4040B	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RF	IGB-319S	IGW-2032R	IG-261
IGW-4043A	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2321	IG-579A	IGW-2047RC	IGB-297S	IGW-1050R	GE-36
IGW-4044	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RG	IGB-312S	IGW-1050R	- - -
IGW-4044A	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RG	IGB-312S	IGW-1050R	GK-36
IGW-4044B	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RE	IGB-165SS	IGW-1050R	GK-36
IGW-4045A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4046	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGB-2290	IG-579A	IGW-1065R	- - -	- - -	- - -
IGW-4047A	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGB-1311R	- - -	- - -	IG-261
IGW-4047B	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGB-1311R	- - -	- - -	GK-36
IGW-4048A	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGB-1287R	- - -	- - -	GE-50
IGW-4049	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGW-1065R	- - -	- - -	- - -
IGW-4050	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGW-1311R	- - -	- - -	- - -
IGW-4051	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGW-1082L	- - -	- - -	- - -
IGW-4052	IGB-1084	IGB-1239	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1305LB	- - -	- - -	- - -
IGW-4053	IGB-1065C	IGB-1002J	IGP-3028A	IGB-1025B	- - -	IGW-2158	IG-579A	IGW-1065R	- - -	- - -	- - -
IGW-4054A	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGW-1311LA	- - -	- - -	IG-261
IGW-4055	IGB-1065C	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGW-2158	IG-579A	IGW-1065L	- - -	- - -	- - -

† Requires IGB-224 Cap Cover.





ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

 MISCELLANEOUS PARTS

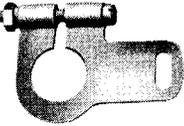Name	Part No.	No. Used	Used on
	IG-1860A	1	IGW-4044, A, B
	IG-2806	1	IGW-4019A, IGW-4046, IGW-4050, IGW-4054A
	IG-2806-1	1	IGW-4052
	IG-2806A	1	IGW-4051
	IG-2806A-3	1	IGW-4014
	IG-2806E	1	IGW-4032A, B
	IG-2806J	1	IGW-4035, IGW-4036
	IG-2806K-4	1	IGW-4031A
	IG-2806L-3	1	IGW-4047A, B
	IG-2806M-3	1	IGW-4048A, IGW-4049
	IG-2806M-7	1	IGW-4053, IGW-4055
	IG-2860A	1	IGW-4008
	IG-2860A-2	1	IGW-4034A, B, C, IGW-4040A, B
	IG-2860A-3	1	IGW-4020, IGW-4029
	IGB-1216	1	IGW-4012A, IGW-4013A
	IGB-1271	1	IGW-4010
	IGB-2171-2	1	IGW-4015, A
	IGB-2296	1	IGW-4005, A
	IGB-2320	1	IGW-4043A
	IGC-2024AC-15	1	IGW-4006B
	IGC-2024AE-15	1	IGW-4006C
IGC-1024AG-3	1	IGW-4023, A	
IGC-2024F-3	1	IGW-4033	
IGC-2024K-3	1	IGW-4022	
IGC-2024N-2	1	IGW-4016, IGW-4038, IGW-4038A	
IGC-2024N-5	1	IGW-4011, IGW-4037	
IGC-2053A-2	1	IGW-4009A	
IGC-3024E-1	1	IGW-4007	
IGH-2062A-1	1	IGW-4017	
	IGB-38	1	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	CB-140	1	All
	IA-278	7	IGW-4012A, IGW-4013A
	IG-447	1	IGW-4010
	IGB-199	1	IGW-4001, IGW-4016, IGW-4029, IGW-4046, IGW-4048A, IGW-4049, IGW-4051, IGW-4053, IGW-4055
CONTROL, VACUUM ADVANCE	VC-4004	1	IGW-4026
	IGS-38	1	IGW-4026
	X-382	1	IGW-4001, IGW-4029
	X-382	2	IGW-4026
	X-1512	1	IGW-4047A, IGW-4047B, IGW-4048A, IGW-4049, IGW-4053, IGW-4055
	IGB-230	2	IGW-4029
	Tachometer Drive GE-51	1	IGW-4026
	Tachometer Follower GE-52	1	IGW-4026
	IGW-44	1	IGW-4026
	IGB-21	1	All
KEY, WOODRUFF, #212	X-1460	1	IGW-4051
	IGW-37	1	IGW-4001, IGW-4005, IGW-4005A, IGW-4006B, IGW-4006C, IGW-4007, IGW-4008, IGW-4008A, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, IGW-4015A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4023A, IGW-4024, IGW-4025, IGW-4025B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(A) Breaker Plate Screw, #8 12X-195	3	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	Cap Spring Screw, #8 12X-195	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	X-1276	1	All
	(B) Contact Bracket Screw, #6 12X-194	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, IGW-4047B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

 MISCELLANEOUS PARTS (Cont.)

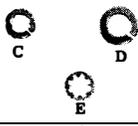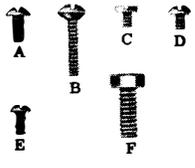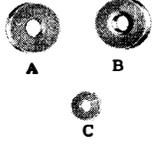	Name	Part No.	No. Used	Used on
	LOCKWASHERS (Cont.) (C) Terminal Stud #10 (D) Terminal Stud, Skpf. #10	12X-196 X-1270	2 1	All IGW-4005, A, IGW-4018, IGW-4019A, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(E) Vacuum Control Mounting, 1/4	12X-199	1	IGW-4026
	NUT (A) Lock, Breaker Contact (B) Terminal Stud, Hex., #10-32	IB-23 8X-173	1 2	All All
	OILER (A) Elbow (B) Sleeve	X-488 X-490A	1 1	IGW-4012A, IGW-4013A, IGW-4032A, B IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4014, IGW-4015, IGW-4015A, IGW-4016, IGW-4017, IGW-4018, IGW-4019A, IGW-4020, IGW-4022, IGW-4028, IGW-4030, IGW-4031A, IGW-4033, IGW-4034A, B, IGW-4034C, IGW-4035, IGW-4036, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A, IGW-4046, IGW-4050, IGW-4051, IGW-4052, IGW-4054A
	PLUG, RUBBER, VENT HOLE	IGB-264	1	IGW-4001, IGW-4012A, IGW-4013A, IGW-4016, IGW-4019A, IGW-4026, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4054A
	RESISTANCE UNIT	IG-1205 SP-4008	1 1	IGW-4010 IGW-4012A
	RIVET Collar	SW-213	1	IGW-4001, IGW-4010, IGW-4016, IGW-4029, IGW-4046, IGW-4048A, IGW-4049, IGW-4051, IGW-4053, IGW-4055
	Coupling	SW-213	1	IGW-4007, IGW-4008, IGW-4011, IGW-4017, IGW-4018, IGW-4020, IGW-4035, IGW-4036
	Gear	GB-31	1	IGW-4045A
	Gear	GJ-236	1	IGW-4005A, IGW-4006B, IGW-4006C, IGW-4015A
	Gear	SW-213	1	IGW-4009A, IGW-4012A, IGW-4013A, IGW-4019A, IGW-4026, IGW-4028, IGW-4031A, IGW-4032A, B, IGW-4034A, B, IGW-4040A, B, IGW-4043A, IGW-4044A, B, IGW-4047A, B, IGW-4048A, IGW-4054A
	SCREW (A) Breaker Plate, Rd. Hd., #8-32x5/16	8X-304	3	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, IGW-4015A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4023A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(B) Cap Cover, Ctsk. Hd., #8-32x3/4	8X-1340	2	IGW-4029
	(C) Cap Spring, Bdg. Hd., #8-32x3/16	8X-722	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(D) Condenser Mtg., Rd. Hd., #8-32x3/16	8X-59	1	All
	(E) Contact Bracket, Rd. Hd., #6-32x1/4	8X-302	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(F) Vacuum Control Mtg., Hex. Hd., 1/4-28x5/8	8X-343	1	IGW-4026
	SHAFT, TACHOMETER DRIVE	IGS-37	1	IGW-4026
	SPACER (A) Cam	IGW-36	1	IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4025, IGW-4025B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(B) Cam	IGW-92	1	IGW-4001, IGW-4023A, IGW-4024
	(C) Governor Weight	IGW-107A	2	IGW-4001
	SPRING Cap Clamp & Hinge	IGB-1007	2	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4018, IGW-4019A, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4035, IGW-4036, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044B, IGW-4045A, IGW-4046, IGW-4047A, IGW-4047B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	Cap Clamp Spring & Hinge	IGB-1007A	2	IGW-4044, IGW-4044A
	STUD Stud, Terminal, Primary, #10-32x3/4	IGB-20	1	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	Stud, Terminal, Primary, #10-32	IGW-39	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4023A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, IGW-4032B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

 MISCELLANEOUS PARTS (Cont.)

	Name	Part No.	No. Used	Used on
	TERMINAL	X-999	1	IGW-4012A, IGW-4013A
	VENT	XA-598	1	IGW-4053, IGW-4055
	WASHER			
	(A) Insulating, Term. Stud, Inner	IGB-22	1	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(B) Insulating, Term. Stud, Inner	IGW-38	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(A) Insulating, Term. Stud, Outer	IGB-22	1	All
	(D) Terminal Stud, Plain, #10	8X-183A	1	All
	(C) Terminal Stud, Spacing	IGW-187	*	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, IGW-4044B, IGW-4045A
	(E) Terminal Stud, Square	IGW-54	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(G) Thrust, Advance Arm	IG-816	1	IGW-4008, IGW-4009A, IGW-4014, IGW-4017, IGW-4019A, IGW-4020, IGW-4029, IGW-4031A, IGW-4032A, B, IGW-4034A, IGW-4034B, C, IGW-4035, IGW-4036, IGW-4040A, B, IGW-4044A, B, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(H) Thrust, Advance Arm	IG-816A	1	IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4011, IGW-4015, IGW-4015A, IGW-4016, IGW-4022, IGW-4023, A, IGW-4033, IGW-4037, IGW-4038, A
	(J) Thrust, Drive Shaft, Lower	IG-90	1	All
	Thrust, Drive Shaft, Upper	IG-90	1	IGW-4018, IGW-4019A, IGW-4026, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(K) Thrust, Drive Shaft, Upper	IGW-46	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(L) Thrust, Tach. Drive Shaft, 25/64x3/4x. 032	IGS-39	1	IGW-4026
	(F) Vacuum Control Mounting, 1/4	8X-357	1	IGW-4026
	WEIGHT			
	Governor	IGW-1014L	2	IGW-4008, IGW-4014, IGW-4020, IGW-4026, IGW-4029
	Governor	IGW-1014LA	2	IGW-4016, IGW-4037
	Governor	IGW-1014LB	2	IGW-4001
	Governor	IGW-1014R	2	IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4009A, IGW-4011, IGW-4012A, IGW-4013A, IGW-4015, A, IGW-4017, IGW-4022, IGW-4023, IGW-4025, IGW-4030, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4038A, IGW-4040B, IGW-4043A, IGW-4045A
	Governor	IGW-1014RA	2	IGW-4010, IGW-4025B, IGW-4028, IGW-4031A, IGW-4038, IGW-4040A, IGW-4044, A, B
	Governor	IGW-1014RB	2	IGW-4023A, IGW-4024
	WICK			
	(A) Felt, Cam Sleeve	IG-495	1	IGW-4001, IGW-4005, A, IGW-4006, B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(B) Felt, Oilier	IGP-34	1	IGW-4032A, B
	(B) Felt, Oilier	IGW-188	1	IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4018, IGW-4019A, IGW-4020, IGW-4022, IGW-4030, IGW-4031A, IGW-4033, IGW-4034A, IGW-4034B, C, IGW-4035, IGW-4036, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4044, A, B, IGW-4045A, IGW-4046, IGW-4050, IGW-4051, IGW-4052, IGW-4054A
	(B) Felt, Oilier	IGW-188A	1	IGW-4001, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4053, IGW-4055

* Used as required.