

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

MBR-3214 SOLENOID STARTING SWITCH PARTS LIST

MBR-3214
(Issued 1-23-52)

 
Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
HRG-4001	1	Relay, Time Delay	TC-51J	1	Resistor, Carbon
12X-196	4	Lockwasher, Term. Screw, #10	8X-54	2	Screw, Carbon Resistor, Rd. Hd. #8-32x1/2
8X-312	4	Screw, Terminal, Rd. Hd. #10-32x1/4	8X-141	2	Nut, Carbon Resistor Sc., Hex. #8-32
MBD-91	2	Stud, Terminal, Battery, 3/8-16	8X-173	5	Nut, Cover (2), Terminal Stud (3), Hex. #10-32
MBD-92	1	Plate, Clamp, Insulation	X-195	2	Lockwasher, Carbon Resistor Sc., #8
MBD-95	1	Insulation, Connector	12X-196	14	Lockwasher, Switch Mtg. (4), Cover (2), Terminal Stud (6) Relay Mtg. Sc. (2), #10
MBD-96	2	Grommet, Rubber, Battery Terminal	12X-201	6	Lockwasher, Switch Terminal, 3/8
MBD-108	3	Bushing, Rubber, Term. Stud, #10	8X-311	2	Screw, Clamp, Plate & Switch Mtg., Rd. Hd. #10-32x3/8
MBD-109	3	Stud, Terminal, #10-32	8X-312	2	Screw, Switch Mtg., Rd. Hd. #10-32x1/4
MBD-128	2	Washer, Plain, Battery Term.	8X-348	2	Washer, Plain, Carbon Resistor Sc., #8
MBD-164	1	Lead Assembly, 1 15/16"	8X-706	2	Screw, Relay Mtg., Bdg. Hd. #10-32x5/16
X-767	1	Terminal	8X-830	4	Nut, Switch Terminal, Hex. 3/8-16
X-770	1	Terminal			
MBD-165	1	Lead Assembly, 4 1/2"			
X-770	1	Terminal			
X-1461	1	Terminal			
MBD-167	1	Insulation, Resistor Support			
MBD-1160	1	Connector Assy., Switch Terminal			
MBD-157	1	Lead Assembly, 4 1/2"			
X-767	1	Terminal			
MBD-159	2	Lead Assembly, 2 1/4"			
X-770	2	Terminal			
MBD-1214A	1	Base, Switch Mtg.			
MBR-37	2	Lead Assembly, 3"			
X-767	1	Terminal			
X-976	1	Terminal			
MBR-1035	1	Resistance			
MBR-1038	1	Cover			
MU-37	3	Washer, Plain, Terminal Stud, 5/16			
SS-4310	2	Switch, Starting			
12X-196	2	Lockwasher, #10			
12X-201	4	Lockwasher, 3/8			
8X-830	4	Nut, Hex. 3/8-16			
8X-1372	2	Nut, Hex. #10-32			

UNIT	APPLICATION
MBR-3214	Buda

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCHES SAD-4000 SERIES

(Issued 11-14-55)

Name of Part	No. Used	SAD-4001	SAD-4001A
Cover, Switch	1	SAD-4	SAD-4
Gasket, Switch Cover	1	SAD-25	SAD-25
Lockwasher, Term. Stud, 5/16	1	12X-200	
Nut, Terminal Stud, Hex. #10-32	1	8X-173	8X-173
Nut, Terminal Stud, Hex. 5/16-18	3	8X-2988	8X-2988 (2)
Plunger Assembly	1	SAD-1005	SAD-1005
Retainer	1	SSX-9	SSX-9
Retainer, Outer	1	SAD-9	SAD-9
Shaft, Plunger	1	SAD-5	SAD-5
Spring, Plunger	1	SS-88	SS-88
Spring, Plunger, Outer	1	SAD-26	SAD-26
Switch Blade	1	SSX-14	SSX-14
Washer, Insulation	2	SSX-13	SSX-13
Screw, Switch Cover, Rd. Hd. #10-32x7/8	2	8X-3291	8X-3291
Solenoid Assembly	1	SAD-2001	SAD-2001S-1
Stud, Terminal	1	SAD-30	SAD-30
Stud, Terminal, Sq. Neck #10-32x15/16	1	X-3218	X-3218
Terminal	1	SAD-38	SAD-38
Stud, Terminal, 5/16	1	SAD-29	SAD-29
Washer, Nylon, Cover Sc., #10	2	SAD-34	SAD-34
Washer, Nylon, Term. Stud, #10	1	SAD-23	SAD-23
Washer, Nylon, Term. Stud, 5/16	2	SAD-24	SAD-24
Wick, Felt	1	EWU-17	EWU-17

UNIT	APPLICATION
SAD-4001	Chrysler. De Soto
SAD-4001A	Ford Truck

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCHES SAD-4100 SERIES

(Issued 11-15-55)

Name of Part	No. Used	SAD-4101
Cover, Switch	1	SAD-4A
Gasket, Switch Cover	1	SAD-25
Lockwasher, Terminal Stud, 5/16	1	12X-200
Nut, Terminal Stud, Hex. #8-32	2	8X-141
Nut, Terminal Stud, Hex. 5/16-18	3	8X-2988
Plunger Assembly	1	SAD-1005A
Shaft, Plunger	1	SAD-5
Retainer, Outer	1	SAD-9
Spring, Plunger, Outer	1	SAD-26
Washer, Insulation	1	SAD-39
Switch Blade	1	SS-14
Spring, Plunger	1	SS-88
Retainer	1	SSX-9
Washer, Insulation	1	SSX-13
Screw, Switch Cover, Rd. Hd. #10-32x7/8	2	8X-3291
Solenoid, Assembly	1	SAD-2001A
Stud, Terminal	1	SAD-30
Stud, Terminal, Sq. Neck #8-32x15/16	1	X-3286
Terminal	1	SAD-38
Stud, Terminal, 5/16	1	SAD-29
Stud, Terminal, Sq. Neck #8-32x15/16	1	X-3286
Terminal, Contact Spring	1	SAD-40
Washer, Nylon, Cover Sc., #10	2	SAD-34
Washer, Nylon, Terminal Stud, #8	2	SAD-37
Washer, Nylon, Terminal Stud, 5/16	2	SAD-24
Wick, Felt	1	EWU-17

UNIT	APPLICATION
SAD-4101	Hudson, Nash, Packard, Studebaker

|

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SAF- 4001 SOLENOID STARTING SWITCH

SAF- 4001
(Issued 7- 2- 56)

Part No.	No. Used	Name of Part
EWU- 17	1	Felt, Wick
SAD- 4	1	Cover, Switch
SAD- 23	1	Washer, Nylon, Term. Stud, 10
SAD- 24	2	Washer, Nylon, Term. Stud, 5/16
SAD- 25	1	Gasket, Switch Cover
SAD- 29	1	Stud, Terminal, 5/16
SAD- 34	2	Washer, Nylon, Cover Sc., 10
SAD- 1005	1	Plunger, Assy.
SAD- 5	1	Shaft, Plunger
SAD- 9	1	Retainer, Outer
SAD- 26	1	Spring, Plunger, Outer
SS- 88	1	Spring, Plunger
SSX- 9	1	Retainer
SSX- 13	2	Washer, Insulation
SSX- 14	1	Switch Blade
SAF- 2001	1	Solenoid Assy.
SAD- 30	1	Stud, Terminal
SAD- 38	1	Terminal
X- 3218	1	Stud, Terminal, Sq. Neck 10- 32x15/16
8X- 173	1	Nut, Term. Stud, Hex. 10- 32
12X- 200	1	Lockwasher, Term. Stud, 5/16
8X- 2988	3	Nut, Term. Stud, Hex. 5/16- 18
8X- 3291	2	Screw, Switch Cover, Rd. Hd. 10- 32x7/8

UNIT	APPLICATION
SAF- 4001	Dodge Truck

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS


SOLENOID STARTING SWITCH

SAG-4000
Series
(Issued 10-15-56)

Name of Part	No. Used	SAG-4001
Cover Assy., Switch	1	SAD-1053
Insulation	1	SAD-54
Lockwasher, Term. Stud, 5/16	1	12X-200
Nut, Term. Stud, Hex. 5/16-18	1	8X-2988
Stud, Terminal, Battery	1	SAD-29
Washer, Ins., Term. Stud, 5/16	1	SS-13D
Washer, Nylon, Term. Stud, 5/16	1	SAD-55
Gasket, Cover	1	SAD-56
Lockwasher, Term. Stud, #10	1	12X-196
Lockwasher, Term. Stud, 5/16	1	12X-200
Nut, Term. Stud, Hex. 5/16-18	2	8X-2988
Nut, Term. Stud, Hex. #10-32	1	8X-173
Plunger Assy.	1	SAD-1005A
Bushing, Insulating	1	SAD-39
Retainer	1	SSX-9
Retainer, Outer	1	SAD-9
Shaft, Plunger	1	SAD-5
Spring, Plunger	1	SS-88
Spring, Plunger, Outer	1	SAD-26
Switch Blade	1	SS-14
Washer, Insulating	1	SSX-13
Screw, Switch Cover, Rd. Hd. #10-32x7/8	2	8X-3291
Solenoid Assy.	1	SAG-2001
Stud, Terminal, Motor	1	SAD-30
Stud, Terminal, Sq. Neck #10-32x15/16	1	X-3218
Terminal	1	SAD-43
Washer, Ins., Term. Stud, #10	1	SAD-58
Washer, Ins., Term. Stud, 5/16	1	SS-13
Washer, Nylon, Cover Sc., #10	2	SAD-34
Washer, Nylon, Term. Stud, #10	1	SAD-57
Washer, Nylon, Term. Stud, 5/16	1	SAD-55

UNIT	APPLICATION
SAG-4001	Dodge Truck

SS-4100 SERIES SOLENOID SWITCHES

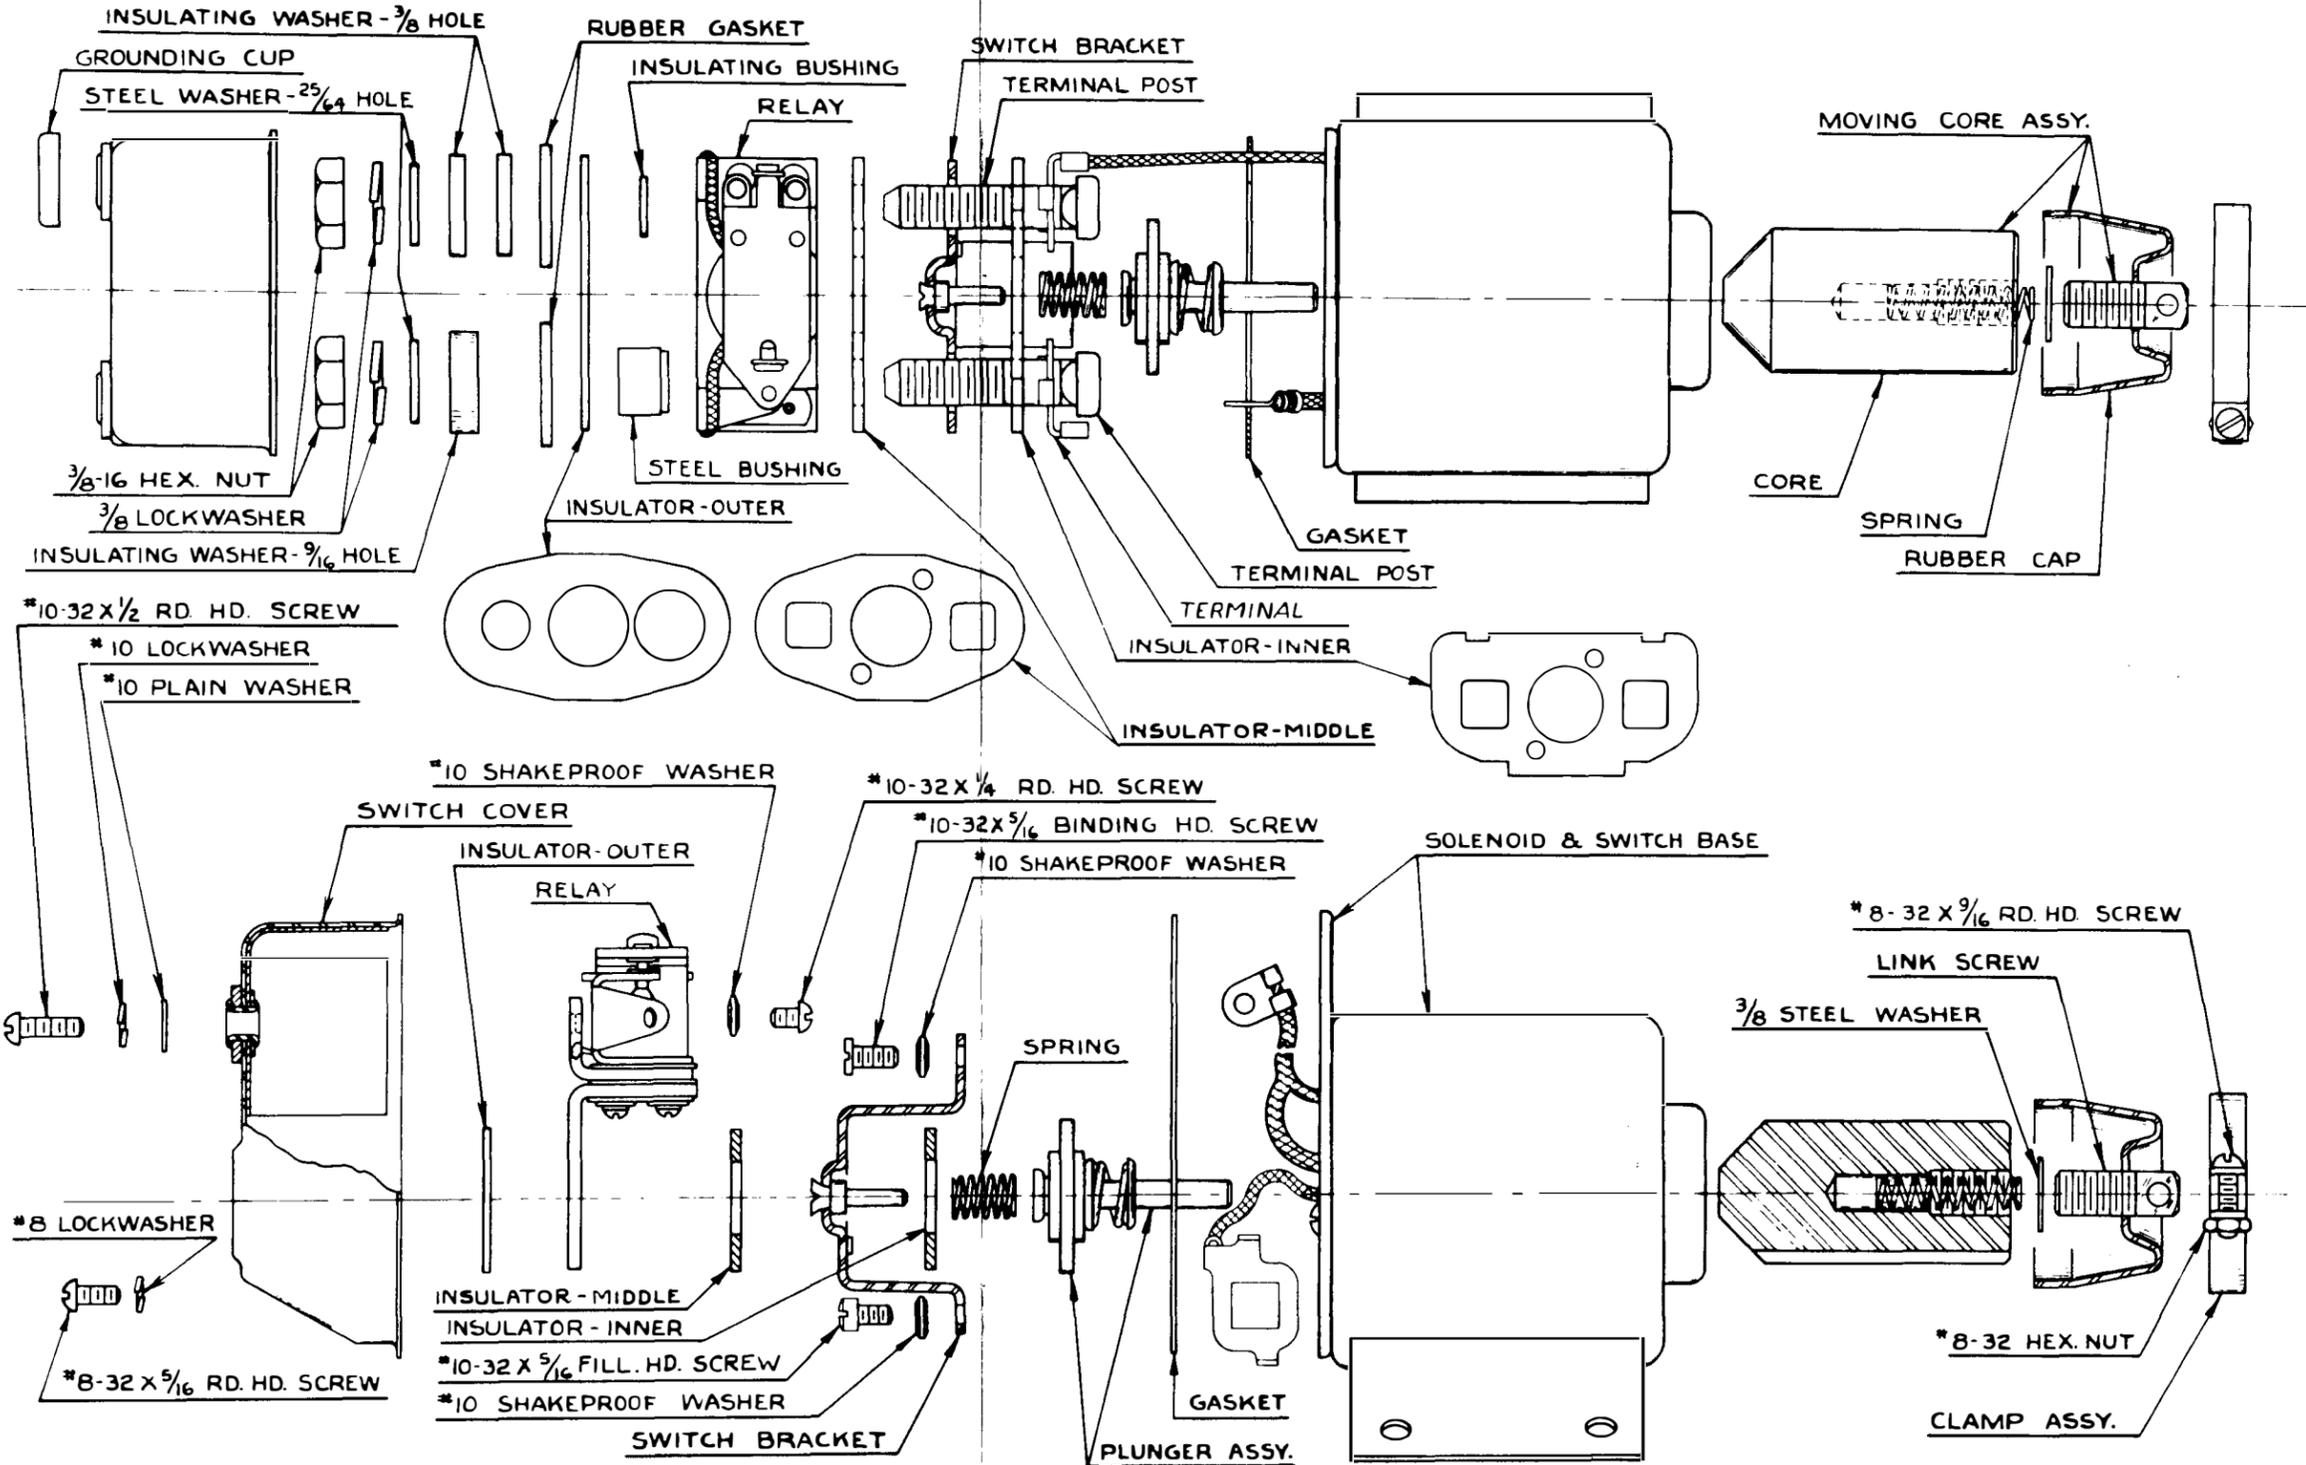


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

No. Used	Name of Part	SS-4101	SS-4103	SS-4104	SS-4105	SS-4106	SS-4107
		1	2	3	4	5	
1	Clamp Assembly					SS-1053	SS-1053
1	#8-32 Hex. Nut					8X-141	8X-141
1	#8-32x9/16 Rd. Hd. Screw					8X-47	8X-47
1	Gasket	SS-83	SS-83	SS-83	SS-83	SS-83	SS-83
1	Grounding Cup	SS-95	SS-95	SS-95	SS-95	SS-95	SS-95
1	Insulating Bushing	SW-688	SW-688	SW-688	SW-688	SW-688	SW-688
2	Insulating Washer - 3/8 Hole	SS-82	SS-82	SS-82	SS-82	SS-82	SS-82
1	Insulating Washer - 9/16 Hole	SS-81	SS-81	SS-81	SS-81	SS-81	SS-81
1	Insulator - Inner	SS-175	SS-175	SS-175	SS-175	SS-175	SS-175
1	Insulator - Middle	SS-75	SS-75	SS-75	SS-75	SS-75	SS-75
1	Insulator - Outer	SS-76	SS-76	SS-76	SS-76	SS-76	SS-76
1	Moving Core Assembly					SS-1057	SS-1057
1	Core					SS-57	SS-57
1	Link Screw					SS-59	SS-59
1	Rubber Cap					SS-54	SS-54
1	Spring					SS-61	SS-61
1	3/8 Steel Washer					SS-60	SS-60
1	Plunger Assembly	SS-2072	SS-2072	SS-2072	SS-2072	SS-2072	SS-2072
1	Relay	SS-3070R	SS-3070RA	SS-3070R	SS-3070RA	SS-3070R	SS-3070RA
2	Rubber Gasket	SS-84	SS-84	SS-84	SS-84	SS-84	SS-84
1	Solenoid & Switch Base	SS-3035R	SS-3035RA	SS-3035RB	SS-3035RC	SS-3035RD	SS-3035RE
1	Spring	SS-88	SS-88	SS-88	SS-88	SS-88	SS-88
1	Steel Bushing	SS-74	SS-74	SS-74	SS-74	SS-74	SS-74
2	Steel Washer - 25/64 Hole	MU-103A	MU-103A	MU-103A	MU-103A	MU-103A	MU-103A
1	Switch Bracket	SS-1087	SS-1087	SS-1087	SS-1087	SS-1087	SS-1087
1	Switch Cover	SS-1071	SS-1071	SS-1071	SS-1071	SS-1071	SS-1071
1	Terminal	SS-174	SS-174	SS-174	SS-174	SS-174	SS-174
2	Terminal Post - Long	SS-119	SS-119	SS-119	SS-119	SS-119	SS-119
2	3/8-16 Hex. Nut	8X-830	8X-830	8X-830	8X-830	8X-830	8X-830
2	3/8 Lock Washer	12X-201	12X-201	12X-201	12X-201	12X-201	12X-201
2	#8 Lock Washer	12X-195	12X-195	12X-195	12X-195	12X-195	12X-195
2	#10 Lock Washer	12X-196	12X-196	12X-196	12X-196	12X-196	12X-196
1	#10-32x5/16 Binding Hd. Screw	8X-706	8X-706	8X-706	8X-706	8X-706	8X-706
1	#10 Plain Washer	8X-183	8X-183	8X-183	8X-183	8X-183	8X-183
2	#8-32x5/16 Rd. Hd. Screw	8X-304	8X-304	8X-304	8X-304	8X-304	8X-304
1	#10-32x5/16 Fill. Hd. Screw	8X-870	8X-870	8X-870	8X-870	8X-870	8X-870
1	#10-32x1/4 Rd. Hd. Screw	8X-312	8X-312	8X-312	8X-312	8X-312	8X-312
2	#10-32x1/2 Rd. Hd. Screw	8X-309	8X-309	8X-309	8X-309	8X-309	8X-309
3	#10 Skpf. Washer	X-1270	X-1270	X-1270	X-1270	X-1270	X-1270

(Issued 4-17-40)

SS-4200 SERIES SOLENOID SWITCHES

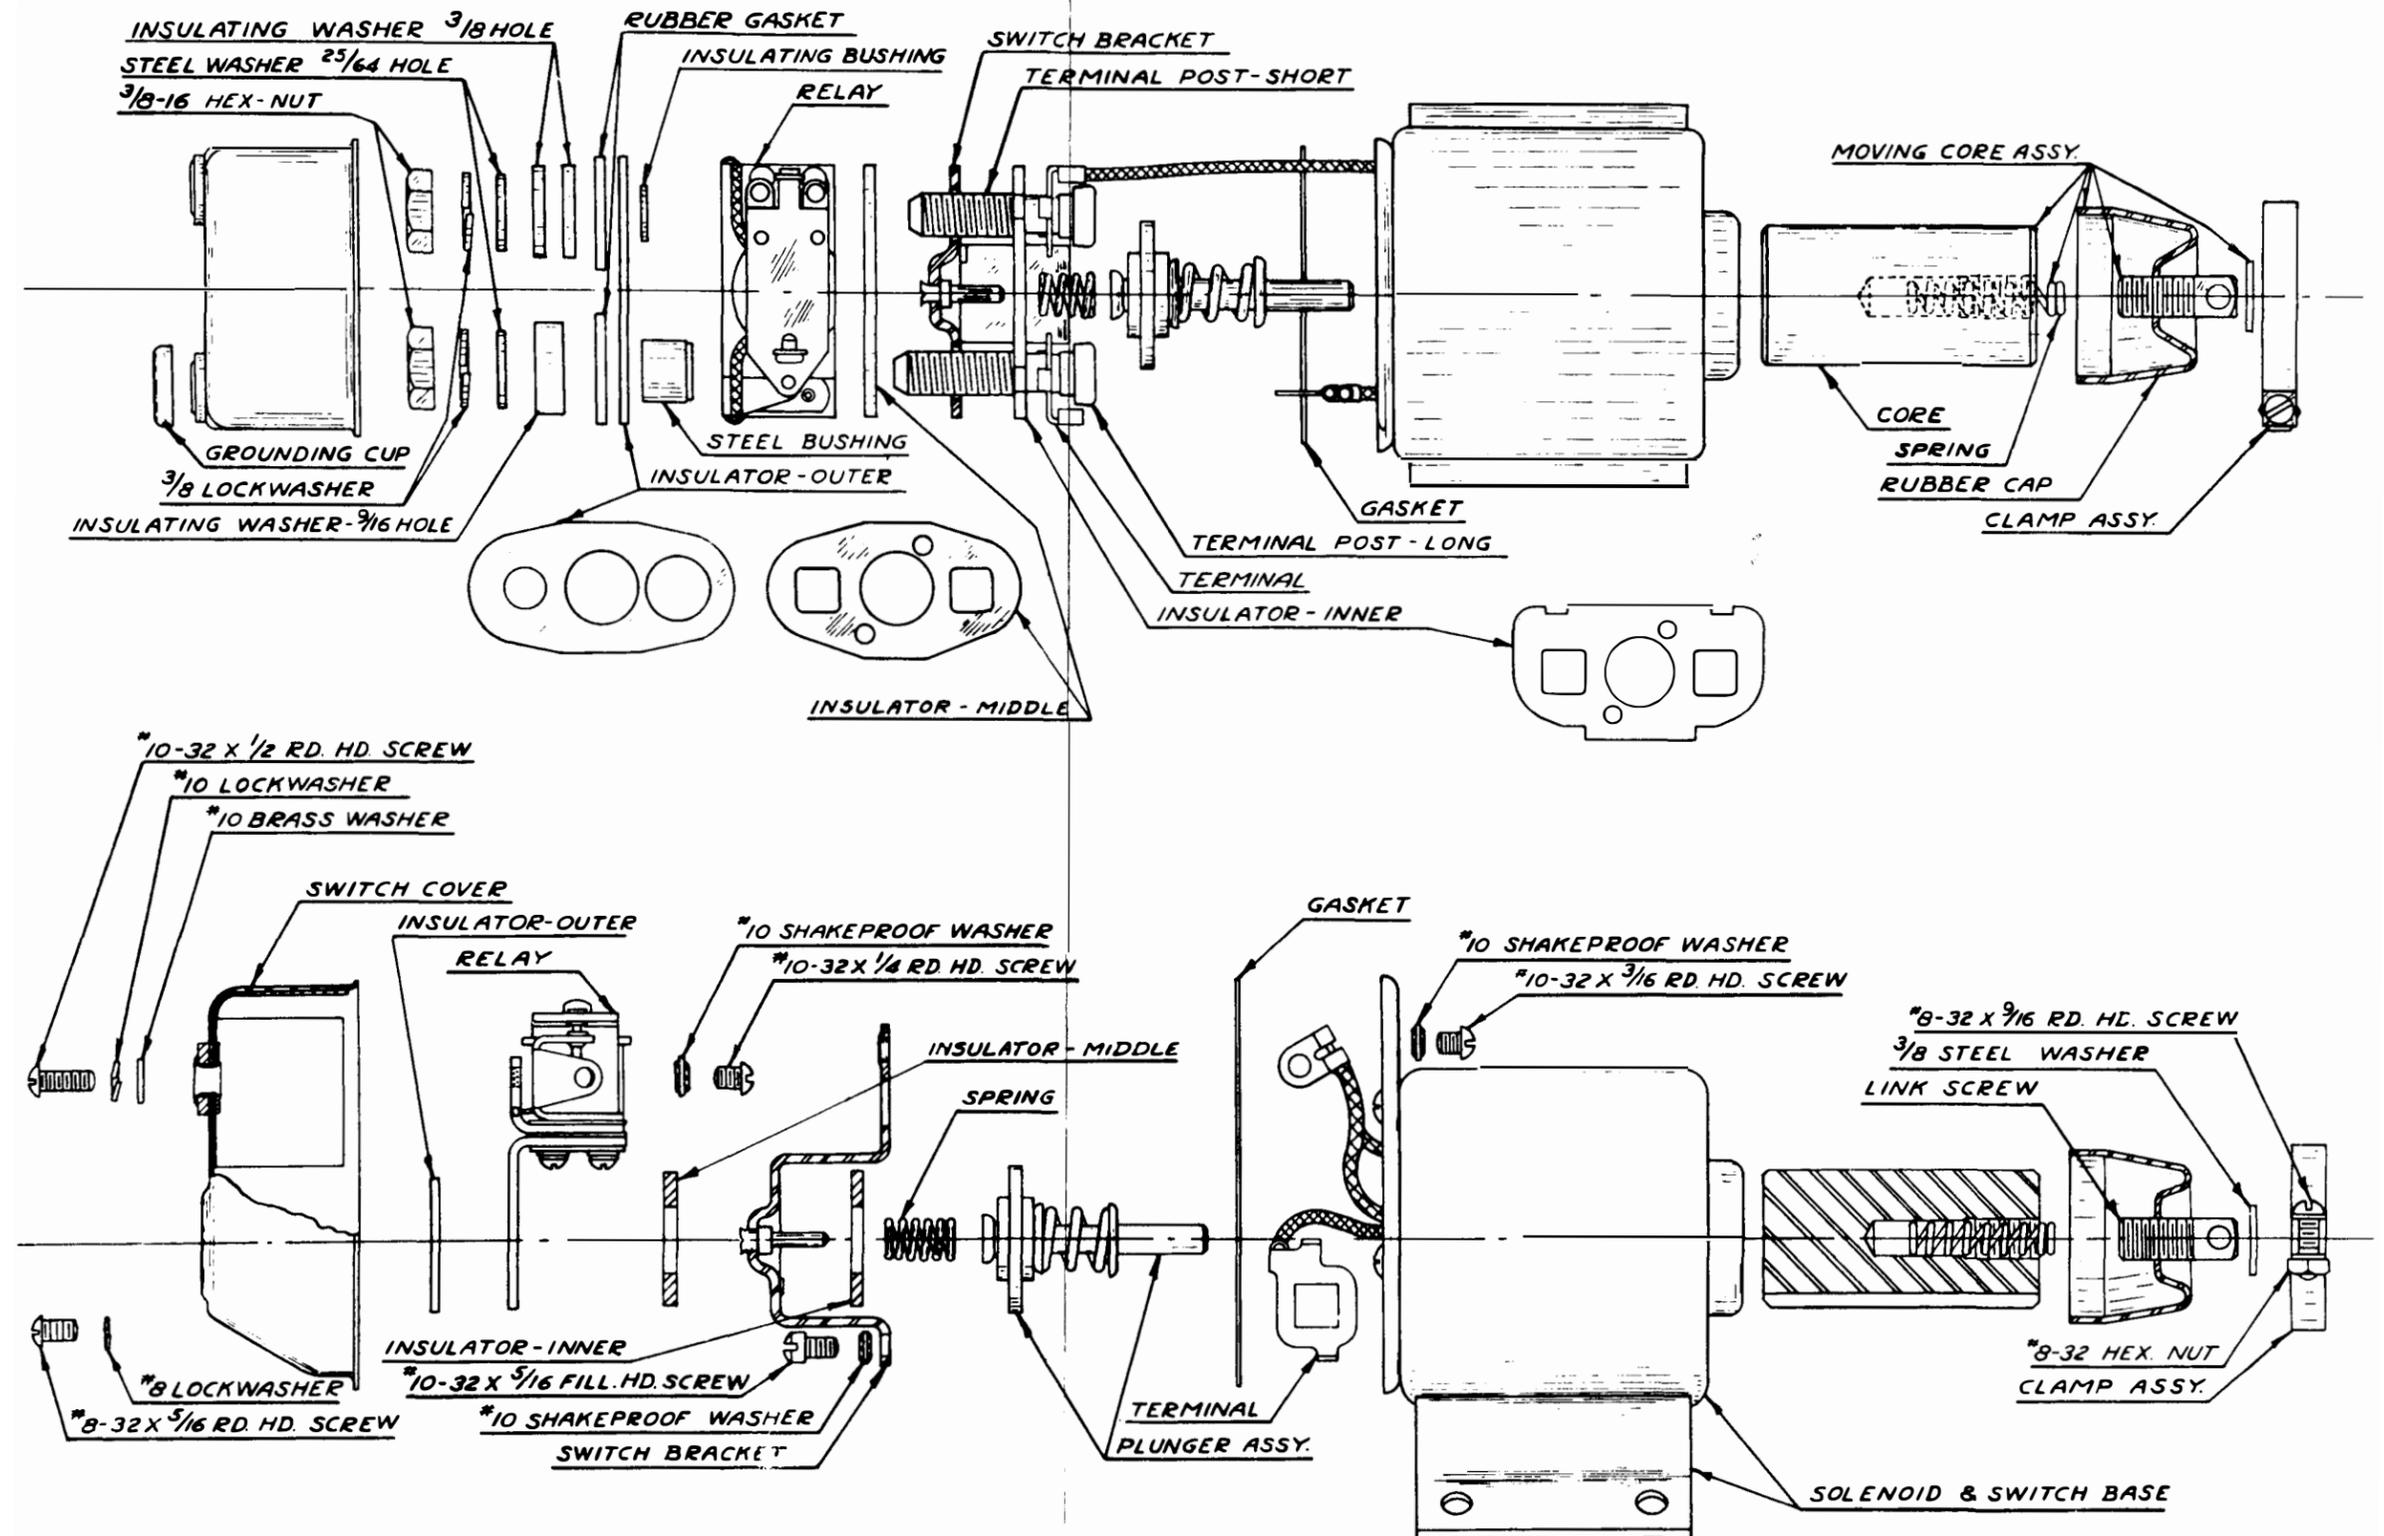

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

No. Used	Name of Part	SS-4201	SS-4202	SS-4203	SS-4203A	SS-4204	SS-4204A	SS-4205	SS-4206	SS-4207	SS-4207A	SS-4208	SS-4209	SS-4210
		1	2	3	4	5								
1	Clamp Assembly								SS-1053	SS-1053	SS-1053	SS-1053	SS-1053	
1	#8-32x9/16 Rd. Hd. Sc.								8X-47	8X-47	8X-47	8X-47	8X-47	
1	#8-32 Hex. Nut								8X-141	8X-141	8X-141	8X-141	8X-141	
1	Gasket	SS-83												
1	Grounding Cup	SS-95												
1	Moving Core Assembly								SS-1128A	SS-1128A	SS-1128A	SS-1128A	SS-1128A	
1	Core								SS-128	SS-128	SS-128	SS-128	SS-128	
1	Link Screw								SS-59	SS-59	SS-59	SS-59	SS-59	
1	Rubber Cap								SS-54	SS-54	SS-54	SS-54	SS-54	
1	Spring								SS-61	SS-61	SS-61	SS-61	SS-61	
1	3/8 Steel Washer								SS-60	SS-60	SS-60	SS-60	SS-60	
1	Plunger Assembly	SS-2072												
2	Rubber Gasket	SS-84												
1	Solenoid & Switch Base	SS-3035RF	SS-3035RH	SS-3035RG	SS-3035RV	SS-3035RI	SS-3035RT	SS-3035RJ	SS-3035RK	SS-3035RL	SS-3035RU	SS-3035RM	SS-3035RN	SS-3035RR
1	Spring	SS-88												
1	Switch, Bracket & Relay Assy.	SS-2124	SS-2124A	SS-2124	SS-2124E	SS-2124A	SS-2124D	SS-2124G	SS-2124E	SS-2124A	SS-2124D	SS-2124	SS-2124A	SS-2124J
1	Insulating Bushing	SW-688												
2	Insulating Washer-3/8 Hole	SS-82												
1	Insulating Washer-9/16 Hole	SS-81												
1	Insulator - Inner	SS-175												
1	Insulator - Middle	SS-75												
1	Insulator - Outer	SS-76												
1	Relay	SS-3070R	SS-3070RA	SS-3070R	SS-3070RD	SS-3070RA	SS-3070RC	SS-3070R	SS-3070RD	SS-3070RA	SS-3070RC	SS-3070R	SS-3070RA	SS-3070RA
1	Steel Bushing	SS-74												
2	Steel Washer-25/64 Hole	MU-103A												
1	Switch Bracket	SS-1124												
1	Terminal	SS-173												
1	Terminal	SS-174												
1	Terminal Post - Long								SS-176	SS-176	SS-176	SS-176	SS-176	SS-176
2	Terminal Post - Short	SS-119												
2	3/8-16 Hex. Nut	8X-830												
2	3/8 Lock Washer	12X-201												
1	Switch Cover	SS-1071												
1	#10 Brass Washer	8X-183												
2	#10-32 Hex. Nut								8X-173	8X-173	8X-173	8X-173	8X-173	8X-173
2	#8 Lock Washer	12X-195												
2	#10 Lock Washer	12X-196												
3	#10 Skpf. Washer	X-1270												
1	#10-32x5/16 Fill. Hd. Sc.	8X-870												
2	#8-32x5/16 Rd. Hd. Screw	8X-304												
1	#10-32x3/16 Rd. Hd. Screw	8X-1004												
1	#10-32x1/4 Rd. Hd. Screw	8X-312												
2	#10-32x1/2 Rd. Hd. Screw	8X-309												



(Issued 4-17-40)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCHES SS-4700 SERIES

No. Used	Name of Part	SS-4702	SS-4703	SS-4704	SS-4705
1	Clamp Assembly	SS-1053	SS-1053		SS-1053
1	Nut, Hex., #10-32	8X-141	8X-141		8X-141
1	Screw, Rd. Hd., #8-32x9/16	8X-47	8X-47		8X-47
1	Gasket, Switch Cover	SS-83	SS-83	SS-83	SS-83
2	Gasket, Rubber, Term. Stud	SS-84	SS-84	SS-84	SS-84
1	Insulation, Terminal		SS-233	SS-233	SS-233
1	Lockwasher, Bracket Screw, #10	12X-537	12X-537	12X-537	12X-537
2	Lockwasher, Cover Screw, #8	12X-195	12X-195	12X-195	12X-195
2	Lockwasher, Relay Term., #10	12X-196	12X-196	12X-196	12X-196
1	Moving Core Assembly	SS-1128A	SS-1128A		SS-1128A
1	Core	SS-128	SS-128		SS-128
1	Link Screw	SS-59	SS-59		SS-59
1	Rubber Cap	SS-54	SS-54		SS-54
1	Spring	SS-61	SS-61		SS-61
1	Washer, Steel, 3/8	SS-60	SS-60		SS-60
2	Nut, Relay Term., Hex., #10-32		8X-173	8X-173	8X-173
1	Plunger	SS-2072	SS-2072	SS-2072	SS-2072
2	Screw, Cover, Fill. Hd., #8-32x5/16	8X-888	8X-888	8X-888	8X-888
1	Screw, Sw. Brkt. & Relay Mtg., Fill. Hd., #10-32x5/16	8X-870	8X-870	8X-870	8X-870
2	Screw, Sol. Lead & Brkt., Rd. Hd., #10-32x1/4	8X-312	8X-312	8X-312	8X-312
2	Screw, Relay Term., Rd. Hd. #10-32x1/2	8X-309			
1	Solenoid & Switch Base	SS-3035RY	SS-3035RZ	SS-3035RAA	SS-3035RAB
1	Spring	SS-88	SS-88	SS-88	SS-88
1	Switch Brkt. & Relay Assy.	SS-2124	SS-2124E	SS-2124E	SS-2124E
1	Bushing, Insulating	SW-688	SW-688	SW-688	SW-688
1	Bushing, Steel	SS-74	SS-74	SS-74	SS-74
1	Insulation, Inner	SS-175	SS-175	SS-175	SS-175
1	Insulation, Middle	SS-75	SS-75	SS-75	SS-75
1	Insulation, Outer	SS-76	SS-76	SS-76	SS-76
2	Lockwasher, Term. Stud, 3/8	12X-201	12X-201	12X-201	12X-201
2	Nut, Term. Stud, Hex. 3/8-16	8X-830	8X-830	8X-830	8X-830
1	Relay	SS-3070R	SS-3070RD	SS-3070RD	SS-3070RD
1	Stud, Terminal, Long		SS-176	SS-176	SS-176
1	Stud, Terminal, Short	SS-119(2)	SS-119	SS-119	SS-119
1	Switch Bracket	SS-1124	SS-1124	SS-1124	SS-1124
1	Terminal	SS-173	SS-173	SS-173	SS-173
1	Terminal	SS-174	SS-174	SS-174	SS-174
2	Washer, Ins., 3/8 Hole	SS-82	SS-82	SS-82	SS-82
1	Washer, Ins. 9/16 Hole	SS-81	SS-81	SS-81	SS-81
2	Washer Steel 25/64 Hole	MU-103A	MU-103A	MU-103A	MU-103A
1	Switch Cover	SS-1071B	SS-1071	SS-1071	SS-1071
2	Washer, Plain, Relay Term., #10	8X-183A	8X-183A	8X-183A	8X-183A
2	Washer, Rubber, Relay Term.		SS-234	SS-234	SS-234
2	Washer, Sol. Lead & Brkt. Sc., Skpf. #10	X-1270	X-1270	X-1270	X-1270

(Issued 11-5-47)

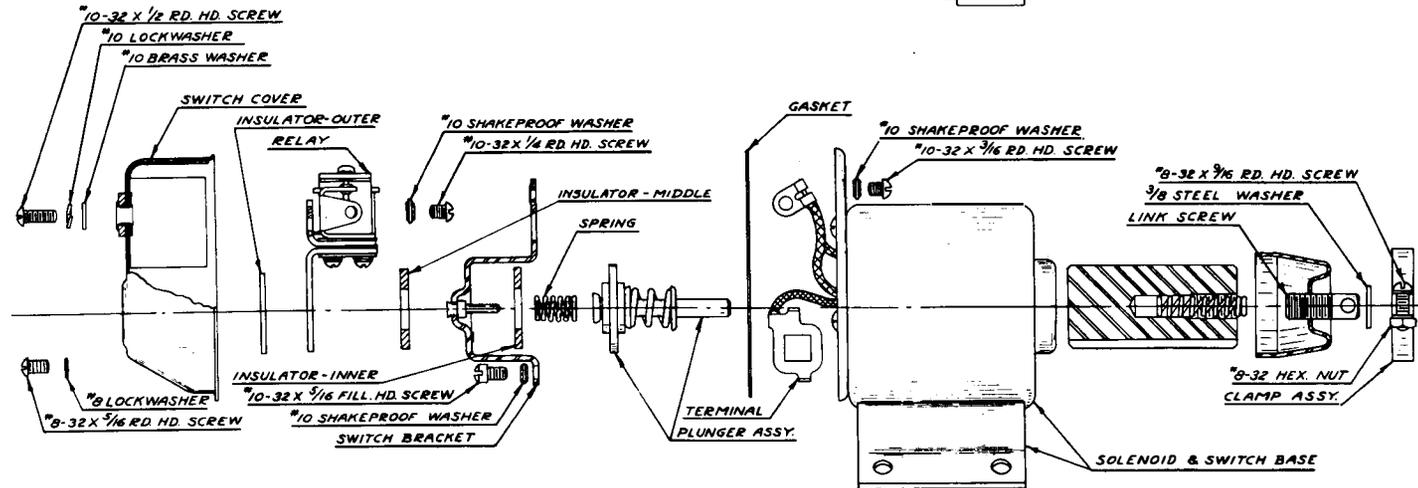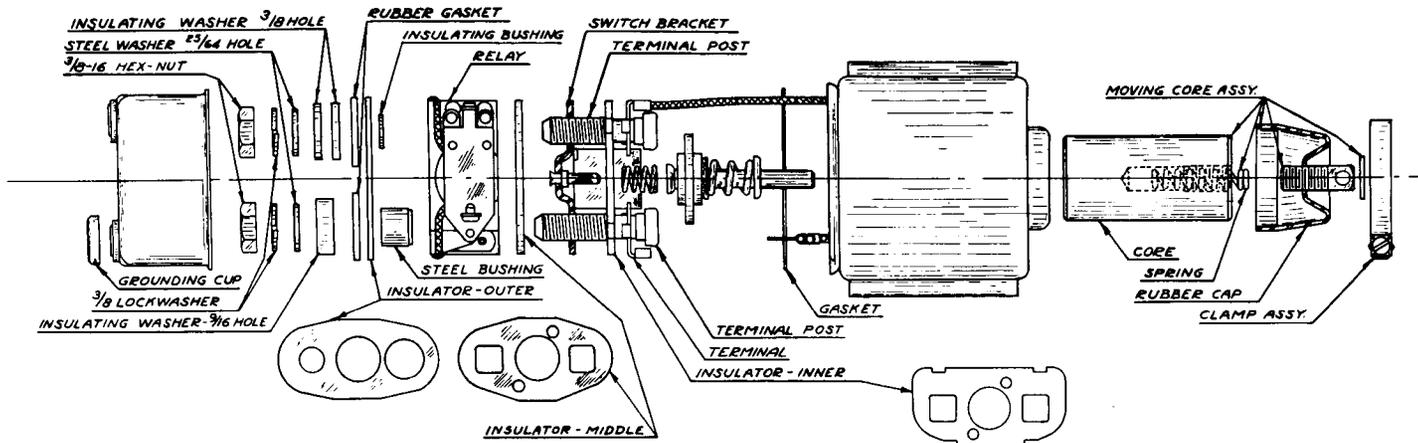

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCHES SS-4700 SERIES

No. Used	Name of Part	SS-4706	SS-4707	SS-4708
1	Clamp Assembly		SS-1053	SS-1053
1	Nut, Hex. #10-32		8X-141	8X-141
1	Screw, Rd. Hd. #8-32x9/16		8X-47	8X-47
1	Cup, Grounding	SS-95		
2	Gasket, Rubber, Term. Stud	SS-84	SS-84	SS-84
1	Gasket, Switch Cover	SS-83	SS-83	SS-83
1	Insulation, Terminal		SS-233	SS-233
2	Lockwasher, Cover Sc., #8	12X-195	12X-195	12X-195
3	Lockwasher, Relay Term. & Brkt. Sc., #10	12X-196	12X-196	12X-196
1	Lockwasher, Term. Stud, 3/8		12X-201	
1	Moving Core Assy.		SS-1128A	SS-1128A
1	Core		SS-128	SS-128
1	Link Screw		SS-59	SS-59
1	Rubber Cap		SS-54	SS-54
1	Spring		SS-61	SS-61
1	Washer, Steel, 3/8		SS-60	SS-60
2	Nut, Relay Term., Hex. #10-32		8X-173	8X-173
2	Nut, Term. Stud, Hex. 3/8-16		8X-830	
1	Plunger	SS-2072	SS-2072	SS-2072
1	Screw, Bracket, Fill. Hd. #10-32x5/16	8X-870	8X-870	8X-870
2	Screw, Cover, Fill. Hd. #8-32x5/16	8X-888	8X-888	8X-888
2	Screw, Relay Term., Rd. Hd. #10-32x1/2	8X-309		
2	Screw, Sol. Lead & Brkt., Rd. Hd. #10-32x1/4	8X-312	8X-312	8X-312
1	Solenoid & Switch Base	SS-3035RAE	SS-3035RAG	SS-3035RAH
1	Spring	SS-88	SS-88	SS-88
1	Switch Brkt. & Relay Assy.	SS-2124	SS-2124E	SS-2124M
1	Bushing, Insulating	SW-688	SW-688	SW-688
1	Bushing, Steel	SS-74	SS-74	SS-74
1	Insulation, Inner	SS-175	SS-175	SS-175
1	Insulation, Middle	SS-75	SS-75	SS-75
1	Insulation, Outer	SS-76	SS-76	SS-76
2	Lockwasher, Term. Stud, 3/8	12X-201	12X-201	12X-201
2	Nut, Term. Stud, Hex. 3/8-16	8X-830	8X-830	8X-830
1	Relay	SS-3070R	SS-3070RD	SS-3070RD
1	Stud, Term., Long		SS-176	SS-239
1	Stud, Term., Short	SS-119 (2)	SS-119	SS-119
1	Switch Bracket	SS-1124	SS-1124	SS-1124
1	Terminal	SS-173	SS-173	SS-173
1	Terminal	SS-237	SS-237	SS-237
2	Washer, Ins., 3/8 Hole	SS-82	SS-82	SS-82
1	Washer, Ins., 9/16 Hole	SS-81	SS-81	SS-81
2	Washer, Steel, 25/64 Hole	MU-103A	MU-103A	MU-103A
1	Switch Cover	SS-1071B	SS-1071	SS-1071
2	Washer, Relay Term., Plain #10	8X-183A	8X-183A	8X-183A
2	Washer, Relay Term., Rubber		SS-234	SS-234
2	Washer, Sol. Lead & Brkt. Sc., Skpf. #10	X-1270	X-1270	X-1270

(Issued 3-17-50)



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCHES SSX-4001 - 4004 SERIES

(Issued 10-8-52)

Name of Part	No. Used	SSX-4001	SSX-4002	SSX-4003	SSX-4004
Bracket Assembly, Term. Stud	1	SSX-1024	SSX-1024	SSX-1024	SSX-1024
Bracket, Switch	1	SSX-24	SSX-24	SSX-24	SSX-24
Insulation	1	SSX-26	SSX-26	SSX-26	SSX-26
Lockwasher, Term. Sc., #10	1	12X-196	12X-196	12X-196	12X-196
Lockwasher, Terminal Stud, 5/16	3	12X-200	12X-200	12X-200	12X-200
Nut, Terminal Sc., Hex. #10-32	1	8X-173	8X-173	8X-173	8X-173
Nut, Term. Stud, Hex. 5/16-18	1	8X-147	8X-147	8X-147	8X-147
Nut, Term. Stud, Hex. 5/16-18	2	8X-2988	8X-2988	8X-2988	8X-2988
Screw, Terminal, #10-32x13/16	1	8X-3069	8X-3069	8X-3069	8X-3069
Stud, Terminal (Long)	1	SSX-29	SSX-29	SSX-29	SSX-29
Stud, Terminal (Short)	1	SSX-30	SSX-30	SSX-30	SSX-30
Terminal, Term. Screw	1	SSX-31	SSX-31	SSX-31	SSX-31
Terminal, Term. Stud (Short)	1	SSX-27	SSX-27	SSX-27	SSX-27
Washer, Insulating, Term. Screw	1	SSX-28	SSX-28	SSX-28	SSX-28
Washer, Ins., Term. Stud	2	SSX-25	SSX-25	SSX-25	SSX-25
Washer, Plain, Terminal Sc., #10	1	GK-151	GK-151	GK-151	GK-151
Washer, Term. Stud (Long)	1	SSX-32	SSX-32	SSX-32	SSX-32
Clamp Assembly	1	SSX-1023	SSX-1023	SSX-1023	SSX-1023
Nut, Hex. #8-32	1	8X-141	8X-141	8X-141	8X-141
Screw, Rd. Hd. #8-32x5/8	1	8X-53	8X-53	8X-53	8X-53
Cover, Switch	1	SSX-1004	SSX-1004B	SSX-1004B	SSX-1004B
Gasket, Switch Cover	1	SSX-37	SSX-37	SSX-37	SSX-37
Lockwasher, Switch Brkt. Mtg. Sc., #10	3	12X-196	12X-196	12X-196	12X-196
Lockwasher, Switch Cover Sc., #8	1	12X-195	12X-195(2)	12X-195(2)	12X-195 (2)
Moving Core Assembly	1	SSX-1021	SSX-1021	SSX-1021	SSX-1021
Cap, Rubber	1	SS-54	SS-54	SS-54	SS-54
Core, Moving	1	SSX-21	SSX-21	SSX-21	SSX-21
Screw, Link	1	SSX-22	SSX-22	SSX-22	SSX-22
Spring	1	SSX-35	SSX-35	SSX-35	SSX-35
Washer, Steel, 3/8	1	SS-60	SS-60	SS-60	SS-60
Plug	1	SSX-36	SSX-36	SSX-36	SSX-36
Plunger, Contact	1	SSX-1005	SSX-1005	SSX-1005	SSX-1005
Screw, Switch Brkt. Mtg., Rd. Hd. #10-32x1/4	3	8X-312	8X-312(2)	8X-312(2)	8X-312(2)
Screw, Switch Cover, Rd. Hd. #8-32x1/4	1	8X-305	8X-305(2)	8X-305(2)	8X-305(2)
Solenoid & Switch Base	1	SSX-2001S	SSX-2001DS	SSX-2001S	SSX-2001ES
Spring, Contact Plunger	1	SS-88	SS-88	SS-88	SS-88
Spring, Moving Core	1	SSX-34	SSX-34	SSX-34	SSX-34
Stud, Spacer	1	SSX-57	SSX-57	SSX-57	SSX-57
Switch Base	1	SSX-3	SSX-3	SSX-3	SSX-3
Washer, Rubber, Terminal Sc., 7/16	1	SSX-40	SSX-40	SSX-40	SSX-40
Washer, Rubber, Term. Stud, 11/16	2	SSX-39	SSX-39	SSX-39	SSX-39

UNIT	APPLICATION
SSX-4001	Chrysler, De Soto (6)
SSX-4002	Chrysler, De Soto (6&8)
SSX-4003	Chrysler, De Soto (6)
SSX-4004	Chrysler, De Soto, (8)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCH SSX-4100 SERIES

(Issued 3-1-55)

Name of Part	No. Used	SSX-4101	SSX-4102	SSX-4103	SSX-4104
Bracket Assembly, Term. Stud	1	SSX-1024A	SSX-1024A	SSX-1024A	SSX-1024A
Bracket, Switch	1	SSX-24	SSX-24	SSX-24	SSX-24
Insulation	1	SSX-26	SSX-26	SSX-26	SSX-26
Lockwasher, Term. Stud, 5/16	3	12X-200	12X-200	12X-200	12X-200
Nut, Term. Stud, Hex. 5/16-18	1	8X-147	8X-147	8X-147	8X-147
Nut, Term. Stud, Hex. 5/16-18	2	8X-2988	8X-2988	8X-2988	8X-2988
Stud, Terminal (Long)	1	SSX-29	SSX-29	SSX-29	SSX-29
Stud, Terminal (Short)	1	SSX-30	SSX-30	SSX-30	SSX-30
Terminal, Term. Stud (Short)	1	SSX-27	SSX-27	SSX-27	SSX-27
Terminal, Term. Stud (Long)	1	SSX-41	SSX-41	SSX-41	SSX-41
Washer, Ins., Term. Stud	2	SSX-25	SSX-25	SSX-25	SSX-25
Clamp Assembly	1	SSX-1023	SSX-1023	SSX-1023	SSX-1023
Nut, Hex. #8-32	1	8X-141	8X-141	8X-141	8X-141
Screw, Rd. Hd. #8-32x5/8	1	8X-53	8X-53	8X-53	8X-53
Cover, Switch	1	SSX-1042	SSX-1042	SSX-1042	SSY-1004A
Gasket, Switch Cover	1	SSX-54	SSX-54	SSX-54	SSX-54
Lockwasher, Switch Brkt. Mtg.					
Screw, #10	3	12X-196	12X-196	12X-196	12X-196
Lockwasher, Switch Cover Screw, #8	1	12X-195	12X-195	12X-195	12X-195
Moving Core Assembly	1	SSX-1021	SSX-1021	SSX-1021	SSX-1021
Cap, Rubber	1	SS-54	SS-54	SS-54	SS-54
Core, Moving	1	SSX-21	SSX-21	SSX-21	SSX-21
Screw, Link	1	SSX-22	SSX-22	SSX-22	SSX-22
Spring	1	SSX-35	SSX-35	SSX-35	SSX-35
Washer, Steel, 3/8	1	SS-60	SS-60	SS-60	SS-60
Plug	1	SSX-36	SSX-36	SSX-36	SSX-36
Plunger, Contact	1	SSX-1005	SSX-1005	SSX-1005	SSX-1005
Screw, Switch Brkt. Mtg., Fill. Hd. #10-32x1/4	3	8X-872	8X-872	8X-872	8X-872
Screw, Switch Cover, Rd. Hd. #8-32x1/4	1	8X-305	8X-305	8X-305	8X-305
Solenoid	1	SSX-2001AS	SSX-2001BS	SSX-2001J	SSX-2001GS
Spring, Contact Plunger	1	SS-88	SS-88	SS-88	SS-88
Spring, Moving Core	1	SSX-34	SSX-34	SSX-34	SSX-34
Switch Base & Relay Assembly	1	SSX-1043	SSX-1043	SSX-1043	SSX-1043
Lockwasher, Relay Term., #10	2	12X-196	12X-196	12X-196	12X-196
Nut, Relay Term., Hex. #10-32	2	8X-173	8X-173	8X-173	8X-173
Washer, Rubber, Term. Stud, 11/16	2	SSX-39	SSX-39	SSX-39	SSX-39

UNIT	APPLICATION
SSX-4101	Chrysler (6 & 8)
SSX-4102	Packard (8)
SSX-4103	Chrysler (Ind.)
SSX-4104	Chrysler (Ind.)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCHES SSY-4002

(Issued 10-8-52)

Name of Part	No. Used	SSY-4002
Base, Switch	1	SSX-3
Bracket, Assembly, Term. Stud	1	SSX-1024
Bracket, Switch	1	SSX-24
Insulation	1	SSX-26
Lockwasher, Term. Sc., #10	1	12X-196
Lockwasher, Term. Stud, 5/16	3	12X-200
Nut, Terminal Sc., Hex. #10-32	1	8X-173
Nut, Terminal Stud, Hex. 5/16-18	1	8X-147
Nut, Terminal Stud, Hex. 5/16-18	2	8X-2988
Screw, Terminal, #10-32x13/16	1	8X-3069
Stud, Terminal (Long)	1	SSX-29
Stud, Terminal (Short)	1	SSX-30
Terminal, Term. Screw	1	SSX-31
Terminal, Term. Stud (Short)	1	SSX-27
Washer, Insulating, Term. Sc.	1	SSX-28
Washer, Insulating, Term. Stud	2	SSX-25
Washer, Plain, Term. Sc. #10	1	GK-151
Washer, Term. Stud (Long)	1	SSX-32
Cover, Switch	1	SSX-1004B
Gasket, Switch Cover	1	SSX-37
Lockwasher, Switch Brkt. Mtg. Sc. #10	3	12X-196
Lockwasher, Switch Cover Sc. #8	2	12X-195
Plunger, Contact	1	SSX-1005
Screw, Switch Brkt. Mtg. Rd. Hd. #10-32x1/4	2	8X-312
Screw, Switch Cover Rd. Hd. #8-32x1/4	2	8X-305
Solenoid	1	SSX-2001BS
Spring, Contact Plunger	1	SS-88
Stud, Spacer	1	SSX-57
Washer, Rubber, Term. Sc. 7/16	1	SSX-40
Washer, Rubber, Term. Sc. 11/16	2	SSX-39

UNIT	APPLICATION
SSY-4002	Chrysler (8)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

SOLENOID STARTING SWITCH

SSY-4102T
(Issued 3-2-55)

Name of Part	No. Used	SSY-4102T
Bracket Assembly, Term. Stud	1	SSX-1024B
Bracket, Switch	1	SSX-24A
Insulation	1	SSX-26
Lockwasher, Term. Stud, 5/16	3	12X-200
Nut, Term. Stud, Hex. 5/16-18	2	X-3130
Nut, Term. Stud, Hex. 5/16-18	1	X-3131
Stud, Terminal (Long)	1	SSX-29
Stud, Terminal (Short)	1	SSX-30
Terminal, Term. Stud (Short)	1	SSX-27
Terminal, Term. Stud (Long)	1	SSX-41
Washer, Insulating, Term. Stud	2	SSX-25
Clamp Assembly	1	SSX-1023B
Nut, Hex. #8-32	1	X-3217
Screw, Rd. Hd. #8-32x5/8	1	X-15
Cover, Switch	1	SSY-1004
Gasket, Switch Cover	1	SSX-54A
Lockwasher, Switch Cover Screw, #8	1	12X-195
Moving Core Assembly	1	SSX-1021A
Cap, Rubber	1	SS-54
Core, Moving	1	SSX-21
Screw, Link	1	SSX-22A
Spring, Rubber Cap	1	SSX-35A
Washer, Steel, 3/8	1	SS-60C
Plug	1	SSX-36A
Plunger, Contact	1	SSX-1005A
Screw, Switch Base Mtg., Fill. Hd. #10-32x1/4	3	X-3132
Screw, Switch Cover, Rd. Hd. #8-32x1/4	1	X-10
Solenoid	1	SSY-2001D
Spring, Contact Plunger	1	SS-88A
Spring, Moving Core	1	SSX-34A
Switch Base & Relay Assembly	1	SSY-1043
Lockwasher, Relay Terminal, #10	2	12X-196
Nut, Relay Terminal, Hex. #10-32	2	X-2853
Washer, Rubber, Term. Stud, 11/16	2	SSX-39

UNIT	APPLICATION
SSY-4102T	Chrysler (Ind.)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

WSE-4002 STARTING SWITCH PARTS LIST

WSE-4002
(Issued 5-16-52)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
WSE-6	1	Insulation, Switch Contact	8X-119	4	Screw, Housing Mtg. , Fill. Hd. #10-32x1/2
WSE-8	1	Retainer, Spring	8X-173	2	Nut, Term. Stud, Hex. #10-32
WSE-9	1	Spring, Switch Contact	8X-183A	2	Washer, Plain, Term. Stud, #10
WSE-12	1	Spring, Plunger	12X-195	3	Lockwasher, Cover Sc. , #8
WSE-47	1	Bushing, Spring Retaining	12X-201	2	Lockwasher, Term. Stud, 3/8
WSE-48	1	Clip	X-1270	2	Washer, Term. Stud, Skpf. #10
WSE-50	1	Cover	8X-1347	3	Screw, Cover, Fill. Hd. #8-32x11/16
WSE-53	2	Stud, Terminal, #10-32	8X-1652	2	Nut, Term. Stud, Hex. 3/8-16
WSE-54	2	Washer, Ins. , Term. Stud	365-1032	6	Nut, Elastic Stop Term. Housing, Hex. #10-32
WSE-1016	1	Plunger			
WSE-1023	1	Contact, Switch			
WSE-1031	1	Terminal & Insulation Assy.			
WSE-11	3	Spacer			
WSE-31	1	Insulation			
WSE-1035B	1	Housing Assy. , Terminal			
MN-47B	2	Washer, Terminal Stud			
WSE-41	2	Washer, Ins. , Term. Stud			
WSE-49	2	Bushing, Ins. , Term. Stud			
WSE-76	1	Housing			
WSE-77	2	Insulation			
WSE-78	2	Insulation, Term. Stud, Inner			
WSE-1052	2	Stud, Terminal			
12X-201	2	Lockwasher, Term. Stud, 3/8			
8X-1652	2	Nut, Term. Stud, Hex. 3/8-16			
WSE-2003A	1	Base Assy. , Solenoid			
WSE-57	2	Terminal			

UNIT	APPLICATION
WSE-4002	Buda, R. H. Sheppard, Hill Diesel

Printed in U. S. A.

File in
Equipment & Parts List Binder

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed.”

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

WSE-4101, A STARTING SWITCH PARTS LIST

WSE-4101, A
(Issued 5-16-52)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part									
WSE-8	1	Retainer, Spring	8X-183B	2	Washer, Plain, Term. Stud, #10									
WSE-9	1	Spring, Switch Contact	12X-201	2	Lockwasher, Term. Stud, 3/8									
WSE-12	1	Spring, Plunger	X-1270	2	Washer, Term. Stud, Skpf. #10									
WSE-47	1	Bushing, Spring Retaining	8X-2845	2	Nut, Term. Stud, Hex. 3/8-16									
WSE-48	1	Clip	8X-2848	4	Screw, Cover, Fill. Hd. #10-32x7/16									
WSE-65	2	Insulation, Term. Stud, Outer	8X-2851	1	Screw, Cover Hole, Rd. Hd. #10-32x3/16									
WSE-66	2	Gasket, Cork, Term. Stud	8X-2853	2	Nut, Term. Stud, Hex. #10-32									
WSE-67	2	Bushing, Insulating, Term. Stud	8X-2856	4	Screw, Housing, Fill. Hd. #10-32x1/2									
WSE-68	1	Gasket, Cover	365-1032	10	Nut, Elastic Stop, Term. Housing & Term. Stud & Cover, Hex. #10-32									
WSE-69	1	Gasket, Terminal Housing	<p>** See table following parts list for part number applying to assembly wanted.</p> <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 30%;">Assembly No.</th> <th style="width: 30%;">Cover</th> <th style="width: 40%;">Cup, Grounding</th> </tr> </thead> <tbody> <tr> <td>WSE-4101</td> <td>WSE-79</td> <td>None</td> </tr> <tr> <td>WSE-4101A</td> <td>WSE-79A</td> <td>WSE-83</td> </tr> </tbody> </table>			Assembly No.	Cover	Cup, Grounding	WSE-4101	WSE-79	None	WSE-4101A	WSE-79A	WSE-83
Assembly No.	Cover	Cup, Grounding												
WSE-4101	WSE-79	None												
WSE-4101A	WSE-79A	WSE-83												
WSE-71	1	Insulation, Switch Contact												
WSE-72	2	Retainer, Gasket												
WSE-73A	2	Stud, Terminal, #10-32												
WSE-75	1	Washer, Spacer												
**	1	Cover												
WSE-82	1	Insulation, Terminal												
**	1	Cup, Grounding												
WSE-1016	1	Plunger												
WSE-1076	1	Housing Assy., Terminal												
MN-47B	2	Washer, Terminal Stud												
WSE-49	2	Bushing, Ins., Term. Stud												
WSE-61	2	Gasket, Cork, Term. Stud												
WSE-62	2	Retainer, Gasket												
WSE-63	2	Insulation, Term. Stud, Outer												
WSE-76	1	Housing												
WSE-77	2	Insulation												
WSE-78	2	Insulation, Term. Stud, Inner												
WSE-1060	2	Stud, Terminal, 3/8-16												
12X-201	2	Lockwasher, Term. Stud, 3/8												
8X-1379	2	Nut, Term. Stud, Hex. 3/8-16												
WSE-2064	1	Base Assy., Solenoid												
WSE-2080	1	Contact, Switch												

UNIT	APPLICATION
WSE-4101	Buda, Hill Diesel
WSE-4101A	Continental, Schramm Inc.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

WSM-4101, A SOLENOID STARTING SWITCH PARTS LIST

WSM-4101, A
(Issued 3-29-57)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part												
WSE-8	1	Retainer Spring	WSE-2080	1	Contact Switch												
WSE-9	1	Spring, Switch Contact	**	1	Cover												
WSE-12	1	Spring, Plunger	WSM-2064	1	Coil & Case Assy.												
WSE-47	1	Bushing, Spring Retaining	8X-183B	2	Washer, Term. Stud, Plain, #10												
WSE-48	1	Clip	12X-201	2	Lockwasher, Term. Stud, 3/8												
WSE-65	2	Insulation, Term. Stud, Outer	X-1270	2	Washer, Term. Stud, Skpf. #10												
WSE-66	2	Gasket, Cork, Term. Stud	8X-2845	2	Nut, Term. Stud, Hex. 3/8-16												
WSE-67	2	Bushing, Insulating, Term. Stud	8X-2848	4	Screw Cover Fill Hd. #10-32x7/16												
WSE-68	1	Gasket Cover	8X-2851	1	Screw, Cover Hole, Rd. Hd. #10-32x3/16												
WSE-69	1	Gasket, Terminal Housing	8X-2853	2	Nut, Term. Stud, Hex. #10-32												
WSE-71	1	Insulation, Switch Contact	8X-2856	4	Screw, Housing, Fill. Hd. #10-32x1/2												
WSE-72	2	Retainer, Gasket	XA-699B	10	Nut, Elastic Stop, Term. Housing & Term. Stud & Cover, Hex. #10-32												
WSE-73A	2	Stud, Terminal, #10-32	** See Table following Parts List for Part Number applying to Assembly Wanted <table style="width: 100%; border: none;"> <tr> <td style="width: 30%; border: none;">Assembly No.</td> <td style="width: 30%; border: none;">Grounding Cup</td> <td style="width: 40%; border: none;">Cover</td> </tr> <tr> <td style="border: none;">WSM-4101</td> <td style="border: none;">None</td> <td style="border: none;">WSM-79</td> </tr> <tr> <td style="border: none;">WSM-4101A</td> <td style="border: none;">WSE-83</td> <td style="border: none;">WSM-79A</td> </tr> <tr> <td style="border: none;">WSM-4101B</td> <td style="border: none;">None</td> <td></td> </tr> </table>			Assembly No.	Grounding Cup	Cover	WSM-4101	None	WSM-79	WSM-4101A	WSE-83	WSM-79A	WSM-4101B	None	
Assembly No.	Grounding Cup	Cover															
WSM-4101	None	WSM-79															
WSM-4101A	WSE-83	WSM-79A															
WSM-4101B	None																
WSE-75	1	Washer, Spacer															
WSE-82	1	Insulation, Terminal															
**	1	Cup, Grounding															
WSE-1016	1	Plunger															
WSE-1076	1	Housing Assy., Terminal															
MN-47B	2	Washer, Terminal Stud															
WSE-49	2	Bushing, Ins., Term. Stud															
WSE-61	2	Gasket, Cork, Term. Stud															
WSE-62	2	Retainer, Gasket															
WSE-63	2	Insulation, Term. Stud Outer															
WSE-76	1	Housing															
WSE-77	2	Insulation															
WSE-78	2	Insulation, Term. Stud Inner															
WSE-1060	2	Stud, Terminal, 3/8-16															
12X-201	2	Lockwasher, Term. Stud 3/8															
8X-1379	2	Nut, Term. Stud, Hex. 3/8-16															

UNIT	APPLICATION
WSM-4101	Hercules
WSM-4101A	Cockshutt, Continental, Hercules, Massey-Harris, Worthington Pump, Yale & Towne

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

WSM-4101B SOLENOID STARTING SWITCH PARTS LIST

WSM-4101B
(Issued 4-10-57)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
WSE-8	1	Retainer, Spring	WSE-77	2	Insulation
WSE-9	1	Spring, Switch Contact	WSE-78	2	Insulation, Term. Stud, Inner
WSE-12	1	Spring, Plunger	WSE-1060	2	Stud, Term. 3/8-16
WSE-47	1	Bushing, Spring Retaining	WSM-65	2	Insulation, Term. Stud, Outer
WSE-48	1	Clip	12X-201	2	Lockwasher, Term. Stud. 3/8
WSE-66	2	Gasket, Cork, Term. Stud	8X-1379	2	Nut, Term. Stud, Hex. 3/8-16
WSE-67	2	Bushing, Ins., Term Stud	WSM-2064	1	Coil & Case Assy.
WSE-68	1	Gasket, Cover	X-183B	2	Washer, Term. Stud, Plain #10
WSE-69	1	Gasket, Term. Housing	12X-201	2	Lockwasher, Term. Stud, 3/8
WSE-71	1	Insulation, Switch Contact	X-1270	2	Washer, Term. Stud, Skpf. #10
WSE-72	2	Retainer, Gasket	X-2845	2	Nut, Term. Stud, Hex. 3/8-16
WSE-73A	2	Stud, Terminal	X-2848	4	Screw, Cover, Fill. Hd. #10-32x7/16
WSE-75	1	Washer, Spacer	X-2851	1	Screw, Cover Hole, Rd. Hd. #10-32x3/16
WSE-82	1	Insulation, Terminal	X-2853	2	Nut, Term. Stud, Hex. #10-32
WSE-1016	1	Plunger	X-2856	4	Screw, Housing, Fill. Hd. 10-32x1/2
WSE-2080	1	Contact, Switch	XA-699B	10	Nut, Elastic Stop, Housing & Cover Sc. & Term. Stud, Hex. #10-32
WSM-66	2	Insulation, Terminal Stud, Outer Cover			
WSM-79C	1	Cover			
WSM-1076	1	Housing Assy., Terminal			
MN-47B	2	Washer, Term. Stud			
WSE-49	2	Bushing, Ins., Term. Stud			
WSE-61	2	Gasket, Cork, Term. Stud			
WSE-62	2	Retainer, Gasket			
WSE-76	1	Housing			

UNIT	APPLICATION
WSM-4101B	Yale & Towne

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

