THE ELECTRIC AUTO-LITE COMPANY

TOLEDO, OHIO

PARTS LIST SPECIAL LETTER

Date Sept. 14, 1937 Pages 1 Page No. 1 Serial No. PL-2

SUBJECT: RADIO ROTORS

Supersedes_____
Same as Manual Bulletin IG-13

TO AUTO-LITE SERVICE STATIONS:

As a result of a demand from our field organization we have from time to time made up special radio rotors for our more popular types of distributors. These rotors carry a longer contact arm than the standard rotor so as to reduce to a minimum the length of spark between the rotor tip and the distributor cap terminals. Not only does this shorter gap reduce to a minimum ignition interference in the radio but it also reduces the amount of resistance which must be over come by the ignition coil secondary current where radio suppressors are used in the secondary circuit.

The radio rotors can easily be identified by the letter "R" stamped on the outer end of the rotor contact strip.

The following list shows the radio rotors now carried in stock together with the standard production rotor which they will replace.

RADIO ROTORS to replace PRODUCTION ROTORS

IGB-1002B	IGB-1002, IGB-1002C
IGH-1041A	IGH-1041
IGP-1016A	IGP-1016
IGS-1016A	IGS-1016

In the above list you will note there is no radio rotor to be used in place of our current IGB-1239 rotor. While we at one time carried an IGB-1239A radio rotor this has now been dropped in view of the fact that the standard IGB-1239 rotor has been changed to the same dimensions as the radio rotor.

These special radio rotors are now available thru your regular source of supply and are recommended for use on cars equipped with radios.

Yours very truly,
THE ELECTRIC AUTO-LITE COMPANY
Parts and Service Division

HDH:LEK

THE ELECTRIC AUTO-LITE COMPANY

TOLEDO, OHIO

PARTS LIST SPECIAL LETTER

Date July 28, 1941 Pages 1 Page No. 1 Serial No. PL-4

SUBJECT: DISTRIBUTOR DRIVE SHAFT ASSEMBLIES Supersedes _____

A change has been made in the construction of distributor drive shafts and distributor cam assemblies. The weight carrying plate is now welded to the shaft and the yoke is now welded to the cam where formerly these parts were staked together. This change is effective on all parts now being manufactured. These two styles of construction are interchangeable if the proper washers are used. It is necessary in some assemblies that the anti-rattle spring be changed.

The illustrations below show the differences in appearance of the two types of construction. In Figure 1 "A" is a drive shaft with the plate staked to the shaft while "B" is an assembly with the welded construction. Figure 2 illustrates the difference in cam assemblies between the staked construction "A" and the welded construction "B".

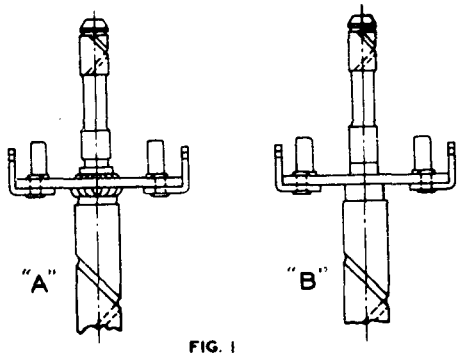


FIG. 1

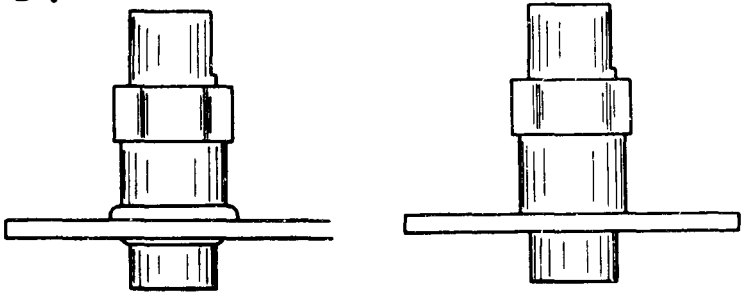


FIG. 2

It is suggested that a supply of the necessary washers and springs to service both types of shafts or cams be obtained. These washers and springs with their applications are tabulated below:

Thrust washer between distributor base and weight carrying plate:

	Staked Shafts	Welded Shafts
IGC, IGE, IGS, IGT, IGW Types	IG-90	IGS-104
IGB, IGC, IGE, IGH, IGK, IGL, IGM, IGO, IGP, IGR, IGS, IGT Types	IGB-162	IGS-104
IGW	IGW-46	IGS-104

Thrust washer between weight carrying plate and cam assembly:

	Staked Shafts	Welded Shafts
IGC, IGE, IGH, IGK, IGP, IGR, IGS, IGT Types	IGK-26	IGS-99
IGW	IGW-36	IGW-92
IGW	IGW-59	IGW-92

	Staked Cam	Welded Cam
Anti-Rattle Spring - L.H.	IGE-36	IGT-69
- R.H.	IGE-35	IGT-70

It is not necessary to change to a welded type cam if a welded shaft is used. It is only necessary to change the two washers as indicated. Likewise when a welded cam is installed on either a staked or welded shaft it is only necessary to change the anti-rattle spring provided that this part is used in the assembly being worked on.

THE ELECTRIC AUTO-LITE COMPANY

TOLEDO, OHIO

PARTS LIST SPECIAL LETTER

Date July 1, 1954 Pages 1 Page No. 1 Serial No. PL-5

SUBJECT: Replacement of IAU-3076LA by IBB-2015R Supersedes_____

The IAU-3076LA has been used on 8 cylinder distributors up until late 1953. Since that time the IBB-2015R has been used. Either of these condensers can be mounted on the breaker plate.

Figure 1 illustrates the method of installing both condensers. As will be noted, the mounting is the same but the leads are connected to different primary terminals. When installing the IBB-2015R, the breaker arm spring and connector are placed against the outside of the lug with the condenser strap next. The terminal of the primary lead is then placed over the lug, connector and strap.

The illustration shows the IAZ-2004R breaker plate, however, it applies to other double breaker 8 cylinder distributors which have similar contact and condenser installation.

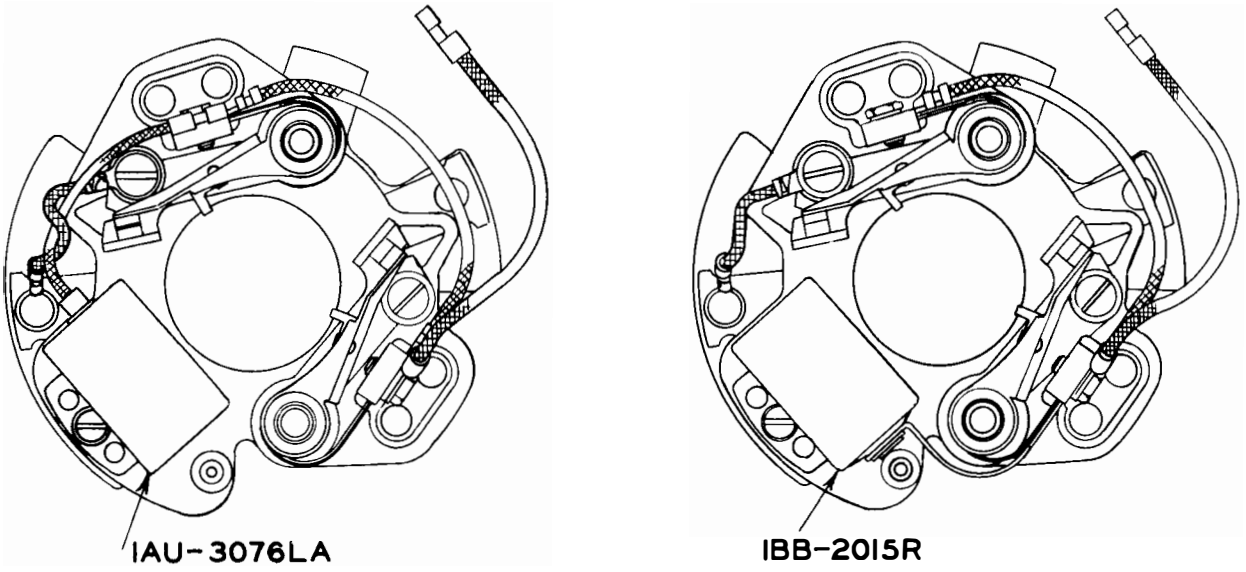


Figure 1

IAD-4000 SERIES DISTRIBUTOR PARTS LISTS

Model No.	No. Cyl.	CUSTOMER
IAD-4001	4	National Farm Mach.
IAD-4003	6	Ward LaFrance, Continental
IAD-4005A	6	Federal, Studebaker Tr., Reo Tr., Hercules
IAD-4006	6	Autocar, White
IAD-4007	6	Federal, Diamond T., Oshkosh, Kenworth
IAD-4008	4	Willys, Ford
IAD-4008A	4	Willys
IAD-4009	6	Hall Scott
IAD-4010A	4	B.F. Avery
IAD-4010C	4	B.F. Avery
IAD-4010D	4	Hercules
IAD-4011	6	Waukesha
IAD-4011A	6	Southern
IAD-4012A	6	John Deere, Hercules
IAD-4015	6	Buda
IAD-4016A	6	Diamond T., Crown Body, Hercules
IAD-4017A	6	Autocar
IAD-4018	4	Continental
IAD-4018A	4	Continental
IAD-4019A	6	Diamond T., Hercules
IAD-4019A-1	6	Diamond T.
IAD-4020A	4	Continental, Massey-Harris
IAD-4020B	4	Massey-Harris
IAD-4023A	4	B.F. Avery
IAD-4024	4	Cockshutt Plow
IAD-4025	6	Diamond T., Worthington
IAD-4026A	6	Diamond T., Continental
IAD-4026C	6	Diamond T., Continental
IAD-4027	6	Massey-Harris
IAD-4027A	6	Massey-Harris, Worthington
IAD-4028A	4	Aerco, Continental
IAD-4029	4	Continental, Hall Scott
IAD-4029-1	4	Continental
IAD-4029A	4	Continental
IAD-4029A-1	4	Continental
IAD-4030	4	Massey-Harris
IAD-4031	4	Hercules
IAD-4032	6	Buda, LeTourneau
IAD-4033	6	Continental
IAD-4033A	6	Continental
IAD-4034	6	Maxim Mtr., Hercules
IAD-4034A	6	Diamond T.
IAD-4035	6	Diamond T.
IAD-4036A	4	Wisconsin
IAD-4037	4	Hercules
IAD-4038	4	Crosley (Industrial)
IAD-4039-1	6	Chrysler (Industrial)
IAD-4040-1	6	Chrysler (Industrial)
IAD-4041	4	Willys
IAD-4042	2	Lycoming
IAD-4043	4	Cockshutt, Co-op
IAD-4043A	4	Hercules
IAD-4044	6	Hercules

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

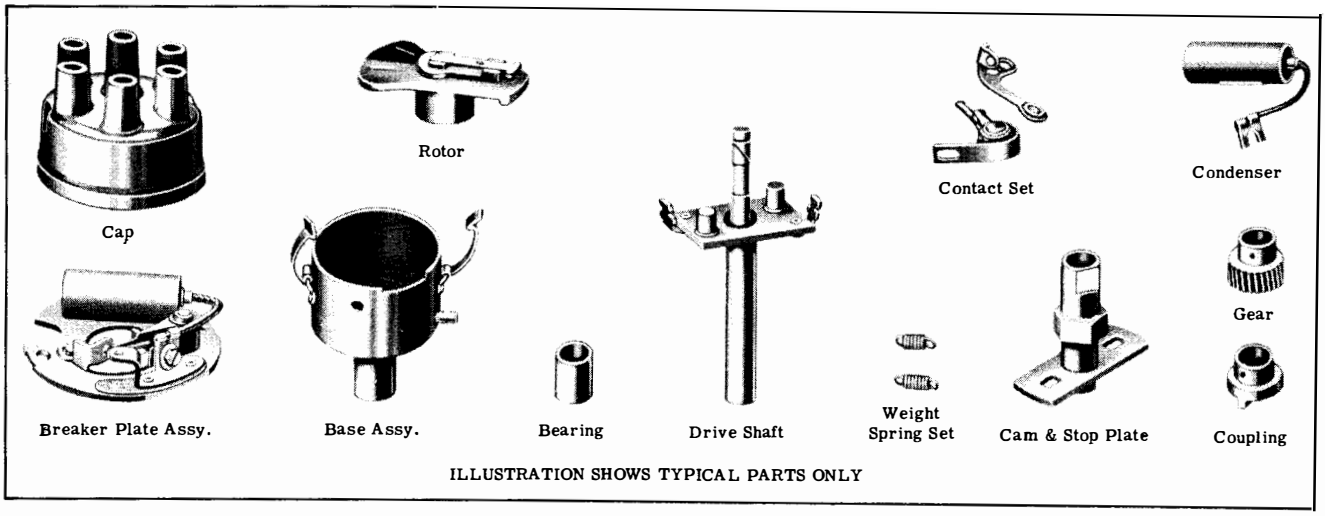


ILLUSTRATION SHOWS TYPICAL PARTS ONLY






Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IAD-4001	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1171LB	IG-636QS	IAD-1100L-1	IG-644
IAD-4003	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2019	IG-579A	IGS-1053LE	IGE-30CS	IAD-1100LA	IG-644A
IAD-4005A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2019	IG-579A	IGS-1180R	IGB-351S	IAD-1100R	GE-41S
IAD-4006	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2019	IG-579A	IGC-1130RE	IGE-24S	IAD-1100RA	IG-644A
IAD-4007	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053RE	IGE-24S	IAD-1100RG	IG-644A
IAD-4008	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1134LA	IGB-350S	IAD-1100LB-1	- - -
IAD-4008A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1134LA	IG-884S	IAD-1100LB-1	- - -
IAD-4009	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2023	IG-579A	IGS-1152R	IGB-352S	IAD-1100R	- - -
IAD-4010A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGE-30JS	IAD-1100RB-1	- - -
IAD-4010C	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGE-30S	IAD-1100RC-1	- - -
IAD-4010D	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGE-30S	IAD-1100RC-1	- - -
IAD-4011	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGC-1130RE	IG-775S	IAD-1100RC	- - -
IAD-4011A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053RE	IGB-284S	IAD-1100RL	GE-81
IAD-4012A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-24S	IAD-1100RG	- - -
IAD-4015	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053RE	IG-784S	IAD-1100RB	- - -
IAD-4016A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2029	IG-579A	IGS-1164R	IGE-24S	IAD-1100RE	GE-80
IAD-4017A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2040	IG-579A	IGS-1180R	IGC-213S	IAD-1100RG	GE-82
IAD-4018	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2042	IG-579A	IGS-1171LB	IGB-327FS	IAD-1100LD-1	IG-644
IAD-4018A	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2042	IG-579A	IGS-1171LB	IGC-42LS	IAD-1100LF-1	IG-644
IAD-4019A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGE-29S	IAD-1100RH	GE-41S
IAD-4019A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGE-29S	IAD-1100RH	GE-41S
IAD-4020A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1151L	IG-784AS	IAD-1100LE-1	GE-68
IAD-4020B	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1151L	IGB-327DS	IAD-1100LA-1	GE-68
IAD-4023A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGB-292SS	IAD-1100RD-1	- - -
IAD-4024	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1053RB	IG-636AS	IAD-1100RE-1	IG-644
IAD-4025	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2018A	IG-579A	IGS-1150LA	IGB-317AS	IAD-1100LE	IGC-1180
IAD-4026A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2018A	IG-579A	IGS-1180R	IGB-327KS	IAD-1100RJ	GE-83
IAD-4026C	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2018A	IG-579A	IGS-1180R	IGB-284ES	IAD-1100RL	GE-83
IAD-4027	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2042	IG-579A	IGS-1053LD	IGB-265AS	IAD-1100LF	IG-644
IAD-4027A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2042	IG-579A	IGS-1053LD	IG-884AS	IAD-1100LF	IG-644
IAD-4028A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1151RC	IG-884S	IAD-1100RA-1	GE-79
IAD-4029	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2044	*GBF-79A	IAD-1056R	IGB-327FS	IAD-1100RC-1	IAD-50
IAD-4029-1	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2044	*GBF-79A	IAD-1056R	IGB-327FS	IAD-1100RC-1	IAD-50
IAD-4029A	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2044	*GBF-79A	IAD-1056R	IGE-29S	IAD-1100RG-1	IAD-50
IAD-4029A-1	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2044	*GBF-79A	IAD-1056R	IGE-29S	IAD-1100RG-1	IAD-50
IAD-4030	IG-1324E	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2042	IG-579A	IGS-1171LB	IG-727AS	IAD-1100LG-1	IG-644
IAD-4031	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2001D	IG-579A	IGS-1180R	IGB-210DS	IAD-1100RG-1	- - -
IAD-4032	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2060	*IG-579A	IGS-1174R	IGB-208S	IAD-1100RN	†- - -
IAD-4033	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2044	*GBF-79A	IAD-1056R	IGB-327ES	IAD-1100RP	IAD-50
IAD-4033A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2044	*GBF-79A	IAD-1056R	IGB-328LS	IAD-1100RN	IAD-50
IAD-4034	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2061	*IG-579A	IGS-1191R	IGB-208S	IAD-1100RE	†- - -
IAD-4034A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2061	*IG-579A	IGS-1191R	IGB-208S	IAD-1100RE	†GE-80
IAD-4035	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2062	*IG-579A	IGS-1197L	IGB-327BS	IAD-1100LE	†IGC-1180
IAD-4036A	IG-1324D	IG-1657RA	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IGC-211S	IAD-1100LH-1	GE-89
IAD-4037	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1201R	IGC-201S	IAD-1100RC-1	- - -
IAD-4038	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2066	IG-579A	IGS-1202L	IGC-203S	IAD-1100LJ-1	- - -
IAD-4039-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2021	IG-579A	IGS-1113RE	IG-636HS	IAD-1100RH	- - -
IAD-4040-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2021	IG-579A	IGS-1112RE	IG-636NS	IAD-1100RB	- - -
IAD-4041	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2069	IG-579A	IGS-1134LD	IG-884S	IAD-1100LB-1	- - -
IAD-4042	IG-1324G	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IG-817S	IAD-1100L-4	- - -
IAD-4043	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-252S	IAD-1100RH-1	IAD-72
IAD-4043A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-252S	IAD-1100RH-1	- - -
IAD-4044	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-252S	IAD-1100RL	- - -

† See Miscellaneous Parts Section for Tachometer Drive Gears.
* See Miscellaneous Parts Section for other Bearings.

MISCELLANEOUS PARTS

Name	Part No.	No. Used	Used on
ARM, ADVANCE	IAT-44	1	IAD-4041
	IG-1860A	1	IAD-4038
	IG-1860A-1	1	IAD-4028A
	IG-2860A-3	1	IAD-4001, IAD-4010A, C, D, IAD-4018, A, IAD-4020A, B
	IG-2902F-4	1	IAD-4007
	IGB-1154B	1	IAD-4027, A, IAD-4030
	IGB-2296A	1	IAD-4019A
	IGC-2024AE-15	1	IAD-4019A-1
	IGC-2024F-3	1	IAD-4015
	IGC-2024F-19	1	IAD-4032
	IGC-2024N-2	1	IAD-4011, A, IAD-4012A, IAD-4023A
	IGC-2052	1	IAD-4003
	IGC-2155	1	IAD-4016A, IAD-4034, A
	IGE-69	1	IAD-4009
	IGS-114	1	IAD-4039-1 , IAD-4040-1
	IGS-1020	1	IAD-4005A, IAD-4024, IAD-4031
	IGS-1020-1	1	IAD-4025, IAD-4026A, C, IAD-4035
	IGS-1080	1	IAD-4008, A
	IGS-2020-1	1	IAD-4006
	IGS-2020-5	1	IAD-4017A
BEARINGS			
(A) Ball, S.A.E. #202, Tach. Drive	X-294	1	IAD-4032, IAD-4034, A, IAD-4035
(B) Bronze Shaft & Coupling	IAD-58	2	IAD-4029, -1, A, A-1, IAD-4033, A
BRACKETS			
(B) Breaker Plate Mtg.	IAD-9	2	All
(C) Cap Spring	IAD-14	2	All
(A) Coil	I AD-45	2	IAD-4029, A, IAD-4033, A
BUSHING INSULATING TERMINAL STUD	IAD-10	1	All
CLIP CONTACT ARM SPRING	IG-676	1	All
COIL, Ignition	CR-6005	1	IAD-4029, A, IAD-4033, A
COLLARS			
(A) Dist. Shaft	IGB-199	1	IAD-4008, A, IAD-4038, IAD-4041
(B) Dist. Shaft	IGS-198	1	IAD-4039-1 , IAD-4040-1
CONNECTOR, Terminal Stud	IAD-7	1	All
CONTACT, Dist. Cap Plunger	IG-514	1	All
COUPLING, Shaft & Coupling Assy.	IAD-55	1	IAD-4029, -1, A, A-1, IAD-4033, A
COVERS			
(A) Plate, Shaft & Coupling	IAD-51	1	IAD-4029, -1, A, A-1, IAD-4033, A
(B) Tachometer Shaft Housing	IGS-38	1	IAD-4032, IAD-4034, A, IAD-4035
CUP, Grease	X-382	1	IAD-4017A, IAD-4018, A, IAD-4027, A, IAD-4029, -1, A-1, A, IAD-4030, IAD-4032, IAD-4033, A, IAD-4034
GASKET, Oil Seal	IAD-57	1	IAD-4029, -1, A, A-1, IAD-4033, A
GEAR			
(A) Tachometer Drive	GE-47	1	IAD-4032, IAD-4034, A, IAD-4035
(B) Tachometer Follower	GE-48	1	IAD-4032, IAD-4034, A, IAD-4035
INSULATION, Terminal Stud (Inner)	IAD-8	1	All
KEY, Woodruff #212	X-1460A	1	IAD-4029, -1, A, A-1, IAD-4033, A
LOCKWASHERS			
(B) Advance Arm, 1/4	12X-199	1	IAD-4039-1 , IAD-4040-1, IAD-4041
(B) Coil Bracket Sc. #10	X-196	2	IAD-4029, A, IAD-4033, A
(C) Condenser & Clamp Sc. #6	12X-194	2	All
(C) Connector Sc. #6	12X-194	1	All
(A) Gear Sc.	IAD-49	1	IAD-4029, -1, A, A-1, IAD-4033, A
(B) Terminal Sc., Base #10	X-196	1	IAD-4003, IAD-4006, IAD-4017A
(B) Terminal Stud #10	12X-196	2	All
NUTS			
(B) Bracket Coil, Sq. #10-32	X-794	2	IAD-4029, A, IAD-4033, A
(A) Terminal Stud, Hex. #10-32	8X-173	2	All
OILERS			
(A) Sleeve Oiler	X-490A	1	IAD-4001 Thru IAD-4016A, IAD-4019A, A-1, IAD-4023A, IAD-4024, IAD-4025, IAD-4026, A, C, IAD-4028A, IAD-4031, 4036A, 4037, 4038, 4041, 4042, 4043, A, 4044
(B) Elbow Oiler	X-1590	1	IAD-4020A, B, IAD-4039-1 , IAD-4040-1
"O" Ring	XA-744W	1	IAD-4008, A , IAD-4041
PLATE, Breaker	IAD-1004	1	All
PLATE ASSEMBLY, SEAL	IAD-2015	1	All

MISCELLANEOUS PARTS (Con't.)

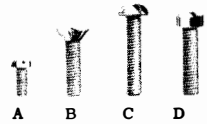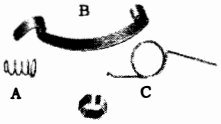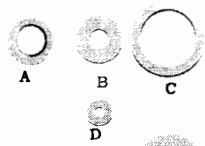Name	Part No.	No. Used	Used on
 A B	**PLUGS**		
	(B) Rubber, Hole Vent.	IGS-32	1	IAD-4005A, IAD-4012A, IAD-4027, A, IAD-4033, A, IAD-4037, IAD-4038 , IAD-4040-1, IAD-4043 , A, 4044
	(A) Shaft & Coupling	IAD-48	1	IAD-4029, -1, A, A-1, IAD-4033, A
	POINTER, Advance Arm	IGS-21	1	IAD-4005A, IAD-4024, IAD-4025, IAD-4026A, C, IAD-4031, IAD-4035
	RIVETS			
A	(A) Coupling	SW-213	1	IAD-4001, IAD-4003, IAD-4006, IAD. 4007
	(A) Gear or Collar	GJ-236	1	IAD-4005A, IAD-4011A, IAD4012A, IAD-4019A, IAD-4019A-1
	(A) Gear or Collar	LAD-43	1	IAD-4016A, IAD-4034A
	(A) Gear or Collar	SW-213	1	IAD-4008, A, 4010C, 4018, A, 4020A, B, 4023A, 4024, IAD-4025, 4026A, C, 4027, A, 4028A, 4030, 4032, 4033, A, IAD-4034, A, IAD-4035 (2), 4036A, 4039-1, 4040-1, 4041
B	(A) Coupling	XA-850	1	IAD-4043
	(B) Cap Spring Nracket	X-525	4	All
	(A) Coupling	XA-839	1	IAD-4029. -1. A. A-1
 A B C D	**SCREWS**			
	(A) Advance Arm Hex. Hd. 1/4-20x5/8	8X-86	1	IAD-4039-1, IAD-4040-1, IAD-4041
	(B) Advance Arm	X-61	4	IAD-4009
	(D) Base, Fill. Hd. #10-32x1/4	8X-872	1	IAD-4003, IAD-4006, IAD-4017A
	(D) Breaker Contact (Lock) #8-32x3/16	8X-884	1	All
	(D) Breaker Plate Mtg., Fill. Hd.#10-32x5/16	X-2878	2	All
	(A) Clamp Spring, Hex. Hd. #6-32x5/16	IGC-175	1	All
	(B) Coil Bracket Mtg. Flat Hd. #1/4-20x5/8	8X-79	2	IAD-4029, A, IAD-4033, A
	(D) Coil Bracket, Fill. Hd. #10-32x3/4	8X-118	2	IAD-4029, A, IAD-4033, A
	(D) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
	(C) Connector, Rd. Hd. #6-32x3/16	8X-301	1	All
	(B) Cover Plate, Flat Hd. #10-32x7/16	8X-61	4	IAD-4029, -1, A, A-1, IAD-4033, A
	(A) Follower Gear, Hex. Hd. #10-32x3/8	8X-1523	1	IAD-4029, -1, A, A-1, IAD-4033, A
	SEAL, Oil	XA-654	1	IAD-4029, -1, A-1, IAD-4033, A
 A B C	**SHAFTS**			
	(C) Shaft, Shaft & Coupling Assy.	IAD-52	1	IAD-4029, -1, A, A-1, IAD-4033, A
	(A) Shaft & Coupling	IAD-1052	1	IAD-4033, A
	(A) Shaft & Coupling	IAD-1052A	1	IAD-4029, -1, A, A-1
	(B) Shaft, Drive Tachometer	IGS-148	1	IAD-4032, IAD-4034, A, IAD-4035
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACER, Cam	IGS-99	1	All
 B A C D	**SPRINGS**			
	(C) Anti-Rattle	IGT-69	1	IAD-4008, A, IAD-4018, IAD-4020A, B, IAD-4025, IAD-4027, A, IAD-4030, IAD-4035, IAD-4036A, IAD-4041
	(C) Anti-Rattle	IGT-70	1	IAD-4010C, D, IAD-4011, A, IAD-4016A, IAD-4017A, IAD-4023A, IAD-4024, IAD-4026A, C, IAD-4028A, IAD-4029, -1, A, A-1, IAD-4031, IAD-4032, IAD-4033, A, IAD-4034, A, IAD-4037 , IAD-4043 , A, IAD-4044
	(B) Cap Clamp	IGZ-9	2	All
	(A) Contact, Dist. Cap	IG-515A	1	All
	(D) Friction	IAT-55	1	IAD-4008, A , IAD-4041
	STUD, Terminal #10-32x15/16	IGL-8A	1	All
 A B C D E F G H J K L	**WASHERS**			
	(D) Advance Arm (Plain)	SW-634	1	IAD-4039-1, IAD-4040-1 , IAD-4041
	(J) Felt, Seal Plate	IAD-12	1	All
	(H) Insulating, Terminal Stud	IGL-9	1	All
	(D) Clamp Sc. (Plain) #6	8X-353	1	All
	(D) Contact Lock Sc. (Plain) #8	8X-350	1	All
	(D) Terminal Stud (Plain) #10	8X-183A	1	All
	(C) Thrust, Advance Arm	IG-816	1	IAD-4001, IAD-4003, IAD-4007, IAD-4008, A, IAD-4010A, C, D, IAD-4017A, IAD-4018 Thru IAD-4028A, IAD-4030, IAD-4031, IAD-4032, IAD-4035
	(C) Thrust, Advance Arm	IG-816A	1	IAD-4001, IAD-4005A, IAD-4006, IAD-4010A, C, D, IAD-4011, A, IAD-4012A, IAD-4015, IAD-4020A, B, IAD-4028A
	(G) Thrust, Drive Shaft (Upper)	IAC-104	1	IAD-4029, -1, A, A-1, IAD-4033, A
	(A) Thrust, Drive Shaft (Upper)	IGS-104	1	IAD-4001 Thru IAD-4028A, IAD-4030, 4031, 4039-1, 4040-1, 4041
	(E) Thrust, Drive Shaft (Lower)	IAD-46	*	IAD-4029, -1, A, A-1, IAD-4033, A
	(E) Thrust, Drive Shaft (Lower)	IAD-46A	*	IAD-4029, -1, A, A-1, IAD-4033, A
	(F) Thrust, Drive Shaft (Lower)	IG-90	1	IAD-4001, IAD-4003, IAD-4005A, IAD-4006, IAD-4007, IAD-4008, A, IAD-4010A, thru IAD-4028A, IAD-4030, IAD-4031, IAD-4032 (2), IAD-4034 (2), IAD-4034A (2), IAD-4035 (2). IAD-4036A, IAD-4039-1 , IAD-4040-1, IAD-4041, 4042, 4043 , A, 4044
	(L) Thrust, Drive Shaft (Lower)	IG-313	1	IAD-4009
	(B) Thrust, Shaft & Coupling Assy.	IAD-54	1	IAD-4029, -1, A-1, IAD-4033, A
	(K) Thrust, Tachometer Shaft	IGS-39	1	IAD-4032, IAD-4034, A, IAD-4035
	(A) Thrust, Drive Shaft, Inner (Upper)	IAO-10	1	IAD-4036A, IAD-4037, IAD-4038 , IAD-4042, IAD-4043 , A, 4044
	(A) Thrust, Drive Shaft, Outer (Upper)	IAO-11	1	IAD-4036A, IAD-4037, IAD-4038 , IAD-4042, IAD-4043 , A, 4044
	**WEIGHTS**			
	Governor	IGC-2168L	2	IAD-4001, IAD-4003, IAD-4008, A, IAD-4018, A, IAD-4020A, B, IAD-4025, IAD-4027, A, IAD-4030, IAD-4035, IAD-4036A, IAD-4038 , IAD-4041 , IAD-4042
	Governor	IGC-2168R	2	IAD-4005A, IAD-4006, IAD-4009, IAD-4010A Thru IAD-4017A, IAD-4019A, A-1, IAD-4023A, IAD-4024, IAD-4026A, C, IAD-4028A, IAD-4029, -1, A, A-1 Thru IAD-4034A. IAD-4037, IAD-4039-1, IAD-4040-1 , IAD-4043, A, 4044
 A B	**WICKS**			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Oiler	IGS-117	1	IAD-4008, A, IAD-4009, IAD-4010A, C, IAD-4016A, IAD-4019A, IAD-4020A, B, IAD-4023A, IAD-4024, IAD-4025, IAD-4036A, IAD-4037, IAD-4038, IAD-4039-1, 4040-1, 4041, 4042, 4043 , A, 4044
	(B) Felt, Oiler	IGS-117A	1	IAD-4018, A, IAD-4030

* USE AS REQUIRED.

Part No.	No. Used	Name of Part
GB-31	1	Rivet, Gear
GE-68A	1	Gear, Follower, Dist.
IAD-1100RK-1	1	Cam & Stop Plate, 4 Cyl. R. H.
IAD-2004	1	Plate Assy., Breaker
IAD-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
IGW-3139	1	CONDENSER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Brkr. Contact Lock Sc., #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IAD-2017	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud, Inner
IAD-9	2	Bracket, Brkr. Plate Mtg.
IAD-10	1	Bushing, Insulating, Term. Stud
IAD-14	2	Bracket, Cap Spring
IG-579A	2	BEARING, ABS, BRONZE
IGL-8A	1	Stud, Terminal, Primary
IGL-9	1	Washer, Insulating, Term. Stud
IGZ-9	2	Spring, Clamp, Cap
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-525	4	Rivet, Tubular
IG-94	5	Terminal, H. T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-816	1	Washer, Thrust, Advance Arm
IG-1324D	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IG-1657R	1	ROTOR
IG-1860A-1	1	Arm, Advance
IGB-328CS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-117A	1	Wick, Felt
IGS-1151R	1	Shaft, Drive
IGZ-90	1	Washer, Thrust, Drive Shaft, Lower
12X-194	1	Lockwasher, Connector Sc. #6
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-382	1	Cup, Grease, 1/8 Pipe
X-2878	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAD-4101A	J. I. Case

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IAD-1100R-2	1	Cam, & Stop Plate, 6 Cyl., R.H.
IAD-2004	1	Plate Assy., Breaker
IAD-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
IGW-3139	1	CONDENSER
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock Breaker Contact Fill. Hd. #8-32x3/16
X-1012	2	Lockwasher, Condenser & Clamp Screw, #6
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IAD-2021A	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation Term. Stud, Inner
IAD-10	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Absorbent Bronze
IGL-8A	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
IGS-117	1	Wick, Felt
8X-173	1	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud, #10
X-1590	1	Oiler, Press in, 1/4
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
*	1	Arm, Advance
IGS-1016B	1	ROTOR
IGS-2113RA	1	Shaft & Gov. Assy.
IG-636HS	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGS-1113R	1	Shaft, Drive
SW-213	1	Rivet, Collar, Drive Shaft
*	1	Screw, Advance Arm, Hex. Hd., 1/4-20x1/2
12X-194	1	Lockwasher, Connector Screw, #6
8X-301	1	Screw, Connector, Rd. Hd., #6-32x3/16
*	1	Washer, Skpf., Advance Arm. Mtg., 1/4
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd., #10-32x5/16
		1 2 3 4 5

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Arm. Advance	Screw	Washer
IAD-4201	None	None	None
IAD-4201-1	IGS-114	8X-85	X-1711

UNIT	APPLICATION
IAD-4201,-1	Chrysler Industrial


(Issued 1-22-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAD-4201-1 DISTRIBUTOR PARTS ILLUSTRATION

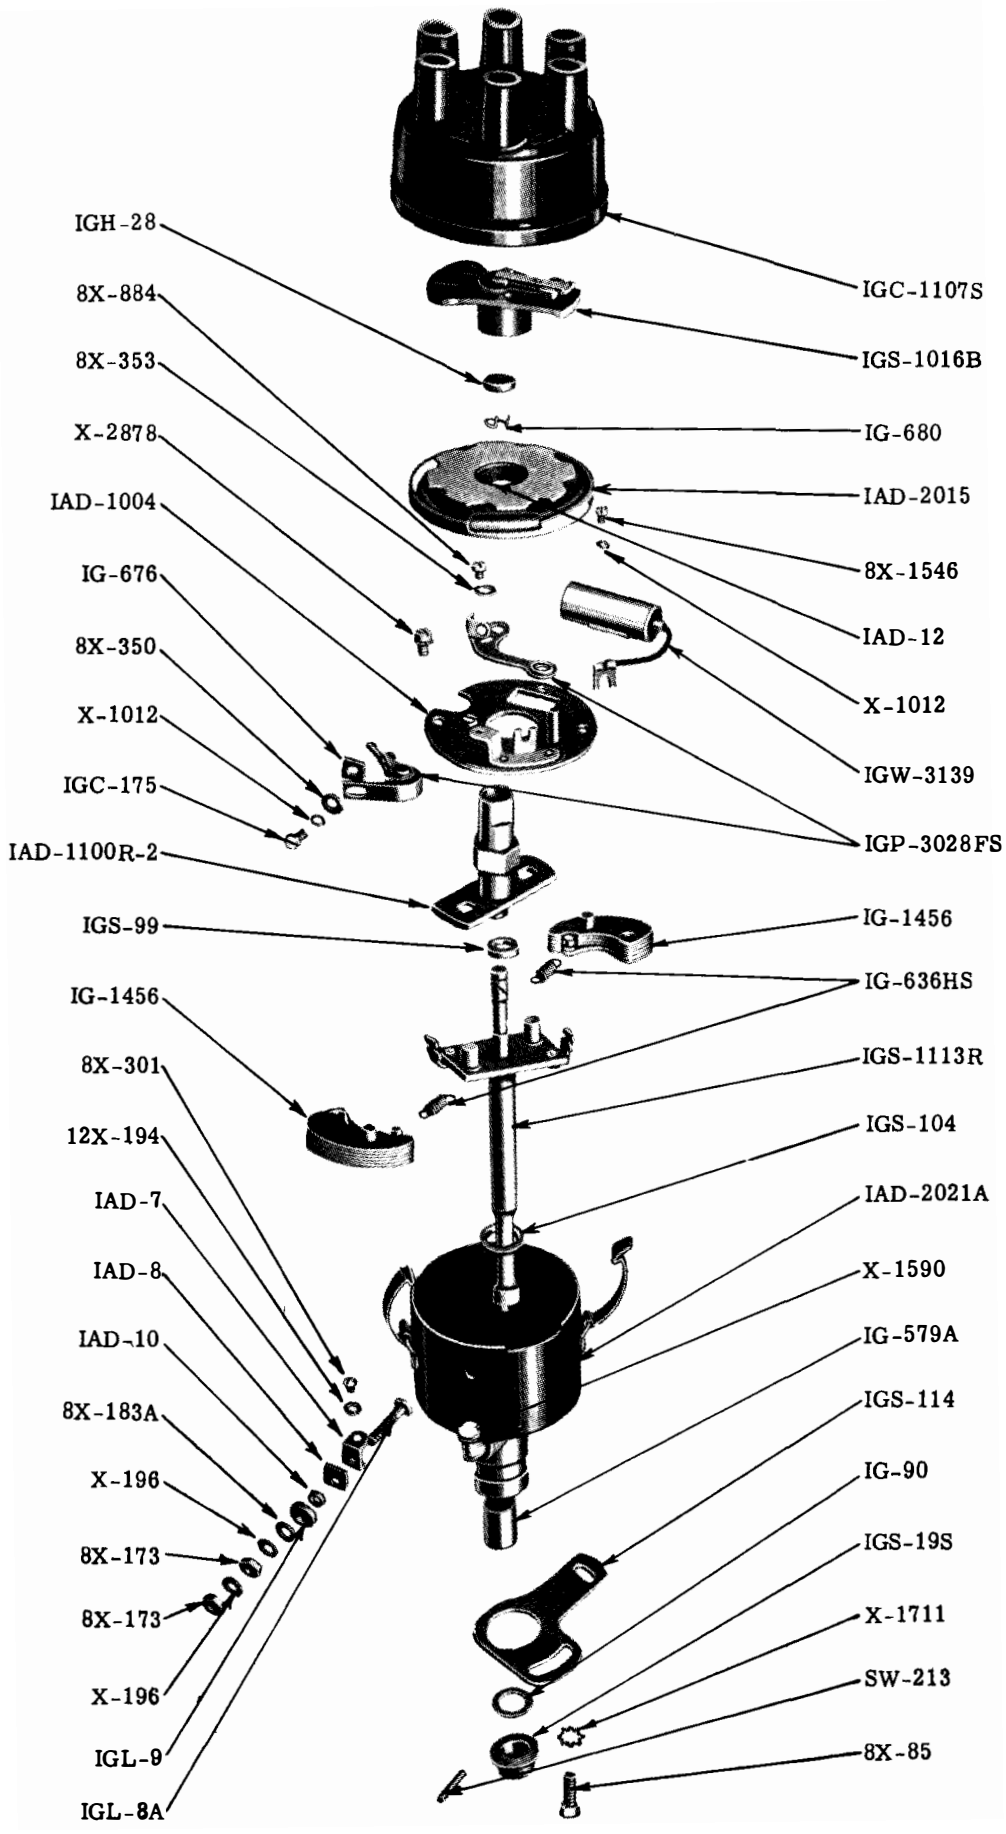

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
IAD-1100RA-2	1	Cam & Stop Plate, 6 Cyl., R.H.
IAD-2004	1	Plate Assy., Breaker
IAD-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	Contact Set, Breaker
IGW-3139	1	Condenser
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill Hd. #8-32x3/16
X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IAD-2021	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud, Inner
IAD-10	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Abs. Bronze
IGL-8A	1	Stud, Terminal, #10-32x15/16
IGL-9	1	Washer, Ins., Term. Stud
IGS-117	1	Wick, Felt
8X-173	1	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	1	Washer, Lock, Term. Stud, #10
X-1590	1	Oiler, Press in, 1/4
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IGC-1107S	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
*	1	Arm, Advance
IGS-1016B	1	Rotor
IGS-2112RA	1	Shaft & Gov. Assy.
IG-636NS	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGS-1112R	1	Shaft, Drive
SW-213	1	Rivet, Collar, Drive Shaft
*	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-194	1	Lockwasher, Connector Sc., #6
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
*	1	Washer, Advance Arm, Skpf. 1/4
X-2878	2	Screw, Breaker Plate Mtg., Fill Hd. #10-32x5/16

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Arm, Advance	Screw	Washer
IAD-4203	None	None	None
IAD-4203-1	IGS-114	8X-86	12X-199

(Issued 7-13-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Cam & Stop Plate, 6 Cyl. L.H.
IAD-2004	1	Plate Assy., Breaker
IAD-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IGC-175	1	Screw, Spring, Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
IGW-3139	1	CONDENSER
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Screw #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-1012	2	Lockwasher, Condenser & Clamp Screw, #6
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IAD-2059	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud, Inner
IAD-10	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Abs. Bronze
IGL-8A	1	Stud, Terminal, #10-32x15/16
IGL-9	1	Washer, Ins., Term. Stud, Outer
8X-173	2	Washer, Plain, Term. Stud, #10
8X-183A	1	Washer, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud,#10
X-490A	1	Oiler, Press in, 1/4
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-644	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
IG-816	1	Washer, Thrust, Advance Arm
IG-2860A	1	Arm, Advance
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1016B	1	ROTOR
*	1	Shaft Governor Assy.
IG-2456	2	Weight, Governor
IGS-1053L	1	Shaft, Drive
*	1	Spring Set, Gov. Weight
*	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling, Drive Shaft
12X-194	1	Lockwasher, Connector Sc., #6
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
		1 2 3 4 5

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Shaft & Gov. Assembly	Spring Set Gov. Weight	Spring Anti-Rattle
IAD-4204	IAD-1100LC	IGS-2053LX	IGB-327GS	IGT-69
IAD-4204A	IAD-1100LC	IGS-2053LY	IGB-327DS	IGT-69
IAD-4204B	IAD-1100LB	IGS-2053LZ	IGC-42CS	None

UNIT	APPLICATION
IAD-4204, A, B	Continental

(Issued 4-19-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAD-1100LA-1	1	Cam & Stop Plate, 4 Cyl.,L.H.
IAD-2004	1	Plate Assy., Breaker
IAD-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
IGW-3139	1	CONDENSER
X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IAD-2042	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud,Inner
IAD-9	2	Bracket, Brkr. Plate Mtg.
IAD-10	1	Bushing, Ins., Term. Stud
IAD-14	2	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGL-8A	1	Stud, Terminal, #10-32x15/16
IGL-9	1	Washer, Ins., Term. Stud, Outer
IGZ-9	2	Spring, Clamp Cap
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-382	1	Cup, Grease
X-525	4	Rivet, Tubular
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-644	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
IG-816	1	Washer, Thrust, Advance Arm
IG-1324E	1	CAP ASSY., DISTRIBUTOR
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IG-1657R	1	ROTOR
IG-2456	2	Weight, Governor
IG-2860A-3	1	Arm, Advance
IGE-29S	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1171LA	1	Shaft, Drive
IGT-69	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
12X-194	1	Lockwasher, Connector Sc., #6
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAD-4206	Continental

(Issued 10-11-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-79	1	Gear, Follower
IAD-1100RA-1	1	Cam, & Stop Plate, 4 Cyl. R.H.
IAD-2001	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud Inner
IAD-10	1	Bushing, Term. Stud
IG-579A	2	Bearing, Absorbent Bronze
IGL-8A	1	Stud, Terminal, #10-32x15/16
IGL-9	1	Washer, Ins., Term. Stud
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
X-196	2	Lockwasher, Term. Stud,#10
X-490A	1	Oiler, Press in, 1/4
IAD-2004	1	Plate Assy., Breaker
IAD-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm.
IGC-175	1	Screw, Spring, Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	Contact Set, Breaker
IGW-3139	1	Condenser
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-816	1	Washer, Thrust, Advance Arm
IG-816A	1	Washer, Thrust, Advance Arm
IG-1324D	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IG-1657R	1	Rotor
IG-1860A	1	Arm, Advance

Part No.	No. Used	Name of Part
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer Cam.
IGS-104	1	Washer, Thrust, Drive Shaft Upper
IGS-2151RA	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-284S	1	Spring Set, Gov. Weight
IGS-1151RA	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Gear
12X-194	1	Lockwasher, Connector, Sc., #6
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate, Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAD-4207A	Continental

(Issued 7-13-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
	1 2 3 4 5	
GE-82	1	GEAR, FOLLOWER
IAD-1100RG	1	Cam & Stop Plate 6 Cyl. R.H.
IAD-2015	1	Plate Assy., Seal
IAD-12	1	Washer, Felt
IAD-2030	1	Plate Assy., Breaker
IAD-32	1	Cover, Grease Retainer
IAD-36	1	Packing
IAD-1030	1	Plate, Breaker
IAD-1035	1	Wick, & Spring Assy.
IAD-3028S	1	CONTACT SET, BREAKER
IG-676	1	Clip, Breaker Arm Spring
IG-2671	1	CONDENSER
IGC-175	1	Screw, Spring Clamp Hex. Hd., #7-32x5/16
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-353	1	Washer, Plain, Clamp Sc.,#6
8X-884	1	Screw, Lock, Breaker Contact Fil. Hd. #8-32x3/16
X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
8X-1546	1	Screw, Condenser Mtg., Fil. Hd., #6-32x5/32
IAD-2040	1	Base Assy., Dist.
IAD-7	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud, Inner
IAD-10	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Absorbent Bronze
IGL-8	1	Term., #10-32x15/16
IGL-9	1	Washer, Ins., Term. Stud
8X-173	2	Nut, Term. Stud, Hex., #10-32
8X-183	1	Washer, Plain, Term. Stud,#10
12X-196	2	Lockwasher, Term. Stud, #10
X-382	1	Cup, Grease, 1/8
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-816	1	Washer, Thrust, Advance Arm
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGC-2130RZ	1	Shaft & Gov. Assy.
IGC-1130RD	1	Shaft, Drive
IGC-2168R	2	Weight, Assembly
IGB-350S	1	Spring, Set
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1016B	1	ROTOR
IGS-2020-5	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Gear
12X-194	1	Lockwasher, Connector Sc #6
12X-196	1	Lockwasher, #10
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
8X-872	1	Screw, Fil. Hd., #10-32x 1/4
X-2878	2	Screw, Breaker Plate Mtg., Fil. Hd. #10-32x5/16
	1 2 3 4 5	

UNIT	APPLICATION
IAD-4302A	Autocar

(Issued 8-14-47)


"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAD-6000 SERIES DISTRIBUTOR PARTS LIST


Model No.	No. Cyl.	CUSTOMER
IAD-6001-1A	6	Ward LaFrance
IAD-6001-1B	6	Buda, Cockshutt Plow
IAD-6001-1C	6	Federal, Ward LaFrance, Biederman, Diamond T, White
IAD-6001-2A	6	Hercules, Speed Sprayer
IAD-6001-2B	6	Biederman, Diamond T
IAD-6001-2D	6	Continental
IAD-6001-2F	6	Continental, Diamond T
IAD-6001-2J	6	Ross Carrier
IAD-6001-2L	6	Diamond T
IAD-6001-2N	6	Maxim Motors
IAD-6001-2R	6	Continental
IAD-6001C	6	Bay City Shovel
IAD-6001D	6	Hercules, Ross Carrier
IAD-6001E	6	Hercules, Massey Harris (Canada)
IAD-6001F	6	Hercules
IAD-6002-1A	6	Continental
IAD-6002-1B	6	Buda, Massey Harris
IAD-6002-1C	6	Worthington Pump
IAD-6002-1D	6	Ward LaFrance
IAD-6002-1E	6	Continental
IAD-6002-1F	6	Continental
IAD-6002-1G	6	Continental
IAD-6002-1K	6	Continental
IAD-6003-1A	4	Cockshutt Plow
IAD-6003-1B	4	J. I. Case
IAD-6003-2A	4	Detroit Tractor, Massey Harris
IAD-6003-2B	4	J. I. Case, Hercules
IAD-6003-2F	4	J. I. Case
IAD-6003-2G	4	Massey Harris (Canada)
IAD-6003-2H	4	Continental
IAD-6003-2J	4	J. I. Case
IAD-6003B	4	Cockshutt Plow, Hercules
IAD-6003D	4	Hercules
IAD-6004-1B	4	Continental
IAD-6004-1C	4	Continental, Federal Machine
IAD-6004-1D	4	Continental, Worthington Pump
IAD-6004-1E	4	Massey Harris
IAD-6004-1G	4	Lycoming
IAD-6004-2C	4	Ross Carrier
IAD-6004-2D	4	Continental, Massey Harris
IAD-6004-2E	4	Massey Harris
IAD-6004-2F	4	Wisconsin
IAD-6004-2H	4	Massey Harris
IAD-6006-1	6	Continental
IAD-6009-2A	6	Continental, Diamond T

Printed in U. S. A.

MISCELLANEOUS PARTS

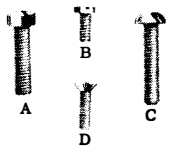	Name	Part No.	No. Used	Used on
	BEARING, Ball, S. A. E. #202, Tach. Drive	X-294	1	IAD-6009-2A
	BRACKETS			
	(A) Breaker Plate Mtg.	IAD-9	2	All
	(B) Cap Spring	IAD-14	2	All
	BUSHING INSULATING, Terminal Stud	IAD-10	1	All
	CLIP, Contact Arm Spring	IG-676	1	All
	CONNECTOR, Terminal Stud	IAD-7	1	All
	CONTACT, Dist. Cap Plunger	IG-514	1	All
	COVER, Tachometer Shaft Housing	IGS-38	1	IAD-6009-2A
	CUP, Grease	X-382	1	IAD-6009-2A
	GASKET, Dist. Cap Cover	IGB-230	3	IAD-6006-1
	GEARS			
	(A) Tachometer Drive	GE-47	1	IAD-6009-2A
	(B) Tachometer Follower	GE-48	1	IAD-6009-2A
	INSULATION, Terminal Stud (Inner)	IAD-8	1	All
	LOCKWASHERS			
	(A) Condenser & Clamp Sc. #6	12X-194	2	All
	(A) Connector Screw #6	12X-194	1	All
	(B) Terminal Stud #10	12X-196	2	All
	NUT, Terminal Stud, Hex. #10-32	8X-173	2	All
	OILER, Dist. Base	X-490A	1	IAD-6001-1A, 1B, 1C, 2A, 2B, 2D, 2F, 2J, 2L, 2N, 2R, C, D, E, F, IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, 1K, IAD-6003-1A, 1B, 2A, 2B, 2F, 2G, 2H. 2J, B, D, IAD-6004-1B, 1C, 1D, 1E, 2C, 2D, 2E, 1G, 2F, 2H, IAD-6006-1
	PLATE, Breaker	IAD-1004	1	All
	PLATE ASSY., Seal	IAD-2015	1	All
	PLUG, Rubber, Dist. Cap	IGS-32	1	All
	RIVETS			
A	(A) Gear or Coupling	SW-213	1	IAD-6001-1A, 1B, 1C, 2D, 2F, 2N, 2R, IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, 1K, IAD-6003-1A, 1B, 2A, 2B, 2F, 2G, 2H, 2J, IAD-6004-1B, 1C, 1D, 1E, 1G, 2C, 2D, 2E, 2F, 2H IAD-6006-1, IAD-6009-2A
B	(A) Gear, Tachometer	SW-213	1	IAD-6009-2A
	(A) Gear or Collar	GJ-236	1	IAD-6001-2A, 2B, 2J, 2L
	(B) Tubular, Cap Spring Bracket Mtg.	X-525	4	All
	SCREWS			
	(A) Breaker Contact Lock, Fill. Hd. #8-32x3/16	8X-864	1	All
	(A) Breaker Plate Mtg., Fill. Hd. #10-32x5/16	X-2878	2	All
	(B) Clamp Spring, Hex. Hd. #6-32x5/16	IGC-175	1	All
	(A) Condenser Mtg., Fill. Hd. #6-32x5/32	8X-1546	1	All
	(C) Connector, Rd. Hd. #6-32x3/16	8X-301	1	All
	(D) Dist. Cap Cover, Ctsk. Hd. #8-32x3/4	8X-1340	3	IAD-6006-1
	SHAFT, Drive, Tachometer	IGS-148	1	IAD-6009-2A
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACER, Cam	IGS-99	1	All


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

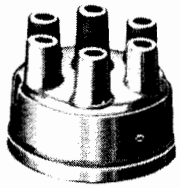

Cap


Rotor



Contact Set


Condenser

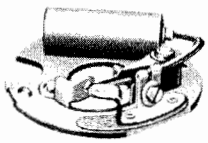

Breaker Plate Assy.

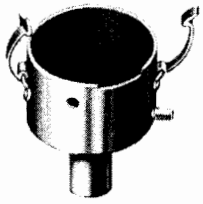
Base Assy.


Bearing

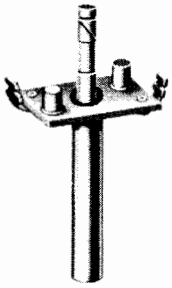
Drive Shaft


Weight Spring Set

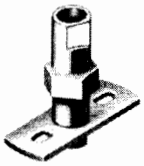
Cam & Stop Plate


Gear

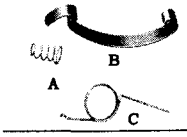

Coupling

ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IAD-6001-1A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053RE	IGB-284ES	IAD-1100RL	IG-644A
IAD-6001-1B	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-353AS	IAD-1100RJ	IG-644A
IAD-6001-1C	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053RE	IGB-208S	IAD-1100RG	IG-644A
IAD-6001-2A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-24S	IAD-1100RE	GE-41S
IAD-6001-2B	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-213S	IAD-1100RN	GE-41S
IAD-6001-2D	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-327KS	IAD-1100RJ	GE-83
IAD-6001-2F	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-284ES	IAD-1100RL	GE-83
IAD-6001-2J	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-29S	IAD-1100RR	GE-56
IAD-6001-2L	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-213S	IAD-1100RN	GE-56
IAD-6001-2N	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-24S	IAD-1100RE	GE-104
IAD-6001-2R	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-336AS	IAD-1100RL	GE-83
IAD-6001C	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-207S	IAD-1100RC	- - - -
IAD-6001D	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-24S	IAD-1100RE	- - - -
IAD-6001E	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-213S	IAD-1100RN	- - - -
IAD-6001F	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IG-636SS	IAD-1100RC	- - - -
IAD-6002-1A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IG-796BS	IAD-1100LG	IG-644A
IAD-6002-1B	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-327HS	IAD-1100LF	IG-644A
IAD-6002-1C	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-327JS	IAD-1100LF	IG-644A
IAD-6002-1D	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-317GS	IAD-1100LF	IG-644A
IAD-6002-1E	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-327FS	IAD-1100LC	IG-644A
IAD-6002-1F	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-339AS	IAD-1100LC	IG-644A
IAD-6002-1G	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-327FS	IAD-1100LH	IG-644A
IAD-6002-1K	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LC	IG-636US	IAD-1100LK	IG-644A
IAD-6003-1A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-284ES	IAD-1100RH-1	IG-644A
IAD-6003-1B	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IG-636S	IAD-1100RK-1	IG-644A
IAD-6003-2A	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-24S	IAD-1100RA-1	GE-95
IAD-6003-2B	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-118BS	IAD-1100RK-1	GE-95A
IAD-6003-2F	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-118BS	IAD-1100RK-1	GE-98
IAD-6003-2G	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGE-24S	IAD-1100RA-1	GE-101
IAD-6003-2H	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IG-775S	IAD-1100RC-1	GE-102
IAD-6003-2J	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-252S	IAD-1100RK-1	GE-98
IAD-6003B	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGB-358AS	IAD-1100RG-1	- - - -
IAD-6003D	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180R	IGC-118BS	IAD-1100RG-1	- - - -
IAD-6004-1B	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-327FS	IAD-1100LD-1	IG-644A
IAD-6004-1C	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGC-42LS	IAD-1100LF-1	IG-644A
IAD-6004-1D	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGE-29S	IAD-1100LA-1	IG-644A
IAD-6004-1E	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IG-727AS	IAD-1100LG-1	IG-644A
IAD-6004-1G	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IGB-252S	IAD-1100LM-1	IG-644A
IAD-6004-2C	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IGE-29S	IAD-1100LA-1	GE-100
IAD-6004-2D	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IG-636WS	IAD-1100LE-1	GE-101
IAD-6004-2E	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IGB-327ES	IAD-1100LA-1	GE-101
IAD-6004-2F	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IGC-200S	IAD-1100LE-1	GE-89
IAD-6004-2H	IG-1324D	IG-1657R	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1180L	IGC-199S	IAD-1100LG-1	GE-101
IAD-6006-1	‡IGC-1123L	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2020	IG-579A	IGS-1053LE	IGB-327FS	IAD-1100LL	IG-644A
IAD-6009-2A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IAD-2004	IAD-2060	*IG-579A	IGS-1174R	IGB-284ES	IAD-1100RL	†GE-83

* See Miscellaneous Parts Section for other Bearings.
† See Miscellaneous Parts Section for other Drive Gears.
‡ IGC-1124L Distributor Cap Cover.

MISCELLANEOUS PARTS (Continued)

	Name	Part No.	No. Used	Used on
	SPRINGS			
	(C) Anti-Rattle	IGT-69	1	IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, IAD-6004-1B, 1D, 1E, 2C, 2D, 2E, 2F, 2H, IAD-6006-1
	(C) Anti-Rattle	IGT-70	1	IAD-6001-1A, 1B, 1C, 2A, 2B, 2D, 2F, 2L, 2N, 2R, C, D, E, F, IAD-6003-1A, 1B, 2B, 2F, 2H, 2J, B, D, IAD-6009-2A
	(B) Cap Clamp	IGZ-9	2	All
	(A) Contact, Dist. Cap	IG-515A	1	All
	STUD, Terminal	IGL-8A	1	All
	WASHERS			
	(A) Felt, Seal Plate	IAD-12	1	All
	(B) Insulating, Terminal Stud	IGL-9	1	All
	(C) Clamp Sc. (Plain) #6	8X-353	1	All
	(C) Contact Lock Sc. (Plain) #8	8X-350	1	All
	(C) Terminal Stud (Plain) #10	8X-183A	1	All
	(D) Thrust, Inner, Drive Shaft (Upper)	IAO-10	1	IAD-6001-1A, 1B, 1C, 2A, 2B, 2D, 2F, 2J, 2L, 2N, 2R, C, D, E, F, IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, 1K, IAD-6003-1A, 1B, 2A, 2B, 2F, 2G, 2H, 2J, B, D, IAD-6004-1B, 1C, 1D, 1E, 1G, 2C, 2D, 2E, 2F, 2H, IAD-6006-1
	(D) Thrust Outer, Drive Shaft (Upper)	IAO-11	1	IAD-6001-1A, 1B, 1C, 2A, 2B, 2D, 2F, 2J, 2L, 2N, 2R, C, D, E, F, IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, 1K IAD-6003-1A, 1B, 2A, 2B, 2F, 2G, 2H, 2J, B, D IAD-6004-1B, 1C, 1D, 1E, 1G, 2C, 2D, 2E, 2F, 2H, IAD-6006-1
	(E) Thrust, Drive Shaft (Lower)	IG-90	1	IAD-6001-1A,1B,1C, 2A, 2B, 2D, 2F, 2J, 2L, 2N, 2R, C, D, E, F, IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, 1K IAD-6003-1A, 1B, 2A, 2G, B, D, IAD-6004-1B, 1C, 1E, 1G, 2C, 2D, 2E, 2F, 2H, IAD-6006-1
	(E) Thrust, Drive Shaft	IG-90	2	IAD-6009-2A
	(F) Thrust, Tachometer Shaft	IGS-39	1	IAD-6009-2A
	(G) Thrust, Drive Shaft (Lower)	IGZ-90	1	IAD-6003-2B, IAD-6003-2F, 2J
	WEIGHTS			
	Governor	IGC-2168L	2	IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1K IAD-6004-1B, 1C, 1D, 1E, 1G, 2C, 2E, 2F, 2H, IAD-6006-1
	Governor	IGC-2168R	2	IAD-6001-1A, 1B, 1C, 2A, 2B, 2D, 2F, 2J, 2L, 2N, 2R, C, D, E, F, IAD-6003-1A, 1B, 2A, 2B, 2F, 2G, 2H, 2J, B, D, IAD-6009-2A
	WICKS			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Oiler	IGS-117	1	IAD-6001-1A, 1B, 1C, 2A, 2B, 2D, 2F, 2J, 2L, 2N, 2R, C, D, E, F, IAD-6002-1A, 1B, 1C, 1D, 1E, 1F, 1G, 1K, IAD-6003-1A, 1B, 2A, 2B, 2F, 2G, 2H, 2J, B, D, IAD-6004-1B, 1C, 1D, 1E, 1G, 2C, 2D, 2E, 2F, 2H, IAD-6006-1

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAK-1016	1	Rotor
IAK-2021R-1	1	Cam, & Stop Plate, 8 Cyl., R.H.
IAK-2001	1	Base Assy., Dist.
IAD-8	1	Insulation, Term. Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IAK-7	1	Connector, Term. Stud
IAK-8	1	Elbow, Grease Cup
IG-579A	2	Bearing, Absorbent Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease, 1/8"
X-2853	2	Nut, Term. Stud, Hex. #10-32
IAK-2004	1	Plate Assy., Breaker
IAK-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927E	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. 6-32x5/16
IGP-3028WS	1	Contact Set, Breaker
19X-59	1	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm
IGB-199	1	Collar, Shaft, Dist.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-30	1	Cover, Cap, Dist.
IGH-36	1	Nut, Cover, Dist. Cap, #10-32
IGH-1087	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-21	1	Pointer, Advance Arm
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1020-2	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
IGT-2025RE	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring, Set, Gov. Weight
IGT-1025RC	1	Shaft, Drive
SW-213	2	Rivet, Gear, & Collar
X-183B	1	Washer, Plain, Cover Sc., #10
12X-194	1	Lockwasher, Connector Sc., #6
12X-196	1	Lockwasher, Cover Screw #10
X-294	1	Bearing, Ball, S.A.E. #202
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
		1 2 3 4 5

UNIT	APPLICATION
IAK-4001-1M	Chrysler Marine

(Issued 1-27-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part 1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAK-1016	1	Rotor
IAK-1021R-1	1	Cam & Stop Plate, 8 Cyl., R.H.
IAK-2001	1	Base Assy., Dist.
IAD-8	1	Insulation, Term.Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IAK-7	1	Connector, Term. Stud
IAK-8	1	Elbow, Grease Cup
IG-579A	2	Bearing, Abs. Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease 1/8"
X-2853	2	Nut, Term. Stud, Hex. #10-32
IAK-2004	1	Plate Assy., Breaker
IAK-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927E	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028WS	1	Contact Set, Breaker
19X-59	1	Screw, Lock, Breaker Contact Rd. Hd. #8-32x3/16
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Sc., #6
12X-1012	2	Lockwasher, Condenser & Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm
IGB-199	1	Collar, Shaft, Dist.
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-30	1	Cover, Cap, Dist.
IGH-36	1	Nut, Cover, Dist. Cap, #10-32
IGH-1029B	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-21	1	Pointer, Advance Arm
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft 1 2 3 4 5
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1020-2	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
IGT-2025RE	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring, Set, Gov. Weight
IGT-1025RC	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
X-183B	1	Washer, Plain, Cover Sc., #10
12X-194	1	Lockwasher, Connector Screw, #6
12X-196	1	Lockwasher, Cover Screw, #10
X-294	1	Bearing, Ball, S.A.E. #202
8X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16 1 2 3 4 5

UNIT	APPLICATION
IAK-4002-1M	Chrysler Marine

(Issued 1-27-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used 1 2 3 4 5	Name of Part
GE-47	1	GEAR, Tachometer, Driver
GE-48	1	GEAR, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAK-1100L-1	1	Cam & Stop Plate, 8 Cyl. L.H.
IAK-2004	1	Plate Assy., Breaker
IAK-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16
IGP-3028WS	1	Contact Set, Breaker
19X-59	1	Screw, Lock, Breaker Contact, Rd. Hd., #8-32x3/16
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc. #6
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fil. Hd., #6-32x5/32
IAK-2017	1	Base Assy., Dist.
IAD-8	1	Insulation, Term. Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IAK-7	1	Connector, Term. Stud
IG-579A	2	Bearing, Abs. Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud #10
12X-196	2	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease 1/8"
X-2853	2	Nut, Term. Stud, Hex. #10-32
IG-90	2	Washer, Thrust, Drive Shaft
IG-94	9	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-2456	2	Weight, Governor
IGB-284DS	1	Spring Set, Gov. Weight

Part No.	No. Used 1 2 3 4 5	Name of Part
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-53B	1	Extension, Drive Shaft
IGH-54	1	Sleeve, Drive Shaft
IGH-55	1	Pin, Drive Shaft
IGP-1003	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGP-1016B	1	ROTOR
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1177LA	1	Shaft, Drive
IGT-69	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Collar
12X-194	1	Lockwasher, Connector Sc., #6
X-294	1	Bearing, Ball, S.A.E. #202
19X-301	1	Screw, Connector, Rd. Hd., #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fil. Hd., #10-32x5/16

UNIT	APPLICATION
IAK-4101M	Packard (Marine)

(Issued 10-22-47)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAD-1100RD-2	1	Cam, & Stop Plate, 6 Cyl. R.H.
IAD-2004B	1	Plate Assy., Breaker
IAD-1004A	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927J	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	Contact Set, Breaker
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
19X-884	1	Screw, Lock, Breaker Contact
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAK-40	1	Cap, Tachometer Shaft
IAL-2001	1	Base Assy., Dist.
IAD-7A	1	Connector, Term. Stud
IAD-8	1	Insulator, Term. Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing Absorbent Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud,#10
X-382A	1	Cup, Grease, 1/8"
X-2853	1	Nut, Term. Stud, Hex. #10-32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGC-1123C	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-1124B	1	Cover Assy., Dist. Cap
IGB-230	3	Gasket
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-21	1	Pointer, Advance Arm
IGS-38	1	Cover, Housing Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	Rotor
IGS-1020-2	1	Arm, Advance
IGS-2165R	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGS-1165R	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
12X-194	1	Lockwasher, Connector Sc.,#6
X-294	1	Bearing, Ball, S.A.E. #202
19X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill Hd. #10-32x5/16
X-2932	3	Screw, Cover Ctsk. Hd. #8-32x3/4
		1 2 3 4 5

UNIT	APPLICATION
IAL-4001-1M	Chrysler Marine

(Issued 1-27-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
	1 2 3 4 5	
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAD-1100RD-2	1	Cam, & Stop Plate, 6 Cyl. R.H.
IAD-2004B	1	Plate Assy., Breaker
IAD-1004A	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927J	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	Contact Set, Breaker
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
19X-884	1	Screw, Lock Breaker Contact, Fill. Hd. #8-32x3/16
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAK-40	1	Cap, Tachometer Shaft
IAL-2001	1	Base Assy., Dist.
IAD-7A	1	Connector, Term. Stud
IAD-8	1	Insulator, Term. Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Absorbent Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease, 1/8"
X-2853	1	Nut, Term. Stud, Hex. #10-32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
IGC-1123A	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-1124A	1	Cover Assy., Dist. Cap
IGB-230	3	Gasket
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-21	1	Pointer, Advance Arm
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	Rotor
IGS-1020-2	1	Arm, Advance
IGS-2165R	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGS-1165R	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
12X-194	1	Lockwsher, Connector Sc., #6
X-294	1	Bearing, Ball, S.A.E. #202
19X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-2932	3	Screw, Cover Ctsk. Hd. #8-32x3/4
	1 2 3 4 5	

UNIT	APPLICATION
IAL-4002-1M	Chrysler Marine

(Issued 1-27-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAD-1100RC-2	1	Cam, & Stop Plate 6 Cyl. R.H.
IAD-2004B	1	Plate Assy., Breaker
IAD-1004A	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927J	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	Contact Set, Breaker
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAK-40	1	Cap, Tachometer Shaft
IAL-2001	1	Base Assy., Dist.
IAD-7A	1	Connector, Term. Stud
IAD-8	1	Insulator, Term. Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Absorbent Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud #10
12X-196	1	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease, 1/8"
X-2853	1	Nut, Term. Stud, Hex. #10-32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm
IGC-1123A	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-1124A	1	Cover Assy., Dist. Cap
IGB-230	3	Gasket
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-21	1	Pointer, Advance Arm
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	Rotor
IGS-1020-2	1	Arm, Advance
IGS-2166R	1	Shaft & Gov. Assy.
IG-636NS	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGS-1166R	1	Shaft, Drive
SW-213	2	Rivet, & Gear & Collar
12X-194	1	Lockwasher, Connector Sc., #6
X-294	1	Bearing, Ball, S.A.E. #202
19X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-2932	3	Screw, Cover Ctsk. Hd. #8-32x3/4
		1 2 3 4 5

UNIT	APPLICATION
IAL-4003-1M	Chrysler Marine

(Issued 1-27-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part 1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAD-1100RC-2	1	Cam & Stop Plate, 6 Cyl., R.H.
IAD-2004B	1	Plate Assy., Breaker
IAD-1004A	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927J	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	Contact Set, Breaker
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Sc., #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
12X-1012	2	Lockwasher, Condenser & Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAK-40	1	Cap, Tachometer Shaft
IAL-2001	1	Base Assy., Dist.
IAD-7A	1	Connector, Term. Stud
IAD-8	1	Insulator, Term. Stud, Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing Abs. Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease, 1/8"
X-2853	1	Nut, Term. Stud, Hex. #10-32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm
IGC-1123C	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-1124B	1	Cover Assy., Dist. Cap
IGB-230	3	Gasket
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-21	1	Pointer, Advance Arm
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam 1 2 3 4 5
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	Rotor
IGS-1020-2	1	Arm, Advance
IGS-2166R	1	Shaft & Gov. Assy.
IG-636NS	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGS-1166R	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
12X-194	1	Lockwasher, Connector Screw, #6
X-294	1	Bearing, Ball, S.A.E. #202
19X-301	1	Screw, Connector, Rd. Hd. #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-2932	3	Screw, Cover, Ctsk. Hd. #8-32x3/4 1 2 3 4 5

UNIT	APPLICATION
IAL-4004-1M	Chrysler Marine

(Issued 1-27-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
	1 2 3 4 5	
GE-47	1	GEAR, Tachometer,Driver
GE-48	1	GEAR, Tachometer, Follower
IAD-1100L-2	1	Cam & Stop Plate, 6 Cyl. L.H.
IAD-2004B	1	Plate Assy., Breaker
IAD-1004A	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927J	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
19X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fil. Hd., #6-32x5/32
IAK-40	1	Cap, Tachometer Shaft
IAL-2017	1	Base Assy., Dist.
IAD-7A	1	Connector, Term. Stud
IAD-8	1	Insulation, Term. Stud,Inner
IAD-10A	1	Bushing, Ins., Term. Stud
IG-579A	2	Bearing, Absorbent Bronze
IGL-8B	1	Stud, Terminal
IGL-9	1	Washer, Ins., Term. Stud
X-183B	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-382A	1	Cup, Grease, 1/8"
X-2853	2	Nut Term. Stud, Hex.,#10-32
IG-90	2	Washer, Thrust, Drive Shaft
IG-94	7	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-2456	2	Weight, Governor
IGB-293S	1	Spring, Set, Gov. Weight
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole,Rubber
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-53B	1	Extension, Drive Shaft
IGH-54	1	Sleeve, Drive Shaft
IGH-55	1	Pin, Drive Shaft
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive,Tachometer
IGS-1016B	1	ROTOR
IGS-1177L	1	Shaft, Drive
IGT-69	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Collar
12X-194	1	Lockwasher,Connector Sc.,#6
X-294	1	Bearing, Ball, S.A.E. #202
19X-301	1	Screw, Connector, Rd. Hd., #6-32x3/16
X-2878	2	Screw, Breaker Plate Mtg., Fil. Hd., #10-32x5/16
	1 2 3 4 5	

UNIT	APPLICATION
IAL-4005M	Packard (Marine)

(Issued 10-22-47)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IAM-117	1	Cover, Terminal Slot
IAM-1100L	1	Cam & Stop Plate L.H. 6 Cyl.
IAM-2001	1	Base Assy., Dist.
IAM-6	2	Spring,Cap
GFM-4J	2	Screw, Spring Attaching Fil. Hd. #10-32
IG-579A	1	Bearing, Absorbent Bronze
IG-579D	1	Bearing Absorbent Bronze
IGS-117	1	Wick, Oil
X-489	1	Oiler, Press in Type
XA-655	1	Seal, Oil
IAM-2002L	1	Shaft & Gov. Assy.
IAM-1002L	1	Shaft, Drive
IGB-252S	1	Spring Set, Gov. Weight
IGC-2168L	2	Weight, Governor
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-680	1	Snap Ring, Cam Retaining
IG-1323	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-1180	1	Coupling, Drive, Dist.
IGC-2148D	1	Plate Assy., Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-2671	1	Condenser
IGC-1148	1	Plate, Breaker
IGC-1149†	1	Contact, Breaker
IGP-3028†	1	Arm Assy., Breaker
IGP-30	1	Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-302	1	Screw, Spring Clamp Rd. Hd., #6-32x1/4
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
X-1012	2	Washer, Lock, Condenser & Clamp Screw, #6
8X-1546	1	Screw, Condenser Mtg., Fil. Hd., #6-32x5/32
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	Rotor
IGT-69	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar, Drive Shaft
12X-196	1	Lockwasher, Terminal Screw, #10
8X-870	2	Screw, Breaker Plate Mtg., Fil. Hd. #10-32x5/16
8X-872	1	Screw, Terminal, Fil. Hd. #10-32x1/4
X-1270	2	Washer, Breaker Plate Mtg., Skpf. #10
		1 2 3 4 5

† Contact Set, Service IGP-3028FS.

Unit	Application
IAM-4001	Aircooled

(Issued 9-16-46)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-6	1	Cover, Terminal Slot
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
*	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
*	1	Cam & Stop Plate, 6 Cyl., R.H.
IGS-1112R	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg., Sc., Skpf. #10

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set Gov. Weight
IAO-4001-1	IGS-1100R	IG-636NS
IAO-4001A-1	IGS-1100RA	IG-636QS
IAO-4001B-1	IGS-1100RA	IGB-292SS

UNIT	APPLICATION
IAO-4001-1, A-1, B-1	Dodge (Truck) Fargo (Truck)

(Issued 11-9-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-6	1	Cover, Terminal Slot
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Sc. #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact Fil. Hd., #8-32x3/16
X-1546	1	Screw, Condenser Mtg., Fil. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring, Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
IGS-1100RX	1	Cam, & Stop Plate, 6 Cyl, R.H.
IGS-1113R	1	Shaft, Drive
SW-213	1	Rivet, Collar,
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg. Sc. Skpf. #10

UNIT	APPLICATION
IAO-4002-1	Fargo (Truck), Dodge (Truck)

(Issued 11-9-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-6	1	Cover, Terminal Slot
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fil. Hd., #6-32x5/32
IAO-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-525	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGC-133	1	Coupling, Dist. Drive
IGC-135	1	Pointer, Advance Arm
IGC-1134	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060R	1	Shaft, Drive
IGS-1100RW	1	Cam, & Stop Plate, 6 Cyl. R.H.
SW-213	1	Rivet, Coupling
8X-870	2	Screw, Breaker Plate Mtg., Fil. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10

UNIT	APPLICATION
IAO-4003-1	Dodge (Truck), Fargo (Truck)

(Issued 11-10-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2018	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
*	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
*	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1112RA	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Adv. Arm Mtg. Screw
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Sc., Skpf. #10

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set
IAO-4101-1	IGS-1100R	IG-636NS
IAO-4101A-1	IGS-1100RA	IG-636QS
IAO-4101B-1	IGS-1100RA	IGB-292SS

UNIT	APPLICATION
IAO-4101-1, A-1,B-1	Dodge (Truck) Fargo (Truck)

(Issued 11-10-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2018M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1112RC	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm 1/4
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4101-1M	Chrysler (Marine)

(Issued 9-13-50)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2018	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-636HS	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
IGS-1100RX	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1113RA	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Adv. Arm Mtg. Sc.
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Sc., Skpf., #10

UNIT	APPLICATION
IAO-4102-1	Dodge (Truck), Fargo (Truck)

(Issued 11-10-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2018M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Governor Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1113RC	1	Shaft Drive
SW-213	1	Rivet, Collar
SW-634B	1	Washer, Plain, Adv. Arm. Mtg.
12X-199	1	Lockwasher, Advance Arm 1/4
X-1270	2	Washer, Breaker Plate Mtg. Sc. Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4102-1M	Chrysler (Marine)

(Issued 9-13-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2019	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-525	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-636HS	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGC-133	1	Coupling, Dist. Drive
IGC-135	1	Pointer, Advance Arm
IGC-1134	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060R	1	Shaft, Drive
*	1	Cam & Stop Plate, 6 Cyl. R.H.
SW-213	1	Rivet, Coupling, Drive Shaft
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Sc., Skpf. #10

* See table following parts list for part number applying to assembly wanted.

Unit	Cam & Stop Plate
IAO-4103-1	IGS-1100RW
IAO-4103A-1	IGS-1100R

UNIT	APPLICATION
IAO-4103-1	Dodge (Truck)
IAO-4103A-1	Dodge (Truck)

(Issued 10-20-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004A	1	Plate Assy., Breaker
IAO-1004S	1	Plate, Breaker
IG-676	1	Clip, Contact Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028FS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-353	1	Washer, Plain, Clamp Screw, #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2019S	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-525	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGC-133	1	COUPLING, DIST. DRIVE
IGC-135	1	Pointer, Advance Arm
IGC-1134	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060R	1	Shaft, Drive
*	1	Cam & Stop Plate, 6 Cyl. R.H.
SW-213	1	Rivet, Coupling
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate
IAO-4103-1F	IGS-1100RW
IAO-4103A-1F	IGS-1100R

UNIT	APPLICATION
IAO-4103-1F	Dodge Truck
IAO-4103A-1F	Dodge Truck

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Sc., #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2019M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-2872	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Governor Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGC-133	1	Coupling, Dist. Drive
IGC-135M	1	Pointer, Advance Arm
IGC-1134M	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060RA	1	Shaft, Drive
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
SW-213	1	Rivet, Coupling
X-1270	2	Washer, Breaker Plate Mtg. Sc. Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4103-1M	Chrysler (Marine)

(Issued 9-13-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2021M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2943	4	Rivet, Tubular
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1166RA	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4105-1M	Chrysler (Marine)

(Issued 9-13-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	Cap Assy., Dist.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32
IAO-2022M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2943	4	Rivet, Tubular
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGC-133	1	Coupling, Dist. Drive
IGC-135M	1	Pointer, Advance Arm
IGC-1134M	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1205R	1	Shaft, Drive
SW-213	2	Rivet, Gear & Coupling
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4106-1M	Chrysler (Marine)

(Issued 9-13-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2023M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1165RC	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4107-1M	Chrysler (Marine)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2023M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Governor Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1166RB	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4108-1M	Chrysler (Marine)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2018M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-14M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1113RF	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634B	1	Washer, Plain, Advance Arm, Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4109-1M	Chrysler (Marine)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP, ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clamp, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2022M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGC-133	1	COUPLING, DIST. DRIVE
IGC-135M	1	Pointer, Advance Arm
IGC-1134M	1	Arm, Advance
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1205RA	1	Shaft, Drive
SW-213	2	Rivet, Gear & Coupling
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4110-1M	Chrysler (Marine)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clamp, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2019M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-2872	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGC-133	1	Coupling, Dist. Drive
IGC-135M	1	Pointer, Advance Arm
IGC-1134M	1	Arm, Advance
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060RB	1	Shaft, Drive
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
SW-213	1	Rivet, Coupling
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4111-1M	Chrysler Marine

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

(Issued 7-8-52)

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clamp, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2023M	1	Base Assy., Dist.
IAD-1014M	1	Bracket, Cap Spring
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-1014M	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114A	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive, Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1165RD	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4112-1M	Chrysler Marine

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clamp, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2023M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive Tachometer
IGS-1016B	1	ROTOR
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1166RC	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4113-1M	Chrysler Industrial, Chrysler Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clip, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2025M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114A	1	Arm, Advance
IGS-1016B	1	ROTOR
**	1	Cam & Stop Plate, 6 Cyl. R. H.
IGS-1112RJ	1	Shaft, Drive
**	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg. Sc.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Anti-Rattle Spring
IAO-4114-1M	IGS-1100RB-3	None
IAO-4114A-1M	IGS-1100RE-3	IGT-70

UNIT	APPLICATION
IAO-4114-1M	Chrysler Industrial, Chrysler Marine
IAO-4114A-1M	Chrysler Industrial, Chrysler Marine

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004M	1	Plate Assy., Breaker
IAO-1004M	1	Plate, Breaker
IG-676	1	Clamp, Breaker Arm Spring
IG-3927K	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-3028VS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-2024M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-13M	2	Bracket, Breaker Plate Mtg.
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-2872	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGC-133	1	COUPLING, DIST. DRIVE
IGC-135M	1	Pointer, Advance Arm
IGC-1134M	1	Arm, Advance
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060RB	1	Shaft, Drive
IGS-1100RB-3	1	Cam & Stop Plate, 6 Cyl. R.H.
SW-213	1	Rivet, Coupling
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAO-4115-1M	Chrysler Marine

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAO-4116-1, A-1 DISTRIBUTOR PARTS LIST

IAO-4116-1, A-1
(Issued 4-9-57)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAO-1003	1	CAP ASSY, DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAO-2004	1	Plate Assy., Breaker
IAO-1004	1	Plate, Breaker
IBB-1042SS-1	1	CONDENSER PACKAGE
IG-676	1	Clip, Breaker Arm Spring
IGC-175	1	Screw, Spring Clamp Hex. Hd. #6-32x5/16
IGP-3028FS	1	Contact Set Breaker
12X-194	2	Lockwasher, Condenser & Clamp Screw #6
8X-350	1	Washer, Plain, Contact Lock Screw #8
8X-353	1	Washer, Plain, Clamp Screw, #6
8X-884	1	Screw, Lock Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/22
IAO-2019	1	Base Assy., Distributor
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring & Locating
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-488	1	Oiler
X-525	4	Rivet, Tubular
IG-90A	1	Washer, Thrust, Drive Shaft, Lower
IG-636HS	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGC-133	1	Coupling, Dist. Drive
IGC-135	1	Pointer, Advance Arm
IGC-1134	1	Arm, Advance
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-1016B	1	ROTOR
IGS-1060RC	1	SHAFT: DRIVE
**	1	Cam & Stop Plate, 6Cyl. R. H.
SW-213	1	Rivet, Coupling
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg. Screw, Skpf. #10

** See table following Parts List for Part Number applying to assembly wanted.

Assembly No.	Cam & Stop Plate
IAO-4116-1	IGS-1100RW
IAO-4116A-1	IGS-1100R

UNIT	APPLICATION
IAO-4116-1	Chrysler Industrial Dodge Truck Fargo Truck
IAO-4116A-1	Chrysler Industrial Dodge Truck Fargo Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-6	1	Cover, Terminal Slot
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAP-7	1	Gasket, Bracket, to Base
IAP-23	1	Bracket, Vacuum Chamber
IAP-24	1	Gasket, Vacuum Chamber to Bracket
IAP-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IAP-9	2	Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
**	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
**	1	Plate, Breaker
IG-3927G	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc.,#6
IGP-3028ES	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1092RS	1	Plate Assy., Sub
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
12X-194	4	Lockwasher, Condenser Mtg. & Lead Sc. #6
8X-1546	4	Screw, Condenser Mtg. & Lead Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGH-28	1	Wick, Felt Cam Sleeve
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1016B	1	ROTOR
**	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1113R	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
**	1	Spring
VC-3147	1	VACUUM CHAMBER
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-196	4	Lockwasher, Vac. Chamber Mtg. Sc. #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-321	2	Screw, Vacuum Chamber Mtg., Rd. Hd. #10-32x5/16
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
8X-902	2	Screw, Vac. Bracket Mtg., Fill. Hd. #10-32x3/8
X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10

* Use as Required.

** See table following parts list for part number applying to assembly wanted.

† See Manual Bulletin IG-11.

UNIT	APPLICATION
IAP-4001-1, A-1	Dodge (Truck)

Unit	Plate Assy.	Plate, Breaker	Spring Set	Cam & Stop Plate	Spring
IAP-4001-1	IAP-3004R	IAP-1004R (Mrkd. 10 †)	IGB-292SS	IGS-1100RW	VC-49 (Blue)
IAP-4001A-1	IAP-3004RB	IAP-1004RB (Mrkd. 8.5 †)	IG-636HS	IGS-1100RX	VC-50 (Orange)

(Issued 11-14-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-6	1	Cover, Terminal Slot
IAO-10	1	Washer, Thrust, Drive Shaft Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAP-7	1	Gasket, Bracket to Base
IAP-23	1	Bracket, Vacuum Chamber
IAP-24	1	Gasket, Vacuum Chamber to Bracket
IAP-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-13	2	Bracket, Brkr. Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IAP-9	2	Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler, Press in Elbow, 1/4
**	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
**	1	Plate, Breaker
IG-3927G	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc.,#6
IGP-3028ES	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1092RS	1	Plate Assy., Sub
8X-350	1	Washer, Plain Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
12X-194	4	Lockwasher, Condenser Mtg. & Lead Sc. #6
8X-1546	4	Screw, Condenser Mtg. & Lead Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
IGS-1100RA	1	Cam & Stop Plate, 6 Cyl., R.H.
IGS-1112R	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
**	1	Spring
VC-3147	1	VACUUM CHAMBER
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-196	4	Lockwasher, Vac. Chamber Mtg. Sc., #10
12X-199	1	Lockwasher, Advance Arm 1/4
8X-321	2	Screw, Vacuum Chamber Mtg., Rd. Hd. #10-32x5/16
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
8X-902	2	Screw, Vac. Bracket Mtg., Fill. Hd. #10-32x3/8
X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10

* Use as Required.

† See Manual Bulletin IG-11.

Unit	Plate Assy.	Plate, Breaker	Spring Set	Spring
IAP-4002-1	IAP-3004RA	IAP-1004RA (Mrkd. 7 †)	IGB-292SS	VC-73
IAP-4002A-1	IAP-3004RC	IAP-1004RC (Mrkd. 6 †)	IGB-292SS	VC-50
IAP-4002B-1	IAP-3004RD	IAP-3004RD (Mrkd. 9 †)	IG-636QS	VC-45

UNIT	APPLICATION
IAP-4002-1	Dodge (Truck), Dodge, Plymouth
IAP-4002A-1	DeSoto
IAP-4002B-1	Chrysler (6)

(Issued 11-14-49

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	Cap Assy., Dist.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAP-7	1	Gasket, Bracket to Base
IAP-23	1	Bracket, Vacuum Chamber
IAP-24	1	Gasket, Vacuum Chamber To Bracket
IAP-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-13	2	Bracket, Breaker Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IAP-9	2	Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
**	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
**	1	Plate, Breaker
IG-3927G	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028ES	1	Contact Set, Breaker
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1092RS	1	Plate Assy., Sub, Breaker
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
12X-194	4	Lockwasher, Cond. Mtg. & Lead Sc., #6
8X-1546	4	Screw, Cond. Mtg. & Lead, Fill. Hd. #6-32x5/32
IAR-8	1	Cover, Terminal Slot
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve

Part No.	No. Used	Name of Part
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1016B	1	Rotor
**	1	Cam & Stop, Plate, 6 Cyl. R.H.
IGS-1113R	1	Shaft, Drive
SW-213	1	Rivet, Collar, Drive Shaft
SW-634	1	Washer, Plain, Advance Arm Screw
VC-14	1	Gasket, 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer .032" Thick
VC-46A	*	Washer .010" Thick
VC-46B	*	Washer .065" Thick
**	1	Spring
VC-3147	1	Vacuum Chamber
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-321	2	Screw, Vacuum Chamber Mtg., Rd. Hd. #10-32x5/16
8X-902	4	Screw, Vac. Bracket & Breaker Plate Mtg., Fill. Hd. #10-32x3/8
X-1270	2	Washer, Vac. Bracket Mtg., Skpf. #10
12X-196	4	Lockwasher, Vacuum Chamber & Breaker Plate Mtg. Sc. #10
12X-199	1	Lockwasher, Advance Arm 1/4

* Use as required.

** See table following parts list for part number applying to assembly wanted.

UNIT	APPLICATION
IAP-4101-1	Plymouth
IAP-4101A-1	Dodge

Assembly No	Spring Set	Cam	Spring	Plate Assembly	Breaker Plate
IAP-4101-1	IGB-292SS	IGS-1100RW	VC-49	IAP-3004R (Identified by 10)	IAP-1004R
IAP-4101A-1	IG-636HS	IGS-1100RX	VC-50	IAP-3004RB (Identified by 8.5)	IAP-1004RB

(Issued 10-21-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAP-4102-1,A-1,B-1,C-1 DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact Plunger
IAO-20	1	Spring, Contact
IAP-7	1	Gasket, Bracket to Base
IAP-23	1	Bracket, Vacuum Chamber
IAP-24	1	Gasket, Vacuum Chamber to Bracket
IAP-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-13	2	Bracket, Breaker Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IAP-9	2	Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
**	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
**	1	Plate, Breaker
IG-3927G	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc. #6
IGP-3028ES	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1092RS	1	Plate Assy., Sub, Breaker
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock Breaker Contact, Fill. Hd. #8-32x3/16
12X-194	4	Lockwasher, Condenser Mtg. & Lead Screw, #6
8X-1546	4	Screw, Condenser Mtg. & Lead, Fill. Hd. #6-32x5/32
IAR-8	1	Cover, Terminal Slot
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
**	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
**	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1112R	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Adv. Arm Mtg. Screw
VC-14	1	Gasket, 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
VC-3147	1	VACUUM CHAMBER
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Washer, Advance Arm, Skpf. 1/4
12X-196	4	Lockwasher, Vac. Chamber Mtg. Sc. #10
8X-321	2	Screw, Vacuum Chamber Mtg., Rd. Hd. #10-32x5/16
8X-902	4	Screw, Vac. Bracket & Breaker Plate Mtg., Fill. Hd. #10-32x3/8
X-1270	2	Washer, Breaker Plate Mtg. Sc. Skpf. #10

* Use as required.

** See table following list for part number applying to assembly wanted.

(Continued on Reverse Side)

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAP-4102-1,A-1,B-1,C-1 DISTRIBUTOR PARTS (Continued)

Assembly No.	Plate Assy.	Breaker Plate	Spring Set	Cam	Spring
IAP-4102-1	IAP-3004RA	IAP-1004RA (Mrkd. 7)	IGB-292SS	IGS-1100RA	VC-73
IAP-4102A-1	IAP-3004RC	IAP-1004RC (Mrkd. 6)	IG-636NS	IGS-1100R	VC-50
IAP-4102B-1	IAP-3004RD	IAP-1004RD (Mrkd. 9)	IG-636QS	IGS-1100RA	VC-45
IAP-4102C-1	IAP-3004RD	IAP-1004RD (Mrkd. 9)	IGB-353BS	IGS-1100RX	VC-45

UNIT	APPLICATION
IAP-4102-1	DeSoto (Export) (Canada) Fargo(Truck), Dodge (Truck), Plymouth, Dodge
IAP-4102A-1	(Canada) DeSoto
IAP-4102B-1	(Canada) Chrysler (6)
IAP-4102C-1	Chrysler (6), DeSoto

(Issued 11-15-49)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAO-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAP-7	1	Gasket, Bracket to Base
IAP-23	1	Bracket, Vacuum Chamber
IAP-24	1	Gasket, Vacuum Chamber to Bracket
IAP-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-13	2	Bracket, Breaker Plate Mtg.
IAO-14	1	Bracket, Cap Spring
IAP-9	2	Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
**	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
**	1	Plate, Breaker
IG-3927G	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc.,#6
IGP-3028ES	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1092RS	1	Plate Assy., Sub. Breaker
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Breaker Cont., Fill. Hd. #8-32x3/16
12X-194	4	Lockwasher, Cond. Mtg. & Lead Sc., #6
8X-1546	4	Screw, Cond. Mtg. & Lead, Fill. Hd. #6-32x5/32
IAR-8	1	Cover, Terminal Slot
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor

Part No.	No. Used	Name of Part
**	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1016B	1	ROTOR
**	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1113R	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
VC-14	1	Gasket, 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
*	1	Spring
VC-3147	1	VACUUM CHAMBER
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-196	4	Lockwasher, Vac. Chamber Mtg. Sc., #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-321	2	Screw, Vacuum Chamber Mtg., Rd. Hd. #10-32x5/16
8X-902	4	Screw, Vac. Bracket & Breaker Plate Mtg., Fill. Hd. #10-32x3/8
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10

* Used as required.

** See table following parts list for part numbers applying to assembly wanted.

UNIT	APPLICATION
IAP-4103-1	Plymouth
IAP-4103A-1	Dodge, Plymouth

Assembly No.	Plate Assy.	Breaker Plate	Spring Set	Cam & Stop Plate	Spring
IAP-4103-1	IAP-3004R	IAP-1004R (Marked 10)	IGB-292SS	IGS-1100RW	VC-49 (Blue)
IAP-4103A-1	IAP-3004RE	IAP-1004RE (Marked 8)	IGB-353BS	IGS-1100RX	VC-119 (Cad. Pl.)

(Issued 11-18-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IAP-7	1	Gasket, Bracket to Base
IAP-24	1	Gasket, Vacuum Chamber to Bracket
IAR-8	1	Cover, Terminal Slot
IAR-23	1	Bracket, Vacuum Chamber
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAR-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-14	1	Bracket, Cap Spring
IAP-9	2	Spring, Cap
IAR-9	2	Bracket, Brkr. Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
IGS-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler, Press in Elbow, 1/4
IAR-3004R	1	Plate Assy., Breaker Identified by 8
IA-131	1	Clip, Spring, Contact Arm
IAR-1004R	1	Plate, Breaker
IG-3927F	1	CONDENSER
IGE-15	1	Washer, Plain, Clamp Sc.,#6
IGP-3028GS	1	CONTACT SET, BREAKER
IGS-52	1	Clip, Lead
IGT-11A	1	Lead Assy.
IGT-1048RS	1	Plate Assy., Sub, Breaker
IGT-52	1	Lead Assy.
8X-59	2	Screw, Contact Lock & Lead Rd. Hd. #8-32x3/16
12X-195	1	Lockwasher, Lead Sc. #8
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-323	1	Screw, Spring, Clamp, Rd. Hd. #6-32x5/16
X-194	3	Lockwasher, Condenser & Lead Sc., #6
8X-1546	3	Screw, Cond. Mtg. & Lead Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-199	1	Collar, Shaft, Dist.
**	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve

Part No.	No. Used	Name of Part
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGT-18	2	Clamp, Bearing, Sub Plate
IGT-70	1	Spring, Anti-Rattle
**	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-1072R	1	Shaft, Drive
SW-213	1	Rivet, Collar, Drive Shaft
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-14	1	Gasket 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-77	1	Spring
VC-3147	1	VACUUM CHAMBER
8X-86	1	Screw Advance Arm Hex. Hd. 1/4-20x5/8
12X-196	4	Lockwasher, Vac. Chamber & Breaker Plate Mtg. Sc. #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-321	2	Screw, Vacuum Chamber Mtg. Rd. Hd. #10-32x5/16
8X-902	4	Screw, Vacuum Bracket & Breaker Plate Mtg., Fill. Hd. #10-32x3/8
X-1270	2	Washer, Vac. Bracket Mtg., Skpf.

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Unit	Spring Set	Cam & Stop Plate
IAR-4101-1	IGB-208CS	IGT-1021RN
IAR-4101A-1	IGB-292SS	IGT-1021R

UNIT	APPLICATION
IAR-4101-1	
IAR-4101A-1	Chrysler (8)

(Issued 10-20-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAT-4000 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IAT-4001	6	Studebaker
IAT-4002	6	Hudson
IAT-4003	6	Dodge, Plymouth
IAT-4003A	6	Dodge Truck
IAT-4003B	6	Plymouth (Export)
IAT-4004	6	Chrysler, DeSoto
IAT-4004A	6	Dodge, Plymouth (Canada)
IAT-4004B	6	DeSoto (Canada)
IAT-4004C	6	Chrysler (Canada)
IAT-4005	6	Nash (Canada)
IAT-4006	4	Aktiebologet Volvo (Export)
IAT-4007	6	Willys, Henry J., Allstate
IAT-4007A	6	Willys
IAT-4008	4	Willys
IAT-4008A	4	Henry J., Allstate
IAT-4008B	4	Willys
IAT-4009	6	Hudson
IAT-4009A	6	Hudson
IAT-4009B	6	Hudson
IAT-4010	6	Studebaker
IAT-4011	6	Dodge, Plymouth
IAT-4011A	6	Dodge Truck
IAT-4011B	6	Plymouth (Export)
IAT-4012	6	Chrysler, DeSoto
IAT-4012A	6	Dodge, Plymouth (Canada)
IAT-4012B	6	DeSoto (Canada)
IAT-4012C	6	Chrysler (Canada)
IAT-4012D	6	Dodge, Plymouth (Canada)
IAT-4013	6	Nash (Canada)
IAT-4014	6	Plymouth
IAT-4015	6	Nash (Canada)
IAT-4016	6	Hudson
IAT-4017	6	Willys
IAT-4017A	6	Willys
IAT-4018	6	Aktiebologet Volvo (Export)
IAT-4019	6	Willys

Printed in U. S. A.

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

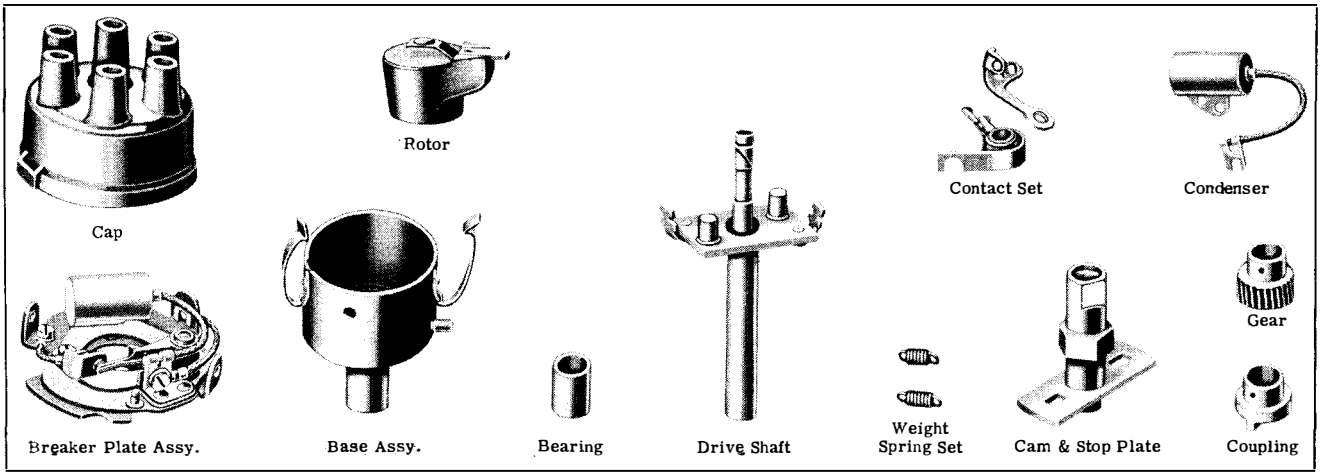
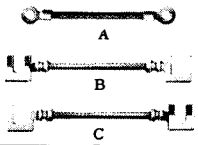

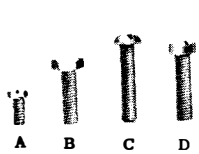




ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IAT-4001	IAT-1003	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2001	IG-579A	IAT-1002L	IGB-337S	IGS-1100LAB	- - -
IAT-4002	IAT-1003	IAT-1016	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2032	IG-579A	IGS-1183RA	IG-636XS	IGS-1100RAJ	- - -
IAT-4003	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RB	IGB-353BS	IGS-1100RAJ	- - -
IAT-4003A	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RB	IGB-292SS	IGS-1100RAD	- - -
IAT-4003B	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RB	IGB-292SS	IGS-1100RAD	- - -
IAT-4004	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RB	IGB-353BS	IGS-1100RAJ	- - -
IAT-4004A	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RB	IGB-292SS	IGS-1100RAM	- - -
IAT-4004B	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RB	IG-636NS	IGS-1100RL	- - -
IAT-4004C	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RB	IG-636QS	IGS-1100RAM	- - -
IAT-4005	IAT-1003	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2038	IG-579A	IGS-1203L	IGB-327FS	IGS-1100LAC	- - -
IAT-4006	IAT-1041	IAT-1016	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2040	IG-579A	IGS-1053RC	IGC-42KS	IGC-1132RL	IG-644A
IAT-4007	IAT-1003	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046	IG-579A	IGS-1206L	IGB-336BS	IGS-1100LAD	- - -
IAT-4007A	IAT-1003	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046A	IG-579A	IGS-1206LA	IGE-24S	IGS-1100LAF	- - -
IAT-4008	IAT-1041	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046	IG-579A	IGS-1134LB	IGB-358BS	IGC-1132LD	- - -
IAT-4008A	IAT-1041	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046A	IG-579A	IGS-1134LB	IGC-78S	IGC-1132LD	- - -
IAT-4008B	IAT-1041	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046	IG-579A	IGS-1134LB	IGC-119S	IGC-1132LD	- - -
IAT-4009	IAT-1033	IAT-1016A	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2045	IG-579A	IGS-1183RB	IG-636XS	IGS-1100RAJ	- - -
IAT-4009A	IAT-1033	IAT-1016A	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2045A	IG-579A	IGS-1183RB	IGB-339S	IGS-1100RAD	- - -
IAT-4009B	IAT-1033	IAT-1016A	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2045B	IG-579A	IGS-1183RB	IGB-339S	IGS-1100RAD	- - -
IAT-4010	IAT-1033	IAU-1016A	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2001	IG-579A	IAT-1002L	IGB-337S	IGS-1100LAB	- - -
IAT-4011	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RD	IGB-353BS	IGS-1100RAJ	- - -
IAT-4011A	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RD	IGB-292SS	IGS-1100RAD	- - -
IAT-4011B	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RD	IGB-292SS	IGS-1100RAD	- - -
IAT-4012	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RD	IGB-353BS	IGS-1100RAJ	- - -
IAT-4012A	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RD	IGB-292SS	IGS-1100RAM	- - -
IAT-4012B	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RD	IG-636NS	IGS-1100RL	- - -
IAT-4012C	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1112RD	IG-636QS	IGS-1100RAM	- - -
IAT-4012D	IAT-1033	IAU-1016A	IGW-3028BS	IAT-2015RA	IAT-2004RD	IAT-2035	IG-579A	IGS-1112RD	IGB-208CS	IGS-1100RAJ	- - -
IAT-4013	IAT-1003	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2038	IG-579A	IGS-1203L	IGB-327FS	IGS-1100LAC	- - -
IAT-4014	IAT-1033	IAU-1016A	IGW-3028BS	IAT-3076RA	IAT-2004RA	IAT-2035	IG-579A	IGS-1113RD	IGB-353BS	IGS-1100R-4	- - -
IAT-4015	IAT-1003	IAT-1016	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2038	IG-579A	IAT-1054L	IGB-327FS	IGS-1100LAC	- - -
IAT-4016	IAT-1033	IAT-1016A	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2045	IG-579A	IGS-1212R	IGB-328PS	IGS-1100RT	- - -
IAT-4017	IAT-1033	IAU-1016A	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046	IG-579A	IGS-1206LB	IGB-336BS	IGS-1100LAD	- - -
IAT-4017A	IAT-1033	IAU-1016A	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2046A	IG-579A	IGS-1206LC	IGE-24S	IGS-1100LAF	- - -
IAT-4018	IAT-1033	IAT-1016A	IGW-3028BS	IAT-3076R	IAT-2004R	IAT-2045C	IG-579A	IAT-1056R	IGB-329AS	IGS-1100RAW	IG-644A
IAT-4019	IAT-1033	IAT-1016A	IGW-3028AS	IAT-3076L	IAT-2004L	IAT-2058	IG-579A	IGS-1053LE	IGB-358CS	IGS-1100LAH	IG-644A

MISCELLANEOUS PARTS

Name	Part No.	No. Used	Used On
 ARM, ADVANCE	IAT-20	1	IAT-4001, IAT-4010
	IAT-39	1	IAT-4005, IAT-4013, IAT-4015
	IAT-42	1	IAT-4006, IAT-4018
	IAT-43	1	IAT-4007, A, IAT-4017, A
	IAT-44	1	IAT-4008, A, B
	IGS-114	1	IAT-4002 Thru IAT-4004C, IAT-4009, A, B, IAT-4011, A, B, IAT-4012, A, B, C, D, IAT-4014, IAT-4016
	IGS-169	1	IAT-4019
 BUSHING INSULATING TERMINAL STUD	IAT-7	1	All
 A B COLLARS			
(A) Dist. Shaft	IGB-199	1	IAT-4001, IAT-4007, A, IAT-4008, A, B, IAT-4010, IAT-4017, A
(B) Dist. Shaft	IGS-19S	1	IAT-4002 Thru IAT-4005, IAT-4009, A, B, IAT-4011 Thru IAT-4016
 CONTACT, DIST. CAP PLUNGER	IAO-7	1	IAT-4003 Thru IAT-4004C, IAT-4009, A, B, IAT-4010, IAT-4011, A, B, IAT-4012, A, B, C, D, IAT-4014, IAT-4016, IAT-4017, A, IAT-4018, IAT-4019
 A B GASKET			
(A) Vacuum Chamber (1/32" Thick)	IAT-30	1	IAT-4001, IAT-4005, IAT-4007, A, IAT-4008, A, B, IAT-4009 Thru IAT-4017A, IAT-4019
(B) Vacuum Chamber (1/32" Thick)	VC-14	1	IAT-4002 Thru IAT-4004C, IAT-4006, IAT-4018
 HOUSING, TERMINAL	XA-772	1	IAT-4001, IAT-4010
 INSULATION, TERMINAL STUD (Inner)	IAT-6	1	All
 A B C LEADS			
(A) Ground, Breaker Plate	IAT-14	1	All
(B) Primary, Breaker Plate	IAT-24L	1	IAT-4001, IAT-4005, IAT-4007, A, IAT-4008, A, B, IAT-4010 IAT-4013, IAT-4015, IAT-4017, A, IAT-4019
(C) Primary, Breaker Plate	IAT-24R	1	IAT-4002 Thru IAT-4004C, IAT-4006, IAT-4009, A, B, IAT-4011 Thru IAT-4012D, IAT-4014, IAT-4016, IAT-4018
 A B C D LOCKWASHERS			
(A) Arm, Advance (1/4)	12X-199	1	All
(C) Breaker Plate Sc., & Lead Assy. #8	12X-195	3	All
(D) Condenser Mtg. (#6)	12X-194	1	All
(B) Stud, Terminal (#10)	12X-196	2	All
 NUTS			
Term. Stud (Hex. #10-32)	8X-173	2	All
 OILERS			
Elbow	X-1590	1	All
 "O" RING	XA-744W	1	IAT-4007, A, IAT-4008, A, B, IAT-4017, A
 PLATE, BREAKER	IAT-2004LS	1	IAT-4001, IAT-4005, IAT-4007, A, IAT-4008, A, B, IAT-4010, IAT-4013, IAT-4015, IAT-4017, A, IAT-4019
	IAT-2004RS	1	IAT-4002 Thru IAT-4004C, IAT-4006, IAT-4009, A, B, IAT-4011 Thru IAT-4012C, IAT-4014, IAT-4016, IAT-4018
	IAT-2004RCS	1	IAT-4012D
 A B PLUGS			
(A) Vacuum Chamber	IAT-29	1	IAT-4001, IAT-4005, IAT-4007 Thru IAT-4012D, IAT-4017A, IAT-4019
(B) Vacuum Chamber	VC-15	1	IAT-4002 Thru IAT-4004C, IAT-4006, IAT-4018
 POINTER, ADVANCE ARM	IGS-115	1	IAT-4002, IAT-4009, A, B, IAT-4016
 RETAINER, OIL SEAL	IGW-179	1	IAT-4005, IAT-4013, IAT-4015
 A B RINGS			
(A) Lock	IGS-17	1	All
(B) Snap, Cam Retaining	IG-680	1	All
RIVETS			
Collar or Coupling	SW-213	1	All
 A B C D SCREWS			
(B) Advance Arm (Hex. Hd. 1/4-20x5/8)	8X-86	1	All
(C) Breaker Plate Mtg. (Rd. Hd. #8-32x5/16)	8X-304	2	All
(A) Clamp Spring (#6-32x3/16)	IGC-175A	1	All
(D) Condenser Mtg. (#6-32x5/32)	8X-1546	1	All
(D) Contact Lead (Fill Hd. #8-32x3/16)	8X-884	1	All
(D) Contact Lead (Fill. Hd. #8-32x1/4)	8X-3027	1	All
(D) Vacuum Chamber Mtg. (Fill. Hd. #10-32x1/4)	8X-872	2	All
 SEAL, OIL	XA-724	1	IAT-4005, IAT-4013, IAT-4015
 A B SPACERS			
(A) Cam	IGS-99	1	All
(B) Vacuum Chamber Spring	VC-164	1	IAT-4009A
(B) Vacuum Chamber Spring	IAT-49	1	IAT-4009B

MISCELLANEOUS PARTS (Continued)

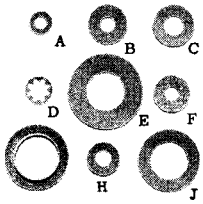	Name	Part No.	No. Used	Used On
 A	SPRINGS			
	(A) Anti-Rattle	IGT-69	1	IAT-4001, IAT-4005, IAT-4008, A, B, IAT-4010, IAT-4013, IAT-4015, IAT-4019
	(A) Anti-Rattle	IGT-70	1	IAT-4006, IAT-4012D, IAT-4016, IAT-4018
 B	(C) Contact, Dist. Cap	IAO-20	1	IAT-4003 Thru IAT-4004C, IAT-4009 Thru IAT-4012C, IAT-4014, IAT-4016, IAT-4017, A, IAT-4018, IAT-4019
	(D) Friction Spring	IAT-55	1	IAT-4007, A, IAT-4008, A, B, IAT-4017, A
	(B) Vacuum Chamber	VC-45	1	IAT-4003, B, IAT-4008A, IAT-4011, B, IAT-4014, IAT-4015, IAT-4018
 C	(B) Vacuum Chamber	VC-49	1	IAT-4001, IAT-4003A, IAT-4010, IAT-4011A
	(B) Vacuum Chamber	VC-55	1	IAT-4008, IAT-4019
	(B) Vacuum Chamber	VC-73	1	IAT-4004A, B, IAT-4012A, B
	(B) Vacuum Chamber	VC-76	1	IAT-4004, C, IAT-4012, C
 D	(B) Vacuum Chamber	VC-77	1	IAT-4005, IAT-4006, IAT-4007A, IAT-4008B, IAT-4013, IAT-4017A
	(B) Vacuum Chamber	VC-92	1	IAT-4007, IAT-4017
	(B) Vacuum Chamber	VC-156	1	IAT-4002, IAT-4009
	(B) Vacuum Chamber	VC-144	1	IAT-4009A, B
	(B) Vacuum Chamber	IAT-149	1	IAT-4016
	SPRING & HINGE, CLAMP CAP	IGB-1007	2	All
 A B	TERMINALS			
	(A) Terminal	X-3012	1	All
	(B) Terminal	XA-773	1	IAT-4001, IAT-4010
	VACUUM CHAMBER	IAT-2023LD	1	IAT-4008, IAT-4019
		IAT-2023LE	1	IAT-4007, A, IAT-4008B, IAT-4017, A
		IAT-2023LJ	1	IAT-4001, IAT-4010
		IAT-2023LK	1	IAT-4008A
		IAT-2023LL	1	IAT-4015
		IAT-2023LM	1	IAT-4005, IAT-4013
		IAT-2023RD	1	IAT-4002, IAT-4009
		IAT-2023RE	1	IAT-4004B, IAT-4012B
		IAT-2023RF	1	IAT-4004A, IAT-4012A
		IAT-2023RG	1	IAT-4003, B, IAT-4011, B, IAT-4014
		IAT-2023RJ	1	IAT-4004, C, IAT-4012, C
		IAT-2023RK	1	IAT-4003A, IAT-4011A, IAT-4012D, IAT-4018
		IAT-2023RM	1	IAT-4006, IAT-4016
		IAT-2023RN	1	IAT-4009A, B
 A B C D E F H J	WASHERS			
	(C) Advance Arm Mtg. Sc. Plain	SW-634	1	All Except IAT-4007, A
	(A) Contact Lead	SSB-38	1	All
	(F) Insulating, Terminal Stud	IGL-9A	1	All
	(A) Spring, Clamp Screw (Plain #6)	IGE-15	1	All
	(H) Terminal Stud (Plain #10)	8X-183A	1	All
	(G) Thrust, Inner, Drive Shaft (Upper)	IAO-10	1	All
	(G) Thrust, Outer, Drive Shaft (Upper)	IAO-11	1	All
	(J) Thrust, Drive Shaft (Lower)	IG-90	1	All Except IAT-4005 & IAT-4013
	(J) Thrust, Drive Shaft (Lower)	IG-90A	1	IAT-4006, IAT-4018
	(E) Thrust, Drive Shaft (Lower)	IG-313	1	IAT-4005, IAT-4013, IAT-4015
	(B) Vacuum Chamber (.032" Thick)	VC-46	*	All
	(B) Vacuum Chamber (.010" Thick)	VC-46A	*	All
	(B) Vacuum Chamber (.065" Thick)	VC-46B	*	All
	(D) Vacuum Chamber Mtg. (Skpf. #10)	X-1270	2	All
	WEIGHT, GOVERNOR	IG-1456	2	IAT-4002 Thru IAT-4004C, IAT-4006
		IG-2456	2	IAT-4005, IAT-4007, A, IAT-4008, A, B, IAT-4013, IAT-4015
		IGC-2168L	2	IAT-4001, IAT-4010, IAT-4017, A, IAT-4019
		IGC-2168R	2	IAT-4009, A, B, IAT-4011 Thru IAT-4012C, D, IAT-4014, IAT-4016, IAT-4018
 A B	WICKS			
	(B) Felt, Cam Sleeve	IGH-28	1	All
	(A) Felt, Oiler	IGS-117	1	IAT-4001, IAT-4002, IAT-4005 Thru IAT-4010, IAT-4013, IAT-4015, IAT-4016, IAT-4017, A, IAT-4018
	(A) Felt, Oiler	IGT-117	1	IAT-4003, Thru IAT-4004C, IAT-4011 Thru IAT-4012D, IAT-4014, IAT-4019

* USE AS REQUIRED.

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, Vacuum Plug, 1/32'' Thick
IAT-52	1	Cover, Terminal Slot
IAT-1033	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-2023RG	1	VACUUM CHAMBER
IAT-2035A	1	Base Assy., Distributor
IG-579A	2	Bearing, Abs. Bronze
IAT-2050R	1	Plate Assy., Breaker
IAT-51	1	Lead Assy., Primary
IAT-2050RS	1	Plate, Breaker
IAT-3076RA	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	2	Lockwasher, Condenser Mtg. & Lead Screw, #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	2	Screw, Condenser Mtg.. & Lead, Fill. Hd. #6-32x5/32
IAU-1016A	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft Lower
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
**	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1113RD	1	Shaft, Drive
IGT-117	1	Wick, Felt
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
**	1	Spring, Vacuum Chamber
VC-46	*	Washer, Vacuum Chamber .032'' Thick
VC-46A	*	Washer, Vacuum Chamber .010'' Thick
VC-46B	*	Washer, Vacuum Chamber .065'' Thick
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg., Sc., Skpf. #10
X-1590	1	Oiler

* Used as required.

** See table following parts lists for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Spring, Vac. Chamber
IAT-4101	IGS-1100RAJ	IGB-353BS	VC-45
IAT-4101A	IGS-1100RAD	IGB-292SS	VC-45
IAT-4101B	IGS-1100RQ	IG-913S	VC-167
IAT-4101C	IGS-1100RAD	IGB-353BS	VC-45

UNIT	APPLICATION
IAT-4101	Dodge (6), Plymouth
IAT-4101A	Dodge (6) (Export), Plymouth (Export)
IAT-4101B	Dodge (6)
IAT-4101C	Chrys. Ind., Dodge Tr.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, Vac. Plug, 1/32" Thick
IAT-52	1	Cover, Terminal Slot
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-2023RJ	1	VACUUM CHAMBER
IAT-2035A	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IAT-2050R	1	Plate Assy., Breaker
IAT-51	1	Lead Assy., Primary
IAT-2050RS	1	Plate, Breaker
IAT-3076RA	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	2	Lockwasher, Condenser Mtg. & Lead Sc., #6
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	2	Screw, Condenser Mtg. & Lead, Fill. Hd. #6-32x5/32
IAU-1016A	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-353BS	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1100RAJ	1	Cam & Stop Plate, 6 Cyl. R.H.
IGS-1112RD	1	Shaft, Drive
IGT-117	1	Wick, Felt
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
VC-46	*	Washer, Vacuum Chamber .032" Thick
VC-46A	*	Washer, Vacuum Chamber .010" Thick
VC-46B	*	Washer, Vacuum Chamber .065" Thick
VC-76	1	Spring
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
X-1590	1	Oiler

* Use as required.

UNIT	APPLICATION
IAT-4102	Chrysler (6), De Soto (6)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAT-4103 DISTRIBUTOR PARTS LIST

IAT-4103
(Issued 3-27-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, Vacuum Plug, 1/32" Thick
IAT-52	1	Cover, Terminal Slot
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-2023RG	1	Vacuum Chamber
IAT-2035A	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IAT-2050RB	1	Plate Assy., Breaker
IAT-51	1	Lead Assy., Primary
IAT-2015RA	1	CONDENSER
IAT-2050RS	1	Plate, Breaker
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	2	Lockwasher, Condenser Mtg. & Lead Sc., #6
8X-884	1	Screw, Lock, Breaker Cont. Fill. Hd. #8-32x3/16
8X-1546	2	Screw, Condenser Mtg. & Lead, Fill. Hd. #6-32x5/32
IAU-1016A	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-329S	1	SPRING SET, GOV. WEIGHT
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1100RQ	1	Cam & Stop Plate, 6 Cyl. R. H.
IGS-1113RD	1	Shaft, Drive
IGT-117	1	Wick, Felt
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
VC-46	*	Washer, Vacuum Chamber, .032" Thick
VC-46A	*	Washer, Vacuum Chamber, .010" Thick
VC-46B	*	Washer, Vacuum Chamber, .065" Thick
VC-167	1	Spring, Vacuum Chamber
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc. Skpf. #10
X-1590	1	Oiler
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IAT-4103	Dodge 6, Dodge Truck, Plymouth 6

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IAT-4201 DISTRIBUTOR PARTS LIST

IAT-4201
(Issued 9-7-54)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-20	1	Advance Arm
IAT-29	1	Plug
IAT-30	1	Gasket, 1/32" Thick
IAT-1033	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-1002L	1	Shaft, Drive
IAT-1060L	1	Cam & Stop Plate, 6 Cyl. L.H.
IAT-2004LB	1	Plate Assembly, Breaker
IAT-24L	1	Lead Assembly, Primary
IAT-2004LBS	1	Plate, Breaker
IAT-2015L	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028AS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Contact Lock Sc.
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-2023LJ	1	VACUUM CHAMBER
IAT-2057	1	Base Assembly, Distributor
IG-579A	2	Bearing, Abs. Bronze
IAU-1016A	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGB-337S	1	SPRING SET, GOVERNOR WEIGHT
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-117	1	Wick, Felt
IGT-69	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-46	*	Washer .032" Thick
VC-46A	*	Washer .010" Thick
VC-46B	*	Washer .065" Thick
VC-49	1	Spring
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	2	Lockwasher, Breaker Plate Screw, #8
12X-196	2	Lockwasher, Terminal Stud, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill Hd. #10-32x1/4
X-1270	2	Washer, Vac Chamber Mtg. Screw, Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary
XA-772	1	Housing, Terminal
XA-773	1	Terminal

* Use as required.

UNIT	APPLICATION
IAT-4201	Studebaker, Studebaker Truck

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAT-4202 DISTRIBUTOR PARTS LIST

IAT-4202
(Issued 10-20-55)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-29	1	Plug
IAT-30	1	Gasket, 1/32" Thick
IAT-1016A	1	ROTOR
IAT-1033	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-1060R	1	Cam & Stop Plate, 6 Cyl. R.H.
IAT-2004RC	1	Plate Assembly, Breaker
IAT-24R	1	Lead Assembly, Primary
IAT-2004RCS	1	Plate, Breaker
IAT-2015R	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028BS	1	Contact Set, Breaker
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg., #6
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-2023RM	1	VACUUM CHAMBER
IAT-2045	1	Base Assembly, Distributor
IG-579A	2	Bearing, Abs. Bronze
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-884BS	1	SPRING SET, GOVERNOR WEIGHT
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-117	1	Wick, Felt
IGS-1212R	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-149	1	Spring
8X-86	1	Screw, Advance Arm. Hex. Hd. 1/4-20x5/8
8X-173	1	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	2	Lockwasher, Breaker Plate Screw #8
12X-196	1	Lockwasher, Terminal Stud, #10
12X-199	1	Lockwasher, Advance Arm 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg. Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary

* Use as required.

UNIT	APPLICATION
IAT-4202	Hudson

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAT-4203, A DISTRIBUTOR PARTS LIST

IAT-4203, A
(Issued 10-20-55)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-29	1	Plug
IAT-30	1	Gasket, 1/32" Thick
**	1	Spacer
IAT-1016A	1	ROTOR
IAT-1033	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
**	1	Cam & Stop Plate, 6 Cyl. R. H.
IAT-2004RC	1	Plate Assembly, Breaker
IAT-24R	1	Lead Assembly, Primary
IAT-2004RCS	1	Plate, Breaker
IAT-2015R	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
**	1	Base Assembly, Distributor
IG-579A	2	Bearing, Abs. Bronze
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOVERNOR WEIGHT
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-117	1	Wick, Felt
IGS-1183RB	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-173	1	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	2	Lockwasher, Breaker Plate Screw, #8
12X-196	1	Lockwasher, Terminal Stud, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Spacer	Cam & Stop Plate	Vacuum Chamber	Base Assembly	Spring Set, Gov. Weight	Spring
IAT-4203	None	IAT-1060RA	IAT-2023RD	IAT-2045	IG-636XS	VC-156
IAT-4203A	IAT-49	IAT-1060RB	IAT-2023RN	IAT-2045B	IGB-339S	VC-144

UNIT	APPLICATION
IAT-4203, A	Hudson

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAT-4204, A DISTRIBUTOR PARTS LIST

IAT-4204, A
(Issued 9-7-54)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-29	1	Plug
IAT-30	1	Gasket, 1/32" Thick
IAT-44	1	Arm, Advance
IAT-55	1	Friction Spring
IAT-1016	1	ROTOR
IAT-1041	1	CAP ASSY., DISTRIBUTOR
IAT-2004LB	1	Plate Assembly, Breaker
IAT-24L	1	Lead Assembly, Primary
IAT-2004LBS	1	Plate, Breaker
IAT-2015L	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028AS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
IAT-2046	1	Base Assembly, Distributor
IG-579A	2	Bearing, Abs. Bronze
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-2456	2	Weight, Governor
IGB-199	1	Collar, Shaft, Distributor
**	1	SPRING SET, GOVERNOR WEIGHT
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-1132LD	1	Cam & Stop Plate, 4 Cyl. L. H.
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud Outer
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-117	1	Wick, Felt
IGS-1134LB	1	Shaft, Drive
IGT-69	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mounting Screw
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	2	Lockwasher, Breaker Plate Mounting Screw, #8
12X-196	2	Lockwasher, Terminal Stud, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary
XA-744W	1	Seal, "O" Ring, Distributor Base, 1 1/16" O. D.

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Vacuum Chamber	Spring Set Gov. Weight	Spring
IAT-4204	IAT-2023LD	IGB-358BS	VC-55
IAT-4204A	IAT-2023LE	IG-884S	VC-77

UNIT	APPLICATION
IAT-4204, A	Willys

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAT-4205, A DISTRIBUTOR PARTS LIST

IAT-4205, A
(Issued 9-7-54)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32" Thick
IAT-43	1	Arm, Advance
IAT-55	1	Friction Spring
IAT-1033	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
**	1	Cam & Stop Plate, 6 Cyl. L. H.
IAT-2004LB	1	Plate Assy., Breaker
IAT-24L	1	Lead Assy., Primary
IAT-2004LBS	1	Plate, Breaker
IAT-2015L	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028AS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-2023LE	1	VACUUM CHAMBER
**	1	Base Assembly, Distributor
IG-579A	2	Bearing, Abs. Bronze
IAU-1016A	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGB-1007	2	Spring & Hinge, Clamp, Cap
**	1	SPRING SET, GOVERNOR WEIGHT
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-117	1	Wick, Felt
**	1	Shaft, Drive
SW-213	1	Rivet, Collar
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	2	Lockwasher, Breaker Plate Screw, #8
12X-196	2	Lockwasher, Term. Stud, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary
XA-744W	1	Seal, "O" Ring, Dist. Base, 1/16" O.D.

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Cam & Stop Plate	Base Assembly	Spring Set, Gov. Weight	Shaft, Drive	Vacuum Spring
IAT-4205	IAT-1060LA	IAT-2046	IGB-336BS	IGS-1206LB	VC-92
IAT-4205A	IAT-1060LB	IAT-2046A	IGE-24S	IGS-1206LC	VC-77

UNIT	APPLICATION
IAT-4205, A	Willys

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAT-4206, A, B DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
**	1	Spacer
IAT-1016A	1	ROTOR
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-2004LB	1	Plate Assy., Breaker
IAT-24L	1	Lead Assy., Primary
IAT-2004LBS	1	Plate, Breaker
IAT-2015L	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw #6
IGW-3028AS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-2023LD	1	VACUUM CHAMBER
**	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-169	1	Arm, Advance
IGS-1053LE	1	Shaft, Drive
**	1	Cam & Stop Plate, 6 Cyl. L.H.
IGT-69	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
**	1	Gasket, 1/32'' Thick
**	1	Plug
VC-46	*	Washer, Vacuum Chamber, .032'' Thick
VC-46A	*	Washer, Vacuum Chamber, .010'' Thick
VC-46B	*	Washer, Vacuum Chamber, .065'' Thick
VC-55	1	Spring
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary
XA-839	1	Pin, Coupling

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Spacer	Base Assy.	Spring Set Gov. Weight	Cam & Stop Plate	Gasket	Plug
IAT-4206	IAT-49	IAT-2058	IGB-358CS	IGS-1100LAH	VC-14	VC-15
IAT-4206A	None	IAT-2058A	IGC-201S	IGS-1100LAJ	IAT-30	IAT-29
IAT-4206B	IAT-49	IAT-2058A	IGB-329BS	IGS-1100LAK	VC-14	VC-15

UNIT	APPLICATION
IAT-4206	Kaiser
IAT-4206A	Kaiser
IAT-4206B	Willys

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-29	1	Plug
IAT-30	1	Gasket, 1/32" Thick
IAT-39	1	Arm, Advance
IAT-1033	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-1054LA	1	Shaft, Drive
IAT-1060LE	1	Cam & Stop Plate, 6 Cyl. L. H.
IAT-2004LB	1	Plate Assy., Breaker
IAT-24L	1	Lead Assy., Primary
IAT-2004LBS	1	Plate, Breaker
IAT-2015L	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Screw, #6
IGW-3028AS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-2023LL	1	VACUUM CHAMBER
IAT-2038	1	Base Assy., Distributor
IG-579A	2	BEARING, ABS. BRONZE
IGW-179	1	Retainer, Oil Seal
XA-724	1	Oil Seal
IAU-1016A	1	Rotor
IG-313	1	Washer, Thrust, Lower
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGT-69	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
SW-213	1	Rivet, Collar
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-45	1	Spring
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	2	Lockwasher, Breaker Plate Screw, #8
12X-196	2	Lockwasher, Terminal Stud, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Spring Set
IAT-4207	IGB-328HS
IAT-4207A	IGB-327FS

UNIT	APPLICATION
IAT-4207, A	Nash (Canada)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAT-4301 DISTRIBUTOR PARTS LIST

IAT-4301
(Issued 10-25-55)

Part No	No. Used	Name of Part
GE-106	1	Gear
IAT-6	1	Insulation, Terminal
IAT-7	1	Insulation, Bushing
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32" Thick
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-1069R	1	Shaft, Drive
IAT-2004RC	1	Plate Assy., Breaker
IAT-24R	1	Lead Assy., Primary
IAT-2004RCS	1	Plate, Breaker
IAT-2015R	1	CONDENSER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Sc., #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	1	Lockwasher, Condenser Mtg., #6
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-2023RE	1	VACUUM CHAMBER
IAT-2070	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IAU-1016A	1	ROTOR
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-775BS	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Cap Clamp
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGL-9A	1	Washer, Ins., Term. Stud, Outer
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-1100RT	1	Cam & Stop Plate, 6 Cyl. R.H.
IGT-70	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt

Part No.	No. Used	Name of Part
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-77	1	Spring
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
X-1590	1	Oiler
X-3012	1	Stud, Terminal, Primary
XA-839	1	Pin, Gear

* Use as required.

UNIT	APPLICATION
IAT-4301	Nash (6)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IAU-4016UT DISTRIBUTOR PARTS LIST

IAU-4016UT
(Issued 1-11-56)

Part No.	No. Used	Name of Part
CY-4002	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-24	1	Lead Assy., Breaker Spring Clamp
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	6	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-62	1	Seal, Receptacle
IAU-1004	1	Plate, Breaker
IAU-1066	1	ROTOR
IAU-1071	1	Capacitor, Dist. Primary
IAU-3076L	1	CONDENSER
IBC-34	1	Cover, Dist. Cap
IBC-1027R	1	Shaft, Drive
IBC-1035	1	CAP ASSY., DIST.
IBC-2001B	1	Base Assy., Dist.
IAH-13	1	Washer, Thrust, Adaptor
IAU-10	1	Washer, Drive Shaft Seal
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IBC-1007	1	Adaptor
IG-579A	2	BEARING, ABS. BRONZE
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4
XA-751	1	Seal, Shaft
IBF-9	1	Receptacle
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-676	1	Clip, Breaker Arm Spring
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	SPRING SET, GOV. WEIGHT
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028FS	1	CONTACT SET, BREAKER
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
SW-213	1	Rivet, Collar
12X-194	1	Lockwasher, Breaker Spring Clamp Sc., #6
12X-196	2	Lockwasher, Coil Terminal, #10
X-865A	1	Plug, Pipe, 1/8
X-1270	6	Washer, Cover Sc., Skpf. #10
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Brkt., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
X-3123	4	Screw, Receptacle Mtg., Fill. Hd. #6-32x15/32
X-3194	6	Screw, Cover Mtg., Hex. Socket Hd. #10-32x 5/8
XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
XA-744P	2	Seal, "O" Ring, Cover Plug & Receptacle Mtg., 3/4"O. D.

UNIT	APPLICATION
IAU-4016UT	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAX-2001M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp Cap
IAO-14M	1	Bracket, Cap Spring & Locating
IAR-9M	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
IGT-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular
IAX-2046M	1	Plate Assy., Breaker
IAX-1046M	1	Plate, Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clip, Spring, Contact Arm
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Lock, Breaker Contact, #8-32x3/16
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-199	1	Collar, Shaft, Dist.
IGC-200S	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGT-70	1	Spring, Anti-Rattle
IGT-1021RB-1	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-1072RF	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634B	1	Washer, Plain, Advance, Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg. Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAX-4001-1M	Chrysler (Marine)

(Issued 9-14-50)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAX-2012M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp, Cap
IAO-14M	1	Bracket, Cap Spring & Locating
IAR-9M	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2943	4	Rivet, Tubular
IAX-2046M	1	Plate Assy., Breaker
IAX-1046M	1	Plate, Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clip, Spring, Contact Arm
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Lock, Breaker Contact, #8-32x3/16
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-199	1	Collar, Shaft, Dist.
IGC-200S	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-148	1	Shaft, Drive, Tachometer
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGT-70	1	Spring, Anti-Rattle
IGT-1021RB-1	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-1025RD	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAX-4002-1M	Chrysler (Marine)

(Issued 9-19-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAX-2013M	1	Base Assy., Dist.
IAD-14A	1	Bracket, Cap Spring
IAO-9M	2	Spring, Clamp, Cap
IAO-14M	1	Bracket, Cap Spring & Locating
IAR-9M	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular
IAX-2046M	1	Plate Assy., Breaker
IAX-1046M	1	Plate, Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clip, Spring, Contact Arm
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Lock, Breaker Contact, #8-32x3/16
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-199	1	Collar, Shaft, Dist.
IGC-200S	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-38	1	Cover, Housing, Tach. Shaft.
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive, Tachometer
IGT-70	1	Spring, Anti-Rattle
IGT-1021RB-1	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-1025RD	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAX-4003-1M	Chrysler (Marine)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAX-4004-1M DISTRIBUTOR PARTS LIST

IAX-4004-1M
(Issued 1-30-52)

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAX-2013M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IAR-9M	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease
X-2872	4	Rivet, Tubular
IAX-2046M	1	Plate Assy., Breaker
IAX-1046M	1	Plate, Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clamp, Spring, Contact Arm
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Lock, Breaker Contact, #8-32x3/16
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-200S	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGS-148	1	Shaft, Drive, Tachometer
IGT-70	1	Spring, Anti-Rattle
IGT-1021RB-1	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-1025RE	1	Shaft, Drive
SW-213	2	Rivet, Gear & Collar
SW-634B	1	Washer, Plain, Advance Arm, Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-1270	2	Washer, Breaker Plate Mtg. Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAX-4004-1M	Chrysler Industrial, Chrysler Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAX-2001M	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IAR-9M	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
IGT-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular
IAX-2046M	1	Plate Assy., Breaker
IAX-1046M	1	Plate, Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clamp, Spring, Contact Arm
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Lock, Breaker Contact, #8-32x3/16
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
19X-350	1	Washer, Plain, Contact Lock Screw, #8
19X-353	1	Washer, Plain, Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-200S	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
IGS-114A	1	Arm, Advance
IGS-115M	1	Pointer, Advance Arm
IGT-70	1	Spring, Anti-Rattle
IGT-1021RB-1	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-1072RH	1	Shaft, Drive
SW-213	1	Rivet, Collar
SW-634B	1	Washer, Plain, Advance Arm Mtg.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-1270	2	Washer, Breaker Plate Mtg., Sc., Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IAX-4005-1M	Chrysler (Marine), Chrysler (Industrial)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAY-4000 / IAY-6000 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IAY-4001-1	6	Chrysler Ind., Dodge Truck
IAY-4001A-1	6	Dodge Truck (Canada)
IAY-4002-1	6	Dodge Truck
IAY-4003-1	6	Dodge Truck
IAY-4003-1F	6	Dodge Truck
IAY-4003A-1	6	Dodge Truck
IAY-4003B-1	6	Dodge Truck
IAY-4004-1	6	Dodge Truck
IAY-4004-1F	6	Dodge Truck
IAY-4004A-1	6	Dodge Truck
IAY-4004B-1	6	Dodge Truck
IAY-4004C-1	6	Dodge Truck
IAY-4005A-1	4	Towmotor
IAY-4006-1	6	Dodge Truck
IAY-4007A-1	6	Towmotor
IAY-4008-1	6	Dodge Truck (Canada)
IAY-4009	6	Chris Craft
IAY-4009-1	6	Universal
IAY-4009-1A	6	Universal
IAY-4009A	6	Owens Yacht
IAY-4009B	6	Palmer Marine
IAY-4010	4	Chris Craft
IAY-4010A	4	Lathrop Marine
IAY-4012	4	Willys Truck
IAY-6001	6	Gray Marine
IAY-6003	4	Gray Marine

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

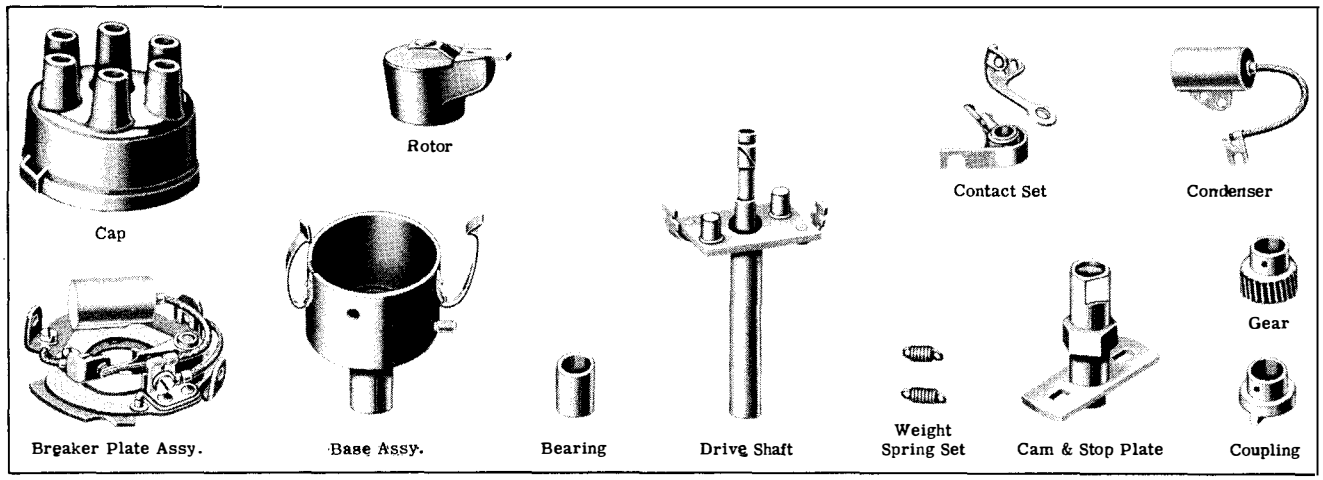


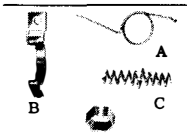

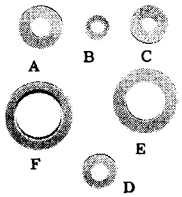


ILLUSTRATION SHOWS TYPICAL PARTS ONLY


Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IAY-4001-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1112RA	IG-636QS	IGS-1100RA	- - -
IAY-4001A-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1112RA	IGB-292SS	IGS-1100RA	- - -
IAY-4002-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1113RA	IG-636HS	IGS-1100RX	- - -
IAY-4003-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1113RE	IGB-353BS	IGS-1100RX	- - -
IAY-4003-1F	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012S	IG-579A	IGS-1113RE	IGB-353BS	IGS-1100RX	- - -
IAY-4003A-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1113RE	IG-636HS	IGS-1100RX	- - -
IAY-4003B-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1113RE	IGB-329S	IGS-1100RN	- - -
IAY-4004-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IG-636QS	IGS-1100RA-5	- - -
IAY-4004-1F	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012S	IG-579A	IGS-1112RE	IG-636QS	IGS-1100RA-5	- - -
IAY-4004A-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IGB-292SS	IGS-1100RA-5	- - -
IAY-4004B-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IGB-353BS	IGS-1100R-5	- - -
IAY-4004C-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IGB-292SS	IGS-1100R-5	- - -
IAY-4005A-1	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2013	IG-579A	IGS-1053RE	IGE-29S	IGC-1132RG	IA-113
IAY-4006-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1113RG	IG-636HS	IGS-1100RX	- - -
IAY-4007A-1	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2013	IG-579A	IGS-1053RE	IGB-358AS	IGS-1100RAF	IA-113
IAY-4008-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1112RF	IG-636QS	IGS-1100RA	- - -
IAY-4009	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IG-863S	IGS-1100RN	- - -
IAY-4009-1	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGB-312S	IGS-1100RAF	- - -
IAY-4009-1A	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGB-312S	IGS-1100RAF	- - -
IAY-4009A	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGE-24S	IGS-1100RAE	- - -
IAY-4009B	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGE-29S	IGS-1100RAZ	- - -
IAY-4010	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IG-863S	IGC-1132RM	- - -
IAY-4010A	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGE-29S	IGC-1132RN	- - -
IAY-4012	IAT-1041	IAT-1016	IGW-3028DS	IAT-2015LA	IAY-1004	IAY-2013B	IG-579A	IGS-1134LE	IG-884S	IGC-1132LB	- - -
IAY-6001	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGE-29S	IGS-1100RP	- - -
IAY-6003	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGC-207S	IGC-1132RF	

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	ARM, Advance	IAT-44	1	IAY-4005A-1, IAY-4007A-1, IAY-4012
		IGS-114	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	COLLAR, Shaft	IGS-19S	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
		IGB-199	1	IAY-4012
	CONTACT, Plunger	IAO-7	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	INSULATION, Bushing	IAY-7	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4009-1, -1A, IAY-4009, A, B, IAY-4010, A, IAY-4012, IAY-6001, IAY-6003
	INSULATION, Terminal	IAY-8	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4009-1, -1A, IAY-4009, A, B, IAY-4010, A, IAY-4012, IAY-6001, IAY-6003
	LOCKWASHERS			
	(A) Advance Arm, 1/4	12X-199	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4012
	(B) Breaker Plate Sc. #8	12X-195	2	All
	(C) Condenser Mtg. Sc. #6	12X-194	1	All
	(D) Terminal Stud #10	12X-196	2	All
	NUT, Term. Stud, Hex. #10-32	8X-173	2	All
	OILER	X-1590	1	All
	POINTER, Advance Arm	IGS-115	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	RIVET			
	Collar	SW-213	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1, IAY-4012
	Gear	SW-213	1	IAY-4005A-1, IAY-4007A-1, IAY-4009-1, -1A
	SCREWS			
	(A) Advance Arm, Hex. Hd. 1/4-20x5/8	8X-86	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4012
	(B) Breaker Contact, Fill Hd. #8-32x3/16	8X-884	1	All
	(C) Breaker Plate Mtg., Rd. Hd. #8-32x5/16	8X-304	2	All
	(B) Condenser Mtg., Fill. Hd. #6-32x5/32	8X-1546	1	All
	SEAL, "O" RING, Dist. Base	XA-744W	1	IAY-4012, IAY-6001, IAY-6003
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACERS			
	(A) Cam	IGS-99	1	All
	(B) Terminal	IAY-9	1	All
	SPRINGS			
	(A) Anti-Rattle	IGT-70	1	IAY-4004C-1, IAY-4005A-1, IAY-4007A-1, IAY-6001, IAY-6003
	(B) Cap Clamp Spring & Hinge	IGB-1007	2	All
	(C) Contact	IAO-20	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	(A) Anti-Rattle	IGT-69	1	IAY-4012
	(D) Friction	IAT-55	1	IAY-4012
	STUD, Terminal, Primary	X-931	1	All
	WASHERS			
	(A) Advance Arm Mtg. Sc., Plain	SW-634	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1 IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4012
	(B) Breaker Contact, Plain #8	8X-350	1	All
	(C) Insulated, Terminal Stud, Outer	IGL-9A	1	All
	(D) Terminal Stud, Plain #10	8X-183A	1	All
	(E) Thrust, Drive Shaft, Lower	IG-90	1	All
	(F) Thrust, Drive Shaft, Upper(Inner)	IAO-10	1	All
	(F) Thrust, Drive Shaft, Upper(Outer)	IAO-11	1	All
	WEIGHT, Governor	IG-1456	2	IAY-4001-1, A-1, IAY-4002-1
		IGC-2168L	2	IAY-4012
		IGC-2168R	2	IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1 IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4009, -1, -1A, A, B, IAY-4010, A, IAY-6001, IAY-6003

See Reverse Side

MISCELLANEOUS PARTS



Name	Part No.	No. Used	Used On
WICKS			
(B) Felt, Cam Sleeve	IGH-28	1	All
(A) Felt, Dist. Oiler	IGS-117	1	IAY-4005A-1, IAY-4007A-1, IAY-4009-1, -1A, IAY-4009, A, B, IAY-4010, A, IAY-4012, IAY-6001, IAY-6003
(A) Felt, Dist. Oiler	IGT-117	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAY-4000 / IAY-6000 SERIES DISTRIBUTOR PARTS LIST

IAY-4000 Series
IAY-6000 Series
(Issued 12-12-56)

Model No.	No. Cyl.	CUSTOMER
IAY-4001-1	6	Chrysler Ind. Dodge Truck
IAY-4001A-1	6	Dodge Truck (Canada)
IAY-4002-1	6	Dodge Truck
IAY-4003-1	6	Dodge Truck
IAY-4003-1F	6	Dodge Truck
IAY-4003A-1	6	Dodge Truck
IAY-4003B-1	6	Dodge Truck
IAY-4004-1	6	Dodge Truck
IAY-4004-1F	6	Dodge Truck
IAY-4004A-1	6	Dodge Truck
IAY-4004B-1	6	Dodge Truck
IAY-4004C-1	6	Dodge Truck
IAY-4005A-1	4	Towmotor
IAY-4006-1	6	Dodge Truck
IAY-4007A-1	6	Towmotor
IAY-4008-1	6	Dodge Truck (Canada)
IAY-4009	6	Chris Craft
IAY-4009-1	6	Universal
IAY-4009-1A	6	Universal
IAY-4009A	6	Owens Yacht
IAY-4009B	6	Palmer Marine
IAY-4010	4	Chris Craft
IAY-4010A	4	Lathrop Marine
IAY-4011	6	Towmotor
IAY-4012	4	Willys Truck
IAY-4013	6	Gray Marine
IAY-4013A	6	Gray Marine
IAY-4014	4	Gray Marine
IAY-4015A-1	4	Towmotor
IAY-6001	6	Gray Marine
IAY-6003	4	Gray Marine

File in
Equipment & Parts List Binder

Printed in U. S. A.

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

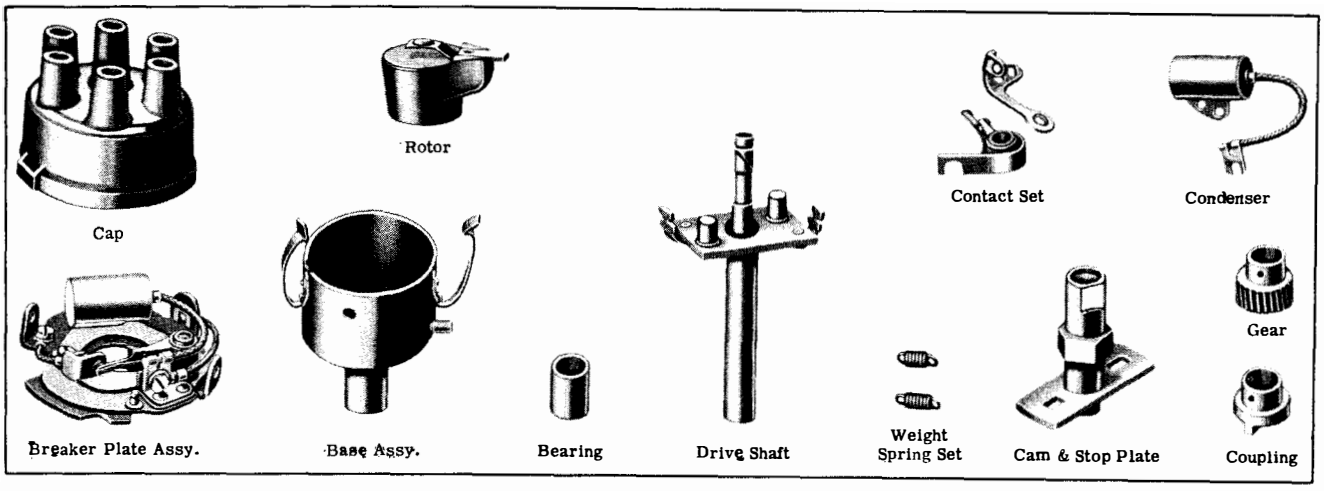
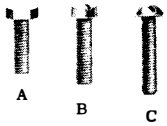
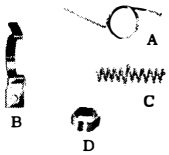
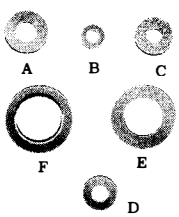



ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IAY-4001-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1112RA	IG-636QS	IGS-1100RA	- - - -
IAY-4001A-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1112RA	IGB-292SS	IGS-1100RA	- - - -
IAY-4002-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1113RA	IG-636HS	IGS-1100RX	- - - -
IAY-4003-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1113RE	IGB-353BS	IGS-1100RX	- - - -
IAY-4003-1F	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012S	IG-579A	IGS-1113RE	IGB-353BS	IGS-1100RX	- - - -
IAY-4003A-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1113RE	IG-636HS	IGS-1100RX	- - - -
IAY-4003B-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1113RE	IGB-329S	IGS-1100RN	- - - -
IAY-4004-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IG-636QS	IGS-1100RA-5	- - - -
IAY-4004-1F	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012S	IG-579A	IGS-1112RE	IG-636QS	IGS-1100RA-5	- - - -
IAY-4004A-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IGB-292SS	IGS-1100RA-5	- - - -
IAY-4004B-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IGB-353BS	IGS-1100R-5	- - - -
IAY-4004C-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2012	IG-579A	IGS-1112RE	IGB-292SS	IGS-1100R-5	- - - -
IAY-4005A-1	IAT-1041	IAU-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2013	IG-579A	IGS-1053RE	IGE-29S	IGC-1132RG	IA-113
IAY-4006-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1113RG	IG-636HS	IGS-1100RX	- - - -
IAY-4007A-1	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2013	IG-579A	IGS-1053RE	IGB-358AS	IGS-1100RAF	IA-113
IAY-4008-1	IAT-1033	IAU-1016A	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2001	IG-579A	IGS-1112RF	IG-636QS	IGS-1100RA	- - - -
IAY-4009	IAT-1003	IAT-1016	IGW-3028ES	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IG-863S	IGS-1100RN	- - - -
IAY-4009-1	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGB-312S	IGS-1100RAF	- - - -
IAY-4009-1A	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG. 579A	IGS-1216R	IGB-312S	IGS-1100RAF	- - - -
IAY-4009A	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGE-24S	IGS-1100RAE	- - - -
IAY-4009B	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGE-29S	IGS-1100RAZ	- - - -
IAY-4010	IAT-1041	IAT-1016	IGW-3028ES	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IG-863S	IGC-1132RM	- - - -
IAY-4010A	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014	IG-579A	IGS-1216R	IGE-29S	IGC-1132RN	- - - -
IAY-4011	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2013	IG-579A	IGS-1053LE	IGB-358AS	IGS-1100LC	IG-644A
IAY-4012	IAT-1041	IAT-1016	IGW-3028DS	IAT-2015LA	IAY-1004	IAY-2013B	IG-579A	IGS-1134LE	IG-884S	IGC-1132LB	- - - -
IAY-4013	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGE-29S	IGS-1100RP	GE-88
IAY-4013A	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGE-29S	IGS-1100RP	GE-89
IAY-4014	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGC-207S	IGC-1132RF	GE-89
IAY-4015A-1	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2013	IG-579A	IGS-1053LE	IGE-29S	IGC-1132LF	IG-644A
IAY-6001	IAT-1003	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGE-29S	IGS-1100RP	- - - -
IAY-6003	IAT-1041	IAT-1016	IGW-3028DS	IAT-3076LA	IAY-1004	IAY-2014A	IG-579A	IGS-1180R	IGC-207S	IGC-1132RF	- - - -

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	ARM, Advance	IGC-1024AG-2	1	IAY-4009
		IAT-44	1	IAY-4005A-1, IAY-4007A-1, IAY-4011, IAY-4012, 4015A-1
		IGS-114	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	COLLAR, Shaft	IGS-19	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
		IGB-199	1	IAY-4012
	CONTACT, Plunger	IAO-7	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	INSULATION, Bushing	IAY-7	1	All
	INSULATION, Terminal	IAY-8	1	All
	LOCKWASHERS			
	(A) Advance Arm, 1/4	12X-199	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1 IAY-4007A-1, 4008-1, IAY-4011, 4012, IAY-4015A-1
	(B) Breaker Plate Sc. #8	12X-195	2	All
	(C) Condenser Mtg. Sc. #6	12X-194	1	All
	(D) Terminal Stud #10	12X-196	2	All
	NUT, Term, Stud, Hex. #10-32	8X-173	2	All
	OILER	X-1590	1	All
	POINTER, Advance Arm	IGS-115	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	RIVET			
	Collar	SW-213	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1, IAY-4011, 4012
	Coupling	SW-213	1	IAY-4015A-1
	Gear	SW-213	1	IAY-4005A-1, IAY-4007A-1, 4009-1, 1A, 4013, A, 4014
	SCREWS			
	(A) Advance Arm, Hex. Hd. 1/4-20X5/8	8X-86	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1, IAY-4007A-1, 4008-1, 4011, 4012, 4015A-1
	(B) Breaker Contact, Fill Hd. #8-32X3/16	8X-884	1	All
	(C) Breaker Plate Mtg., Rd. Hd. #8-32X5/16	8X-304	2	All
	(B) Condenser Mtg., Fill. Hd. #6-32X5/32	8X-1546	1	All
	SEAL, "O" RING, Dist. Base	XA-744W	1	IAY-4012, 4013, A, IAY-4014, IAY-6001, IAY-6003
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACERS			
	(A) Cam	IGS-99	1	All
	(B) Terminal	IAY-9	1	All
	SPRINGS			
	(A) Anti-Rattle	IGT-70	1	IAY-4004C-1, IAY-4005A-1, 4007A-1, 4013, A, 4014, IAY-6001, IAY-6003
	(B) Cap Clamp Spring & Hinge	IGB-1007	2	All
	(C) Contact	IAO-20	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1
	(A) Anti-Rattle	IGT-69	1	IAY-4011, 4012, 4015A-1
	(D) Friction	IAT-55	1	IAY-4012
	STUD, Terminal, Primary	X-931	1	All
	WASHERS			
	(A) Advance Arm Mtg. Sc., Plain	SW-634	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4005A-1, IAY-4006-1 IAY-4007A-1. 4008-1, 4012, 4015A-1
	(B) Breaker Contact, Plain #8	8X-350	1	All
	(C) Insulated, Terminal Stud, Outer	IGL-9A	1	All
	(D) Terminal Stud, Plain #10	8X-183A	1	All
	(E) Thrust, Drive Shaft, Lower	IG-90	1	All
	(F) Thrust, Drive Shaft, Upper (Inner(	IAO-10	1	All
	(F) Thrust, Drive Shaft, Upper (Outer)	IAO-11	1	All
	(E) Thrust, Advance Arm	IG-816A	1	IAY-4009

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	WEIGHT, Governor	IG-1456	2	IAY-4001-1, A-1, IAY-4002-1
		IGC-2168L	2	IAY-4012, IAY-4015A-1
		IGC-2168R	2	IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1 IAY-4005A-1, IAY-4006-1, IAY-4007A-1, IAY-4008-1, IAY-4009-1, 1A, A, B, IAY-4010, A, 4013, A, 4014, IAY-6001, IAY-6003
	WICKS			
	(B) Felt, Cam Sleeve	IGH-28	1	All
	(A) Felt, Dist. Oiler	IGS-117	1	IAY-4005A-1, IAY-4007A-1, IAY-4009-1, 1A, IAY-4009, A, IAY-4009B, IAY-4010, 4010A, IAY-4012, 4013, A, 4014, IAY-4015A-1, IAY-6001, 6003
	(A) Felt, Dist. Oiler	IGT-117	1	IAY-4001-1, A-1, IAY-4002-1, IAY-4003-1, 1F, A-1, B-1, IAY-4004-1, 1F, A-1, B-1, C-1, IAY-4006-1, IAY-4008-1

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAU-1016A	1	ROTOR
IAY-2012B	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IAY-2019B	1	Plate Assy., Breaker
IAY-1019S	1	Plate, Breaker
IBB-2042SS*	1	CONDENSER ASSY.
IBB-44*	1	Cond. Bracket(Required)
IBP-17A	1	Lead Assy., Primary
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028DS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Brkr. Contact Lock Sc., #8
8X-884	1	Screw, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-381AS	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Cap Clamp
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1100RBC	1	Cam & Stop Plate, 6 Cyl. R. H.
IGS-1113RE	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm Mtg. Sc., 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1590	1	Oiler
XA-839	1	Pin, Collar

UNIT	APPLICATION
IAY-4102-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAY-4104-1 DISTRIBUTOR PARTS LIST

IAY-4104-1
(Issued 10-11-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAU-1016A	1	ROTOR
IAY-2012B	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IAY-2019B	1	Plate Assy., Breaker
IAY-1019S	1	Plate, Breaker
IBB-2042SS*	1	CONDENSER ASSY.
IBB-44*	1	Cond. Bracket (Required)
IBP-17A	1	Lead Assy., Primary
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028DS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Brkr. Contact Lock Sc., #8
8X-884	1	Screw, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-292SS	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Cap Clamp
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1100RX	1	Cam & Stop Plate, 6 Cyl. R. H.
IGS-1112RE	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm Mtg. Sc., 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1590	1	Oiler
XA-839	1	Pin, Collar

UNIT	APPLICATION
IAY-4104-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part num ers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAZ-4001, A, B, C, D, E, F, G DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-17	1	Washer, Felt
IAZ-1002R	1	Shaft, Drive
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-2001	1	Base Assy., Distributor
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IAZ-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGP-3028ZS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Lead & Brkt. Screw, #8
8X-884	2	Screw, Contact Lead & Brkt. Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	SPRING SET, GOV. WEIGHT
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGC-2168R	2	Weight Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
**	1	Gasket, Vacuum Plug, 1/32" Thick
**	1	Plug, Vacuum Chamber
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Bkr. Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Vacuum Chamber	Spring Set, Gov. Weight	Spring Vac. Chamber	Gasket	Plug
IAZ-4001	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-55	VC-14	VC-15
IAZ-4001A	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-115	VC-14	VC-15
IAZ-4001B	IAZ-1021RC	IAZ-2023RA	IGB-208S	VC-115	IAT-30	IAT-29
IAZ-4001C	IAZ-1021RE	IAZ-2023RA	IGB-336CS	VC-115	IAT-30	IAT-29
IAZ-4001D	IAZ-1021RM	IAZ-2023RA	IGB-363AS	VC-115	IAT-30	IAT-29
IAZ-4001E	IAZ-1021RB	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001F	IAZ-1021RE	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001G	IAZ-1021RK	IAZ-2023RB	IGB-346AS	VC-115	IAT-30	IAT-29

UNIT	APPLICATION
IAZ-4001, A, B, C, D, E, F, G	Chrysler (8)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAZ-4001, A, B, C, D, E, F, G DISTRIBUTOR PARTS LIST

IAZ-4001, A, B, C, D, E, F, G
(Issued 4-26-55)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-17	1	Washer, Felt
IAZ-1002R	1	Shaft, Drive
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-2001	1	Base Assy., Distributor
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IAZ-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGP-3028ZS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Lead & Brkt. Screw, #8
8X-884	2	Screw, Contact Lead & Brkt. Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	SPRING SET, GOV. WEIGHT
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGC-2168R	2	Weight Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
**	1	Gasket, Vacuum Plug, 1/32" Thick
**	1	Plug, Vacuum Chamber
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Bkr. Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Vacuum Chamber	Spring Set, Gov. Weight	Spring Vac. Chamber	Gasket	Plug
IAZ-4001	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-55	VC-14	VC-15
IAZ-4001A	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-115	VC-14	VC-15
IAZ-4001B	IAZ-1021RC	IAZ-2023RA	IGB-208S	VC-115	IAT-30	IAT-29
IAZ-4001C	IAZ-1021RE	IAZ-2023RA	IGB-336CS	VC-115	IAT-30	IAT-29
IAZ-4001D	IAZ-1021RM	IAZ-2023RA	IGB-363AS	VC-115	IAT-30	IAT-29
IAZ-4001E	IAZ-1021RB	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001F	IAZ-1021RE	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001G	IAZ-1021RK	IAZ-2023RB	IGB-346AS	VC-115	IAT-30	IAT-29

UNIT	APPLICATION
IAZ-4001, A, B, C, D, E, F, G	Chrysler (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAZ-4001, A, B, C, D, E, F, G DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-17	1	Washer, Felt
IAZ-1002R	1	Shaft, Drive
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-2001	1	Base Assy., Distributor
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IAZ-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGP-3028ZS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Lead & Brkt. Screw, #8
8X-884	2	Screw, Contact Lead & Brkt. Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	SPRING SET, GOV. WEIGHT
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGC-2168R	2	Weight Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
**	1	Gasket, Vacuum Plug, 1/32" Thick
**	1	Plug, Vacuum Chamber
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Bkr. Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Vacuum Chamber	Spring Set, Gov. Weight	Spring Vac. Chamber	Gasket	Plug
IAZ-4001	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-55	VC-14	VC-15
IAZ-4001A	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-115	VC-14	VC-15
IAZ-4001B	IAZ-1021RC	IAZ-2023RA	IGB-208S	VC-115	IAT-30	IAT-29
IAZ-4001C	IAZ-1021RE	IAZ-2023RA	IGB-336CS	VC-115	IAT-30	IAT-29
IAZ-4001D	IAZ-1021RM	IAZ-2023RA	IGB-363AS	VC-115	IAT-30	IAT-29
IAZ-4001E	IAZ-1021RB	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001F	IAZ-1021RE	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001G	IAZ-1021RK	IAZ-2023RB	IGB-346AS	VC-115	IAT-30	IAT-29

UNIT	APPLICATION
IAZ-4001, A, B, C, D, E, F, G	Chrysler (8)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4002, A, B, C, D DISTRIBUTOR PARTS LIST

IAZ-4002, A, B, C, D
(Issued 10-19-54)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, Vacuum Plug, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge , Clamp, Cap
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-1025R	1	Shaft, Drive
IAZ-2001	1	Base Assy., Distributor
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	Bearing, Abs. Bronze, Upper
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	Bearing, Abs. Bronze
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IAZ-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGP-3028ZS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Lead & Brkt. Sc., #8
8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-115	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10

* Used as required.
** See table following parts lists for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Vacuum Chamber
IAZ-4002	IAZ-1021RB	IG-636NS	IAZ-2023RA
IAZ-4002A	IAZ-1021RC	IG-796S	IAZ-2023RA
IAZ-4002B	IAZ-1021RC	IGB-277BS	IAZ-2023RA
IAZ-4002C	IAZ-1021RK	IGB-346AS	IAZ-2023RB
IAZ-4002D	IAZ-1021RE	IG-636MS	IAZ-2023RA

UNIT	APPLICATION
IAZ-4002, A, B, C, D	DeSoto (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAZ-4003, A, B, C, D, E, F, G, H DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSEMBLY, DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, Vacuum Plug, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-1026R	1	Shaft, Drive
IAZ-2001	1	Base Assembly, Distributor
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	Bearing, Absorbent Bronze, Upper
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	Bearing, Abs. Bronze
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004R	1	Plate Assembly, Breaker
IAZ-10	1	Lead Assembly, Primary
IAZ-24	1	Lead Assembly, Breaker Arm
IAZ-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGP-3028ZS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Brkt. Screw, #8
8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring, Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-115	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applying to assembly wanted.

(Continued on Reverse Side)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IAZ-4003, A, B, C, D, E, F, G, H DISTRIBUTOR PARTS LIST (Continued)

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Vacuum Chamber
IAZ-4003	IAZ-1021RA	IG-636XS	IAZ-2023RA
IAZ-4003A	IAZ-1021RC	IG-913BS	IAZ-2023RA
IAZ-4003B	IAZ-1021RA	IG-636HS	IAZ-2023RA
IAZ-4003C	IAZ-1021RL	IGB-364AS	IAZ-2023RA
IAZ-4003D	IAZ-1021RE	IG-636KS	IAZ-2023RA
IAZ-4003E	IAZ-1021RL	IGB-364AS	IAZ-2023RB
IAZ-4003F	IAZ-1021RE	IG-636KS	IAZ-2023RB
IAZ-4003G	IAZ-1021RP	IG-636ES	IAZ-2023RC
IAZ-4003H	IAZ-1021RP	IG-636ES	IAZ-2023RA

UNIT	APPLICATION
IAZ-4003, D, F	Dodge (8)
IAZ-4003A, B	Dodge (8), Dodge Truck
IAZ-4003C, E, G, H	Dodge (8), Plymouth (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBB-2013	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	2	BEARING, ABS. BRONZE
X-382	1	Cup, Grease, 1/8 Pipe
X-525	4	Rivet, Tubular
IBB-2040	1	Plate Assy., Breaker
IA-131	2	Clip, Spring, Contact Arm
IAW-24	1	Lead Assembly
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
8X-350	2	Washer, Plain, Contact Lock Screw, #8
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-148	1	Shaft, Drive, Tachometer
IGS-1145RA	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Coupling
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
8X-86	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S. A. E. #202
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBB-4101A-1	IAZ-1021RG	IGB-362AS
IBB-4101B-1	IAZ-1021RH	IGB-336CS

UNIT	APPLICATION
IBB-4101A-1	Dodge Truck
IBB-4101B-1	Chrysler Industrial

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER
GE-48	1	GEAR, TACHOMETER, FOLLOWER
IAK-40	1	Cap, Tachometer Shaft
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBB-2013AM	1	Base Assy., Dist.
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IBB-9M	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
X-382A	1	Cup, Grease, 1/8 Pipe
X-2872	4	Rivet, Tubular
IBB-2040M	1	Plate Assy., Breaker
IAU-3076LA	1	CONDENSER
IAW-24	1	Lead Assy.
IBB-1040M	1	Plate, Breaker
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	2	Clamp, Spring, Contact Arm
IGP-3028XS	1	CONTACT SET, BREAKER
19X-59	2	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
19X-350	2	Washer, Plain, Contact Lock Screw, #8
19X-353	2	Washer, Plain, Clamp Screw, #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft
IG-644A	1	COUPLING; DRIVE, DIST.
IG-680	1	Snap Ring, Cam Retaining
IGB-208S	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114A	1	Arm, Advance
IGS-148	1	Shaft, Drive Tachometer
IGS-1145R	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
IGT-1021RD-1	1	Cam & Stop Plate, 8 Cyl. R.H.
SW-213	2	Rivet, Gear & Coupling
SW-634B	1	Washer, Plain, Advance Arm Mtg. Sc.
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S.A.E. #202
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2929	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

UNIT	APPLICATION
IBB-4101-1M	Chrysler Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBB-1002R	1	Shaft, Drive
IBB-2014	1	Base Assembly, Distributor
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	2	BEARING, ABS. BRONZE
IGT-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBB-2040	1	Plate Assy., Breaker
IA-131	2	Clip, Breaker Arm Spring
IAW-24	1	Lead Assembly
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
8X-350	2	Washer, Plain, Contact Lock Screw, #8
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
8X-86	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm Mtg. Sc., 1/4
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight
IBB-4102-1	IAZ-1021RG	IG-913CS
IBB-4102A-1	IAZ-1021RH	IGB-336CS

UNIT	APPLICATION
IBB-4102-1	Chrysler (Industrial) Dodge Truck
IBB-4102A-1	Chrysler (Industrial)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17M	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSEMBLY, DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBB-29	1	Advance Arm
IBB-1002RM	1	Shaft, Drive
IBB-2014M	1	Base Assembly, Distributor
IAD-1014M	1	Spring & Hinge, Clamp, Cap
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating
IBB-9M	2	Bracket, Breaker Plate Mounting
IG-579A	2	BEARING, ABSORBENT BRONZE
IGT-117	1	Wick, Felt
X-1590	1	Oiler
X-2872	4	Rivet, Tubular
IBB-2040M	1	Plate Assembly, Breaker
IAW-24	1	Lead Assembly
IBB-1040M	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15A	2	Washer, Plain, Clamp Screw, #6
IGP-60	2	Clip, Breaker Arm Spring
IGP-3028XS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
19X-350	2	Washer, Plain, Contact Lock Screw, #8
19X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-644A	1	COUPLING, DRIVE, DIST.
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
**	1	Cam & Stop Plate, 8 Cyl. R.H.
SW-213	1	Rivet, Coupling
SW-634B	1	Washer, Plain, Advance Arm Mounting Screw
12X-199	1	Lockwasher, Advance Arm, 1/4
X-1270B	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Gov. Weight Spring Set	Cam & Stop Plate
IBB-4102-1M	IGB-208S	IAZ-1021RF
IBB-4102A-1M	IGC-200S	IAZ-1021RT

UNIT	APPLICATION
IBB-4102-1M	Chrysler Ind. & Marine
IBB-4102A-1M	Chrysler Ind. & Marine

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
**	1	Cam & Stop Plate, 8 Cyl. R.H.
IAZ-1026RA	1	SHAFT, DRIVE
IBB-2012	1	Base Assy., Distributor
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	Bearing, Abs. Bronze, Upper
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBB-2040	1	Plate Assy., Breaker
IA-131	2	Clip, Contact Arm Spring
IAW-24	1	Lead Assembly
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
8X-350	2	Washer, Plain, Contact Lock Screw, #8
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft Lower
**	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg. Screw, Skpf. #10

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set
IBB-4103	IAZ-1021RD	IG-636XS
IBB-4103A	IAZ-1021RF	IG-913BS
IBB-4103B	IAZ-1021RN	IG-636ES
IBB-4103C	IAZ-1021RH	IG-636KS

UNIT	APPLICATION
IBB-4103	Dodge Tr., Fargo Tr.
IBB-4103A	Dodge Tr., Fargo Tr.
IBB-4103B, C	Dodge Truck

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBB-4104 DISTRIBUTOR PARTS LIST

IBB-4104
(Issued 5-19-54)

Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSEMBLY, DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-1021RF	1	Cam & Stop Plate, 8 Cyl.R. H.
IBB-1024R	1	Shaft, Drive
IBB-2023	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	Bearing, Abs. Bronze Upper
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	2	Bearing, Abs. Bronze
X-382	1	Cup, Grease, 1/8 Pipe
X-525	4	Rivet, Tubular
IBB-2040	1	Plate Assy., Breaker
IA-131	2	Clip, Breaker Arm Spring
IAW-24	1	Lead Assembly
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
8X-59	2	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
8X-350	2	Washer, Plain, Contact Lock Screw, #8
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-913BS	1	Spring Set, Gov. Weight
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-148	1	Shaft, Drive, Tachometer
IGT-70	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Collar
X-294	1	Bearing, Ball, S. A. E. #202
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10

UNIT	APPLICATION
IBB-4104	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBB-4105A, B DISTRIBUTOR PARTS LIST

IBB-4105A, B
(Issued 6-29-55)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSEMBLY, DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
**	1	Shaft, Drive
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBB-2012	1	Base Assembly, Distributor
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	Bearing, Absorbent Bronze, Upper
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	2	Bracket, Breaker Plate Mounting
IG-579A	1	BEARING, ABSORBENT BRONZE
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBB-2040	1	Plate Assembly, Breaker
IA-131	2	Clip, Breaker Arm Spring
IAW-24	1	Lead Assembly
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
8X-350	2	Washer, Plain, Contact Lock Screw, #8
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser, Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
**	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
**	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar
12X-196	1	Lockwasher, Terminal Screw, #10
8X-870	2	Screw, Breaker Plate, Mtg., Fill. Hd. #10-32x5/16
8X-872	1	Screw, Terminal, Fill. Hd. #10-32x1/4
X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10

** See Table following parts list for part number applying to assembly wanted

Assembly Number	Drive Shaft	Cam & Stop Plate	Gov. Weight Spring Set	Anti-Rattle Spring
IBB-4105A	IAZ-1002RA	IAZ-1021RJ	IGC-198S	None
IBB-4105B	IAZ-1002R	IAZ-1021RH	IGB-336CS	IGT-70

UNIT	APPLICATION
IBB-4105A	Chrysler Industrial
IBB-4105B	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-1021RH	1	Cam & Stop Plate, 8 Cyl. R. H.
IBB-29	1	Arm, Advance
IBB-1002R	1	Shaft, Drive
IBB-2014	1	Base Assy., Distributor
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	2	BEARING, ABS. BRONZE
IGT-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBB-2040	1	Plate Assy., Breaker
IA-131	2	Clip, Spring, Contact Arm
IAW-24	1	Lead Assembly
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
8X-350	2	Washer, Plain, Contact Lock Screw, #8
8X-884	2	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
IGB-336CS	1	SPRING SET, GOV. WEIGHT
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	Rotor
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10

UNIT	APPLICATION
IBB-4107-1	Chrysler (Industrial)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBB-4108 DISTRIBUTOR PARTS LIST

IBB-4108
(Issued 10-14-55)

Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-1021RF	1	Cam & Stop Plate, 8 Cyl. R. H.
IBB-1024R	1	Shaft, Drive
IBB-2023	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	Bearing, Abs. Bronze, Upper
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	1	Bearing, Abs. Bronze
X-382	1	Cup, Grease, 1/8 Pipe
X-525	4	Rivet, Tubular
IBB-2040	1	Plate Assy., Breaker
IA-131	2	Clip, Spring, Contact Arm
IAW-24	1	Lead Assy.
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGP-3028YS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Sc., #6
8X-350	2	Washer, Plain, Contact Lock Sc., #8
8X-884	2	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	2	Washer, Thrust, Drive Shaft
IG-680	1	Snap Ring, Cam Retaining
IG-913BS	1	Spring Set, Gov. Weight
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-37	1	Shaft, Drive, Tachometer
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Collar
X-294	1	Bearing, Ball, S. A. E. #202
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10

UNIT	APPLICATION
IBB-4108	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBC-4018UT DISTRIBUTOR PARTS LIST

IBC-4018UT
(Issued 3-13-56)

Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-24	1	Lead Assy., Breaker Spring Clamp
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	6	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-1004	1	Plate, Breaker
IAU-1066	1	ROTOR
IAU-3076L	1	CONDENSER
IBC-23	1	Seal, Filter Mtg.
IBC-34	1	Cover, Dist. Cap
IBC-1025R	1	Shaft, Drive
IBC-1035	1	CAP ASSEMBLY, DIST.
IBC-2001	1	Base Assy., Dist.
IAH-13	1	Washer, Thrust, Adaptor
IAU-10	1	Washer, Drive Shaft Seal
IAU-12	1	Washer, Adaptor Lock Screw, Skpf. 1/4
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IBC-1007	1	Adaptor
IG-579A	2	Bearing, Abs. Bronze
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4
XA-751	1	Seal, Shaft
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-676	1	Clip, Breaker Arm Spring
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Governor Weight
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	1	Washer, Breaker Spring Clamp Screw, #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028FS	1	CONTACT SET, BREAKER
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
SW-213	1	Rivet, Collar
12X-194	1	Lockwasher, Brkr. Spring Clamp Screw, #6
12X-196	2	Lockwasher, Coil Terminal, #10
X-865A	1	Plug, Pipe, 1/8
X-1270	6	Washer, Cover Screw, Skpf. #10
8X-1372	2	Nut, Coil Terminal, Hex, #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744G	1	Seal, "O" Ring, Cover, 4 1/2 inch O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4 inch O. D.
XA-823	1	Filter Assembly

UNIT	APPLICATION
IBC-4018UT	Chrys. Industrial & Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBC-4019UT DISTRIBUTOR PARTS LIST

IBC-4019UT
(Issued 3-13-56)

Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-24	1	Lead Assy., Breaker Spring Clamp
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	6	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-1004	1	Plate, Breaker
IAU-1066	1	ROTOR
IAU-3076L	1	CONDENSER
IBC-23	1	Seal, Filter Mtg.
IBC-34	1	Cover, Dist. Cap
IBC-1027R	1	Shaft, Drive
IBC-1035	1	CAP ASSEMBLY, DIST.
IBC-2001S-1	1	Base Assembly, Dist.
IAH-13	1	Washer, Thrust Adaptor
IAU-10	1	Washer, Drive Shaft Seal
IAU-12	1	Washer, Adaptor Lock Screw, Skpf. 1/4
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IBC-1007	1	Adaptor
IG-579A	2	Bearing, Abs. Bronze
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4
XA-751	1	Seal, Shaft
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-676	1	Clip, Breaker Arm Spring
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Governor Weight
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	1	Washer, Breaker Spring Clamp Screw, #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028FS	1	CONTACT SET, BREAKER
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
SW-213	1	Rivet, Collar
12X-194	1	Lockwasher, Brkr. Spring Clamp Screw, #6
12X-196	2	Lockwasher, Coil Terminal, #10
X-865A	1	Plug, Pipe, 1/8
X-1270	6	Washer, Cover Screw, Skpf. #10
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744G	1	Seal, "O" Ring, Cover, 4 1/2 inch O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4 inch O. D.
XA-823	1	Filter Assembly

UNIT	APPLICATION
IBC-4019UT	Chrys. Industrial & Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBC-4021UT DISTRIBUTOR PARTS LIST

IBC-4021UT
(Issued 3-13-56)

Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-24	1	Lead Assy., Breaker Spring Clamp
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	6	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-62	1	Seal, Receptacle
IAU-1004	1	Plate, Breaker
IAU-1066	1	ROTOR
IAU-1071	1	Capacitor, Dist. Primary
IAU-3076L	1	CONDENSER
IBC-34	1	Cover, Dist. Cap
IBC-1025R	1	Shaft, Drive
IBC-1035	1	CAP ASSY., DIST.
IBC-2001	1	Base Assy., Dist.
IAH-13	1	Washer, Thrust, Adaptor
IAU-10	1	Washer, Drive Shaft Seal
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IBC-1007	1	Adaptor
IG-579A	2	Bearing, Abs. Bronze
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4
XA-751	1	Seal, Shaft
IBF-9	1	Receptacle
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-676	1	Clip, Breaker Arm Spring
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Gov. Weight
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028FS	1	CONTACT SET, BREAKER
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
SW-213	1	Rivet, Collar
12X-194	1	Lockwasher, Breaker Spring Clamp Sc., #6
12X-196	2	Lockwasher, Coil Terminal, #10
X-865A	1	Plug, Pipe, 1/8
X-1270	6	Washer, Cover Sc., Skpf. #10
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg. Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Brkt. Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
X-3123	4	Screw, Receptacle Mtg., Fill. Hd. #6-32x15/32
X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
XA-744P	2	Seal, "O" Ring, Cover Plug & Receptacle Mtg., 3/4" O. D.

UNIT	APPLICATION
IBC-4021UT	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBD-4008UT DISTRIBUTOR PARTS LIST

IBD-4008UT
(Issued 10-14-55)

Part No.	No. Used	Name of Part
CW-4002	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-24	1	Lead Assy., Breaker Spring Clamp
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	6	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-1004	1	Plate, Breaker
IAU-1066	1	ROTOR
IAU-3076L	1	CONDENSER
IBC-23	1	Seal, Filter Mtg.
IBC-34	1	Cover, Dist. Cap
IBC-1027R	1	Shaft, Drive
IBC-1035	1	CAP ASSY., DIST.
IBC-2001A	1	Base Assy., Dist.
IAH-13	1	Washer, Thrust, Adaptor
IAU-10	1	Washer, Drive Shaft Seal
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IBC-1007	1	Adaptor
IG-579A	2	Bearing, Abs. Bronze
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4
XA-751	1	Seal, Shaft
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-676	1	Clip, Breaker Arm Spring
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring, Set, Governor Weight
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	1	Washer, Plain, Breaker Spring Clamp Sc., #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028FS	1	CONTACT SET, BREAKER
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
SW-213	1	Rivet, Collar
12X-194	1	Lockwasher, Brkr. Spring Clamp Sc., #6
12X-196	2	Lockwasher, Coil Terminal, #10
X-865A	1	Plug, Pipe, 1/8
X-1270	6	Washer, Cover Sc., Skpf. #10
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
XA-823	1	Filter Assy.

UNIT	APPLICATION
IBD-4008UT	Chrysler Industrial

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IBD-4009UT DISTRIBUTOR PARTS LIST

IBD-4009UT
(Issued 10-14-55)

Part No.	No. Used	Name of Part
CW-4002	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-24	1	Lead Assy., Breaker Spring Clamp
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	6	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-1004	1	Plate, Breaker
IAU-1066	1	ROTOR
IAU-3076L	1	CONDENSER
IBC-23	1	Seal, Filter Mtg.
IBC-34	1	Cover, Dist. Cap
IBC-1025R	1	Shaft, Drive
IBC-1035	1	CAP ASSY., DIST.
IBC-2001A	1	Base Assy., Dist.
IAH-13	1	Washer, Thrust, Adaptor
IAU-10	1	Washer, Drive Shaft Seal
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IBC-1007	1	Adaptor
IG-579A	2	Bearing, Abs. Bronze
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4
XA-751	1	Seal, Shaft
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-676	1	Clip, Breaker Arm Spring
IG-680	1	Snap Ring, Cam Retaining
IGB-292SS	1	Spring Set, Governor Weight
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	1	Washer, Plain, Breaker Spring Clamp Sc., #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028FS	1	CONTACT SET, BREAKER
IGS-19S	1	Collar, Shaft
IGS-99	1	Spacer, Cam
IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.

Part No.	No. Used	Name of Part
SW-213	1	Rivet, Collar
12X-194	1	Lockwasher, Brkr. Spring Clamp Sc., #6
12X-196	2	Lockwasher, Coil Terminal, #10
X-865A	1	Plug, Pipe, 1/8
X-1270	6	Washer, Cover Sc., Skpf. #10
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
XA-823	1	Filter Assy.

UNIT	APPLICATION
IBD-4009UT	Chrysler Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBF-4002AUT, BUT, UT DISTRIBUTOR PARTS LIST

IBF-4002AUT, BUT, UT (Issued 3-7-56)

Part No.	No. Used	Name of Part
CY-4002	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-12	1	Washer, Advance Arm Mtg. Screw, Skpf. 1/4
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	8	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-3076LB	1	CONDENSER
IAZ-24	1	Lead Assy., Breaker Arm
**	1	Cam & Stop Plate, 8Cyl. R. H.
IBC-23	1	Seal Filter Mounting
IBF-6	1	Lead Assembly, Breaker Spring Clamp
IBF-21	1	Arm, Advance
IBF-33	1	Cover, Distributor Cap
IBF-1002R	1	Shaft, Drive
IBF-1003	1	CAP ASSEMBLY, DIST.
IBF-1004R	1	Plate, Breaker
IBF-1066	1	ROTOR
IBF-2001	1	Base Assembly, Distributor
IAU-10	1	Washer, Drive Shaft Seal
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IG-579A	2	Bearing, Absorbent Bronze
XA-751	1	Seal Shaft
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-644A	1	Coupling, Drive, Distributor
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-175B	2	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x1/4
IGC-2168R	2	Weight, Governor
IGE-15	2	Washer, Plain, Breaker Spring Clamp Screw, #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028ZS	1	CONTACT SET, BREAKER
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
12X-196	2	Lockwasher, Coil Terminal, #10
8X-350	2	Washer, Plain, Breaker Contact, #8
19X-464	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20-3/4
X-865A	1	Plug, Pipe, 1/8
8X-884	2	Screw, Breaker, Contact, Fill. Hd. #8-32x3/16
X-1272	6	Washer, Cover Mtg. Screw, Skpf. 1/4
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
19X-3219	6	Screw, Cover Mtg., Socket Hd. 1/4-28x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744F	1	Seal, "O" Ring, Cap Cover, 5 1/4" O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
XA-823A	1	Filter Assembly

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set
IBF-4002AUT	IBJ-1021RR	IGC-200S
IBF-4002BUT	IBJ-1021RK	IG-636MS
IBF-4002UT	IBJ-1021RP	IGB-277BS

UNIT	APPLICATION
IBF-4002AUT	Chrysler Marine
IBF-4002BUT	Chrysler Industrial
IBF-4002UT	Chrysler Industrial

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBG-4001AUT, UT DISTRIBUTOR PARTS LIST

IBG-4001AUT, UT
(Issued 3-7-56)

Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-12	1	Washer, Advance Arm Mtg. Screw, Skpf. 1/4
IAU-29	1	Spring, Distributor Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	8	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-3076LB	1	CONDENSER
IAZ-24	1	Lead Assy., Breaker Arm
IBC-23	1	Seal, Filter Mounting
IBF-6	1	Lead Assy., Breaker Spring Clamp
IBF-21	1	Arm, Advance
IBF-33	1	Cover, Dist. Cap
IBF-1002R	1	Shaft, Drive
IBF-1003	1	CAP ASSEMBLY, DIST.
IBF-1004R	1	Plate, Breaker
IBF-1066	1	ROTOR
**	1	Base Assembly, Distributor
IAU-10	1	Washer, Drive Shaft Seal
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IG-579A	2	Bearing, Absorbent Bronze
XA-751	1	Seal, Shaft
**	1	**Cam & Stop Plate, 8Cyl. R. H.**
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-644A	1	Coupling, Drive, Distributor
IG-680	1	**Snap** Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-175B	2	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x1/4
IGC-2168R	2	Weight, Governor
IGE-15	2	Washer, Plain, Breaker Spring Clamp Screw, #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028ZS	1	CONTACT SET, BREAKER
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle

Part No.	No. Used	Name of Part
SW-213	1	Rivet, Coupling
12X-196	2	Lockwasher, Coil Terminal #10
8X-350	2	Washer, Plain, Breaker Contact, #8
19X-464	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x3/4
X-865A	1	Plug, Pipe, 1/8
8X-884	2	Screw, Breaker Contact, Fill. Head #8-32x3/16
X-1272	6	Washer, Cover Mtg. Screw, Skpf. 1/4
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
19X-3219	6	Screw, Cover Mtg., Socket Hd. 1/4-28x5/8
X-3235	4	Screw, Filter Mtg., Fill. Head #6-32x1 1/2
XA-744F	1	Seal, "O" Ring, Cap Cover, 5 1/4" O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
XA-823A	1	Filter Assembly

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Base Assy.	Cam & Stop Plate
IBG-4001AUT	IBF-2001AS-1	IBJ-1021RK
IBG-4001UT	IBF-2001AS	IBJ-1021RR

Assembly No.	Base Assy.	Cam & Stop Plate	Gov. Weight Spring Set
IBG-4001AUT	IBF-2001AS-1	IBJ-1021RK	IGB-336CS
IBG-4001UT	IBF-2001AS	IBJ-1021RR	IGC-200S

UNIT	APPLICATION
IBG-4001AUT	Chrysler (Industrial)
IBG-4001UT	Chrysler (Marine)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBH-4001AUT, UT DISTRIBUTOR PARTS LIST

IBH-4001AUT, UT
(Issued 3-7-56)

Part No.	No. Used	Name of Part
CAJ-4001	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-12	1	Washer, Advance Arm Mtg. Screw, Skpf. 1/4
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	8	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-3076LB	1	CONDENSER
IAZ-24	1	Lead Assy., Breaker Arm
IBC-23	1	Seal, Filter Mounting
IBF-6	1	Lead Assy., Breaker Spring Clamp
IBF-21	1	Arm, Advance
IBF-33	1	Cover, Dist. Cap
IBF-1002R	1	Shaft, Drive
IBF-1003	1	CAP ASSEMBLY, DIST.
IBF-1004R	1	Plate, Breaker
IBF-1066	1	ROTOR
**	1	Base Assembly, Distributor
IAU-10	1	Washer, Drive Shaft Seal
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IG-579A	2	Bearing, Absorbent Bronze
XA-751	1	Seal, Shaft
**	1	Cam & Stop Plate, 8Cyl. R. H.
IG-90	1	Washer, Thrust Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-644A	1	Coupling, Drive, Distributor
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-175B	2	Screw, Breaker Spring Clamp, #6-32x5/16
IGC-2168R	2	Weight, Governor
IGE-15	2	Washer, Plain, Breaker Spring Clamp Screw, #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028ZS	1	CONTACT SET, BREAKER
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
12X-196	2	Lockwasher, Coil Terminal, #10
8X-350	2	Washer, Plain, Brkr. Contact, #8
19X-464	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x3/4
X-865A	1	Plug, Pipe, 1/8
8X-884	2	Screw, Breaker Contact, Fill. Hd. #8-32x3/16
X-1272	6	Washer, Cover Mtg. Screw Skpf. 1/4
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
19X-3219	6	Screw, Cover Mtg., Socket Hd. 1/4-28x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744F	1	Seal, "O" Ring, Distributor Cap Cover, 5 1/4" O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
XA-823A	1	Filter Assembly

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Base Assy.	Cam & Stop Plate	Gov. Weight Spring Set
IBH-4001AUT	IBF-2001BS-1	IBJ-1021RK	IGB-336CS
IBH-4001UT	IBF-2001BS	IBJ-1021RR	IGC-200S

UNIT	APPLICATION
IBH-4001AUT	Chrysler (Industrial)
IBH-4001UT	Chrysler (Marine)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ-4001, A, B, C, D, E DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
GJ-236	1	Rivet, Gear
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-30	1	Gasket, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	VACUUM CHAMBER
IBJ-17S	1	Gear
IBJ-18	1	Elbow Oiler
IBJ-1002L	1	Shaft, Drive
**	1	Cam&Stop Plate, 8Cyl. L. H.
**	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-34	1	Clip, Terminal
IG-579A	2	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-3218	1	Stud, Terminal, Primary
IBJ-2004L	1	Plate Assy., Breaker
IBB-2015L	1	CONDENSER
IBJ-6	1	Washer, Retaining
IBJ-8	1	Washer, Bearing
IBJ-9	1	Washer, Thrust, Bearing
IBJ-10	1	Lead Assy., Primary
IBJ-14	1	Spring, Tension
IBJ-1004L	1	Plate, Breaker, Lower
IBJ-1012L	1	Plate, Breaker, Upper
IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028HS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Contact Brkt. Sc., #8
8X-884	1	Screw, Contact Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-69	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
VC-15	1	Plug, Vacuum Chamber
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10

* Use as required

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Base Assy.	Spring Set	Spring
IBJ-4001	IAZ-2023L	IBJ-1021L	IBJ-2001	IGC-205BS	VC-115
IBJ-4001A	IAZ-2023LA	IBJ-1021LA	IBJ-2001	IGB-328RS	VC-90
IBJ-4001B	IAZ-2023LB	IBJ-1021LA	IBJ-2001	IGC-78AS	VC-171
IBJ-4001C	IAZ-2023LA	IBJ-1021LB	IBJ-2001B	IGC-207AS	VC-175
IBJ-4001D	IAZ-2023LB	IBJ-1021LC	IBJ-2001	IGC-207AS	VC-171
IBJ-4001E	IAZ-2023LA	IBJ-1021LC	IBJ-2001C	IGB-379AS	VC-150

UNIT	APPLICATION
IBJ-4001, A, B	Clipper
IBJ-4001C	Clipper, Studebaker Speedhawk
IBJ-4001D	Hudson & Nash (8), Clipper
IBJ-4001E	Hudson & Nash (8), Clipper

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ-4001, A, B, C, D, E DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
GJ-236	1	Rivet, Gear
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-30	1	Gasket, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	VACUUM CHAMBER
IBJ-17S	1	Gear
IBJ-18	1	Elbow Oiler
IBJ-1002L	1	Shaft, Drive
**	1	Cam&Stop Plate, 8Cyl. L. H.
**	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-34	1	Clip, Terminal
IG-579A	2	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-3218	1	Stud, Terminal, Primary
IBJ-2004L	1	Plate Assy., Breaker
IBB-2015L	1	CONDENSER
IBJ-6	1	Washer, Retaining
IBJ-8	1	Washer, Bearing
IBJ-9	1	Washer, Thrust, Bearing
IBJ-10	1	Lead Assy., Primary
IBJ-14	1	Spring, Tension
IBJ-1004L	1	Plate, Breaker, Lower
IBJ-1012L	1	Plate, Breaker, Upper
IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028HS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Contact Brkt. Sc., #8
8X-884	1	Screw, Contact Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-69	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
VC-15	1	Plug, Vacuum Chamber
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10

* Use as required

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Base Assy.	Spring Set	Spring
IBJ-4001	IAZ-2023L	IBJ-1021L	IBJ-2001	IGC-205BS	VC-115
IBJ-4001A	IAZ-2023LA	IBJ-1021LA	IBJ-2001	IGB-328RS	VC-90
IBJ-4001B	IAZ-2023LB	IBJ-1021LA	IBJ-2001	IGC-78AS	VC-171
IBJ-4001C	IAZ-2023LA	IBJ-1021LB	IBJ-2001B	IGC-207AS	VC-175
IBJ-4001D	IAZ-2023LB	IBJ-1021LC	IBJ-2001	IGC-207AS	VC-171
IBJ-4001E	IAZ-2023LA	IBJ-1021LC	IBJ-2001C	IGB-379AS	VC-150

UNIT	APPLICATION
IBJ-4001, A, B	Clipper
IBJ-4001C	Clipper, Studebaker Speedhawk
IBJ-4001D	Hudson & Nash (8), Clipper
IBJ-4001E	Hudson & Nash (8), Clipper

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ-4301, A, B, DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1026R	1	Shaft, Drive
IAZ-2001	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-196	2	Lockwasher, Term. Stud #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
**	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBJ-2048R	1	Plate Assy., Breaker
IBB-2015R	1	CONDENSER
IBJ-24	1	Lead Assy., Breaker Arm
IBJ-1048R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IGC-175B	1	Screw, Brkr. Spring Clamp Hex. Hd. #6-32x1/4
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028MS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
12X-195	1	Lockwasher, Ground Lead Sc., #8
8X-350	1	Washer, Contact Brkt. Lock Sc., Plain #8
8X-884	2	Screw, Contact Brkt. & Grd. Lead, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vac. Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

** See Table following parts list for part number applying to assembly wanted.

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Spring Set	Spring
IBJ-4301	IAZ-2023RC	IBJ-1021RE	IG-636ES	VC-115
IBJ-4301A	IAZ-2023RD	IBJ-1021RH	IGC-154AS	VC-169
IBJ-4301B	IAZ-2023RA	IBJ-1021RE	IGC-42PS	VC-169

UNIT	APPLICATION
IBJ-4301	Dodge Truck
IBJ-4301A	Dodge, Plymouth
IBJ-4301B	Dodge, Plymouth

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ - 4302, A, B, C, D DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO - 10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO - 11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT - 29	1	Plug, Vacuum Chamber
IAT - 30	1	Gasket, 1/32'' Thick
IAZ - 17	1	Washer, Felt
IAZ - 1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ - 1015	1	Spring & Hinge, Clamp, Cap
IAZ - 1025R	1	Shaft, Drive
IAZ - 2001	1	Base Assy., Dist.
IAZ - 7	1	Bushing, Insulation
IAZ - 13	1	Insulation, Term. Stud
IAZ - 22	1	Washer, Ins., Term. Stud
IAZ - 30	1	BEARING, ABS. BRONZE, UPPER
IAZ - 31	1	Wick, Felt
IAZ - 32	1	Retainer, Felt Wick
IAZ - 34	1	Clip, Terminal
IG - 579A	1	BEARING, ABS. BRONZE
8X - 173	2	Nut, Term. Stud, Hex. #10 - 32
8X - 183A	1	Washer, Term. Stud, Plain #10
12X - 196	2	Lockwasher, Term. Stud, #10
X - 1590	1	Oiler
X - 3218	1	Stud, Terminal, Primary
**	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBJ - 2048R	1	Plate Assy., Breaker
IBB - 2015R	1	CONDENSER
IBJ - 24	1	Lead Assy., Breaker Arm
IBJ - 1048R	1	Plate, Breaker
IAZ - 11S	1	Lead Assy., Ground

Part No.	No. Used	Name of Part
IGC - 175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6 - 32x1/4
IGE - 15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW - 3028MS	1	CONTACT SET, BREAKER
12X - 194	1	Lockwasher, Condenser Mtg. Sc. #6
12X - 195	1	Lockwasher, Ground Lead Sc., #8
8X - 350	1	Washer, Contact Brkt. Lock Sc., Plain #8
8X - 884	2	Screw, Contact Brkt. & Grd. Lead, Fill. Hd. #8 - 32x3/16
8X - 1546	1	Screw, Condenser Mtg., Fill. Hd. #6 - 32x5/32
IBK - 1003	1	CAP ASSY., DIST.
IAO - 7	1	Contact, Plunger
IAO - 20	1	Spring, Contact
IBK - 1016	1	ROTOR
IG - 90	1	Washer, Thrust, Drive Shaft, Lower
**	1	Spring Set, Gov. Weight
IG - 680	1	Snap Ring, Cam Retaining
IGB - 199	1	Collar, Shaft, Dist.
IGC - 2168R	2	Weight, Governor
IGH - 28	1	Wick, Felt, Cam Sleeve
IGS - 17	1	Ring, Lock
IGS - 99	1	Spacer, Cam
IGT - 70	1	Spring, Anti - Rattle
VC - 46	*	Washer, .032'' Thick
VC - 46A	*	Washer, .010'' Thick
VC - 46B	*	Washer, .065'' Thick
VC - 169	1	Spring, Vac. Chamber
8X - 55	2	Screw, Breaker Plate, Rd. Hd. #8 - 32x3/8
8X - 189B	1	Washer, Vac. Arm Pin, Plain #4
12X - 195	2	Lockwasher, Breaker Plate Sc., #8
8X - 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10 - 32x1/4
X - 1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA - 839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applying to assembly wanted.

(Continued on reverse side)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Spring Set
IBJ - 4302	IAZ - 2023RD	IBJ - 1021RJ	IGC - 210AS
IBJ - 4302A	IAZ - 2023RA	IBJ - 1021RF	IG - 784S
IBJ - 4302B	IAZ - 2023RD	IBJ - 1021RD	IGB - 352S
IBJ - 4302C	IAZ - 2023RA	IBJ - 1021RF	IG - 784S
IBJ - 4302D	IAZ - 2023RA	IBJ - 1021RD	IGB - 352S

UNIT	APPLICATION
IBJ - 4302	DeSoto
IBJ - 4302A	DeSoto
IBJ - 4302B	DeSoto
IBJ - 4302C	DeSoto
IBJ - 4302D	DeSoto

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBJ - 4303, A, B, C DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO - 10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO - 11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT - 29	1	Plug, Vacuum Chamber
IAT - 30	1	Gasket, 1/32'' Thick
IAZ - 17	1	Washer, Felt
IAZ - 1002R	1	Shaft, Drive
IAZ - 1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ - 1015	1	Spring & Hinge, Clamp, Cap
IAZ - 2001	1	Base Assy., Dist.
IAZ - 7	1	Bushing, Insulation
IAZ - 13	1	Insulation, Term. Stud
IAZ - 22	1	Washer, Ins., Term. Stud
IAZ - 30	1	BEARING, ABS. BRONZE, UPPER
IAZ - 31	1	Wick, Felt
IAZ - 32	1	Retainer, Felt Wick
IAZ - 34	1	Clip, Terminal
IG - 579A	1	BEARING, ABS. BRONZE
8X - 173	2	Nut, Term. Stud, Hex. #10 - 32
8X - 183A	1	Washer, Term. Stud, Plain #10
12X - 196	2	Lockwasher, Term. Stud, #10
X - 1590	1	Oiler
X - 3218	1	Stud, Terminal, Primary
**	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBJ - 2048R	1	Plate Assy., Breaker
IBB - 2015R	1	CONDENSER
IBJ - 24	1	Lead Assy., Breaker Arm
IBJ - 1048R	1	Plate, Breaker
IAZ - 11S	1	Lead Assy., Ground
IGC - 175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6 - 32x1/4
IGE - 15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW - 3028MS	1	CONTACT SET, BREAKER
12X - 194	1	Lockwasher, Condenser Mtg. Sc., #6
12X - 195	1	Lockwasher, Ground Lead Sc., #8
8X - 350	1	Washer, Contact Brkt. Lock Sc., Plain #8
8X - 884	2	Screw, Contact Brkt. & Grd. Lead, Fill. Hd. #8 - 32x3/16
8X - 1546	1	Screw, Condenser Mtg., Fill. Hd. #6 - 32x5/32
IBK - 1003	1	CAP ASSY., DIST.
IAO - 7	1	Contact, Plunger
IAO - 20	1	Spring, Contact
IBK - 1016	1	ROTOR
IG - 90	1	Washer, Thrust, Drive Shaft, Lower
IG - 680	1	Snap Ring, Cam Retaining
IGB - 199	1	Collar, Shaft, Dist.
**	1	Spring Set, Gov. Weight
IGC - 2168R	2	Weight, Governor
IGH - 28	1	Wick, Felt, Cam Sleeve
IGS - 17	1	Ring, Lock
IGS - 99	1	Spacer, Cam
IGT - 70	1	Spring, Anti - Rattle
VC - 46	*	Washer, .032'' Thick
VC - 46A	*	Washer, .010'' Thick
VC - 46B	*	Washer, .065'' Thick
**	1	Spring
8X - 55	2	Screw, Breaker Plate, Rd. Hd. #8 - 32x3/8
8X - 189B	1	Washer, Vac. Arm Pin, Plain #4
12X - 195	2	Lockwasher, Breaker Plate Sc., #8
8X - 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10 - 32x1/4
X - 1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA - 839	1	Pin, Collar

* Use as Required.

** See table following parts list for part number applying to assembly wanted.

(Continued on reverse side)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ - 4303, A, B, C, (Continued)

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Spring Set	Spring
IBJ - 4303	IAZ - 2023RE	IBJ - 1021RE	IGB - 266AS	VC - 169
IBJ - 4303A	IAZ - 2023RE	IBJ - 1021RC	IG - 636MS	VC - 169
IBJ - 4303B	IAZ - 2023RF	IBJ - 1021RH	IGC - 207BS	VC - 115
IBJ - 4303C	IAZ - 2023RA	IBJ - 1021RC	IG - 636MS	VC - 169

UNIT	APPLICATION
IBJ - 4303	Dodge
IBJ - 4303A	Chrysler
IBJ - 4303B	Dodge
IBJ - 4303C	Chrysler

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4001, A, B DISTRIBUTOR PARTS LIST

IBK-4001, A, B
(Issued 11-9-55)

Part No.	No. Used	Name of Part
GJ-236	1	Rivet, Gear
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAR-1003	1	CAP ASSEMBLY, DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
**	1	VACUUM CHAMBER
IBJ-17S	1	Gear
IBJ-18	1	Elbow Oiler
IBJ-1002L	1	Shaft, Drive
**	1	Cam & Stop Plate, 8 Cyl. L. H.
IBJ-2001A	1	Base Assembly, Distributor
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-34	1	Clip, Terminal
IG-579A	2	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-3218	1	Stud, Terminal, Primary
IBK-2004L	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IBB-2015L	1	CONDENSER
IBJ-6	1	Washer, Retaining
IBJ-8	1	Washer, Bearing
IBJ-9	1	Washer, Thrust, Bearing
IBJ-14	1	Spring, Tension
IBJ-1004L	1	Plate, Breaker, Lower
IBK-1012L	1	Plate, Breaker, Upper
IGC-175B	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Brkr. Spring Clamp Screw, #6
IGW-3028JS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	2	Washer, Plain, Contact Brkt. Screw, #8
8X-884	2	Screw, Contact Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-69	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10

* Use as required.

**See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Vacuum Chamber	Spring Set	V.C. Spring
IBK-4001	IBJ-1021L	IAZ-2023L	IGC-205BS	VC-115
IBK-4001A	IBJ-1021LA	IAZ-2023LA	IGB-328RS	VC-90
IBK-4001B	IBJ-1021LA	IAZ-2023LB	IGC-78AS	VC-171

UNIT	APPLICATION
IBK-4001, A, B	Hudson & Nash 8

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4301A, C DISTRIBUTOR PARTS LIST

IBK-4301A, C
(Issued 4-4-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1002R	1	Shaft, Drive
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-2001	1	Base Assembly, Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABSORBENT BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004RA	1	Plate Assembly, Breaker
IAZ-10	1	Lead Assembly, Primary
IAZ-24	1	Lead Assy., Breaker Arm
IAZ-1004RA	1	Plate, Breaker
IAZ-11S	1	Lead Assembly, Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGW-3028KS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Bracket Screw, #8
8X-884	2	Screw, Contact Lead & Bracket, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSEMBLY, DISTRIBUTOR
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Distributor
**	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-174	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vac. Arm Pin, Plain #4
12X-195	2	Lockwasher, Breaker Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Gov. Weight Spring Set
IBK-4301A	IAZ-2023RA	IBJ-1021RG	IGB-361AS
IBK-4301C	IAZ-2023RF	IBJ-1021RD	IGB-348AS

UNIT	APPLICATION
IBK-4301A	Chrysler, Imperial
IBK-4301C	Chrysler "300B"

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4302 DISTRIBUTOR PARTS LIST

IBK-4302
(Issued 3-27-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vac. Chamber
IAT-30	1	Gasket, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1026R	1	Shaft, Drive
IAZ-2001	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	2	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IAZ-2004RA	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IAZ-1004RA	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IBB-2015R	1	CONDENSER
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGW-3028KS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Contact Brkt. Sc., #8
8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAZ-2023RA	1	Vacuum Chamber
IBJ-1021R	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-351AS	1	SPRING SET, GOV. WEIGHT
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-174	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Vac. Arm Pin, Plain, #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IBK-4302	Plymouth "Fury"

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4304 DISTRIBUTOR PARTS LIST

IBK-4304
(Issued 9-28-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vac. Chamber
IAT-30	1	Gasket, Vac. Chamber, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1021RU	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-2023RE	1	VACUUM CHAMBER
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBK-1027R	1	Shaft, Drive
IBK-2001	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	1	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IBS-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IBB-2015R	1	CONDENSER
IBS-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IGC-175B	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028KS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Contact Bracket Sc., #8
8X-884	2	Screw, Cont. Lead & Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-385AS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-174	1	Spring, Vac. Chamber
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vac. Arm Pin, #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IBK-4304	Chrysler, Imperial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBL-4001A DISTRIBUTOR PARTS LIST

IBL-4001A
(Issued 10-14-55)

Part No.	No. Used	Name of Part
GE-105	1	Gear, Follower
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAR-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAZ-1021LA	1	Cam & Stop Plate, 8 Cyl. L. H.
IBL-1002L	1	Shaft, Drive
IBL-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	Bearing, Abs. Bronze, Upper
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	2	Bracket, Breaker Plate Mtg.
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBL-2040	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IBB-2015L	1	CONDENSER
IBL-1040	1	Plate, Breaker
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Screw #6
IGP-3028PS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-199S	1	Spring Set, Gov. Weight
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1016B	1	ROTOR
IGS-99	1	Spacer, Cam
IGT-69	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Collar
8X-321	2	Screw, Brkr. Plate Mtg., Rd. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10

UNIT	APPLICATION
IBL-4001A	Dearborn (Marine)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM-4001, A, B DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAZ-1026RA	1	Shaft, Drive
IBB-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	1	BEARING, ABS. BRONZE
X-525	4	Rivet, Tubular
X-1590	1	Oiler
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBM-2040	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IBB-2015L	1	CONDENSER
IBM-1040	1	Plate, Breaker
IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028NS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Brkr. Contact Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
**	1	SPRING SET, GOVERNOR WEIGHT
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
8X-321	2	Screw, Brkr. Plate Mtg. Rd. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBM-4001	IBJ-1021RK	IG-636KS
IBM-4001A	IBJ-1021RL	IG-636ES
IBM-4001B	IBJ-1021RM	IGC-200AS

UNIT	APPLICATION
IBM-4001	Dodge Truck
IBM-4001A	Dodge Truck
IBM-4001B	Dodge Truck

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM-4003 DISTRIBUTOR PARTS LIST

IBM-4003
(Issued 10-16-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAZ-1002RB	1	Shaft, Drive
IBB-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	1	BEARING, ABS. BRONZE
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBJ-1021RT	1	Cam & Stop Plate, 8 Cyl. R. H
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBM-2040	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IBB-2015L	1	CONDENSER
IBM-1040	1	Plate, Breaker
IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028NS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-386S	1	Spring Set, Governor Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
8X-321	2	Screw, Brkr. Plate Mtg., Rd. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

UNIT	APPLICATION
IBM-4003	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBM-4101 DISTRIBUTOR PARTS LIST

IBM-4101
(Issued 10-11-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAZ-1002RB	1	Shaft, Drive
IBJ-1021RT	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBM-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	1	BEARING, ABS. BRONZE
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBM-2004R	1	Plate Assy., Breaker
IBB-2015L	1	CONDENSER
IBM-1004R	1	Plate, Breaker
IBP-17	1	Lead Assy., Primary
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028NS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-386S	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

UNIT	APPLICATION
IBM-4101	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM-4103 DISTRIBUTOR PARTS LIST

IBM-4103
(Issued 10-11-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAZ-1026RA	1	Shaft, Drive
IBJ-1021RU	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBM-2001	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	1	BEARING, ABS. BRONZE
X-525		Rivet, Tubular
X-1590	1	Oiler
IBM-2004R	1	Plate Assy., Breaker
IBB-2015L	1	CONDENSER
IBM-1004R	1	Plate, Breaker
IBP-17	1	Lead Assy., Primary
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc. #6
IGW-3028NS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32X5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-351BS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

UNIT	APPLICATION
IBM-4103	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBM-4104 DISTRIBUTOR PARTS LIST

IBM-4104
(Issued 10-12-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAZ-1028R	1	Shaft, Drive
IBJ-1021RN	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBM-2004R	1	Plate Assy., Breaker
IBB-2015L	1	CONDENSER
IBM-1004R	1	Plate, Breaker
IBP-17	1	Lead Assy., Primary
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IGW-3028NS	1	CONTACT SET, BREAKER
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IBM-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	2	Bracket, Breaker Plate Mtg.
IG-579A	1	BEARING, ABS. BRONZE
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-376AS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

UNIT	APPLICATION
IBM-4104	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBO-4001-1, A-1 DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IBB-1002R	1	Shaft, Drive
IBB-2014	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	2	BEARING, ABS. BRONZE
IGT-117	1	Wick, Felt
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBB-2040A	1	Plate Assy., Breaker
IA-131	2	Clip, Spring, Contact Arm
IAW-24	1	Lead Assy.
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGW-3028PS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Sc., #6
8X-350	2	Washer, Plain, Contact Lock Sc., #8
8X-884	2	Screw, Lock, Brkr. Contact Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
SW-634	1	Washer, Plain, Advance Arm, Mtg. Sc.
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Coupling

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBO-4001-1	IBJ-1021RM	IG-913CS
IBO-4001A-1	IBJ-1021RN	IG-636YS

UNIT	APPLICATION
IBO-4001-1	Dodge Truck
IBO-4001A-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBO-4002-1 DISTRIBUTOR PARTS LIST

IBO-4002-1
(Issued 6-18-56)

Part No..	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IAK-40	1	Cap, Tachometer Shaft
IAO-17	1	Cover, Terminal Slot
IBB-2013	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	2	BEARING, ABS. BRONZE
X-382	1	Cup, Grease, 1/8 Pipe
X-525	4	Rivet, Tubular
IBB-2040A	1	Plate Assy., Breaker
IA-131	2	Clip, Spring, Contact Arm
IAW-24	1	Lead Assy.
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spr. Clamp, Hex. Hd. 6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, 6
IGW-3028PS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Screw, 6
8X-350	2	Washer, Plain, Contact Lock Screw, 8
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. 8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. 6-32x5/32

Part No.	No. Used	Name of Part
IBJ-1021RN	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IG-90	2	Washer, Thrust, Drive Shaft
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
IGB-376AS	1	SPRING SET, GOV. WEIGHT
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-37	1	Shaft, Drive, Tachometer
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1145RA	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
SW-213	2	Rivet, Gear & Coupling
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
8X-86	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
X-294	1	Bearing, Ball, S. A. E. 202
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. 10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. 10

UNIT	APPLICATION
IBO-4002-1	Dodge (Truck)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IBO-4003 DISTRIBUTOR PARTS LIST

IBO-4003
(Issued 3-27-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAO-17	1	Cover, Terminal Slot
IAZ-1002RB	1	Shaft, Drive
IBB-2012	1	Base Assy., Dist.
IAD-14	1	Bracket, Cap Spring
IAO-9	2	Spring, Clamp, Cap
IAO-14	1	Bracket, Cap Spring & Locating
IAR-9	1	Bracket, Breaker Plate Mtg.
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IBB-9	1	Bracket, Breaker Plate Mtg.
IG-579A	1	BEARING, ABS. BRONZE
X-525	4	Rivet, Tubular
X-1590	1	Oiler
IBB-2040A	1	Plate Assy., Breaker
IA-131	2	Clip, Spring, Contact Arm
IAW-24	1	Lead Assy.
IBB-1040	1	Plate, Breaker
IBB-2015RA	1	CONDENSER
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16
IGE-15	2	Washer, Plain, Clamp Screw, #6
IGW-3028PS	1	CONTACT SET, BREAKER
12X-194	3	Lockwasher, Condenser & Clamp Sc., #6
8X-350	2	Washer, Plain, Contact Lock Sc., #8
8X-884	2	Screw, Lock, Brkr. Cont., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IBJ-1021RN	1	Cam & Stop Plate, 8 Cyl. R. H.
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-636YS	1	SPRING SET, GOV. WEIGHT
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

UNIT	APPLICATION
IBO-4003	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBP-4001, A DISTRIBUTOR PARTS LIST

IBP-4001, A
(Issued 9-28-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vac. Chamber
IAT-30	1	Gasket, Vac. Chamber, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1025RA	1	Shaft, Drive
IBK-1003	1	CAP ASSY., DIST;
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBP-2001	1	Base Assy., Dist.
IAZ-30		BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IG-579A	1	BEARING, ABS. BRONZE
X-1590	1	Oiler
IBP-2004R	1	Plate Assy., Breaker
IAT-2015RA	1	CONDENSER
IBP-17	1	Lead Assy., Primary
IBP-2004RS	1	Plate, Breaker
IBP-3028AS	1	CONTACT SET, BREAKER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Sc., #6
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IBP-2023RC	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-179	1	Spring, Vac. Chamber
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vacuum Arm Pin, #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applyingto assembly wanted.

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBP-4001	IBP-2209RF	IG-863AS
IBP-4001A	IBP-2209RG	IGB-388AS

UNIT	APPLICATION
IBP-4001	DeSoto
IBP-4001A	DeSoto

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBP-4002, A, B, C, D DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper
IAT-29	1	Plug, Vac. Chamber
IAT-30	1	Gasket, Vac. Chamber, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1002RC	1	Shaft, Drive
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring Contact
IBK-1016	1	ROTOR
IBP-2001	1	Base Assy., Dist.
IAZ-30	1	BEARING:ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IG-579A	1	BEARING, ABS. BRONZE
X-1590	1	Oiler
IBP-2004R	1	Plate Assy., Breaker
IBB-2042SS-1	1	CONDENSER PACKAGE
IBP-17	1	Lead Assy., Primary
IBP-2004RS	1	Plate, Breaker
IBP-3028AS	1	Contact Set, Breaker
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Sc., #6
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-884	1	Screw, Contact Lock Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32
**	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8Cyl. R. H.
IG-90	1	Washer, Thrust Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGC-2168R	2	Weight, Governor
**	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring, Vac. Chamber
8X-55	2	Screw, Breaker Plate Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vacuum Arm Pin, #4
12X-195	2	Lockwasher Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Gov. Weight Spring Set	Vac. Chamber Spring
IBP-4002	IBP-2023R	IBP-2209RA	IGE-29AS	VC-177
IBP-4002A	IBP-2023RB	IBP-2209RD	IGC-154BS	VC-178
IBP-4002B	IBP-2023R	IBP-2209RB	IGB-389AS	VC-177
IBP-4002C	IBP-2023RA	IBP-2209RB	IG-776AS	VC-177
IBP-4002D	IBP-2023R	IBP-2209RG	IGB-385BS	VC-155

UNIT	APPLICATION
IBP-4002	Dodge, DeSoto
IBP-4002A	Chrysler
IBP-4002B	Dodge, DeSoto
IBP-4002C	Dodge Truck
IBP-4002D	Dodge D500

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBP-4003, A, B, C DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vac. Chamber
IAT-30	1	Gasket, Vac. Chamber, 1/32" Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1026RB	1	Shaft, Drive
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBP-2001	1	Base Assy., Dist.
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IG-579A	1	BEARING, ABS. BRONZE
X-1590	1	Oiler
IBP-2004R	1	Plate Assy., Breaker
IAT-2015RA	1	CONDENSER
IBP-17	1	Lead Assy., Primary
IBP-2004RS	1	Plate, Breaker
IBP-3028AS	1	CONTACT SET, BREAKER
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Spring Clamp Sc., #6
SSB-38	1	Washer, Plain, Contact Lock Sc., #8
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-884	1	Screw, Cont. Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32

Part No.	No. Used	Name of Part
**	1	VACUUM CHAMBER
**	1	Cam & Stop Plate, 8 Cyl. R. H.
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
**	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
**	1	Spring, Vac. Chamber
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vacuum Arm Pin, #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Gov. Weight Spring Set	Vac. Chamber Spring
IBP-4003	IBP-2023R	IBP-2209R	IGE-29BS	VC-177
IBP-4003A	IBP-2023RA	IBP-2209RC	IGC-200BS	VC-177
IBP-4003B	IBP-2023R	IBP-2209RE	IGB-351BS	VC-177
IBP-4003C	IBP-2023RD	IBP-2209RH	IGC-154AS	VC-55

UNIT	APPLICATION
IBP-4003	Dodge 8(Canada), Plymouth 8
IBP-4003A	Plymouth 8
IBP-4003B	
IBP-4003C	Plymouth 8

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBR-4001 DISTRIBUTOR PARTS LIST

IBR-4001
(Issued 9-28-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32" Thick
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-2023RJ	1	VACUUM CHAMBER
IAU-1016A	1	ROTOR
IBR-2035	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IBR-2050R	1	Plate Assy., Breaker
IAT-2015RA	1	CONDENSER
IBP-17A	1	Lead Assy., Primary
IBR-2050RS	1	Plate, Breaker
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Screw, #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-381AS	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1100RBB	1	Cam & Stop Plate, 6 Cyl. R. H.
IGS-1113RD	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-76	1	Spring, Vac. Chamber
8X-86	1	Screw, Advance Arm. Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
X-1590	1	Oiler
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IBR-4001	Dodge 6, DeSoto 6 (Canada), Plymouth 6

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBR-4002 DISTRIBUTOR PARTS LIST

IBR-4002
(Issued 10-12-56)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug. Vacuum Chamber
IAT-30	1	Gasket, 1/32'' Thick
IAT-1033	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IAT-2023RK	1	VACUUM CHAMBER
IAU-1016A	1	ROTOR
IBR-2035	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IBR-2050RA	1	Plate Assy., Breaker
IAT-2015RA	1	CONDENSER
IBP-17D	1	Lead Assy., Primary
IBR-2050RS	1	Plate, Breaker
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Screw #6
IGW-3028BS	1	CONTACT SET, BREAKER
SSB-38	1	Washer, Plain, Contact Lock Screw, #8
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-336CS	1	Spring Set, Gov. Weight
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGS-114	1	Arm, Advance
IGS-1100RQ	1	Cam & Stop Plate, 6 Cyl. R. H.
IGS-1112RD	1	Shaft, Drive
IGT-70	1	Spring, Anti-Rattle
IGT-117	1	Wick, Felt
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-46	*	Washer, .032'' Thick
VC-46A	*	Washer, .010'' Thick
VC-46B	*	Washer, .065'' Thick
VC-76	1	Spring, Vac. Chamber
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-195	2	Lockwasher, Breaker Plate Sc., #8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
X-1590	1	Oiler
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IBR-4002	Dodge Truck (Canada) Dodge (Canada) Plymouth (Canada)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBS-4003 DISTRIBUTOR PARTS LIST

IBS-4003
(Issued 4-9-57)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vac. Chamber
IAT-30	1	Gasket, 1/32'' Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1021RK	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-1026RC	1	Shaft, Drive
IAZ-2023RG	1	VACUUM CHAMBER
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBK-2001	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	1	Nut, Term. Stud, Hex. 10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud Terminal, Primary
IBS-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IBB-2042SS-1	1	CONDENSER PACKAGE
IBS-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGW-3028KS	1	Contact Set, Breaker
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
8X-350	1	Washer, Plain, Contact Brkt. Sc., #8
8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-250AS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032''Thick
VC-46A	*	Washer, .010''Thick
VC-46B	*	Washer, .065''Thick
VC-180	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vac. Arm Pin, #4
12X-195	2	Lockwasher, Breaker Plate Sc., #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IBS-4003	Plymouth Fury

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32"Thick
IAZ-17	1	Washer, Felt
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1021RK	1	Cam & Stop Plate, 8Cyl. R. H.
IAZ-1025RB	1	Shaft, Drive
IAZ-2023RG	1	VACUUM CHAMBER
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBK-2001	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABS. BRONZE UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	1	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud, #10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IBS-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IBB-2042SS-1	1	CONDENSER PACKAGE
IBS-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw #6
IGW-3028KS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Bracket Screw, #8
8X-884	2	Screw, Cont. Lead &Brkt., Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-352S	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032"Thick
VC-46A	*	Washer, .010"Thick
VC-46B	*	Washer, .065"Thick
VC-180	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vac. ArmPin #4
12X-195	2	Lockwasher, Breaker Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
XA-839	1	Pin, Collar

* Use as required.

UNIT	APPLICATION
IBS-4004	DeSoto Adventurer

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBS-4005 DISTRIBUTOR PARTS LIST

IBS-4005
(Issued 4-10-57)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IAT-29	1	Plug, Vacuum Chamber
IAT-30	1	Gasket, 1/32"Thick
IAZ-17	1	Washer, Felt
IAZ-1002RD	1	Shaft, Drive
IAZ-1014	1	Spring & Hinge Clamp, Cap Locating
IAZ-1015	1	Spring & Hinge, Clamp, Cap
IAZ-1021RK	1	Cam & Stop Plate, 8Cyl. R. H.
IAZ-2023RG	1	VACUUM CHAMBER
IBK-1003	1	CAP ASSY., DIST.
IAO-7	1	Contact, Plunger
IAO-20	1	Spring, Contact
IBK-1016	1	ROTOR
IBK-2001	1	Base Assy., Dist.
IAZ-7	1	Bushing, Insulation
IAZ-13	1	Insulation, Term. Stud
IAZ-22	1	Washer, Ins., Term. Stud
IAZ-30	1	BEARING, ABS. BRONZE, UPPER
IAZ-31	1	Wick, Felt
IAZ-32	1	Retainer, Felt Wick
IAZ-34	1	Clip, Terminal
IG-579A	1	BEARING, ABS. BRONZE
8X-173	1	Nut, Term. Stud, Hex.#10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-196	1	Lockwasher, Term. Stud,#10
X-1590	1	Oiler
X-3218	1	Stud, Terminal, Primary
IBS-2004R	1	Plate Assy., Breaker
IAZ-10	1	Lead Assy., Primary
IAZ-24	1	Lead Assy., Breaker Arm
IBB-2042SS-1	1	CONDENSER PACKAGE
IBS-1004R	1	Plate, Breaker
IAZ-11S	1	Lead Assy., Ground
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6
IGW-3028KS	1	CONTACT SET, BREAKER
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
8X-350	1	Washer, Plain, Contact Bracket Screw #8
8X-884	2	Screw, Cont. Lead & Brkt. Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IG-90	1	Washer, Thrust, Drive Shaft Lower
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-348AS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-99	1	Spacer, Cam
IGT-70	1	Spring, Anti-Rattle
VC-46	*	Washer, .032"Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065"Thick
VC-180	1	Spring
8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-189B	1	Washer, Plain, Vac. Arm Pin #4
12X-195	2	Lockwasher, Breaker, Plate Screw, #8
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
XA-839	1	Pin, Collar

* Use as required

UNIT	APPLICATION
IBS-4005	Dodge D500

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGB-4005A-B-C -D-E-F-G-H -J DISTRIBUTOR PARTS LIST

IGB-4005A-B-C -D-E-F-G-H -J

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Dist. Gear - Follower
*	1	Dist. Drive Rivet
IG-90	2	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
*	1	Advance Control Arm
IG-816	1	Thrust Washer
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1035RA	1	Breaker Cam & Shaft - 4 cyl. R.H.
IGB-3037	1	Dist. Base Assembly
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Screw Point
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Ins.
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025B	1	Condenser Assembly
IGB-2037	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IGB-38	1	Breaker Point Screw Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Screw
X-490	1	Press in-Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-884	3	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
X-199	1	1/4 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-1063	1	1/4-28 Hex. Nut
		1 2 3 4 5

(Issued 4-26-33)
(R-12-27-35)

Assembly No.	Advance Arm	Dist. Gear	Drive Rivet
IGB-4005A	IG-806A	GJ-168	GJ-306
IGB-4005B	IG-806A	IG-261	IGB-247
IGB-4005C	IG-806A	GK-36	IGB-247
IGB-4005D	IG-806	GK-36	IGB-247
IGB-4005E	IG-806	IG-261	IGB-247
IGB-4005F	IG-806	GE-30	IGB-247
IGB-4005G	IG-806A	GE-20	IGB-247
IGB-4005H	IG-806C	IG-261	IGB-247
IGB-4005J	IG-806C	GK-36	IGB-247

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Dist. Gear - Follower
IG-90	2	Thrust Washer
*	1	Dist. Drive Rivet
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-808	1	Advance Control Arm
IG-816	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-2009RJ	1	Drive Shaft & Gov. Assy.
IA-77	2	Weight Spring
IGB-14B	2	Weight
IGB-1009R	1	Drive Shaft Assembly
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.
IGB-2010	1	Breaker Plate Assembly
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Point Screw
IGB-1010	1	Breaker Plate Part Assy.
IGB-2041	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579	2	Bronze Graphite Brg.
X-247	2	3/32x3/16 Split Rivet
X-490	1	Press in - Sleeve Oiler
IGB-3664	1	Breaker Arm Assembly
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-794	1	#10-32 Square Nut
6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
6X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1063	1	1/4-28 Hex. Nut
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 8-17-28)
(R-7-9-36)

Assembly No.	Dist. Gear	Drive Rivet
IGB-4019A	GJ-168	GJ-306
IGB-4019B	GK-36	IGB-247

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H. T. Wire Terminal
*	1	Dist. Gear - Follower
IG-816	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight
IGB-1175R	1	Drive Shaft Assy.
*	1	Cam & Stop Plate - 4 cyl. R.H.
IGB-2176	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32xl 3/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-905	1	1/4-20x7/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 5-25-36)


Assembly No.	Dr. Shaft & Gov.	Cam Assy.	Weight Spring	Weight Assy.	Gear - Follower	Weight Spr. Set
IGB-4041A	IGB-2175R	IGB-2017RA	IG-863	IGB-14B	IG-261	IG-863S
IGB-4041B	IGB-2175RB	IGB-2017R	IG-776	IGB-14D	GK-36	IG-776S
IGB-4041C	IGB-2175RE	IGB-2017R	IGC-78	IGB-14F	GK-36	IGC-78S
IGB-4041D	IGB-2175R	IGB-2017RA	IG-863	IGB-14B	GK-36	IG-863S
IGB-4041E	IGB-2175RL	IGB-2017R	IA-77	IGB-14B	IG-261	IA-77S
IGB-4041F	IGB-2175RR	IGB-2017R	IG-775	IGB-14D	GK-36	IG-775S

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4041A,B,C,D,E,F DISTRIBUTOR ILLUSTRATION

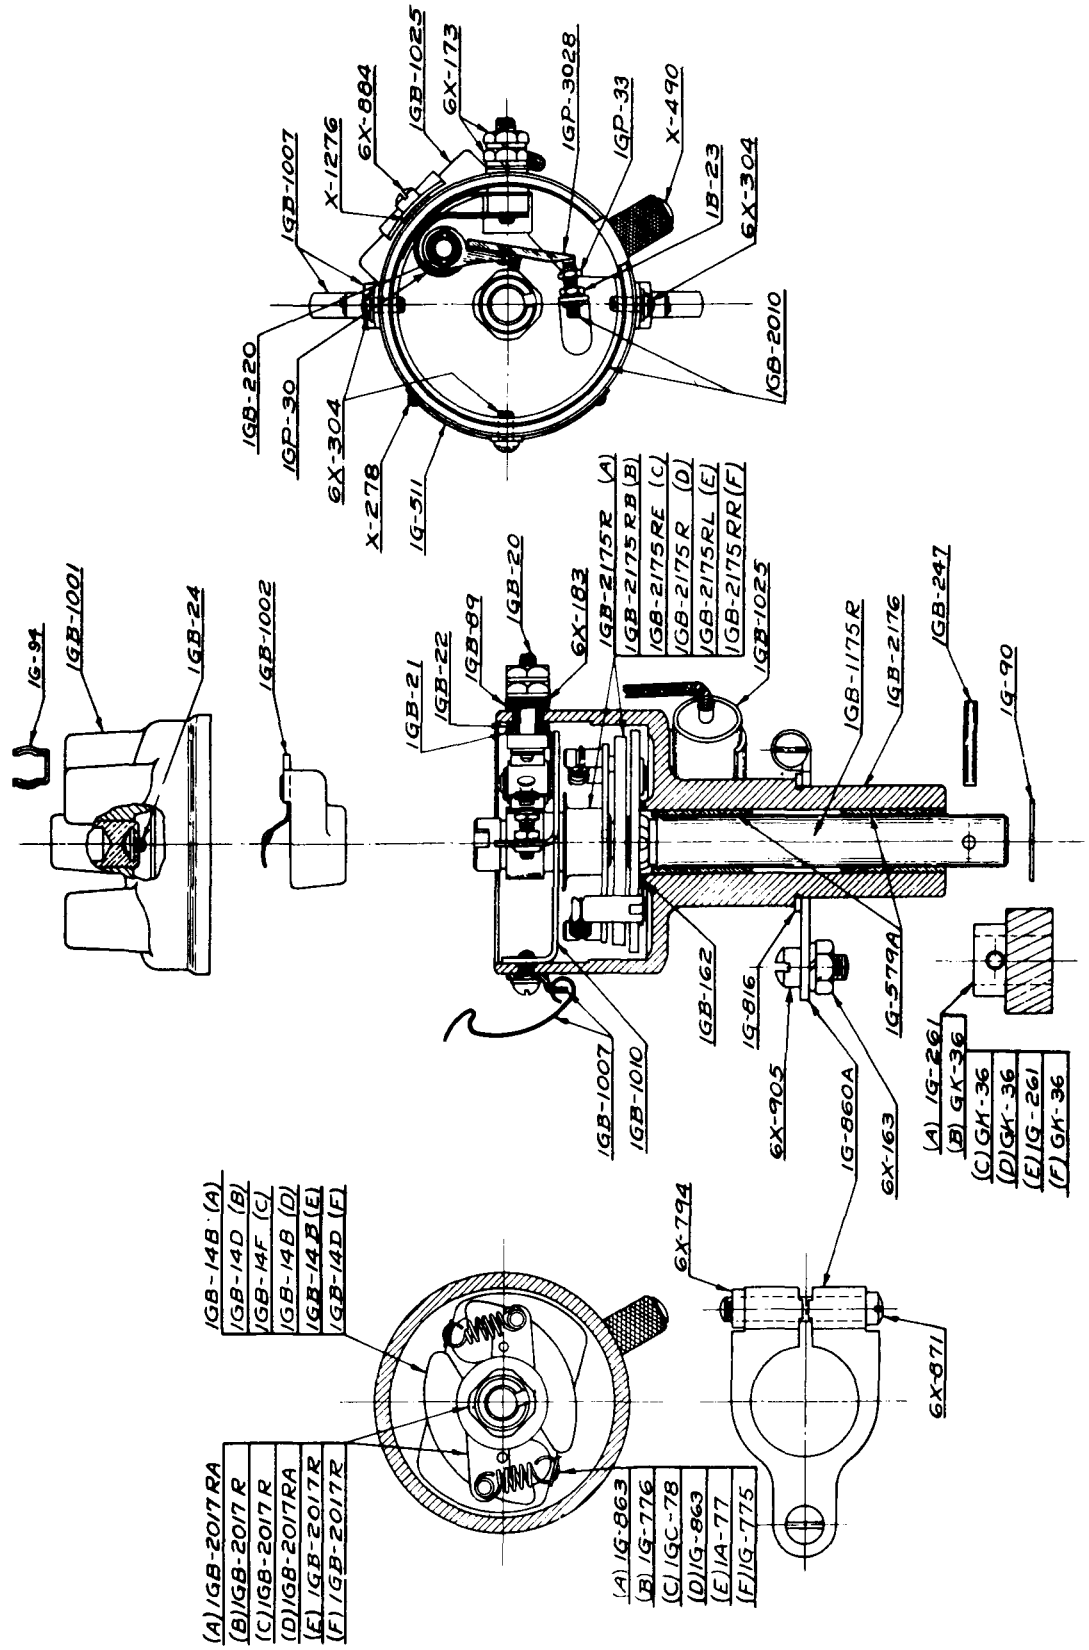

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-644	1	Distributor Drive Coupling
IG-816	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Ins.
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-184	1	Advance Control Arm
IGB-220	1	Lock Spring
IGB-1001	1	Dist. Cap Assy.
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist.Cap Spring & Hinge Assy.
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight
IGB-1181R	1	Drive Shaft Assy.
*	1	Cam & Stop Plate - 4 cyl. R.H.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
SW-213	1	Dist. Drive Rivet 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Sc.
6X-794	1	#10-32 Square Nut
6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
6X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer 1 2 3 4 5

(Issued 1-11-38)


Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Sp. Set	Weight	Cam Assembly
IGB-4045	IGB-2181R	IG-913	IG-913S	IGB-14B	IGB-2017RA
IGB-4045A	IGB-2181RS	IG-654	IG-654S	IGB-14J	IGB-2017R

* See table following parts list for part number applying to assembly wanted.

‡ Service Breaker Point Set IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGB-4045,A DISTRIBUTOR ILLUSTRATION

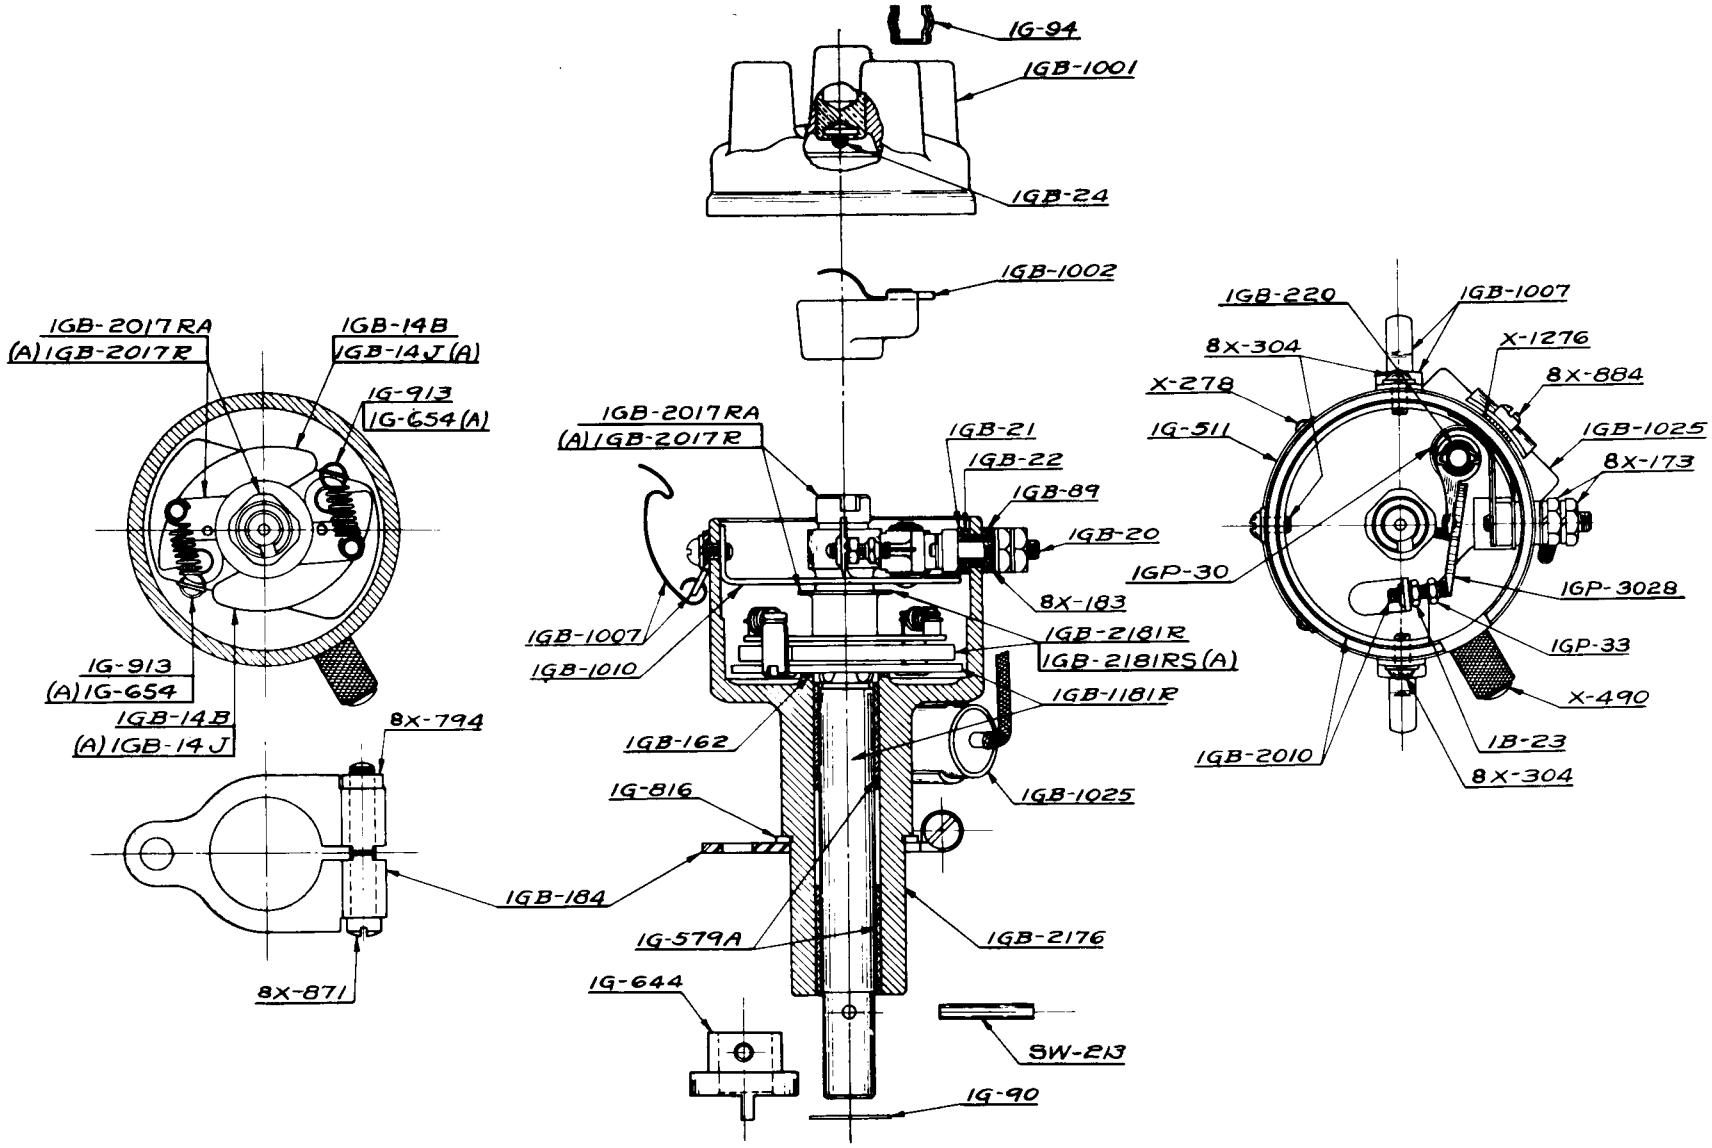

IGB-4057, A,B,C DISTRIBUTOR PARTS LIST IGB-4057, A,B,C

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Gear, Dist., Follower
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H. T. Wire
IGB-20	1	Post, Primary Terminal, #10-32x3/4
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-89	1	Bushing, Insulating, Term. Post
IGB-1001	1	Cap
IGB-1002	1	Rotor
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490	1	Oiler, Sleeve, Press in, 1/4
*	1	Shaft & Gov. Assy.
*	2	Weight, Governor
*	1	Shaft, Drive
IGB-2017R	1	Cam, & Stop Plate, 4 Cyl., R.H.
*	1	Spring Set, Gov. Weight
IGP-33†	1	Contact Breaker Screw
IGP-3028†	1	Arm Assy., Breaker
IGP-30	1	Spring
*	1	Rivet, Gear
IGW-46	1	Washer, Thrust
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
X-195	3	Washer, Lock, Breaker Plate, #8
X-196	2	Washer, Lock, Term. Stud, #10
8X-304	3	Screw, Attaching, Breaker Plate, Rd. hd., #8-32x5/16
8X-722	1	Screw, Attaching, Condenser, Bdg. hd., #8-32x3/16
X-1270	1	Washer, Skpf., Term. Stud, #10
X-1276	1	Washer, Skpf., Attaching Condenser #8
		1 2 3 4 5

(Issued 4-27-44)


Assembly No.	Gear, Dist., Follower	Shaft & Gov. Assy.	Weight, Governor	Shaft, Drive	Spring Set, Gov. Weight	Rivet, Gear
IGB-4057	None	IGB-2181RD	IGB-14B	IGB-1181RA	IGC-78S	None
IGB-4057A	GE-36	IGB-2251RB	IGB-14B	IGB-1251R	IGC-78S	SW-213
IGB-4057B	None	IGB-2251RA	IGB-14A	IGB-1251R	IGB-202S	None
IGB-4057C	None	IGB-2251RC	IGB-14C	IGB-1251R	IG-817S	None

* See table following parts list for part number applying to assembly wanted.

† Contact Set, Service, IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4057 A,B C DISTRIBUTOR ILLUSTRATION

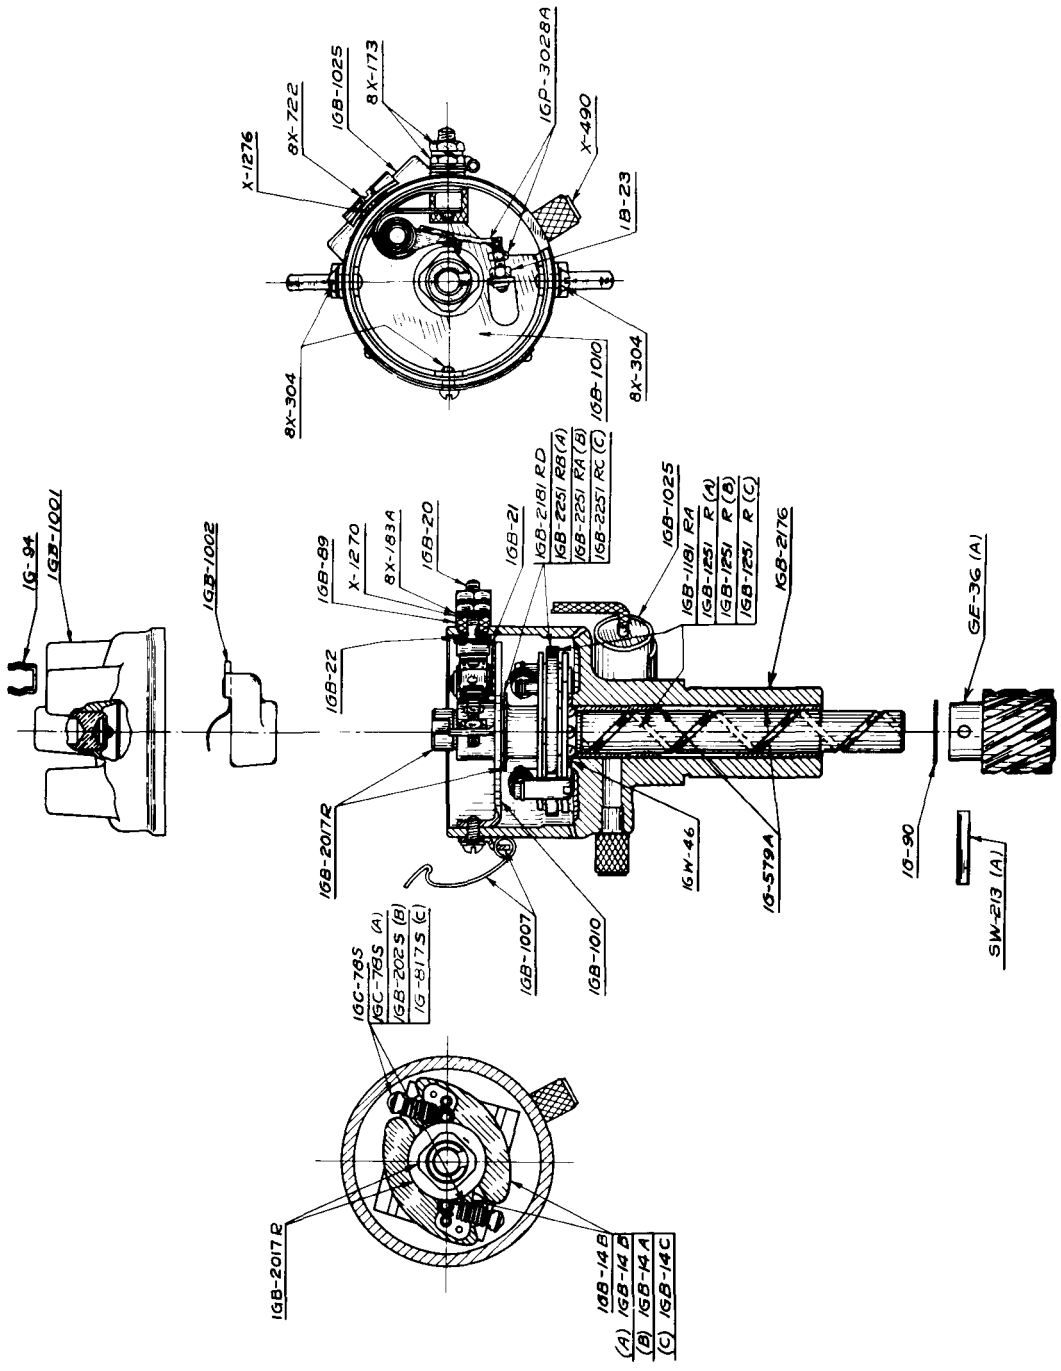

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-587	1	Spring Washer
IG-688	2	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-806	1	Advance Control Arm
IG-816	1	Thrust Washer
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-2253R	1	Breaker Cam & Shaft
IGB-3037	1	Dist. Base Assembly
IB-23	1	Breaker Point Lock Nut
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Ins.
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025B	1	Condenser Assembly
IGB-2037	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IGB-38	1	Breaker Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in - Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-724	3	#8-32x3/16 Bdg. Hd. Sc.
X-1276	1	#8 Skpf. Washer
8X-163	1	1/4-20 Hex. Nut
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 5-25-37)


‡ Service Breaker Point Set IGP-3028A.


Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4064 DISTRIBUTOR ILLUSTRATION

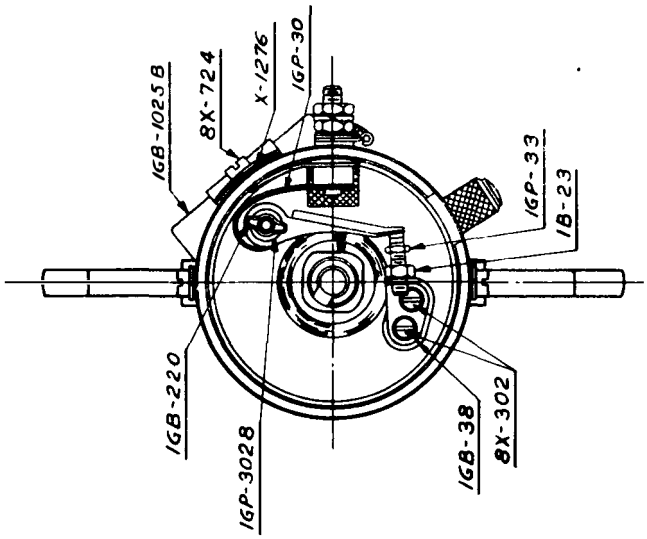

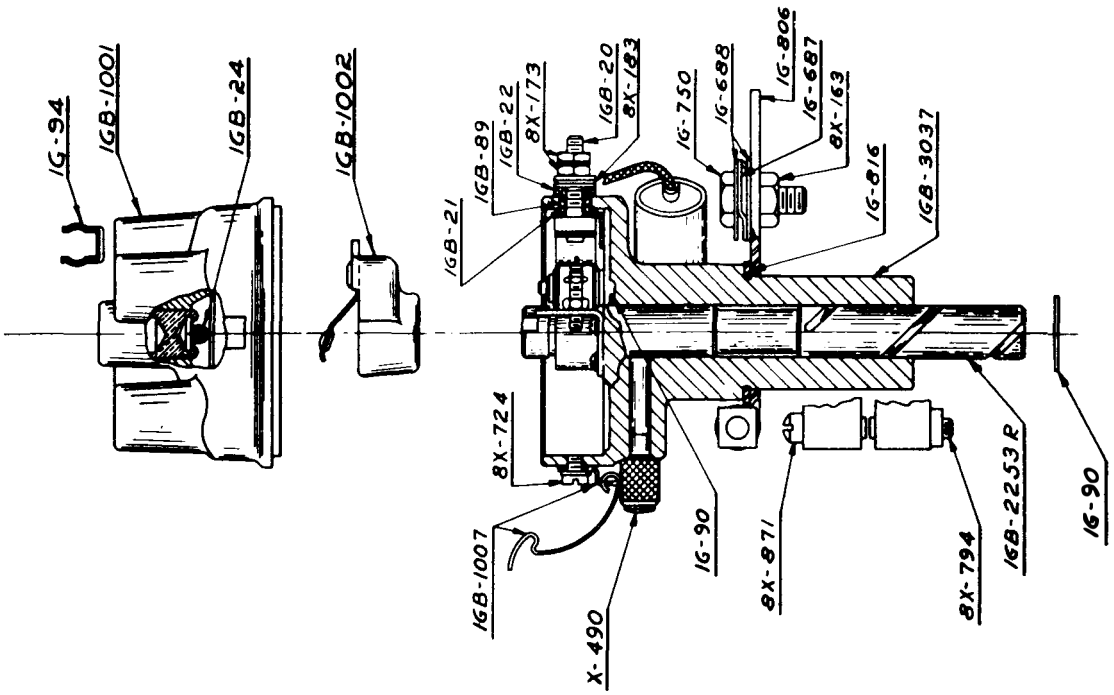

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-806	1	Advance Control Arm
IG-816	1	Thrust Washer
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-2253R	1	Breaker Cam & Shaft
IGB-3037	1	Dist. Base Assembly
IB-23	1	Breaker Point Lock Nut
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Ins.
IGB-22	1	Insulating Washer
IGB-89	1	Insuleting Bushing
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025B	1	Condenser Assembly
IGB-2037	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IGB-38	1	Breaker Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in - Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-724	3	#8-32x3/16 Bdg. Hd. Sc.
X-1276	1	#8 Skpf. Washer
8X-163	1	1/4-20 Hex. Nut
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
		1 2 3 4 5


(Issued 5-25-37)

‡ Service Breaker Point Set IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4064 DISTRIBUTOR ILLUSTRATION

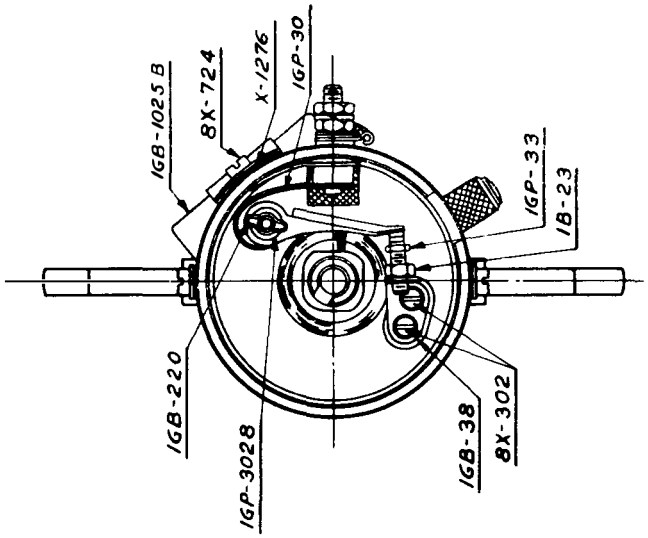

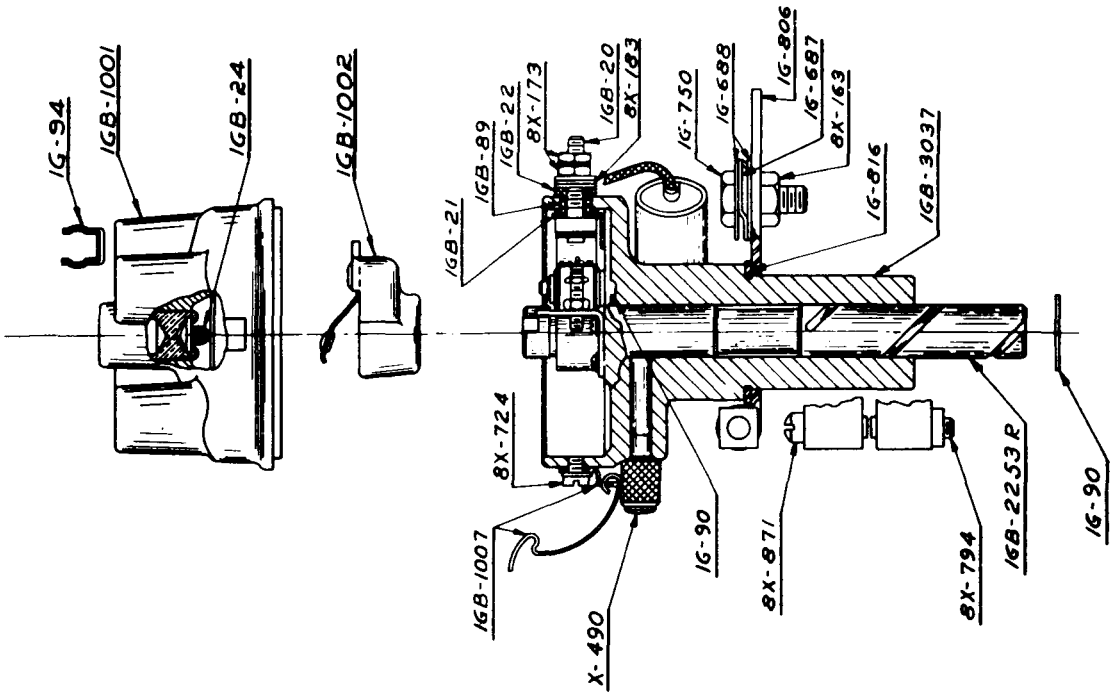

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-36	1	Dist. Gear - Follower
IG-90	1	Thrust Washer
IG-94	5	H.T. Wire Terminal
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1001	1	Dist. Cap Assy.
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assy.
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight
*	1	Drive Shaft Assy.
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.
*	2	Weight Spring
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 5-26-36)


Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight	Weight Spring	Weight Sp. Set
IGB-4065A	IGB-2201R	IGB-1201R	IGB-14B	IGC-78	IGC-78S
IGB-4065B	IGB-2262R	IGB-1262R	IGB-14A	IGB-202	IGB-202S
IGB-4065D	IGB-2201RC	IGB-1201R	IGB-14F	IG-817	IG-817S

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4065A,B,D DISTRIBUTOR ILLUSTRATION

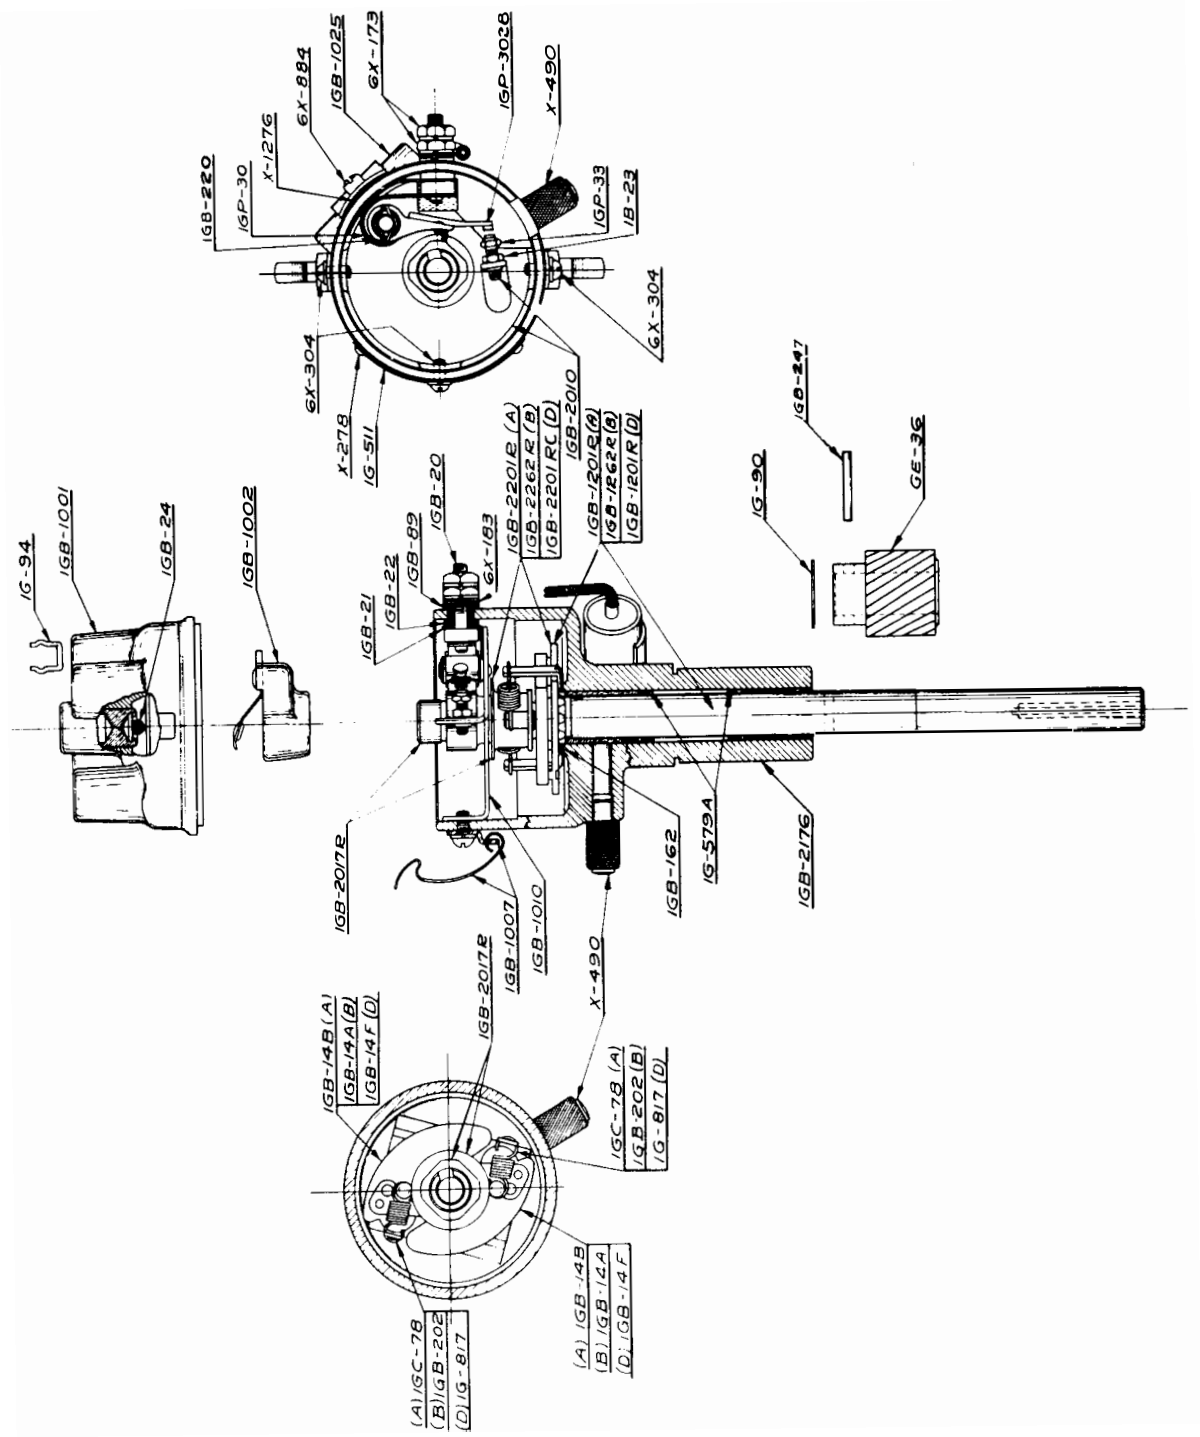

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-688A	1	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1001	1	Dist. Cap Assy.
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Assembly
*	2	Weight Spring
*	1	Drive Shaft Assy.
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.
IGC-24K	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer 1 2 3 4 5

(Issued 5-26-36)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight Spring	Weight Assy.	Weight Sp. Set
IGB-4068	IGB-2251RA	IGB-1251R	IGB-202	IGB-14A	IGB-202S
IGB-4068A	IGB-2181RU	IGB-1181RA	IG-796	IGB-1014RE	IG-796S

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4068-A DISTRIBUTOR ILLUSTRATION

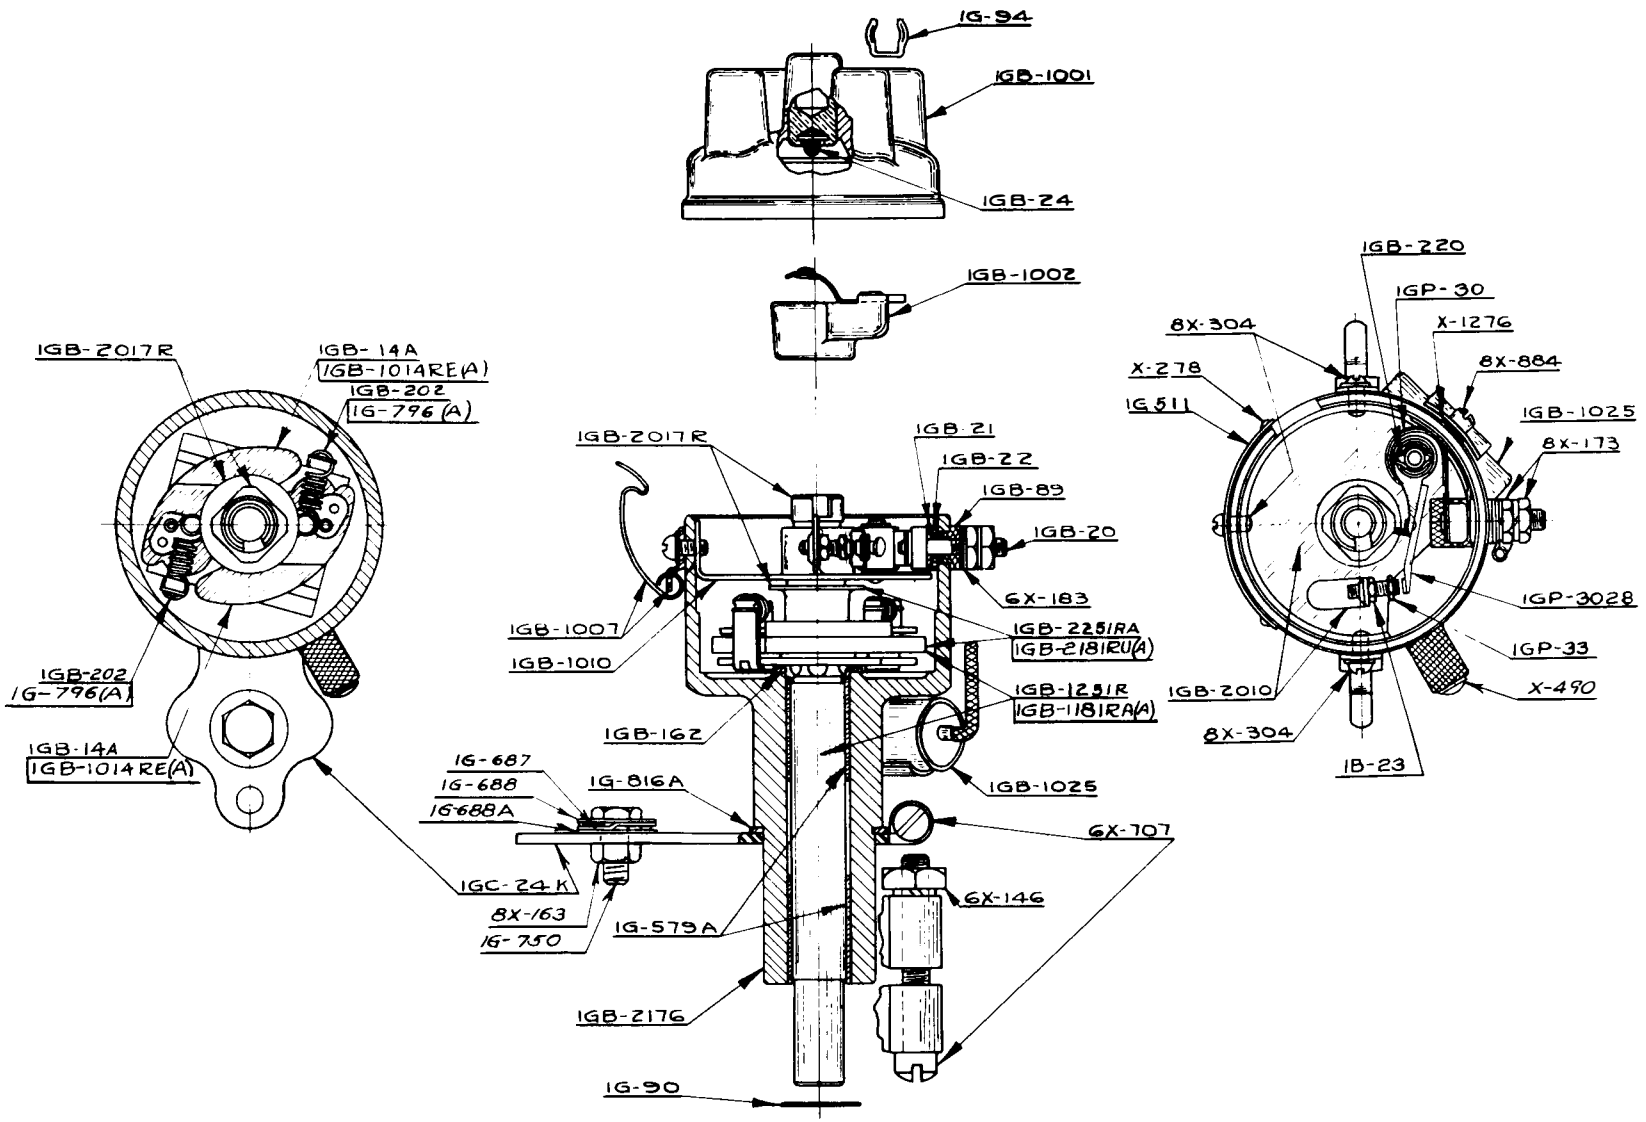

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H. T. Wire Terminal
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Point Screw
IGB-1010	1	Breaker Plate Part Assy.
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2181RU	1	Drive Shaft & Gov. Assy.
IG-796	2	Weight Spring
IGB-1014RE	2	Weight Assembly
IGB-1181RA	1	Drive Shaft Assy.
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.
IGB-3664	1	Breaker Arm Assembly
IGB-209	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGC-24N	1	Advance Control Arm
6X-146	1	1/4-20 Hex. Nut
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-707	1	1/4-20xl 7/8 Fill. Hd. Screw
6X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 10-11-34)
(R-8-7-36)

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4082 DISTRIBUTOR PARTS LIST

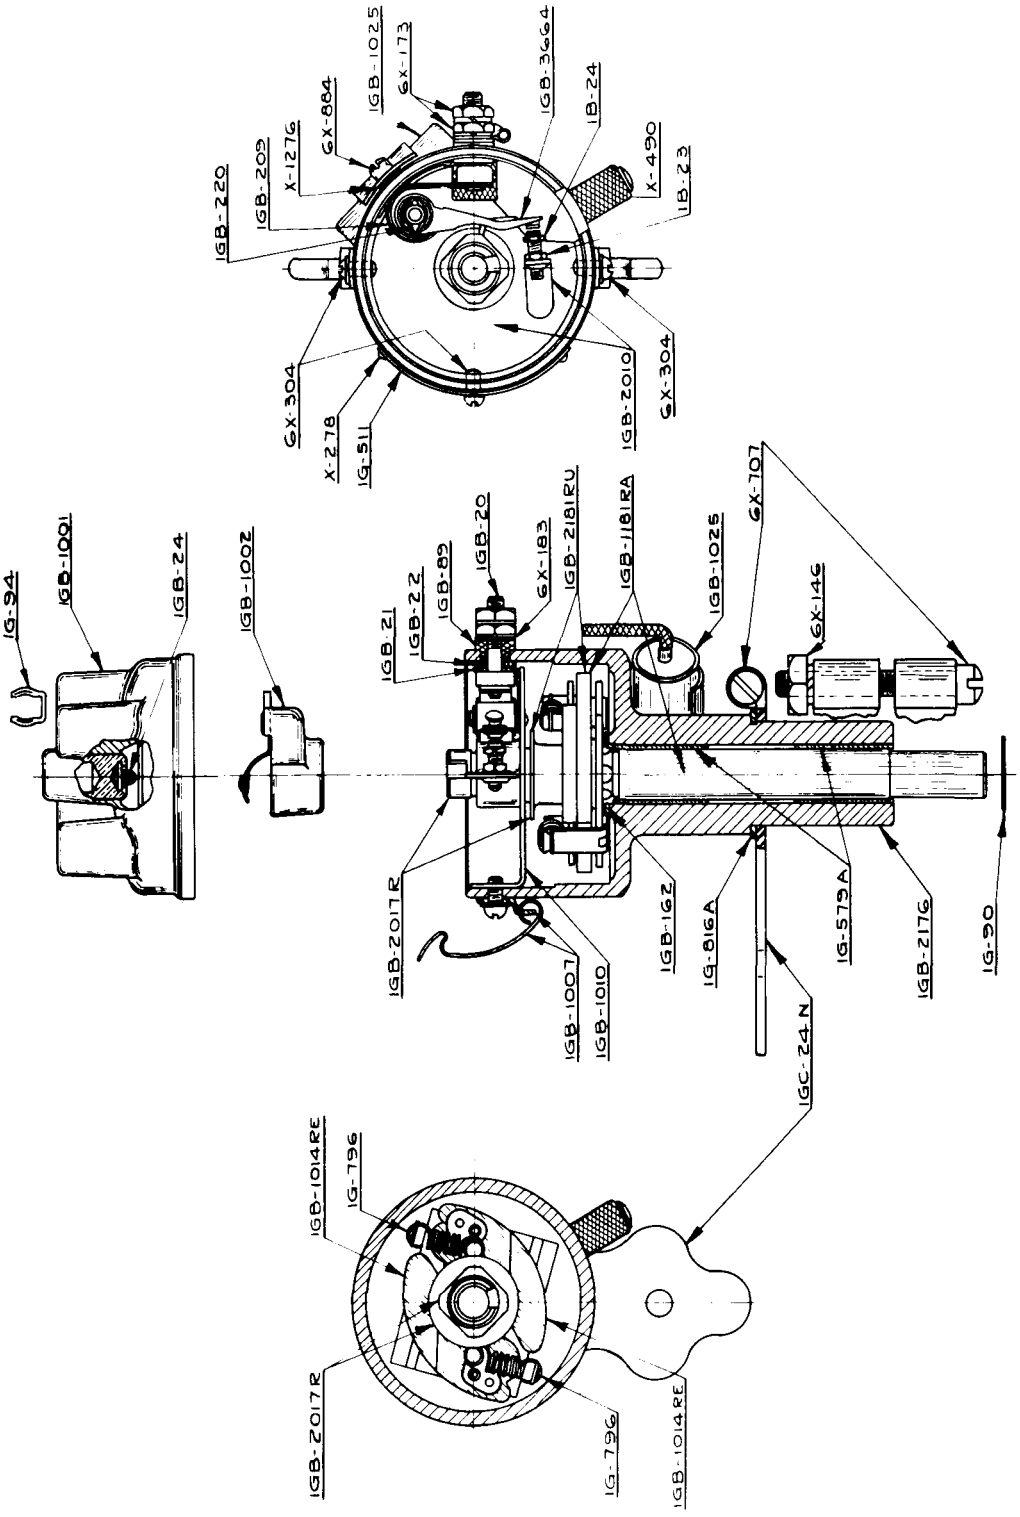

IGB-4095 DISTRIBUTOR PARTS LIST IGB-4095

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	5	H. T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-816	1	Thrust Washer
IG-2806J	1	Advance Control Arm Assy.
IG-686	1	Advance Control Screw
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
X-199	1	1/4 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill.Hd.Sc.
8X-1063	1	1/4-28 Hex. Nut
IGB-1001	1	DISTRIBUTOR CAP ASSEMBLY
IGB-24	1	Contact Plunger
IGB-1002	1	ROTOR
IGB-1125R	1	Breaker Cam & Shaft - 4 Cyl. R. H.
IGB-3037	1	Distributor Base Assembly
CB-140	1	Insulating Bushing
IB-23	1	Breaker Point Lock Nut
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	2	Insulating Washer
IGB-1007	2	Dist. Cap Spring & Hinge Assy.
IGB-1025B	1	CONDENSER ASSEMBLY
		1 2 3 4 5
IGB-2037	1	Dist. Base Part Assembly
IG-511	1	Name Plate
IGB-38	1	Brkr. Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in - Sleeve oiler
X-1012	2	#6 Lock Washer
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-722	3	#8-32x3/16 Bdg. Hd. Screw
X-1270	1	#10 Skpf. Washer
X-1276	1	#8 Skpf. Washer
SW-213	1	Distributor Drive Rivet
		1 2 3 4 5

‡ Service BREAKER POINT SET IGP-3028A.

UNIT	APPLICATION
IGB-4095	J. W. Lathrop


(Issued 12-7-39)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4095 DISTRIBUTOR ILLUSTRATION

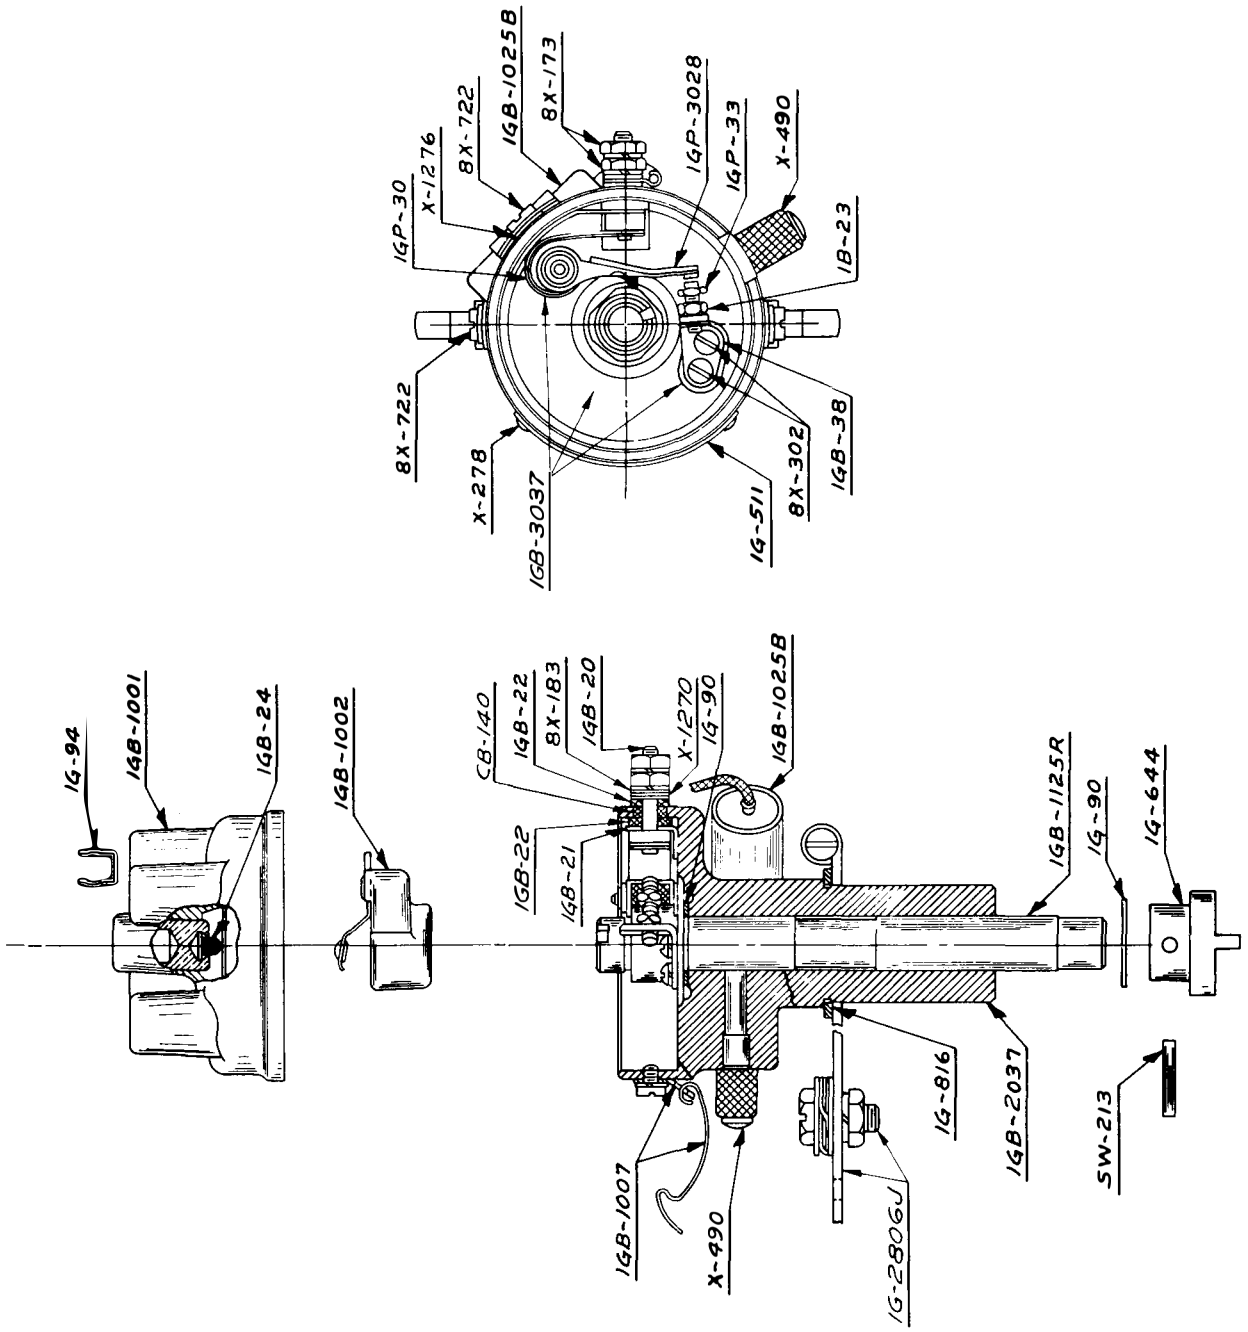

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H.T. Wire Terminal
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
*	1	Drive Shaft & Gov. Assy.
*	2	Weight
*	2	Weight Spring
IGB-1249R	1	Drive Shaft Assy.
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.
IGB-2254	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 10-1-36)

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set
IGB-4096	IGB-2249R	IGB-14A	IGB-202 (2)	IGB-202S
IGB-4096A	IGB-2249RA	IGB-14G	IGB-202 (2)	IGB-202S
IGB-4096B	IGB-2249RB	IGB-14	IG-775 IG-784 1 ea.	IG-775SS

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4096-A-B DISTRIBUTOR ILLUSTRATION

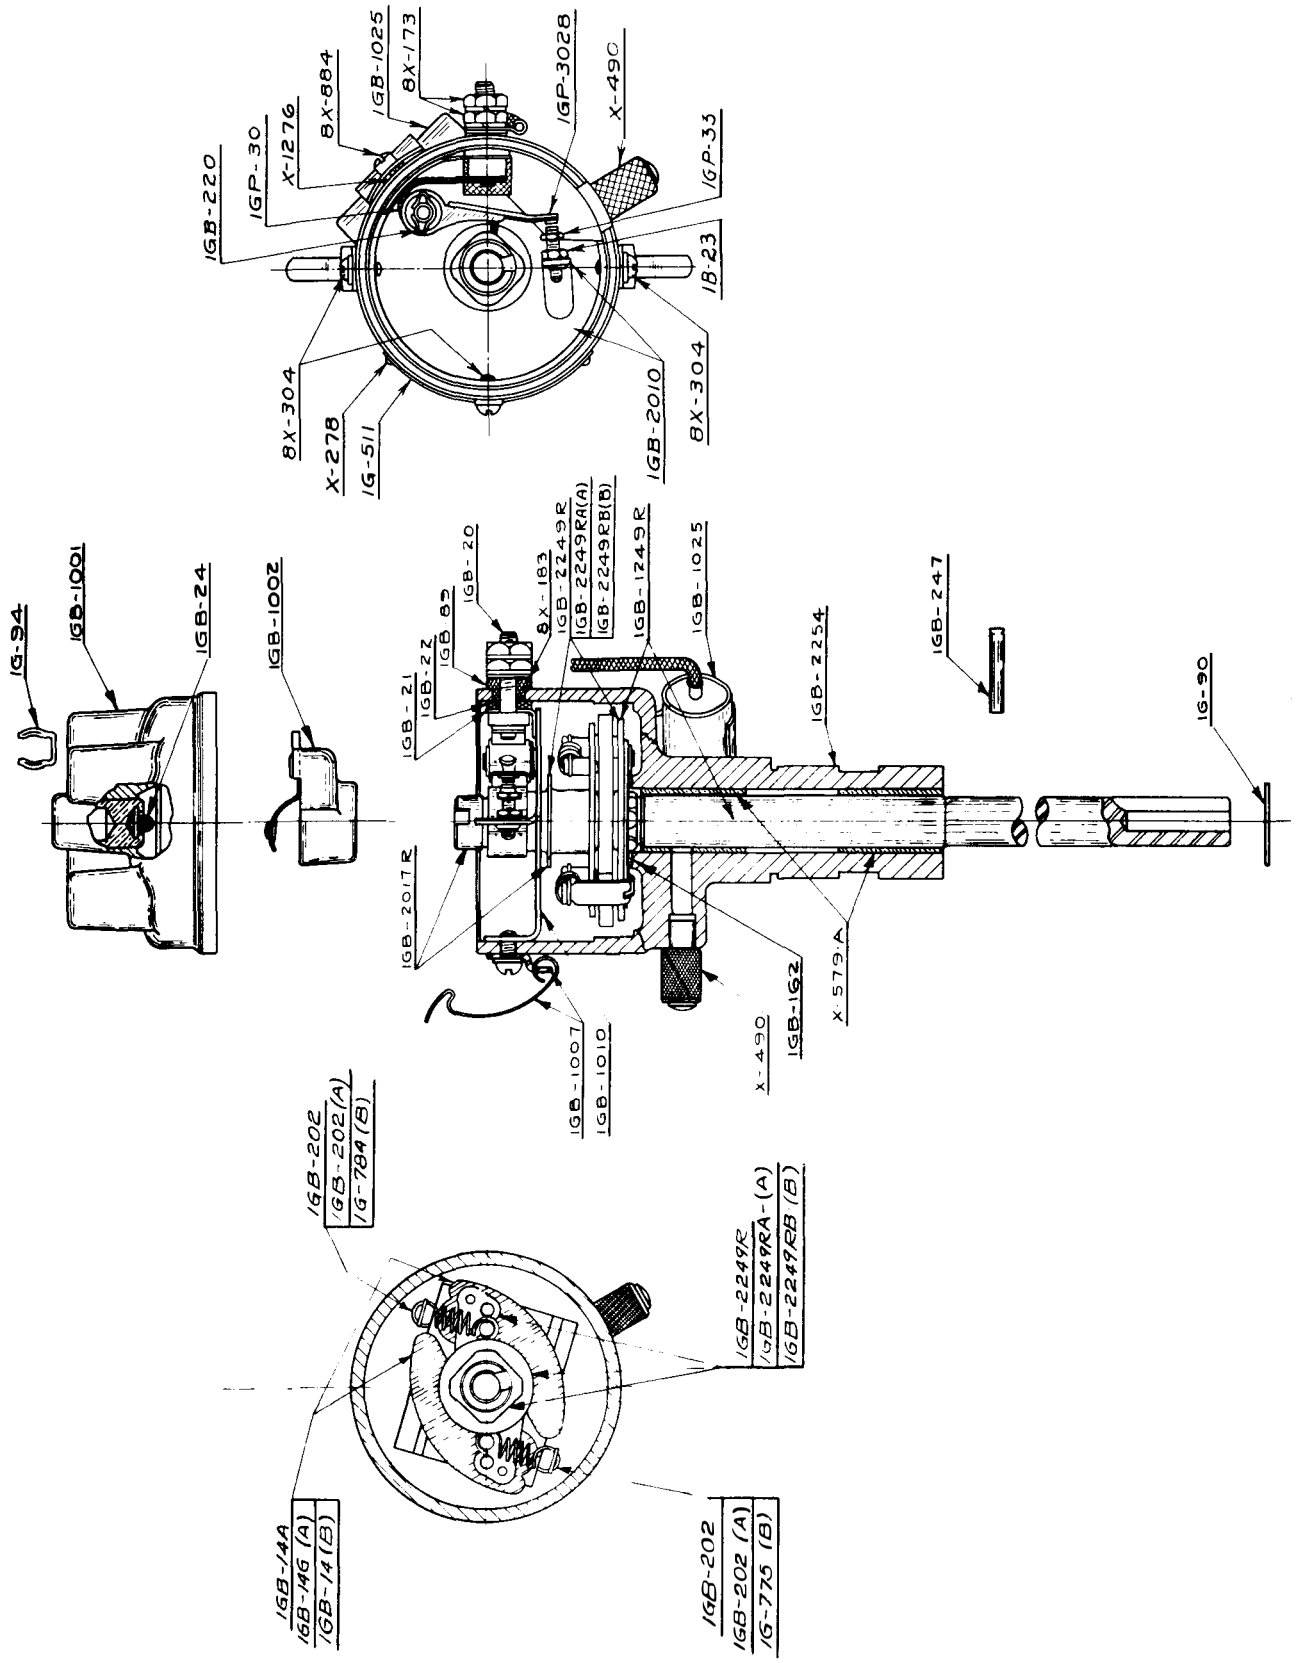


Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-816A	1	Thrust Washer
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-2253R	1	Breaker Cam & Shaft
IGB-3037	1	Dist. Base Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Screw Point
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Ins.
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025B	1	Condenser Assy.
IGB-2037	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IGB-38	1	Breaker Point Screw Bracket
X-278	2	3/32x3/16 Tub. Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in-Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-884	3	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGC-24N	1	Advance Control Arm
6X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 12-2-35)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4099 DISTRIBUTOR ILLUSTRATION

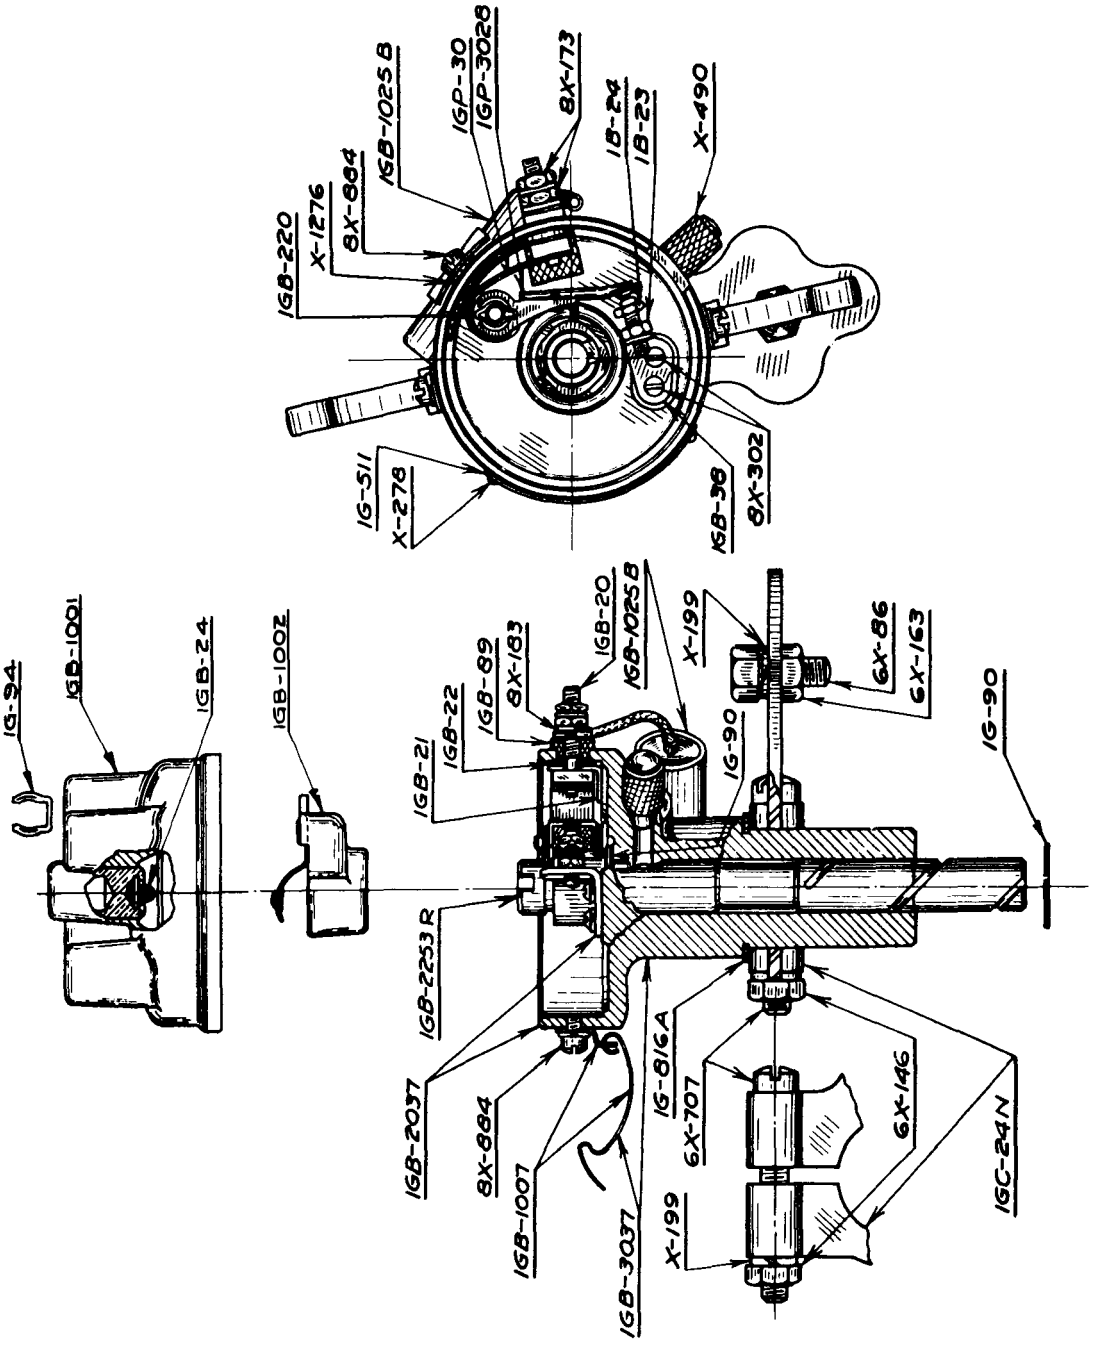

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	3	H.T. Wire Terminal
IG-816	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1065	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2175R0	1	Drive Shaft & Gov. Assy.
IG-817	2	Weight Spring
IGB-14B	2	Weight
IGB-1066R	1	Cam & Stop Plate - 2 cyl. R.H.
IGB-1175R	1	Drive Shaft Assy.
IGB-2279	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 12-14-36)


‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4100 DISTRIBUTOR ILLUSTRATION

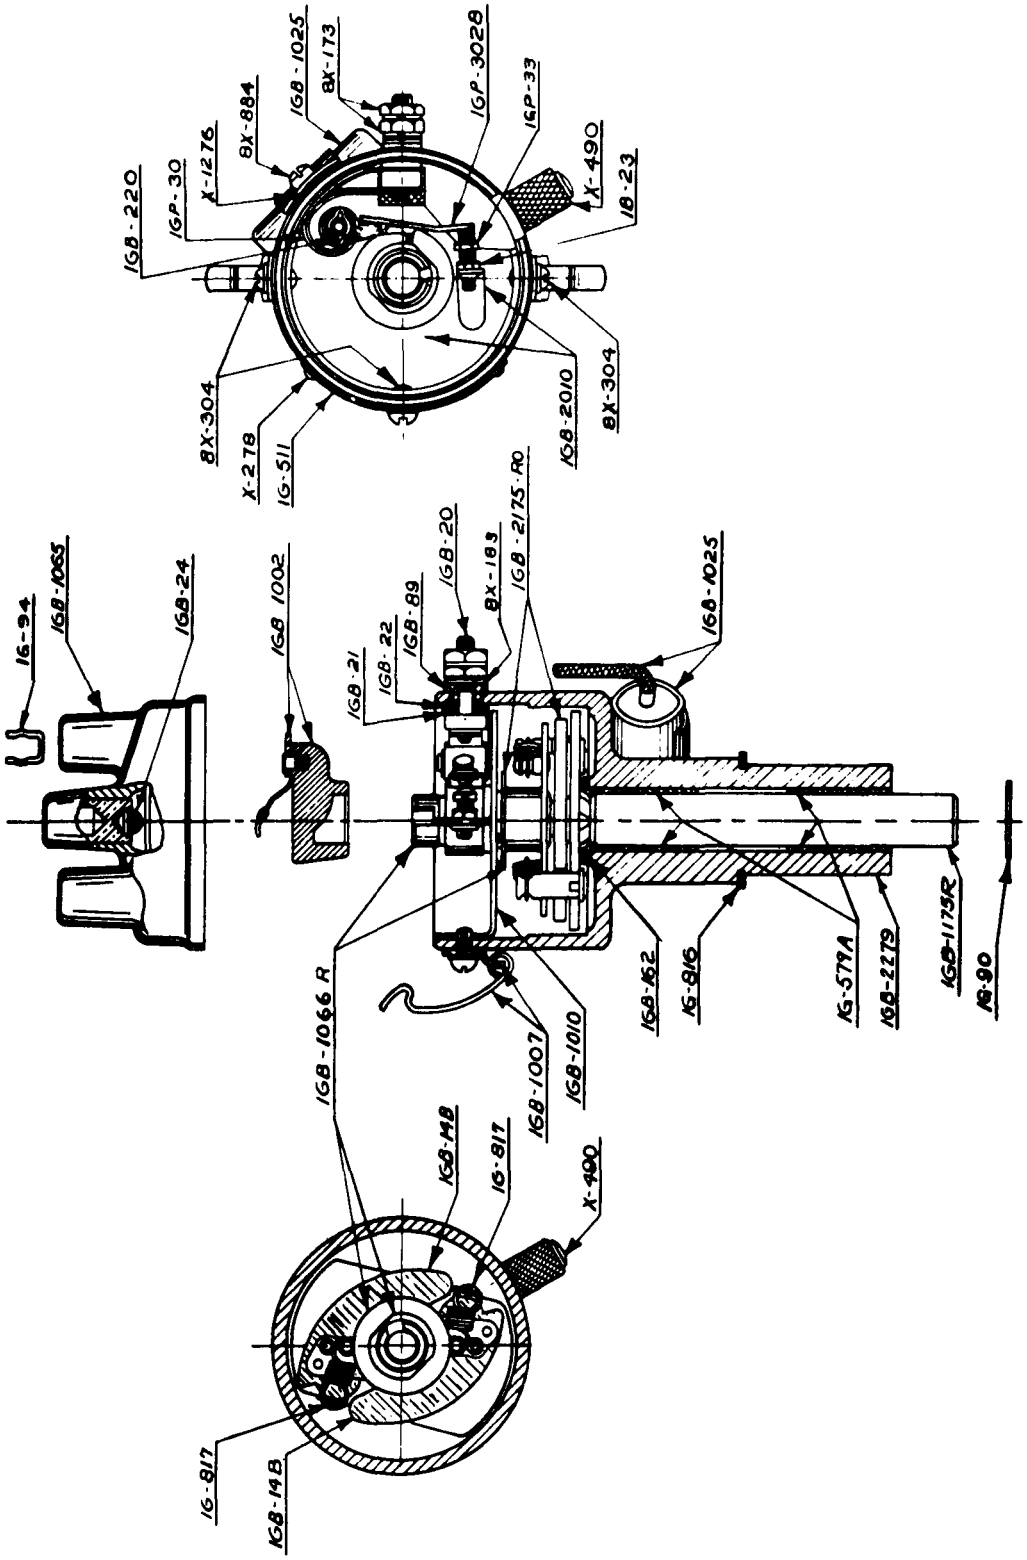

Part No.	No. Used	Name of Part
		1 2 3 4 5
GG-133	1	Dist. Drive Rivet
IG-90	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1001A	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002C	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assy.
IGB-1025	1	Condenser Assy.
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2268	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IGS-16	1	Name Plate
X-278	2	3/32x3/16 Tubular Rivet
X-382	1	1/8 Grease Cup
IGB-2276R	1	Drive Shaft & Gov. Assy.
IGB-14K	2	Weight
IGB-1276R	1	Drive Shaft Assy.
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.
IGE-29	2	Weight Spring
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGB-19	1	Drive Shaft Collar
IGB-1020S†	1	Advance Control Arm Assy.
IG-516C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	1	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
12X-195	3	#8 Lock Washer
12X-196	1	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 7-19-35)
(R-5-10-37)

† Assemblies having a "-1" suffix are the same as an assembly having an identical assembly number with the "-1" omitted except that the "-1" assembly includes the parts indicated with a "†".

NOTE:- Use IGP-3028A breaker point set and IGE-29S weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4102, -1 DISTRIBUTOR ILLUSTRATION

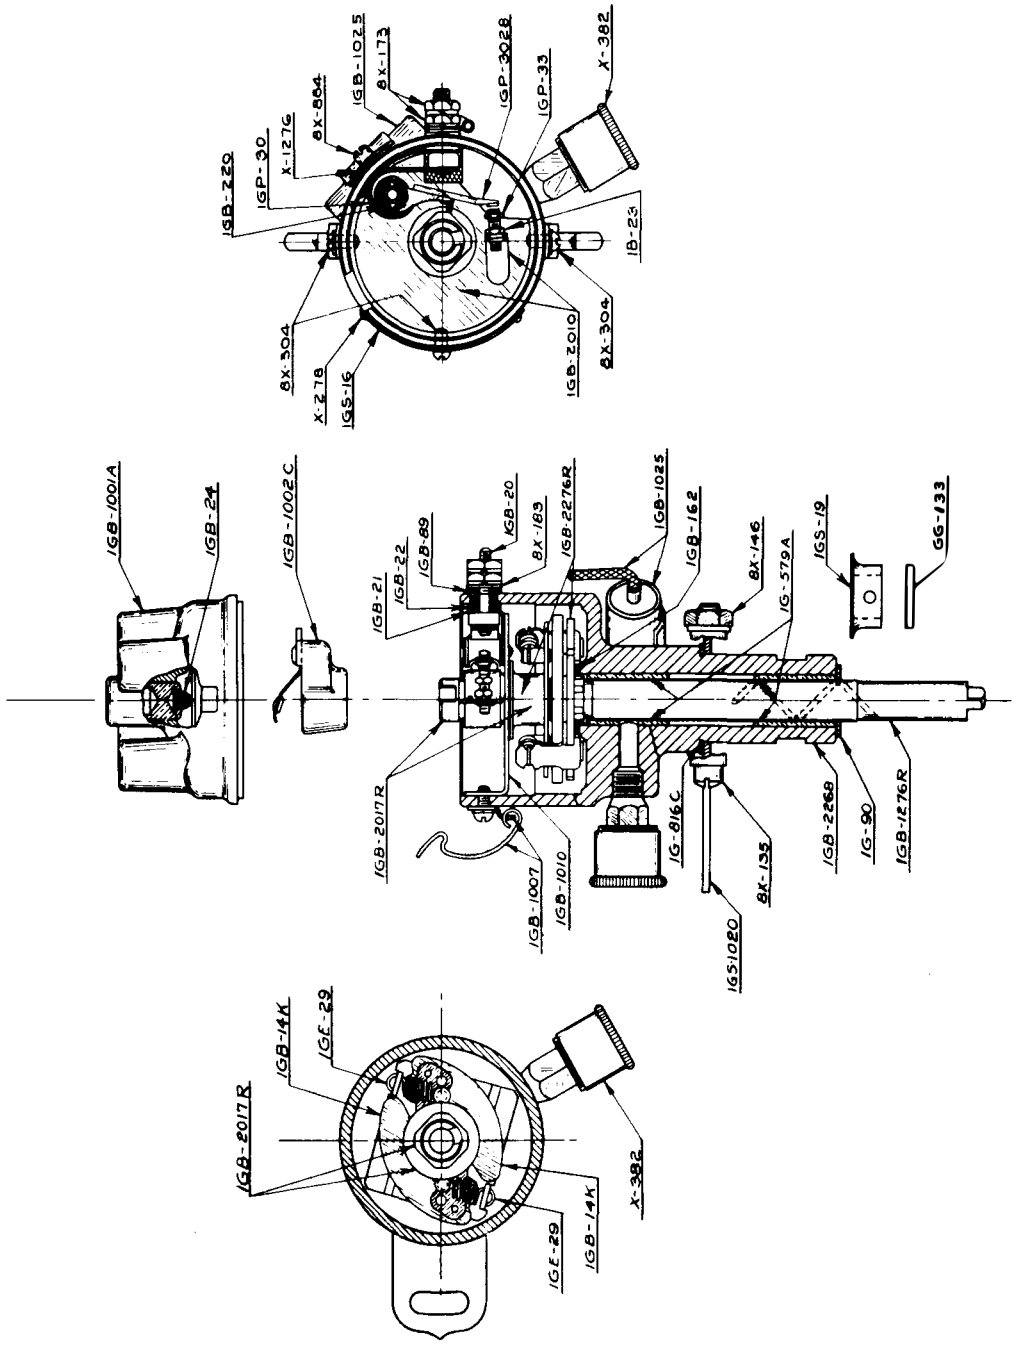


Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-50	1	Dist. Gear - Follower
IG-90	2	Thrust Washer
IG-94	3	H.T. Wire Terminal
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-806	1	Advance Control Arm
IG-816	1	Thrust Washer
IGB-199	1	Dist. Shaft Collar
IGB-247	1	Dist. Drive Rivet
IGB-1002D	1	Rotor
IGB-1065	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1287R	1	Drive Shaft Assy.
IGB-3290	1	Dist. Base Assembly
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Screw Point
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Sp. & Hinge Assembly
IGB-1025B	1	Condenser Assy.
IGB-2290	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGB-38	1	Breaker Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in - Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
8X-173	2	#10-32 Hex. Nut
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-183	1	#10 Brass Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-884	3	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
SW-213	1	Dist. Drive Rivet
X-199	1	1/4 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-1063	1	1/4-28 Hex. Nut
		1 2 3 4 5

(Issued 12-4-35)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4105A DISTRIBUTOR ILLUSTRATION

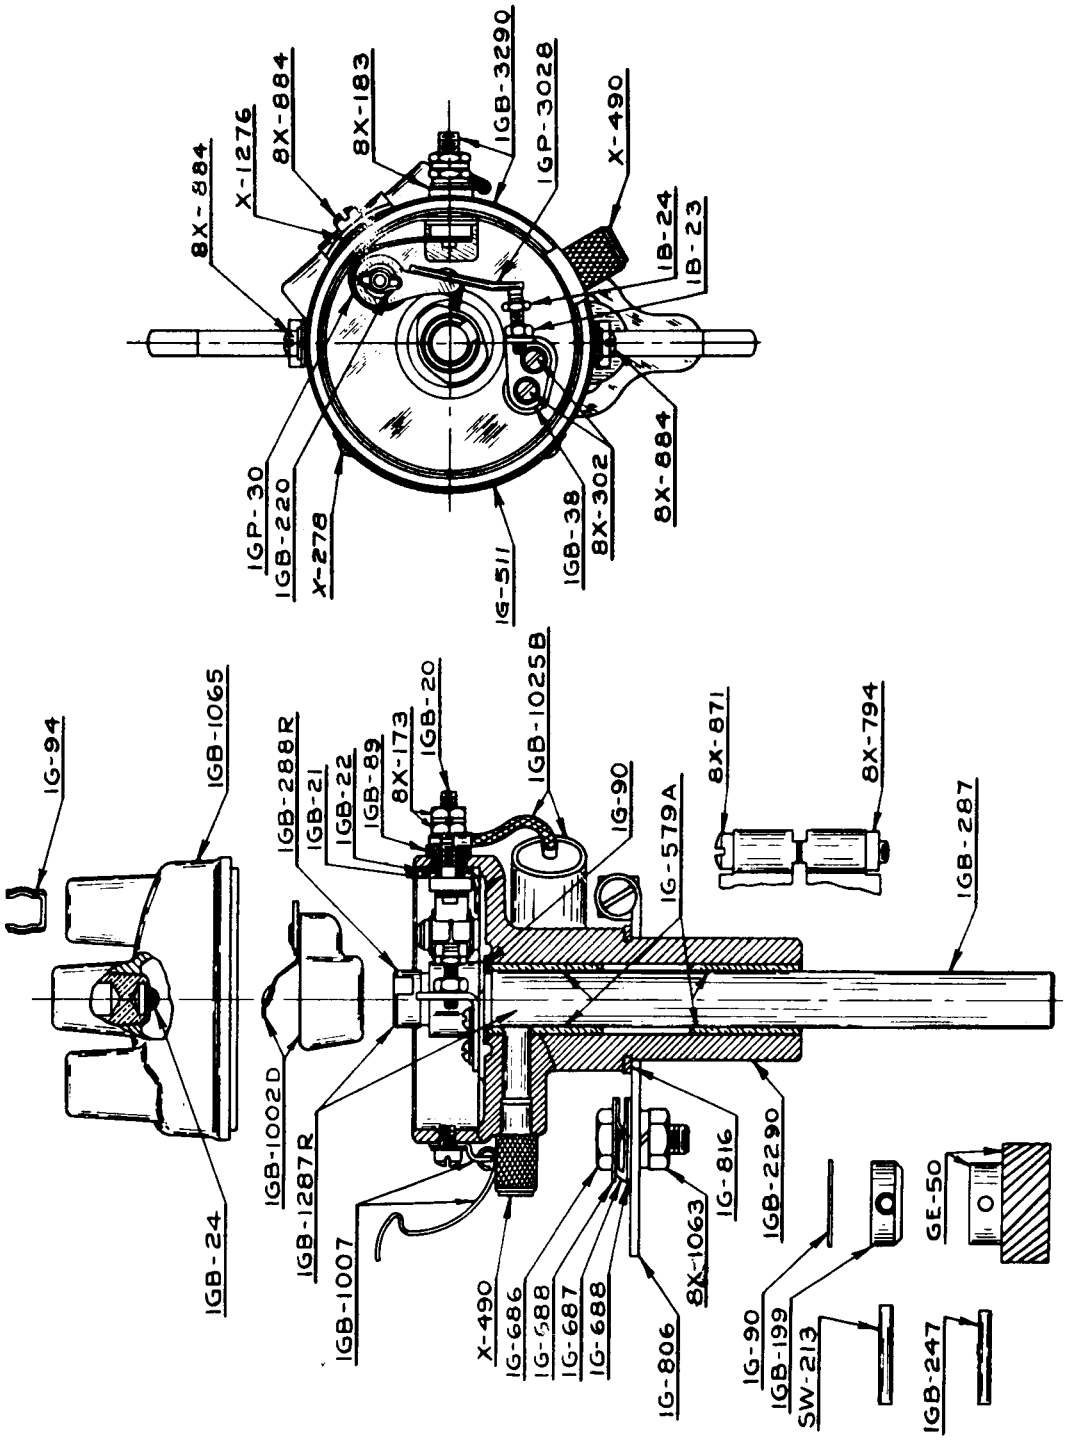

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H.T. Wire Terminal
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-199	1	Dist. Shaft Collar
IGB-220	1	Lock Spring
IGB-1001	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-1002	1	Rotor
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-2010	1	Breaker Plate Assembly
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2295L	1	Drive Shaft & Gov. Assy.
IG-784‡	2	Weight Spring
IGB-14D	2	Weight Assembly
IGB-1295L	1	Drive Shaft Assy.
IGB-2017L	1	Cam & Stop Plate - 4 cyl. L.H.
IGC-24N	1	Advance Control Arm
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
SW-213	1	Dist. Drive Rivet
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 12-23-36)

‡ Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-784S.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4106 DISTRIBUTOR ILLUSTRATION

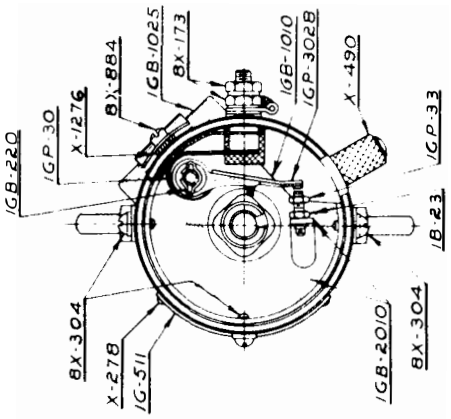

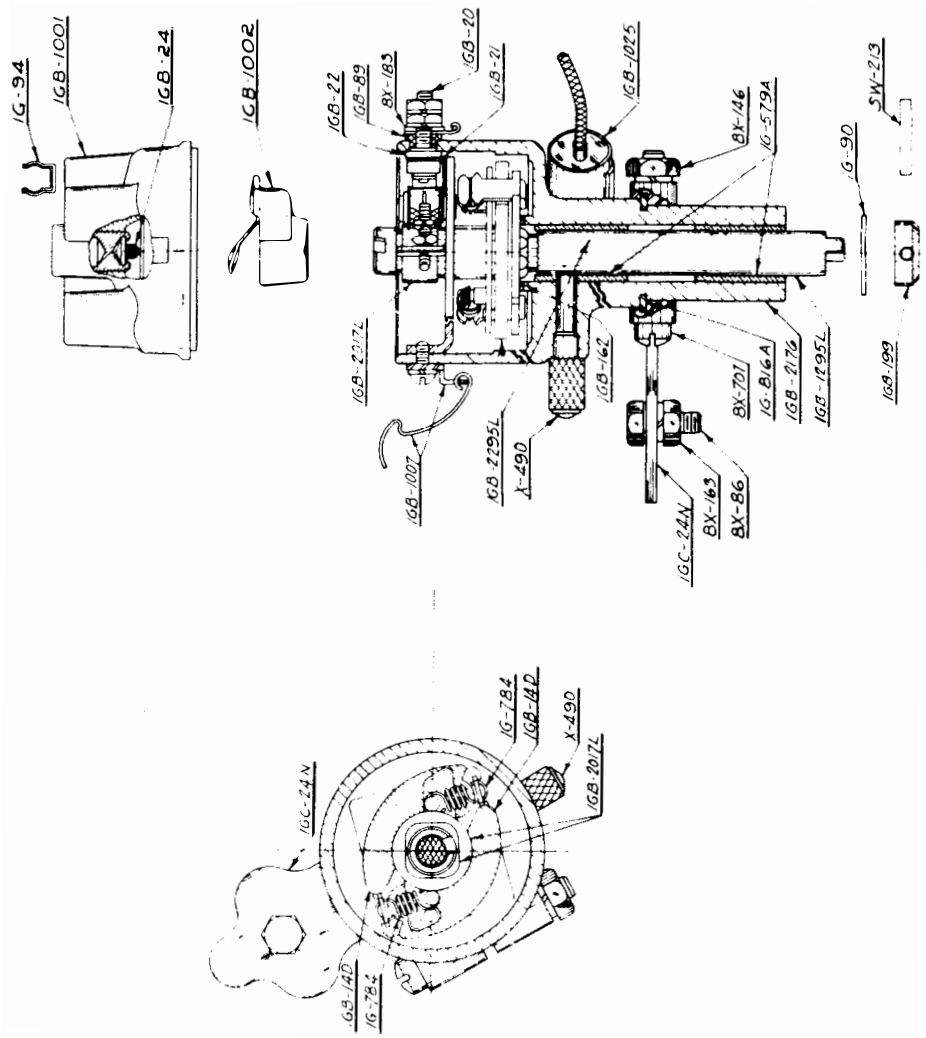

Part No.	No. Used	Name of Part
		1 2 3 4 5
GJ-60	1	C.B. Lead Assy.
X-606	1	Terminal
X-755	1	Terminal
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-688	1	Advance Control Washer
IG-816	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-224	1	Dist. Cap Cover
IGB-227	1	Advance Control Screw - 1/4-20
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1223	1	Rotor
IGB-1225	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-230	2	Rubber Gasket
IGB-1231	1	Advance Control Arm
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
*	1	Drive Shaft & Gov. Assy.
*	2	Weight
*	2	Weight Spring
*	1	Drive Shaft Assy.
IGB-2232L	1	Cam & Stop Plate - 4 cyl. L.H.
IGB-2233	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Screw
8X-902	1	#10-32x3/8 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
8X-1407	2	#8-32x9/16 Ctsk. Hd. Screw
		1 2 3 4 5

(Issued 9-29-36)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight	Weight Spring	Weight Sp. Set
IGB-4201	IGB-2181LD	IGB-1181LB	IGB-14L	IGB-208 IGB-234 1 ea.	IGB-208SS
IGB-4201A	IGB-2181LG	IGB-1181L	IGB-14B	IGC-78 (2)	IGC-78S

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in Equipment & Parts Li ts Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the com lete part can be assembled as needed."

IGB-4201-A DISTRIBUTOR ILLUSTRATION

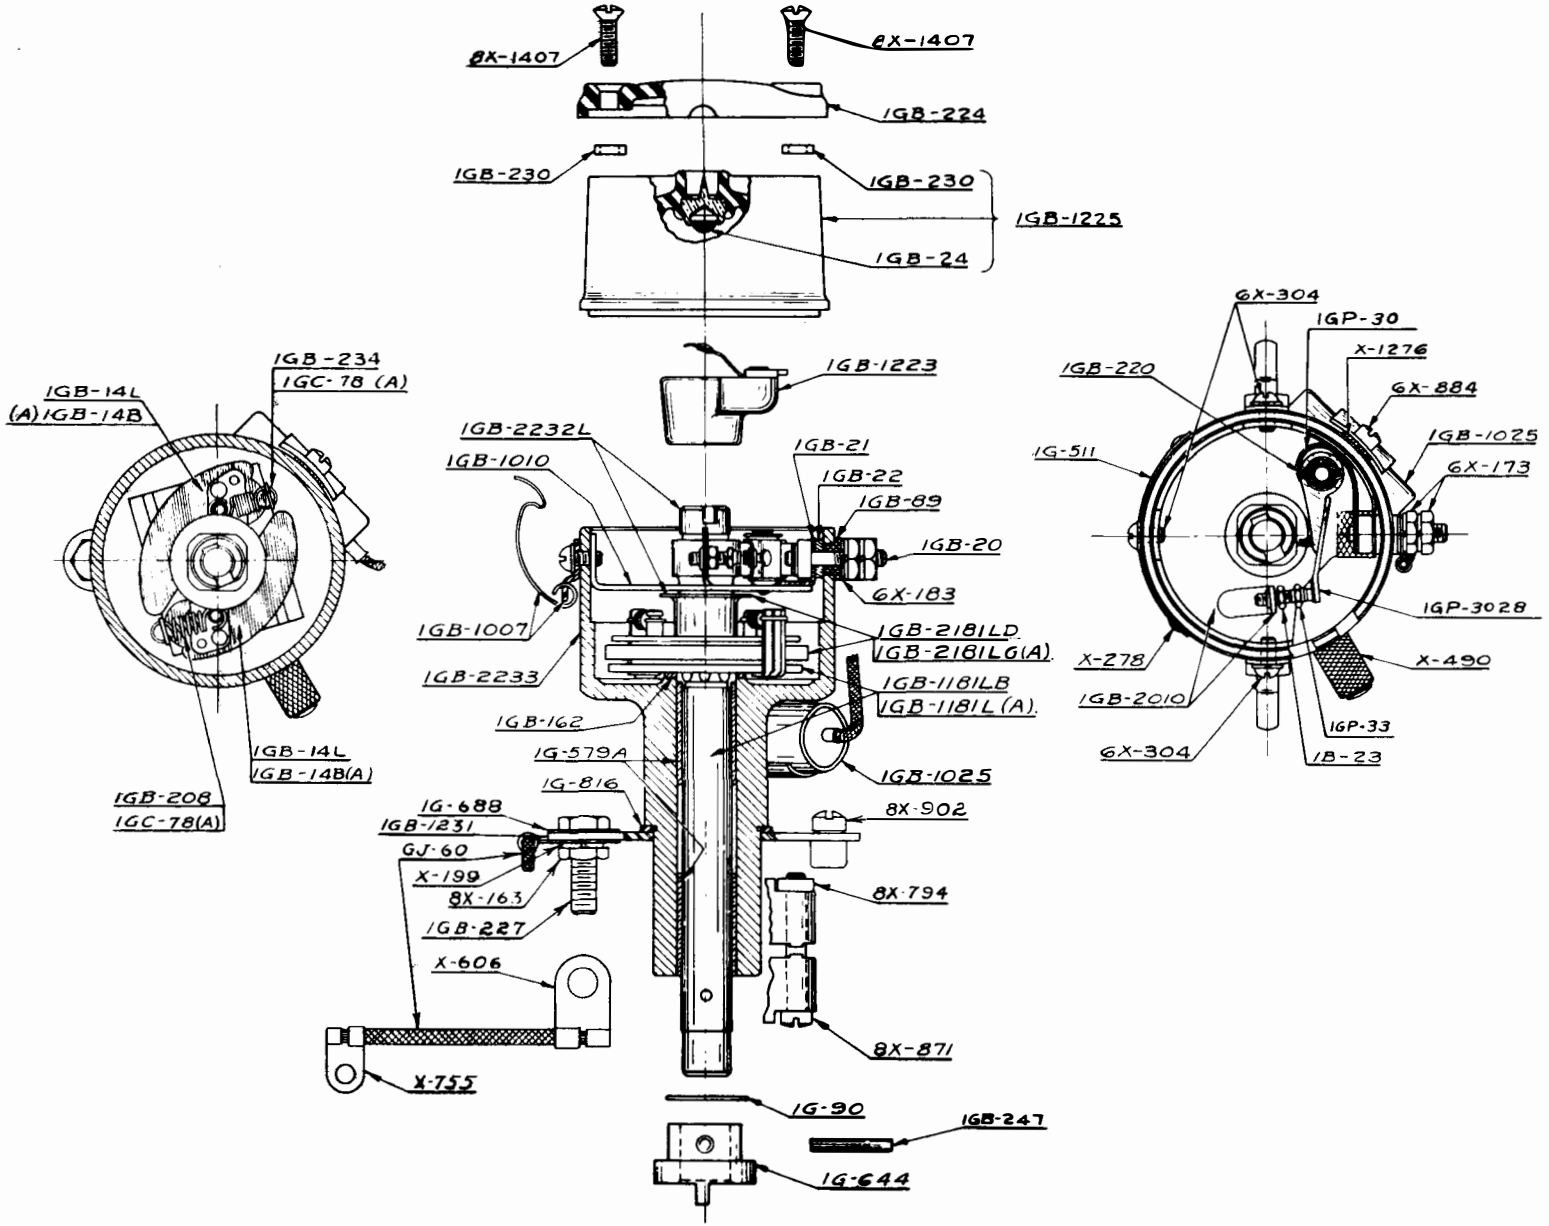

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-816	1	Thrust Washer
IG-2806-1	1	Advance Control Arm Assy.
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-750	1	Advance Control Screw
8X-163	1	1/4-20 Hex. Nut
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-224	1	DISTRIBUTOR CAP COVER
IGB-1225	1	DISTRIBUTOR CAP ASSY.
IGB-24	1	Contact Plunger
IGB-230	2	Rubber Gasket
IGB-1239	1	ROTOR
IGB-1305L	1	Brkr. Cam & Shaft - 2 Cyl. - L.H.
IGB-3303	1	Distributor Base Assy.
DH-11	1	Insulating Bushing
IB-23	1	Brkr. Point Lock Nut
IGB-21	1	Terminal Post Insulation
IGB-1007	1	Dist. Cap Spr. & Hinge Assembly
IGB-1025B	1	CONDENSER ASSY.
IGB-2303	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGB-38	1	Breaker Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press In - Sleeve Oiler
X-1012	2	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGP-33*	1	Breaker Screw Point
IGW-39	1	Terminal Post - #10-32
IGW-54	1	Washer
IGW-68	1	Insulating Washer
IGW-69	1	Insulating Washer
IGW-3028*	1	Breaker Arm Assy.
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-724	3	#8-32x3/16 Bdg. Hd. Sc.
X-1276	1	#8 Skpf. Washer
8X-1340	2	#8-32x3/4 Ctsk. Hd. Screw
		1 2 3 4 5


(Issued 5-22-39)

* Service BREAKER POINT SET IGW-3028S.

UNIT	APPLICATION
IGB-4203	Easthope, Ltd.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4203 DISTRIBUTOR ILLUSTRATION

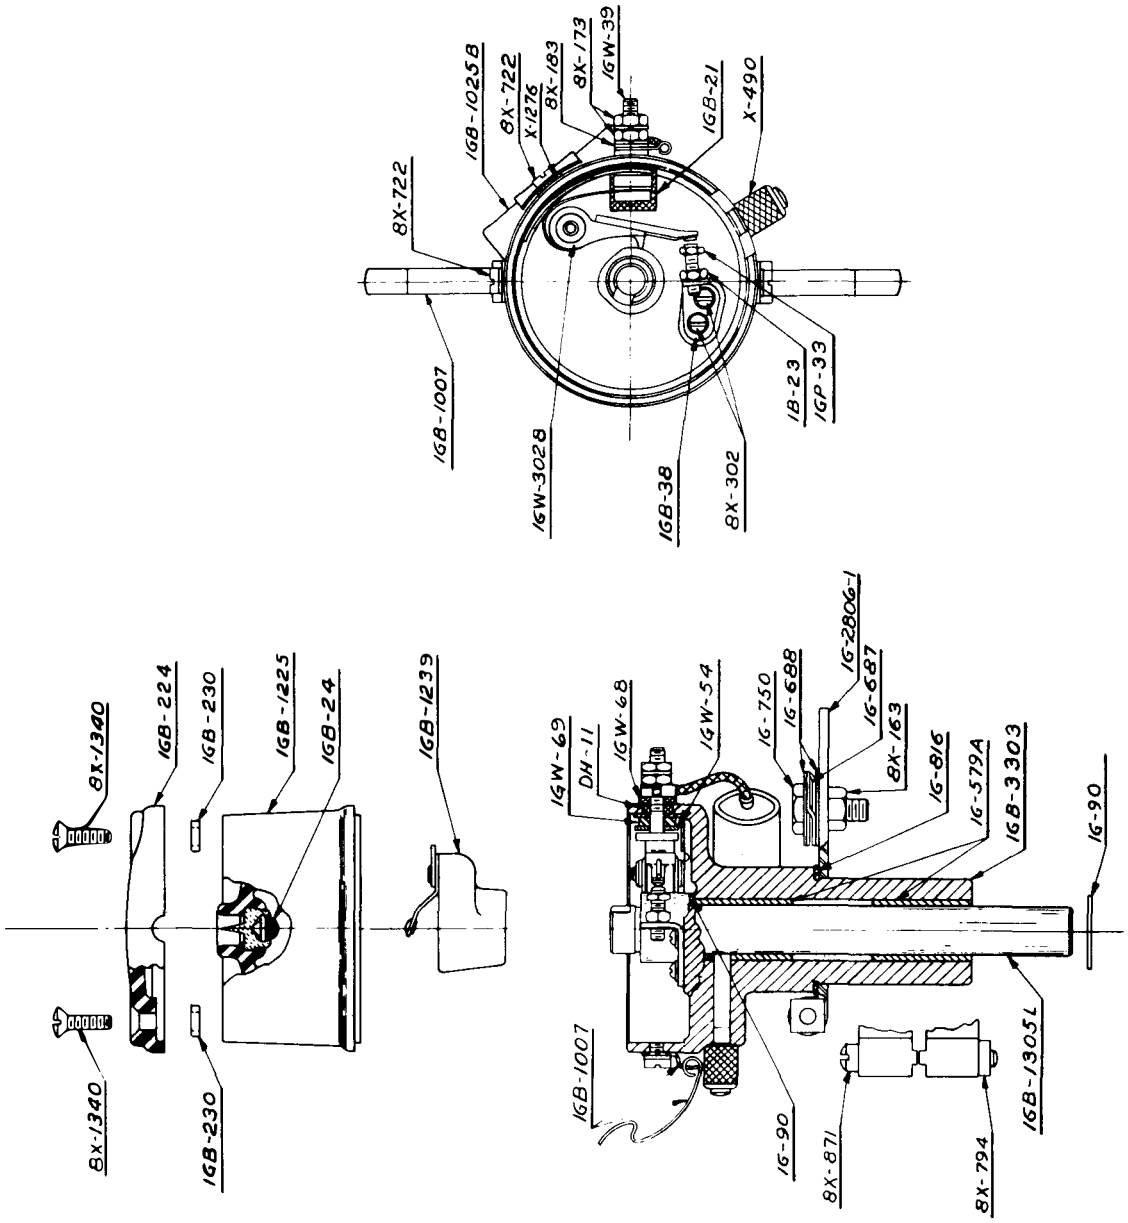

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-816	1	Thrust Washer
IG-2806-1	1	Advance Control Arm Assy.
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-750	1	Advance Control Screw
8X-163	1	1/4-20 Hex. Nut
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-1305LA	1	Brkr. Cam & Shaft - 1 Cyl. - L.H.
IGB-3303	1	Distributor Base Assy.
DH-11	1	Insulating Bushing
IB-23	1	Brkr. Point Lock Nut
IGB-21	1	Terminal Post Insulation
IGB-1007	1	Dist. Cap Spr. & Hinge Assembly
IGB-1025B	1	CONDENSER ASSY.
IGB-2303	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGB-38	1	Breaker Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press In - Sleeve Oiler
X-1012	2	#6 Lock Washer
	1	2 3 4 5

Part No.	No. Used	Name of Part
	1	2 3 4 5
IGP-33*	1	Breaker Screw Point
IGW-39	1	Terminal Post - #10-32
IGW-54	1	Washer
IGW-68	1	Insulating Washer
IGW-69	1	Insulating Washer
IGW-3028*	1	Breaker Arm Assy.
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-724	3	#8-32x3/16 Bdg. Hd. Sc.
X-1276	1	#8 Skpf. Washer
	1	2 3 4 5


(Issued 5-22-39)

* Service BREAKER POINT SET IGW-3028S.

UNIT	APPLICATION
IGB-4204	Easthope, Ltd.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the comp ete part can be assembled as needed."

IGB-4204 DISTRIBUTOR ILLUSTRATION

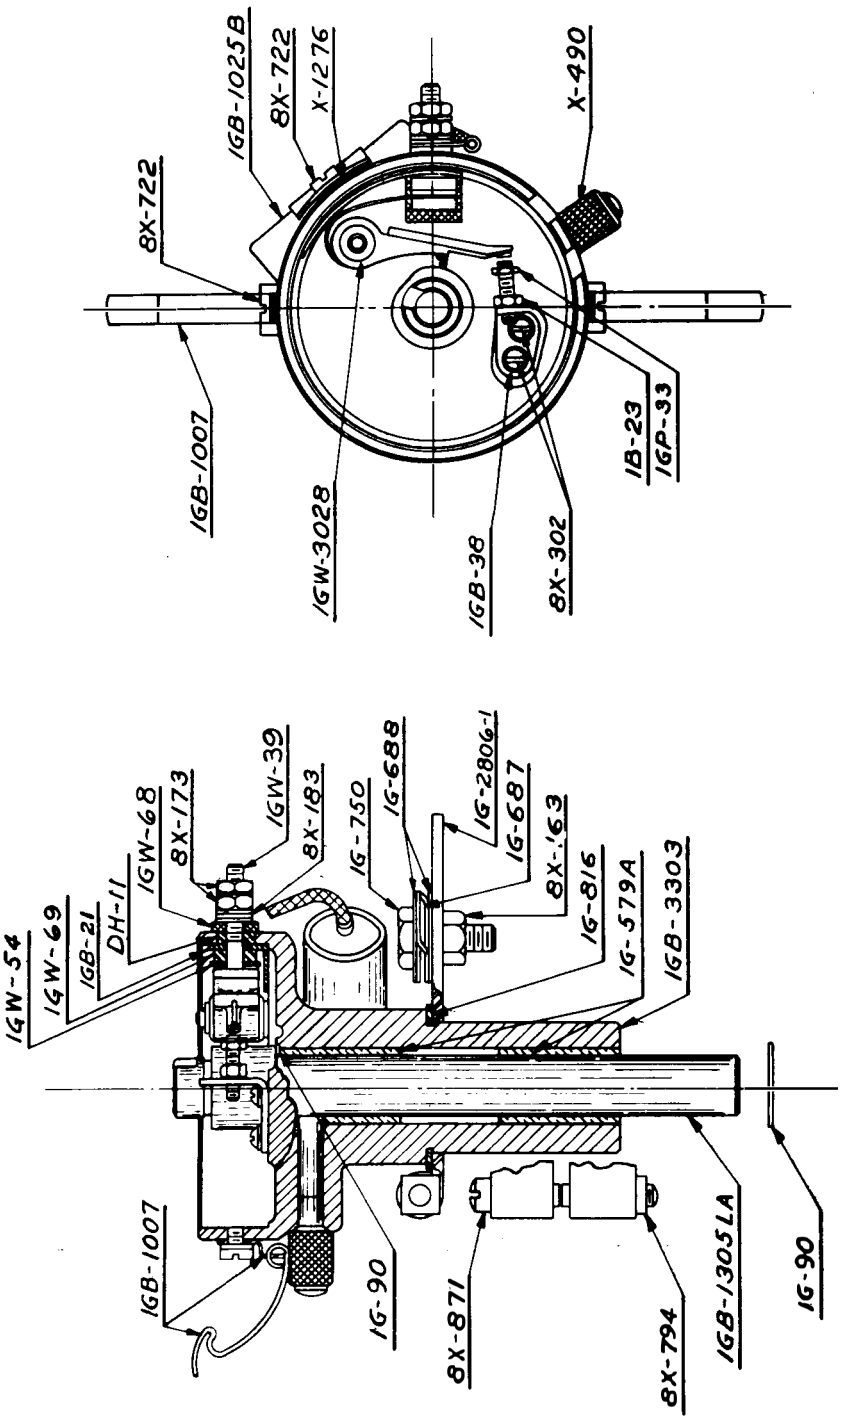

Part No.	No. Used	Name of Part
		1 2 3 4 5
CE-40	1	Dist. Gear - Follower
IA-278	7	Secondary Term. Rubber Cap
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-216	1	Advance Control Arm
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-264	1	Rubber Plug
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025J	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Distributor Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IGB-14	2	Weight
*	1	Cam & Stop Plate - 6 cyl. R.H.
*	1	Drive Shaft Assy.
IGB-2214	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-488	1	1/4 Oiler - Press in Elbow
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
SP-4008	1	Resistance Unit Assy.
8X-196	1	#10 Lock Washer
6X-321	1	#10-32x5/16 Rd. Hd. Screw
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	3	#10 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-321	1	#10-32x5/16 Rd. Hd. Screw
6X-794	1	#10-32 Square Nut
6X-884	1	#8-32x3/16 Fill. Hd. Screw
6X-891	1	#10-32x1 1/2 Fill Hd. Screw
X-999	1	Terminal
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 7-10-35)
(R-1-11-37)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Cam & Stop Plate	Weight Spring
IGB-4301A	IGB-2158R	IGB-1158R	IGB-1032RB	IG-913 (2)
IGB-4301B	IGB-2158RA	IGB-1158RA	IGB-1032R	IG-796 & IGE-30 (1 ea.)

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4301A-B DISTRIBUTOR ILLUSTRATION

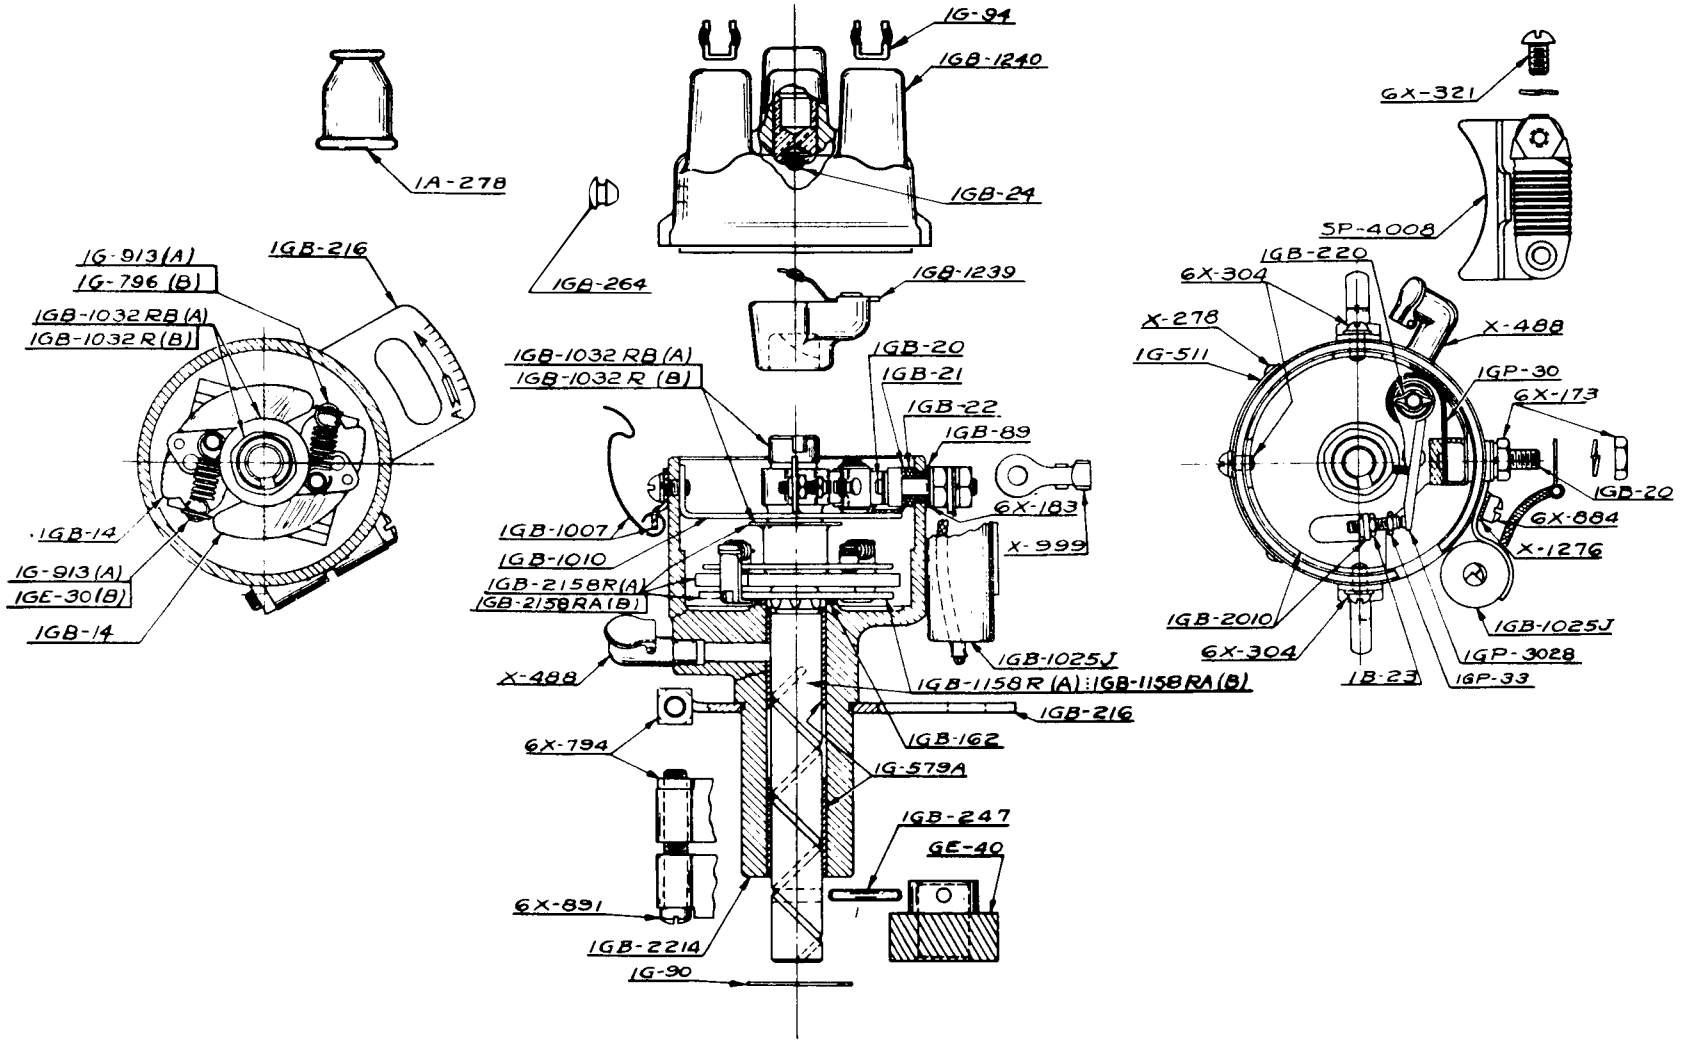

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Dist. Gear Rivet
*	1	Dist. Gear - Follower
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-688A	1	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1171	1	Advance Control Arm
IGB-1239	1	Rotor
IGB-1240	1	Distributor Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Point Screw
IGB-1010	1	Breaker Plate Part Assy.
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2251R	1	Drive Shaft & Gov. Assy.
IGB-1014RC	2	Weight Assy.
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1251R	1	Drive Shaft Assy.
IGC-78	2	Weight Spring
IGB-3664	1	Breaker Arm Assembly
IGB-209	1	Breaker Arm Spring
		1 2 3 4 5

* See table following parts list for part number applying to assembly wanted.

Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-146	1	1/4-20 Hex. Nut
6X-163	1	1/4-20 Hex. Nut
6X-173	2	#10-32 Hex. Nut
6X-183	1	#0 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-707	1	1/4-20xl 7/8 Fill. Hd. Sc.
6X-870	1	#10-32x5/16 Fill. Hd. Sc.
6X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 3-1-34)
(R-8-7-36)

Assembly No.	Gear Follower	Gear Rivet
IGB-4303	None	None
IGB-4303D	GE-41	GB-31
IGB-4303E	**	GB-31

** Assembly "E" is identical with assembly "D" except that Hercules gear #22335 is used. This gear is identical with our GE-41 listed above.

"NOTE: Where part numbers are shown parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4303-D-E DISTRIBUTOR ILLUSTRATION

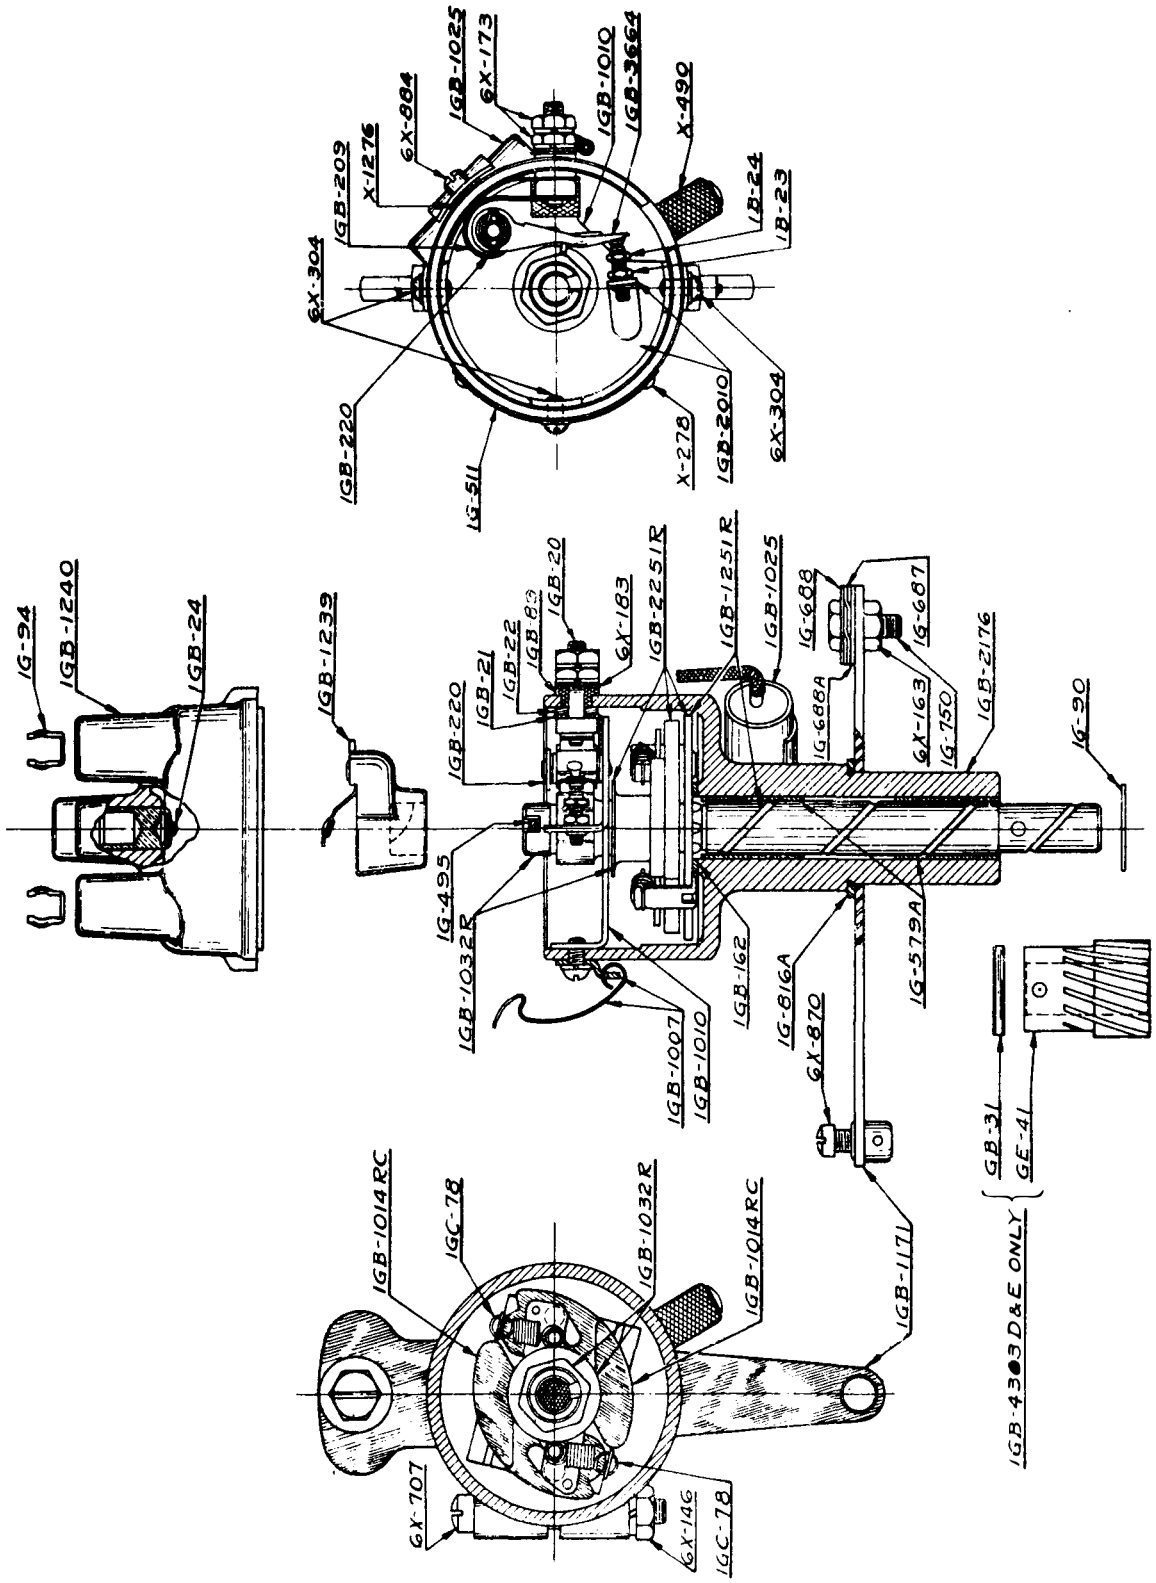

IGB-4304-A-B-C-D DISTRIBUTOR PARTS LIST IGB-4304-A-B-C-D

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-616	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight
IGB-1061L	1	Cam & Stop Plate - 6 cyl. L.H.
IGB-1181L	1	Drive Shaft Assy.
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
SW-213	1	Dist. Drive Rivet
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-86	1	1/4-20x5/8 Hex. Hd. Screw
6X-163	1	1/4-20 Hex. Nut
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-794	1	#10-32 Square Nut
6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
6X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 12-29-36)

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set
IGB-4304	IGB-2181LE	IGB-14G	IG-775	IG-775S
IGB-4304A	IGB-2181LH	IGB-14B	IGC-78	IGC-78S
IGB-4304B	IGB-2181LK	IGB-14B	IG-776	IG-776S
IGB-4304C	IGB-2181LL	IGB-14K	IGC-78	IGC-78S
IGB-4304D	IGB-2181LN	IGB-14F	IGE-29	IGE-29S

* See table following parts list for part number applying to assembly wanted.


‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4304,A,B,C,D DISTRIBUTOR ILLUSTRATION

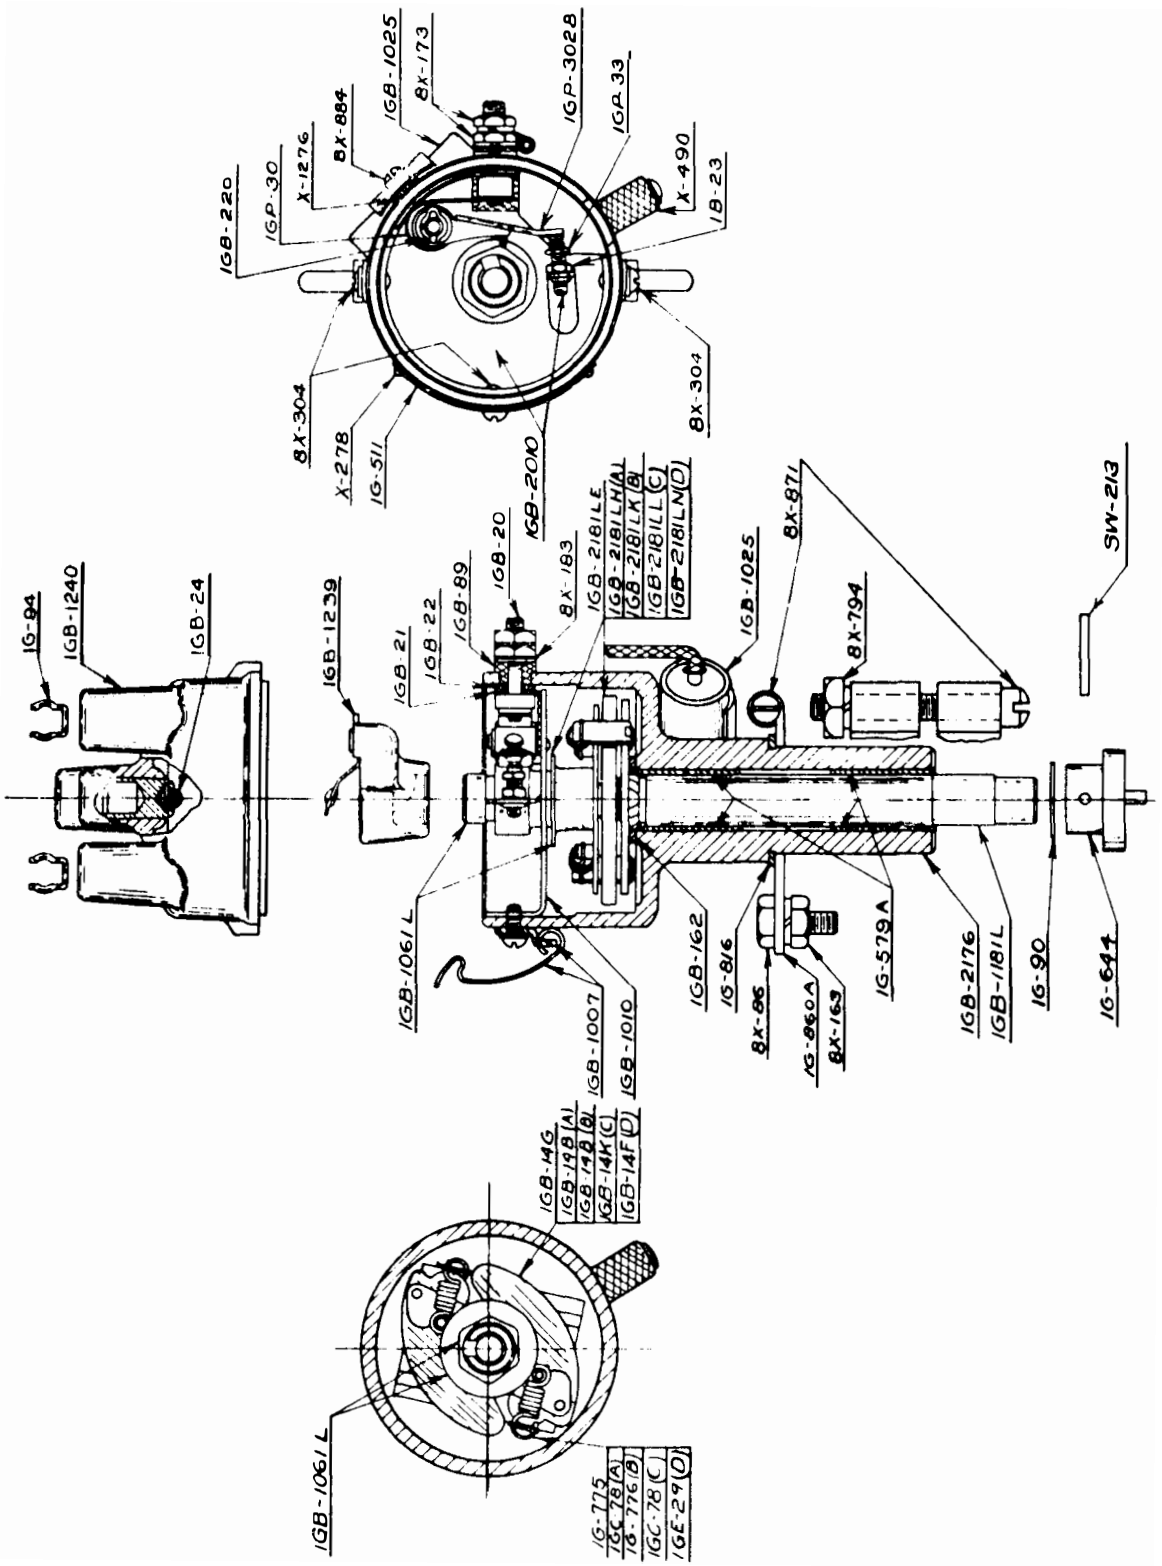

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
*	1	Dist. Gear - Follower
IG-816	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
*	1	Drive Shaft & Gov. Assy.
*	2	Weight
*	2	Weight Spring
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1175R	1	Drive Shaft Assy.
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-905	1	1/4-20x7/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 9-29-36)


Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set	Dist. Gear - Follower
IGB-4305A	IGB-2175RF	IGB-14C	IGC-81	IGC-81S	IG-261
IGB-4305B	IGB-2175RK	IGB-14G	IG-775	IG-775S	GK-36
IGB-4305C	IGB-2175RF	IGB-14C	IGC-81	IGC-81S	GK-36

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4305A-B-C DISTRIBUTOR ILLUSTRATION

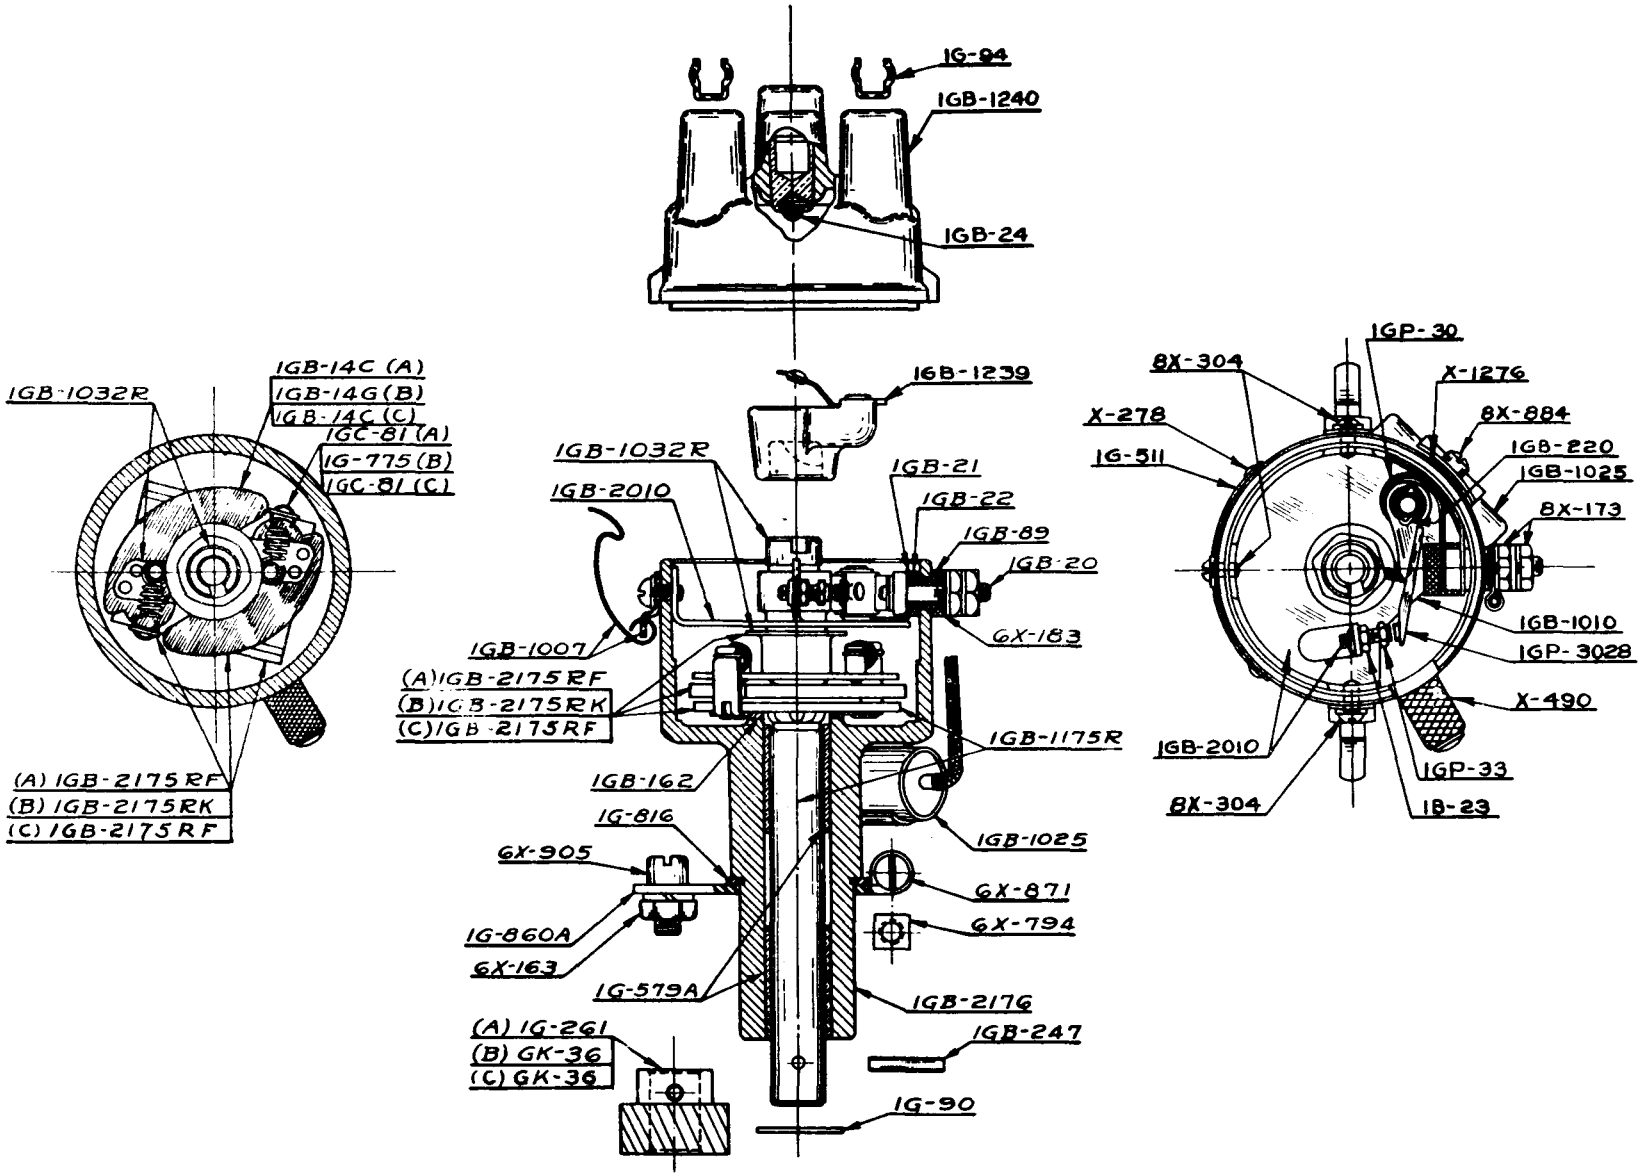

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-544	1	Dist. Drive Coupling
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2181RG	1	Drive Shaft & Gov. Assy.
IGB-208	2	Weight Spring
IGB-1014RB	2	Weight Assembly
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1181R	1	Drive Shaft Assy.
IGC-24N	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 9-29-36)

NOTE:- Use IGP-3028A breaker point set and IGB-208S weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4306 DISTRIBUTOR PARTS LIST

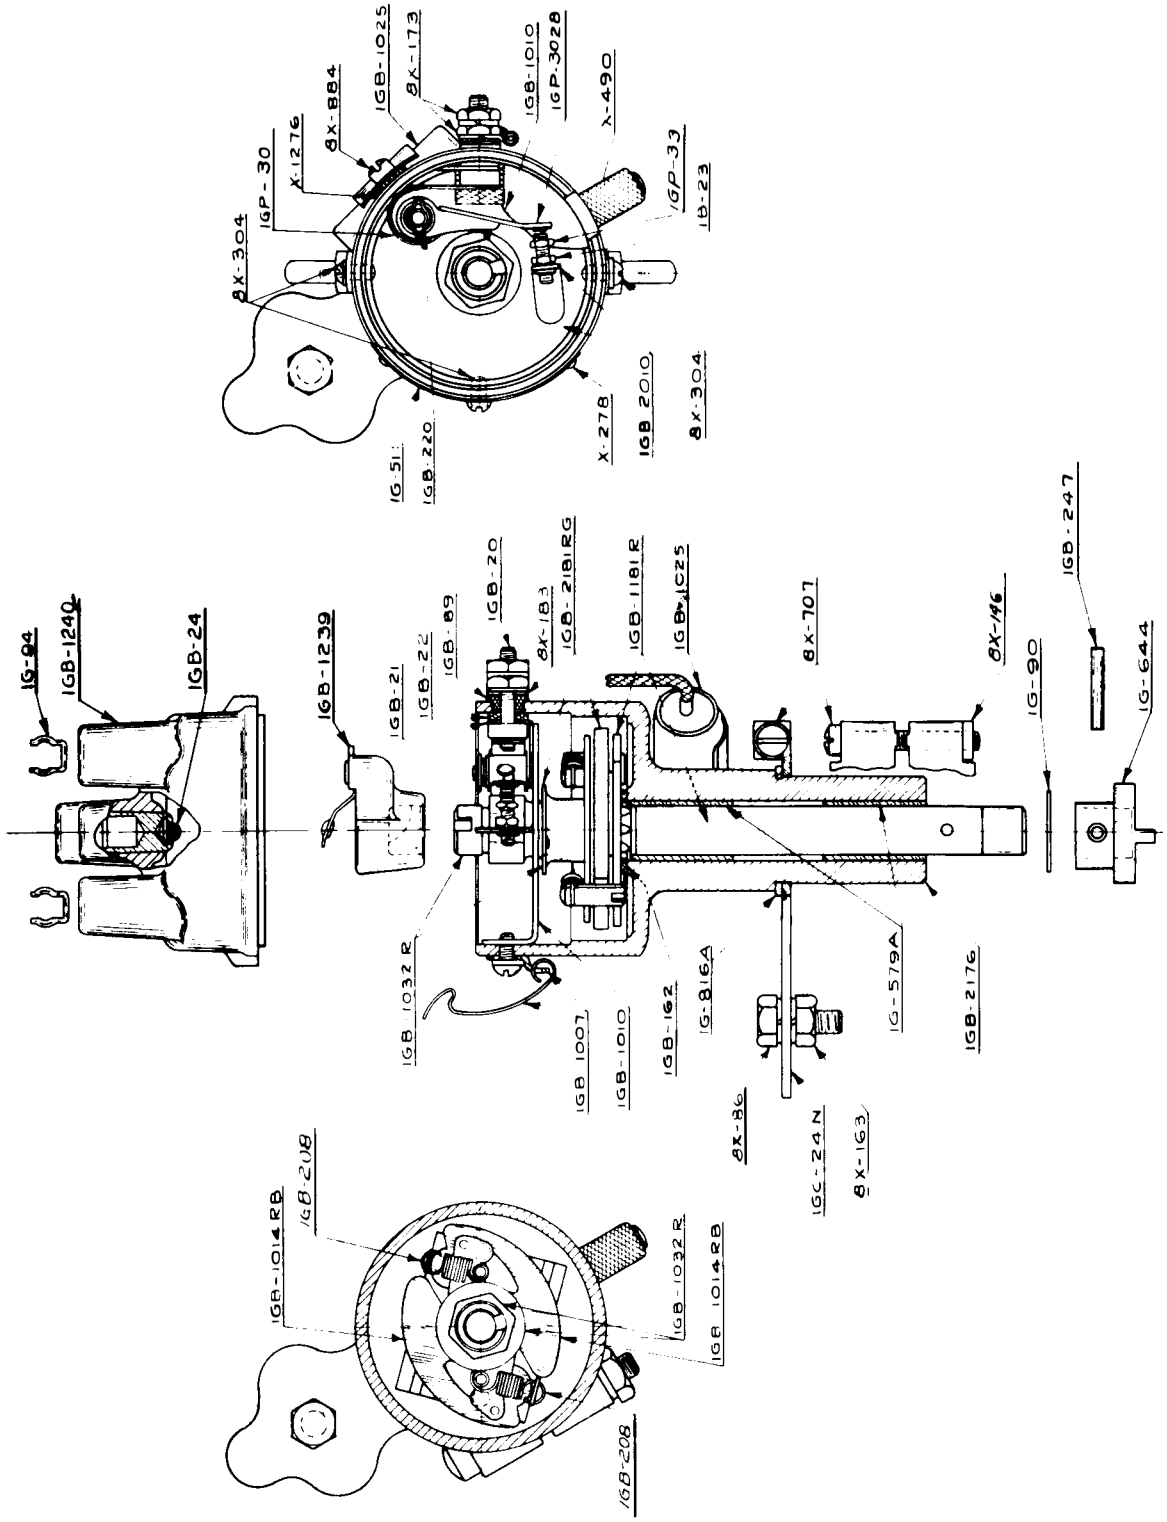

IGB-4307A,B,
C,D,E,F,G,H, DISTRIBUTOR PARTS LIST
J,K,L,M

IGB-4307A,B,
C,D,E,F,G,H,
J,K,L,M

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Dist. Gear - Follower
*	1	Dist. Drive Rivet
IG-90	2	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
*	1	Advance Control Arm
IG-816	1	Thrust Washer
IGB-1035R	1	Breaker Cam & Shaft - 6 cyl. R.H.
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-3037	1	Dist. Base Assy.
IB-23	1	Breaker Point Lock Nut
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Ins.
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025B	1	Condenser Assembly
IGB-2037	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IGB-38	1	Breaker Point Screw Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in - Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-33	1	Breaker Screw Point
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-884	3	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
X-199	1	1/4 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-1063	1	1/4-28 Hex. Nut
		1 2 3 4 5

(Issued 10-1-36)

Assembly No.	Dist. Gear	Drive Rivet	Advance Arm
IGB-4307A	GJ-168	GJ-306	IG-806A
IGB-4307B	GE-6	IGB-247	IG-806
IGB-4307C	GT-92	IGB-247	IG-806A
IGB-4307D	GG-9B	IGB-247	IG-806
IGB-4307E	GG-9A	IGB-247	IG-806
IGB-4307F	GT-92	IGB-247	IG-806
IGB-4307G	IG-261	IGB-247	IG-806
IGB-4307H	GE-28	IGB-247	IG-806
IGB-4307J	GE-20	IGB-247	IG-806
IGB-4307K	GK-36	IGB-247	IG-806
IGB-4307L	GK-36	IGB-247	IG-806C
IGB-4307M	IG-261	IGB-247	IG-806C

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part n mber are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4307A-B-C-D-E-F-G-H-J-K-L-M DISTRIBUTOR ILLUSTRATION

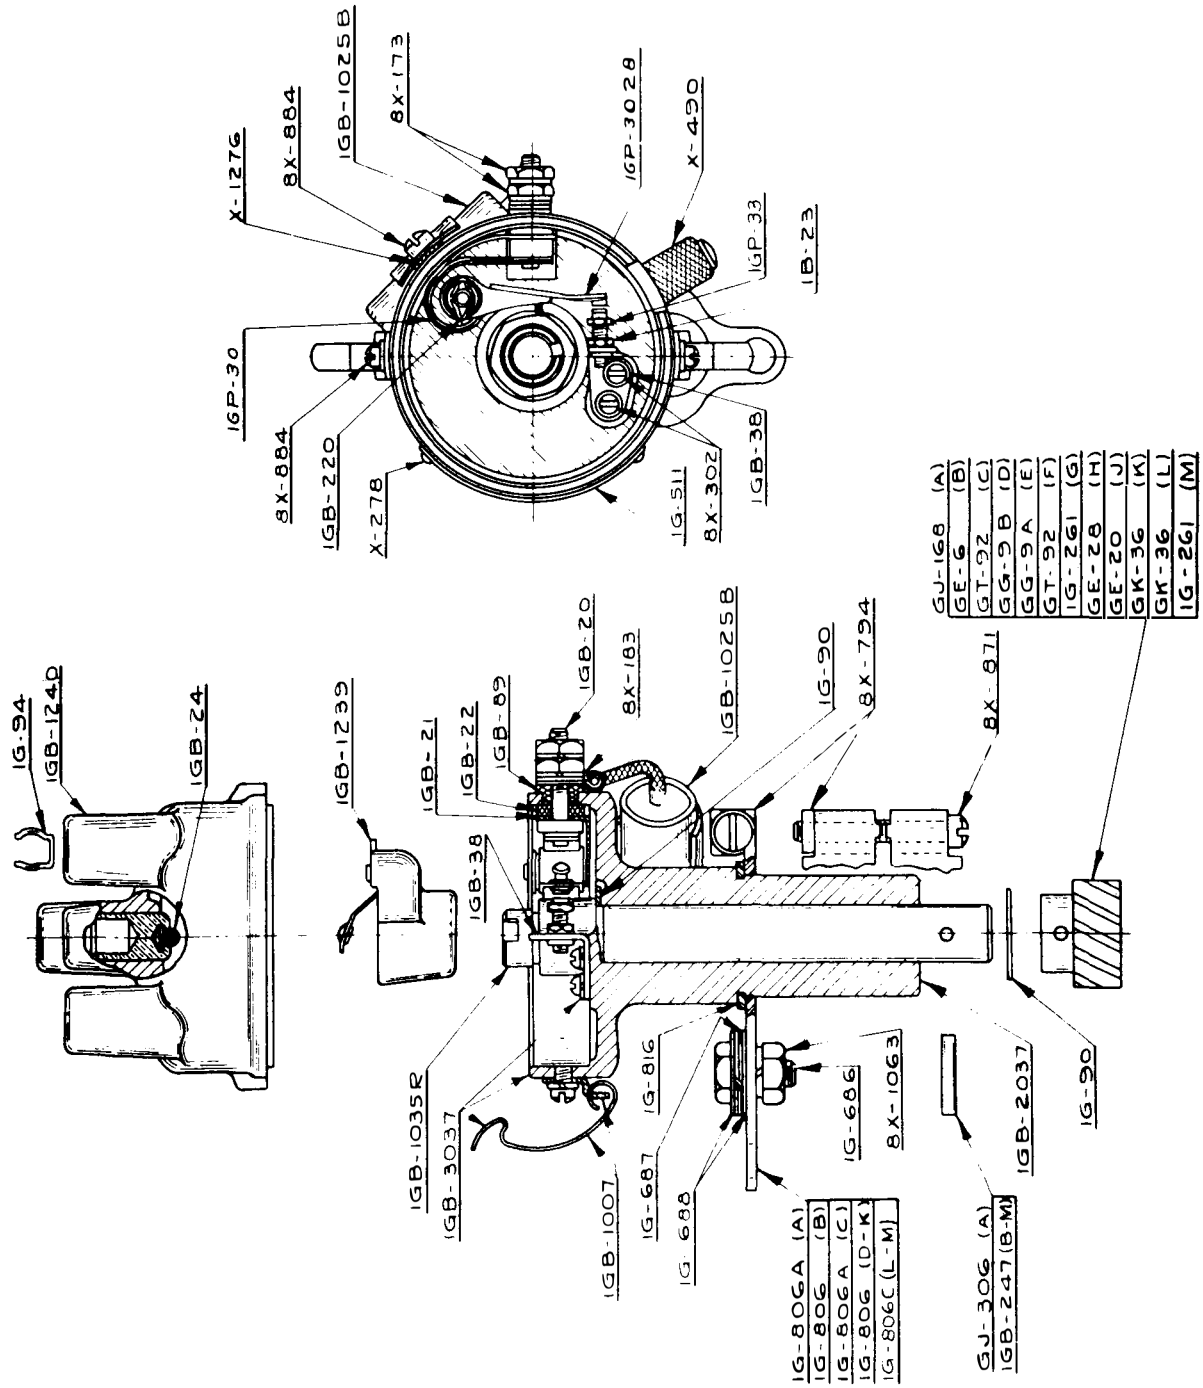

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-688A	1	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2251R	1	Drive Shaft & Gov. Assy.
IGB-1014RC	2	Weight Assembly
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1251R	1	Drive Shaft Assy.
IGC-78	2	Weight Spring
IGC-24F	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-146	1	1/4-20 Hex. Nut
6X-163	1	1/4-20 Hex. Nut
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-707	1	1/4-20xl 7/8 Fill. Hd. Screw
6X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 2-26-35)
(R-12-10-36)

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4309A DISTRIBUTOR ILLUSTRATION

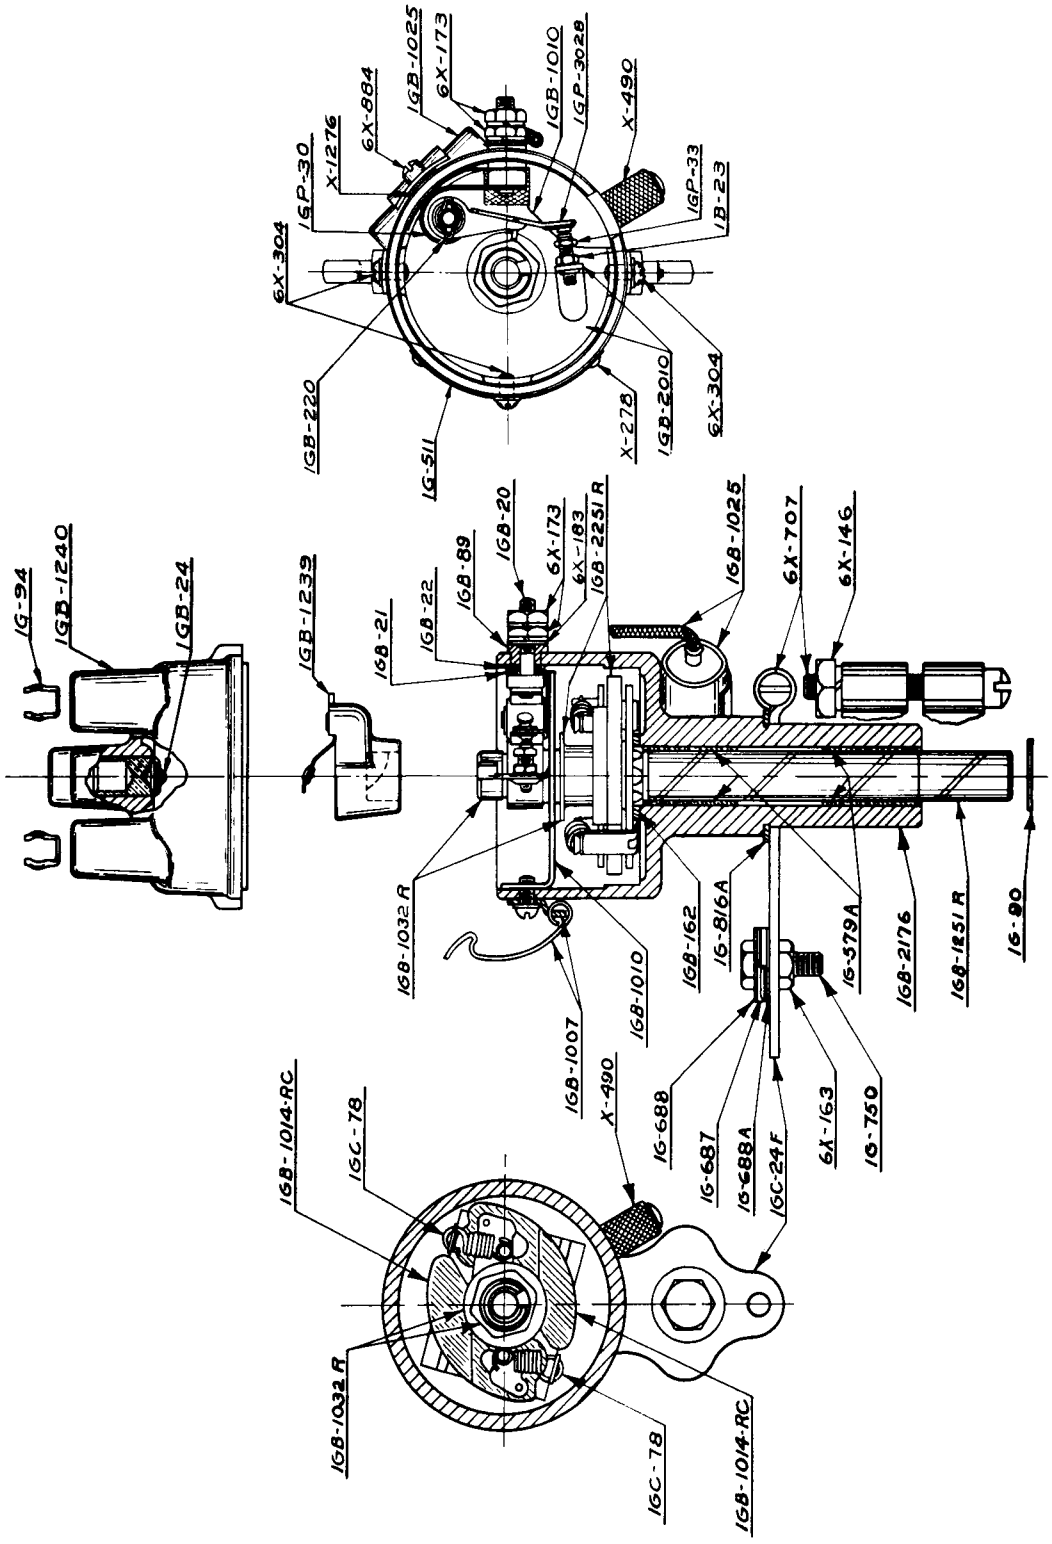

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assembly
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2183RB	1	Drive Shaft & Gov. Assy.
IGB-208‡	2	Weight Spring
IGB-1014RB	2	Weight Assembly
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1183R	1	Drive Shaft Assembly
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Sc.
6X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 4-8-37)

‡ Service Breaker Point Set IGP-3028A & Service Weight Spring Set IGB-208S.

"NOTE: Where part n mbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4310 DISTRIBUTOR ILLUSTRATION

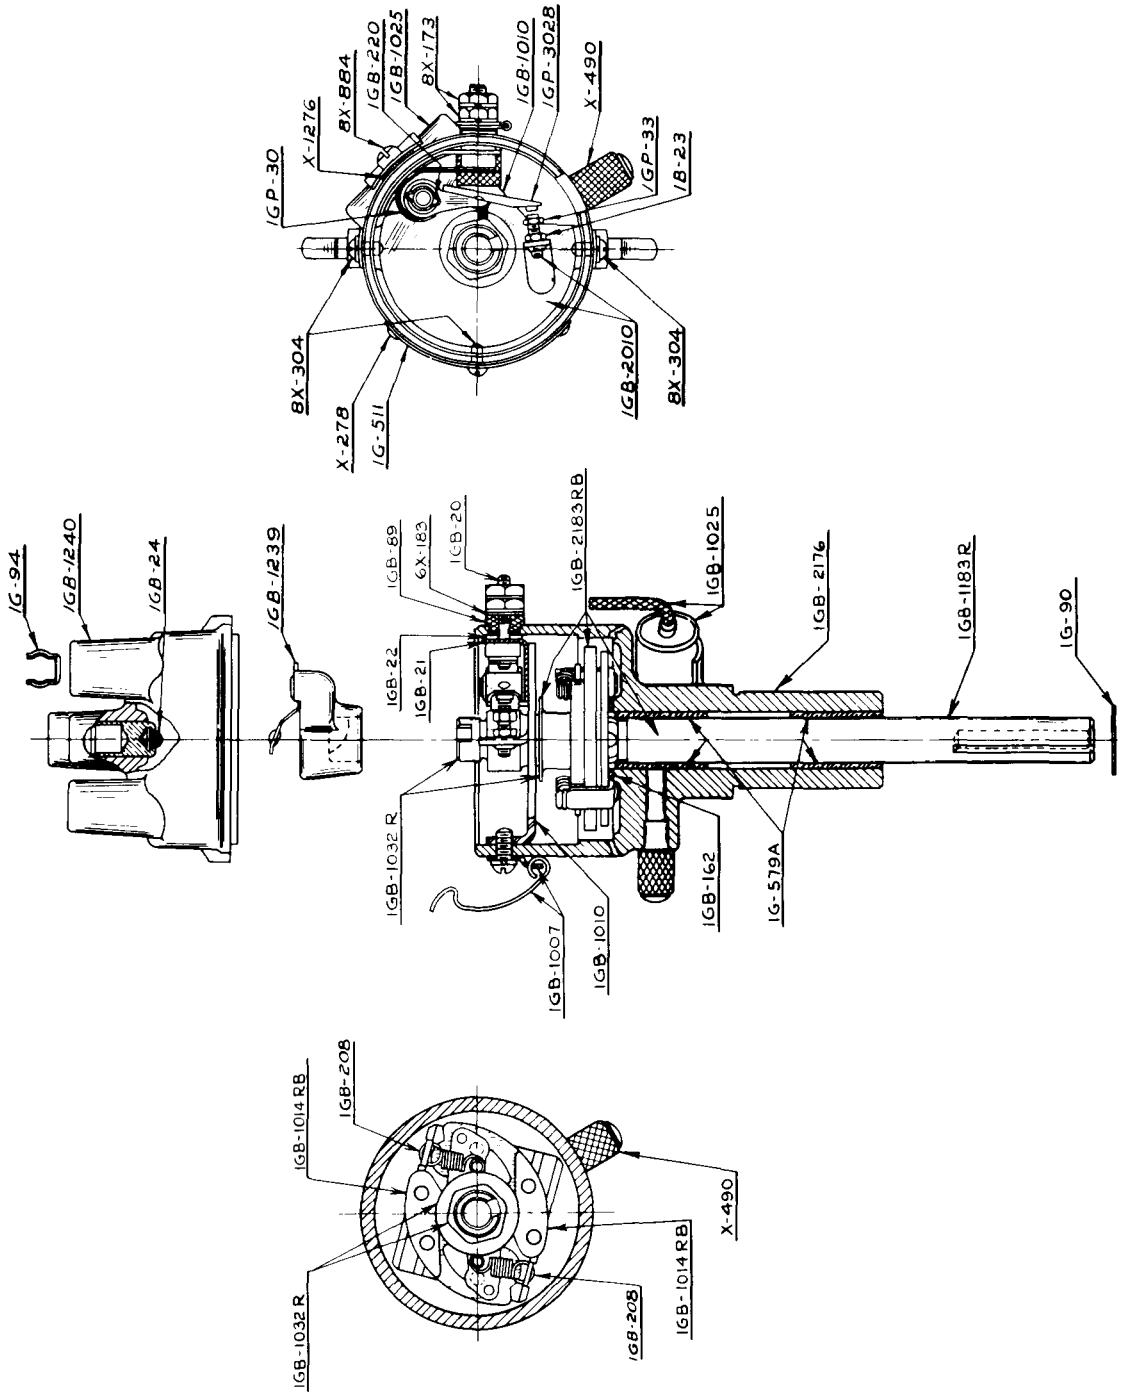

IGB-4312, A,B DISTRIBUTOR PARTS LIST IGB-4312, A,B

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Distributor Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Distributor Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assembly
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1181R	1	Drive Shaft Assy.
IGC-1024E	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-146	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20xl 7/8 Fill. Hd. Sc.
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-1063	1	1/4-28 Hex. Nut
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 3-19-36)

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Assy.
IGB-4312	IGB-2181RH	IG-775	IGB-1014RD
IGB-4312A	IGB-2181RJ	IGC-78	IGB-14F
IGB-4312B	IGB-2181RY	IGE-29	IGB-14F

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4312,A,B DISTRIBUTOR ILLUSTRATION

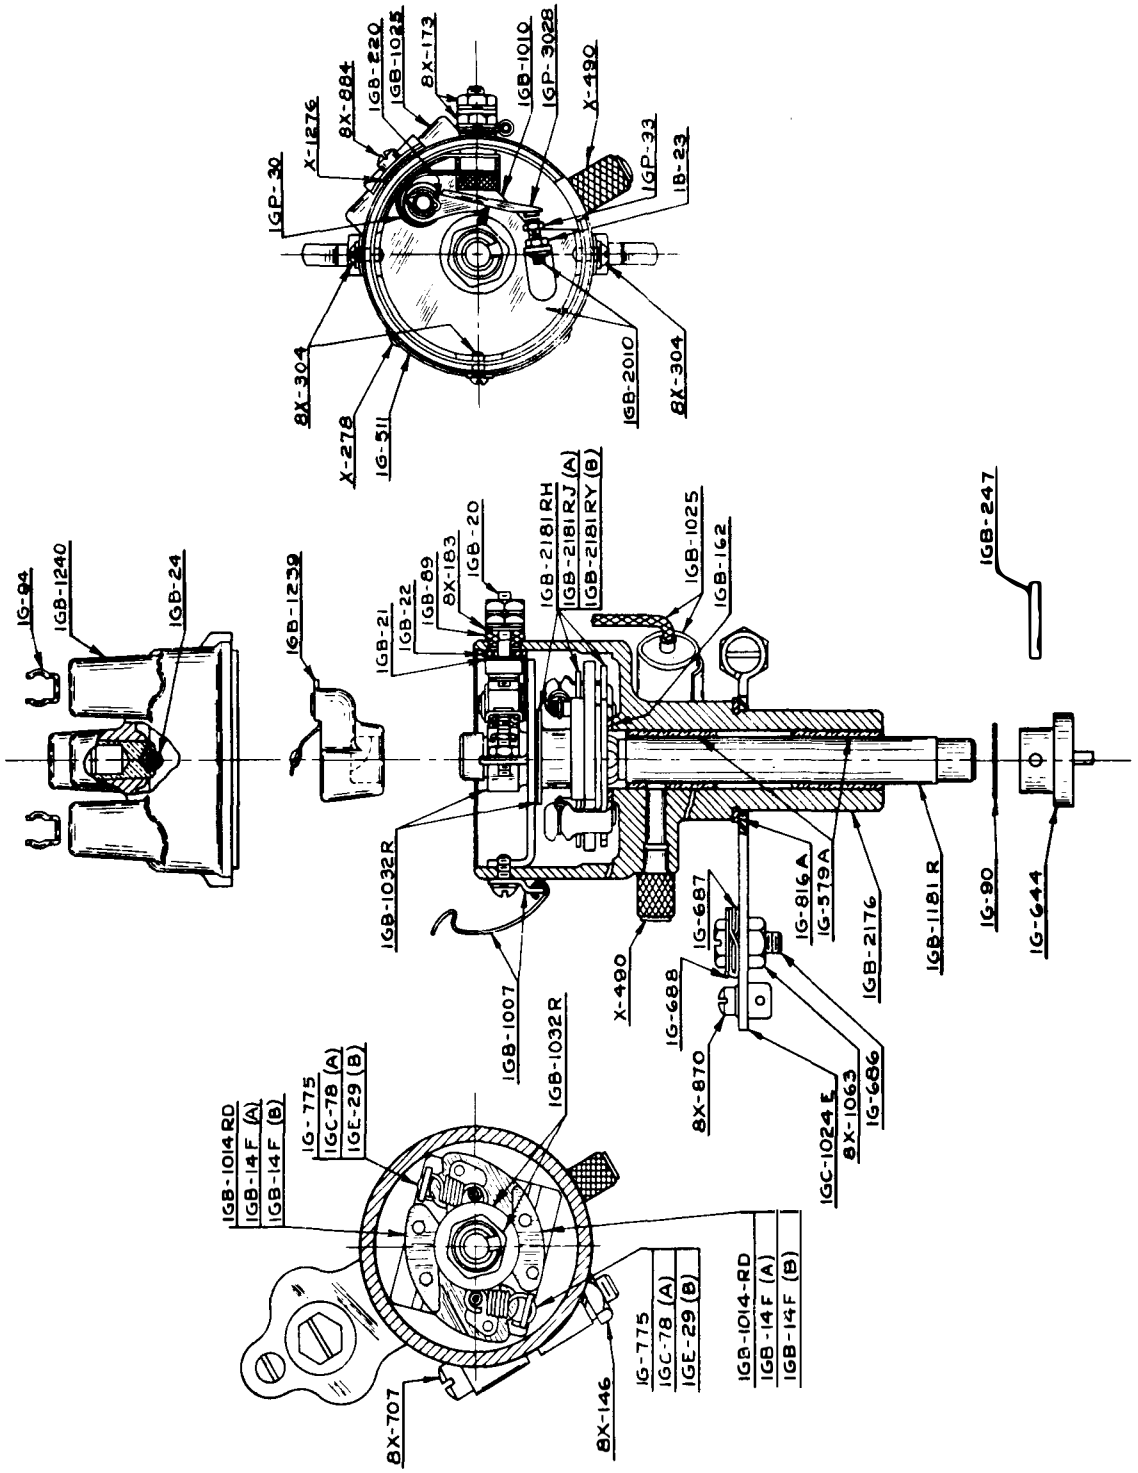

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Distributor Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Distributor Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assembly
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1181R	1	Drive Shaft Assy.
IGC-1024E	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-146	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-1063	1	1/4-28 Hex. Nut
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 3-19-36)

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Assy.
IGB-4312	IGB-2181RH	IG-775	IGB-1014RD
IGB-4312A	IGB-2181RJ	IGC-78	IGB-14F
IGB-4312B	IGB-2181RY	IGE-29	IGB-14F

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4312,A,B DISTRIBUTOR ILLUSTRATION

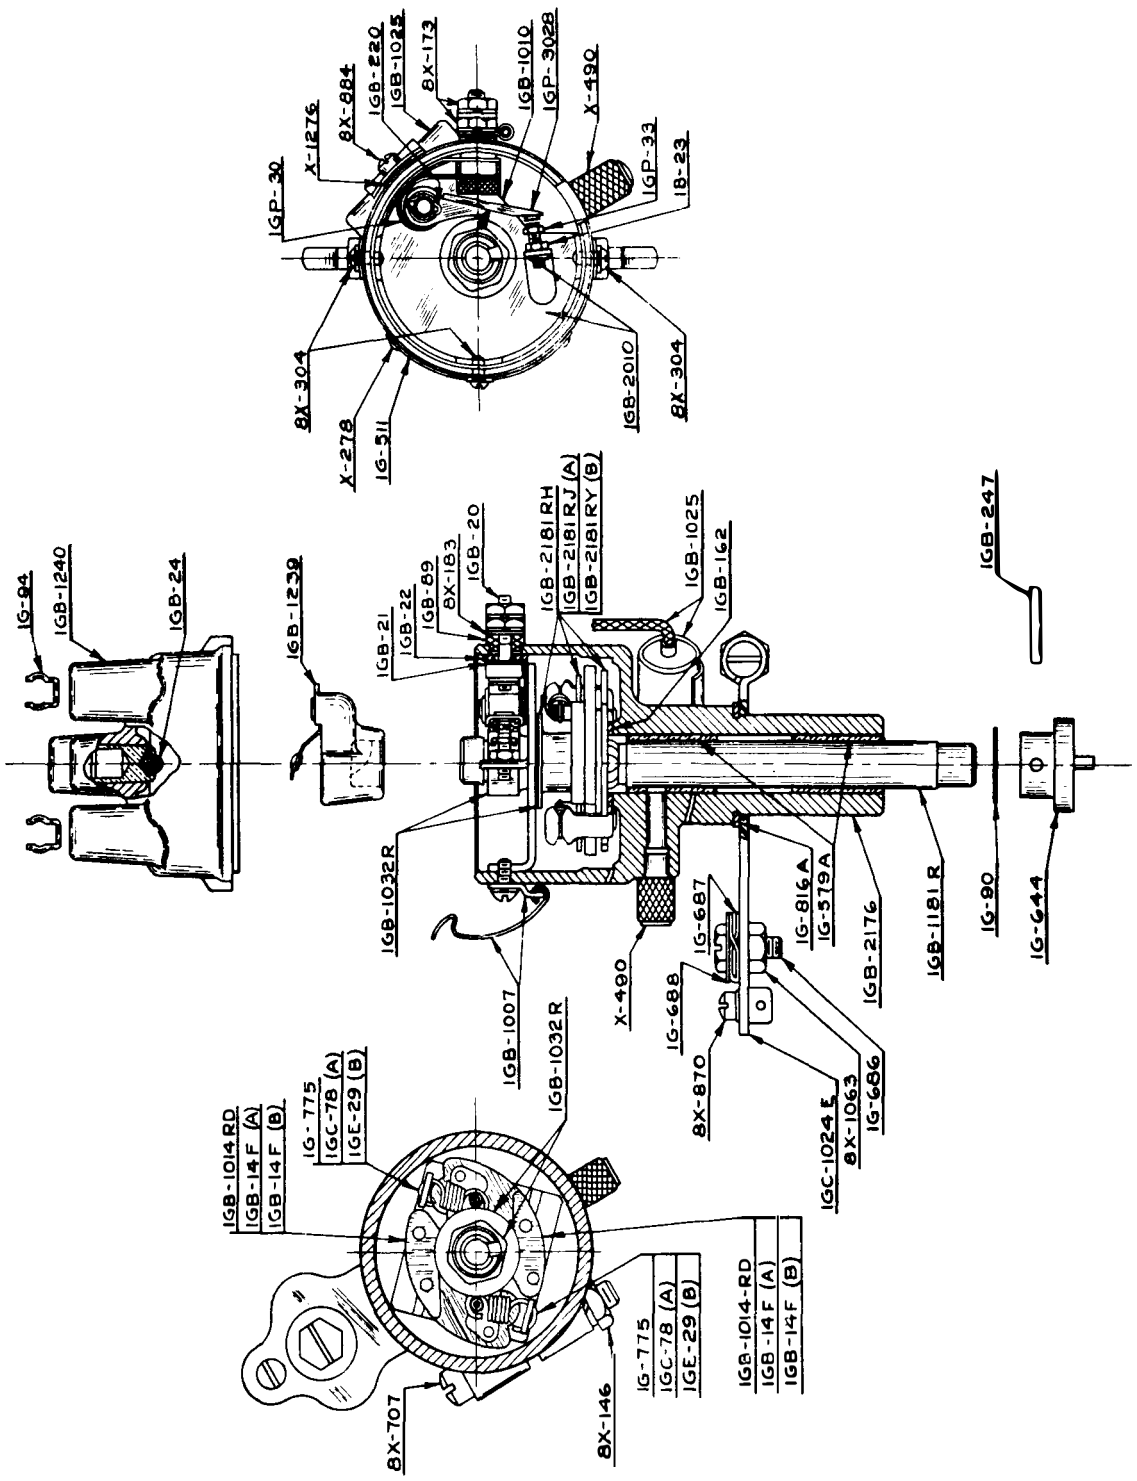

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Dist. Gear - Follower
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-816	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
*	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Distributor Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1183R	1	Drive Shaft Assy.
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
6X-86	1	1/4-20x5/8 Hex. Hd. Screw
6X-163	1	1/4-20 Hex. Nut
6X-173	2	#10-32 Hex. Nut
6X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-304	3	#8-32x5/16 Rd. Hd. Screw
6X-794	1	#10-32 Square Nut
6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
6X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 2-28-35)
(R-10-30-36)

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Assy.	Gear Follower	Drive Rivet
IGB-4315A	IGB-2183RA	IG-884	IGB-1014RF	GK-36	IGB-247
IGB-4315B	IGB-2183RC	IG-775	IGB-14G	GJ-168	GJ-306

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4315A-B DISTRIBUTOR ILLUSTRATION

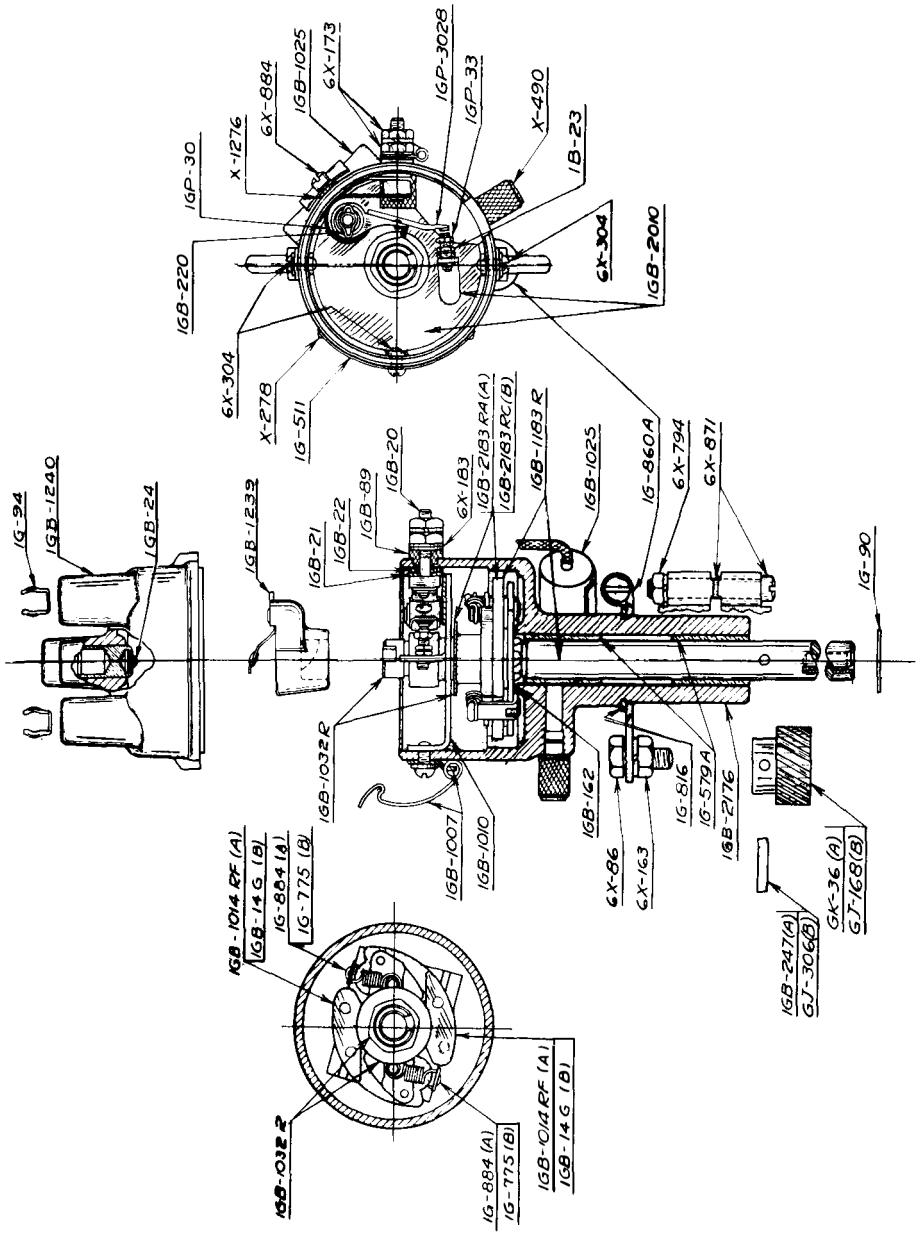

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-447	1	Dist. Drive Sleeve
*	1	Resistance Unit Assy.
GK-151	1	Plain Steel Washer
8X-173	1	#10-32 Hex. Nut
X-196	1	#10 Lock Washer
8X-318	1	#10-32x5/8 Rd. Hd. Screw
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
*	1	Dist. Base Assembly
*	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assembly
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1205R	1	Drive Shaft Assembly
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
SW-213	1	Dist. Drive Rivet
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 12-14-36)

Assembly No.	Dist. Base Assy.	Name Plate	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set	Resistance Unit Assy.
IGB-4317	IGB-2204	IG-511	IGB-2205RA	IGB-1014RB	IGB-208	IGB-208S	None
IGB-4317A	IGB-2204A	IG-511A	IGB-2205RD	IGB-14A	IGB-202	IGB-202S	None
IGB-4317B	IGB-2204	IG-511	IGB-2205RA	IGB-1014RB	IGB-208	IGB-208S	IG-1205


‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts he complete part can be assembled as needed."

IGB-4317-A-B DISTRIBUTOR ILLUSTRATION

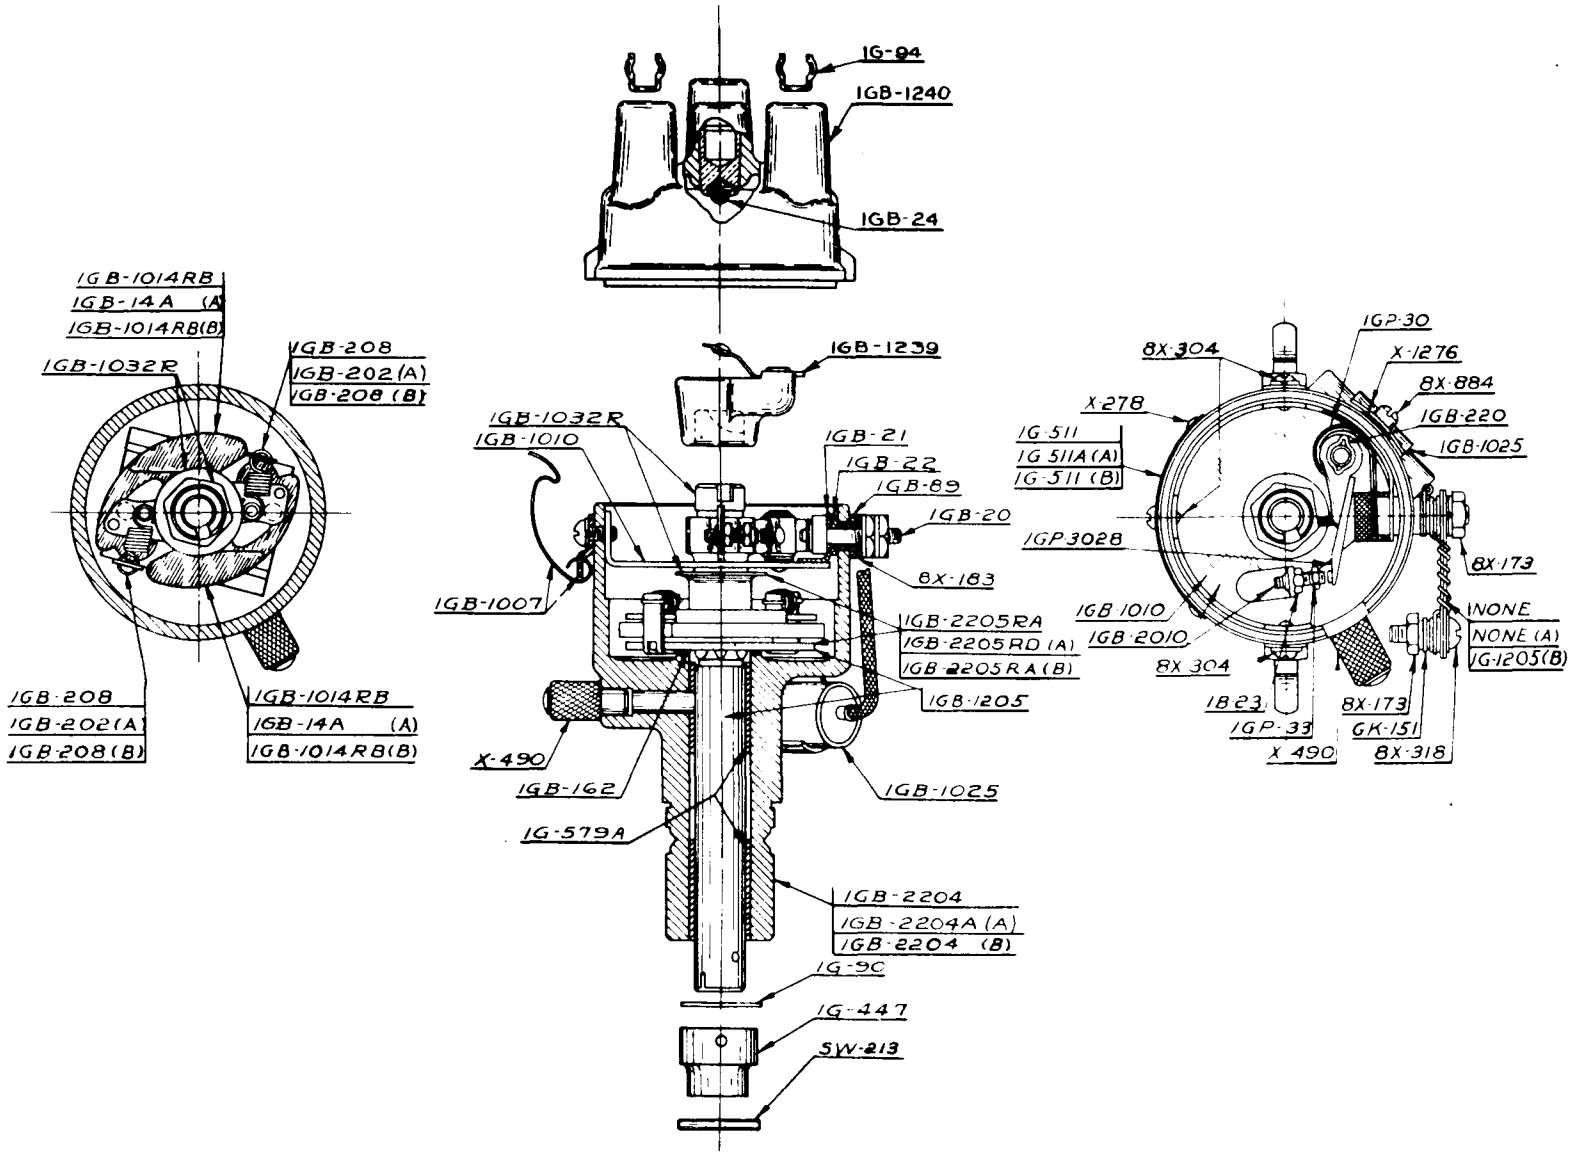

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2251R	1	Drive Shaft & Gov. Assy.
IGB-1014RC	2	Weight Assy.
IGB-1032R	1	Cam & Stop Plate - 6 Cyl. R.H.
IGB-1251R	1	Drive Shaft Assy.
IGC-78‡	2	Weight Spring
IGC-24N	1	Advance Control Arm
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5


(Issued 11-18-36)


‡ Service Weight Spring Set IGC-78S & Service Breaker Point Set IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4320 DISTRIBUTOR ILLUSTRATION

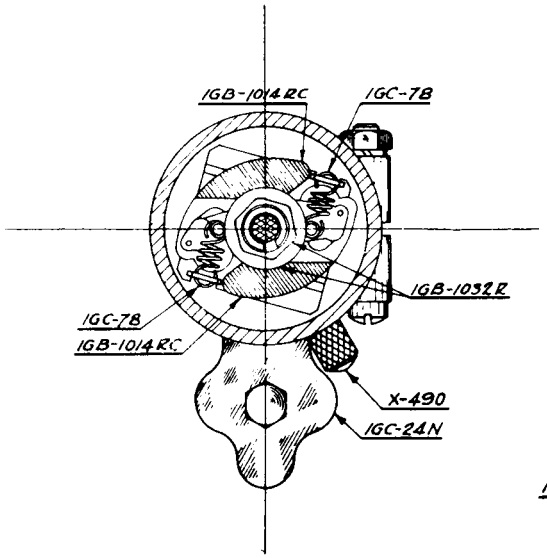

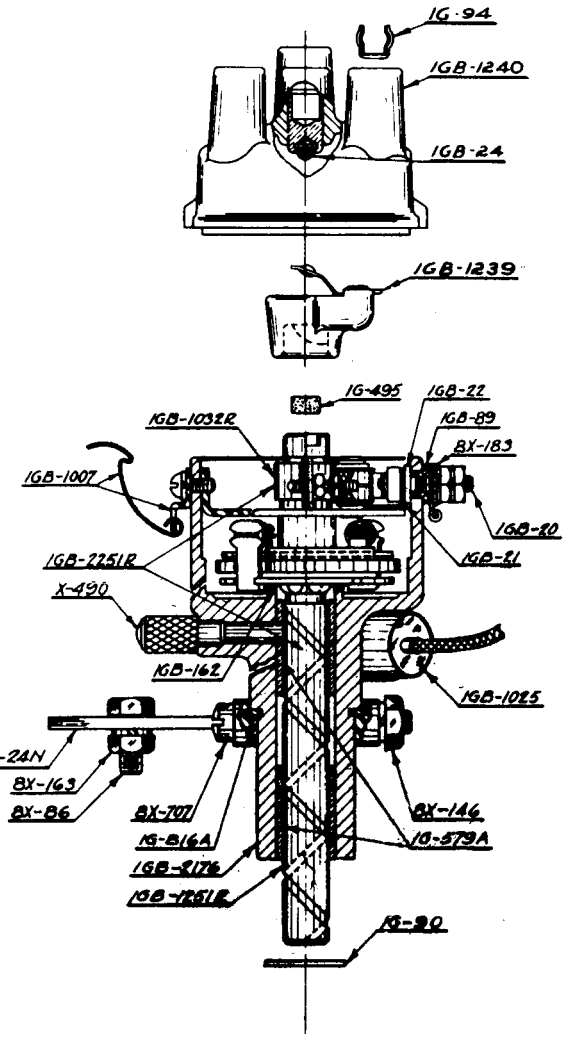

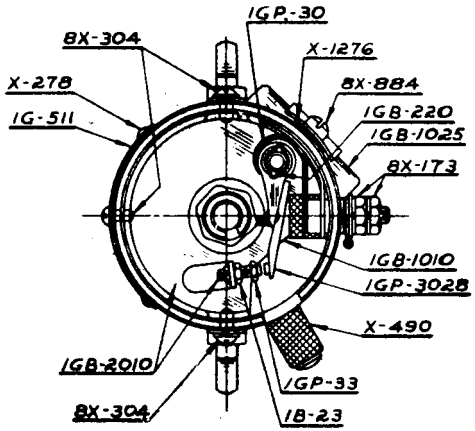

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-688A	1	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1171	1	Advance Control Arm
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight
IGB-1061L	1	Cam & Stop Plate - 6 Cyl. L.H.
*	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
8X-146	1	1/2-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 5-29-36)


Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight Assy.	Weight Spring	Weight Sp. Set
IGB-4322	IGB-2181LA	IGB-1181LA	IGB-14C	IG-776	IG-776S
IGB-4322A	IGB-2251L	IGB-1251L	IGB-1014LC	IGC-78	IGC-78S

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4322,A DISTRIBUTOR ILLUSTRATION

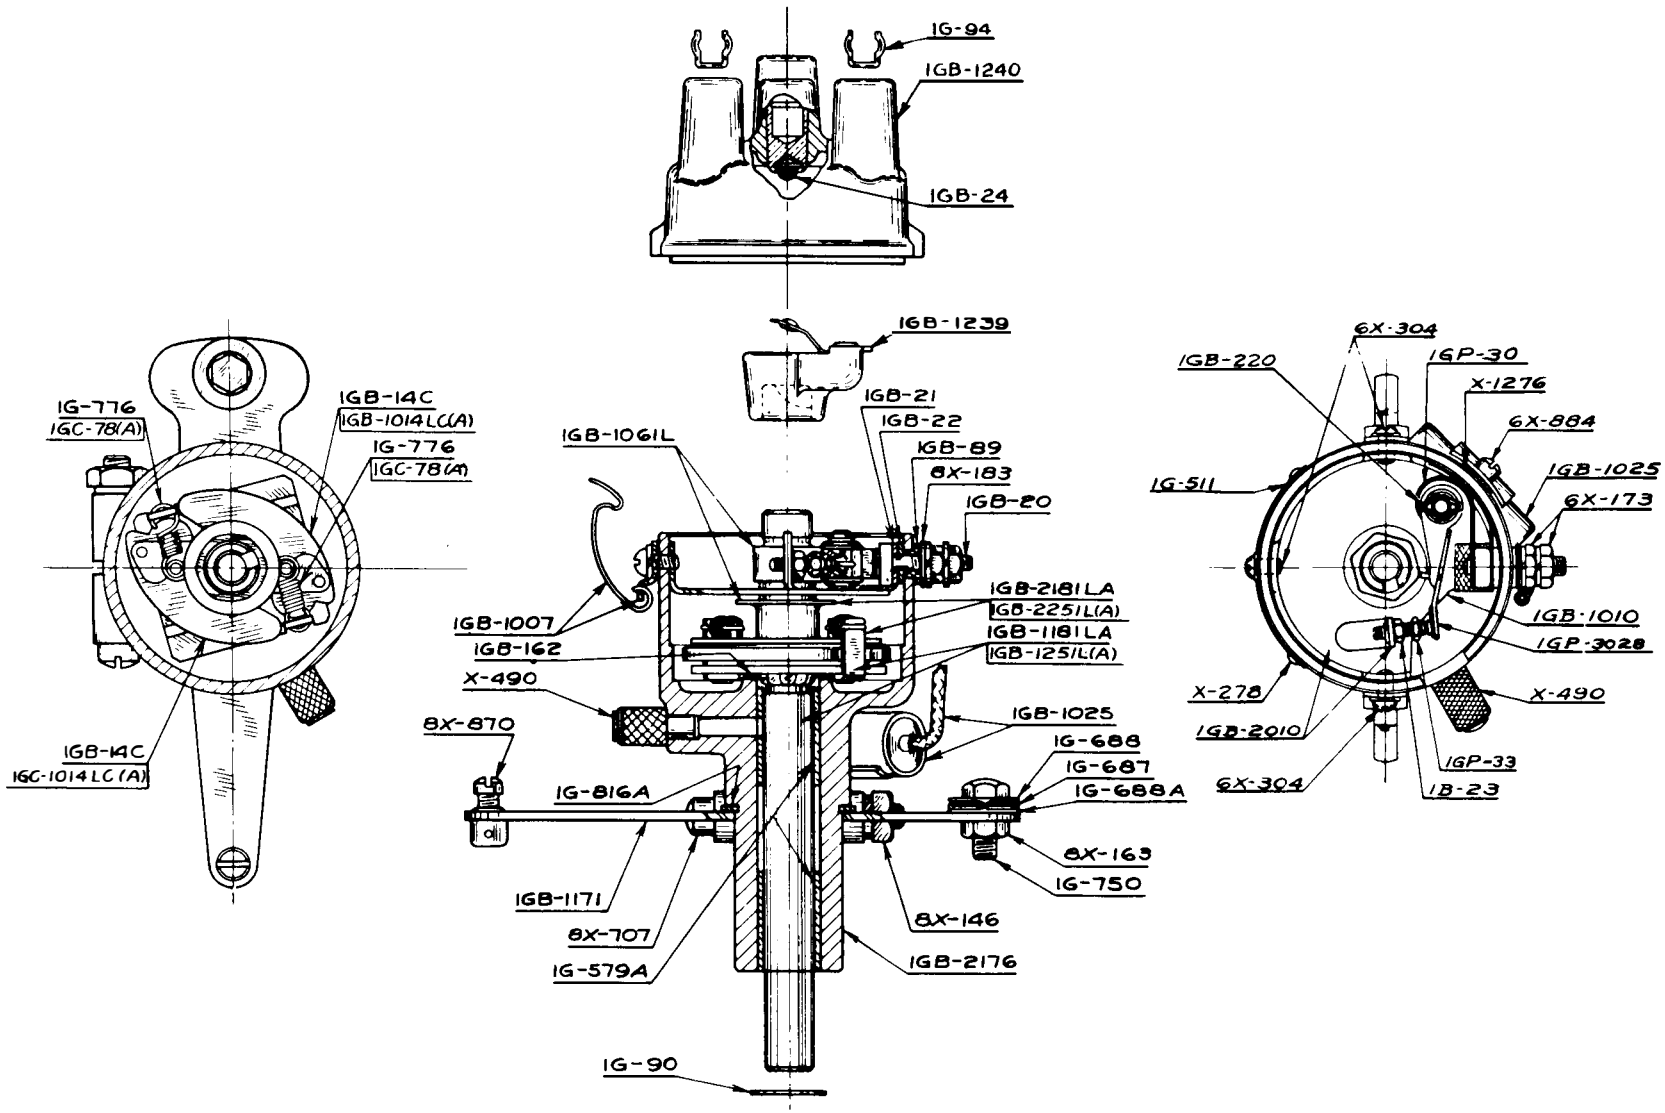

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-816	1	Thrust Washer
IG-2806J	1	Advance Control Arm Assy.
IG-686	1	Advance Control Screw
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
X-199	1	1/4 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill.Hd.Sc.
8X-1063	1	1/4-28 Hex. Nut
IGB-1125L	1	Breaker Cam & Shaft - 6 Cyl. L. H.
IGB-1239	1	ROTOR
IGB-1240	1	DISTRIBUTOR CAP ASSEMBLY
IGB-24	1	Contact Plunger
IGB-3037	1	Distributor Base Assembly
CB-140	1	Insulating Bushing
IB-23	1	Breaker Point Lock Nut
IGB-20	1	Terminal Post
IGB-21	1	Terminal Post Ins.
IGB-22	2	Insulating Washer
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025B	1	CONDENSER ASSEMBLY
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGB-2037	1	Dist. Base Part Assy.
IG-511	1	Name Plate
IGB-38	1	Breaker Arm Bracket
X-278	2	3/32x3/16 Tubular Rivet
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
X-490	1	Press in - Sleeve Oiler
X-1012	2	#6 Lock Washer
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Plain Washer
X-195	2	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-722	3	#8-32x3/16 Bdg. Hd. Sc.
X-1270	1	#10 Skpf. Washer
X-1276	1	#8 Skpf. Washer
SW-213	1	Dist. Drive Rivet
		1 2 3 4 5


‡ Service BREAKER POINT SET IGP-3028A.

UNIT	APPLICATION
IGB-4323	J. W. Lathrop

(Issued 12-7-39)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4323 DISTRIBUTOR ILLUSTRATION

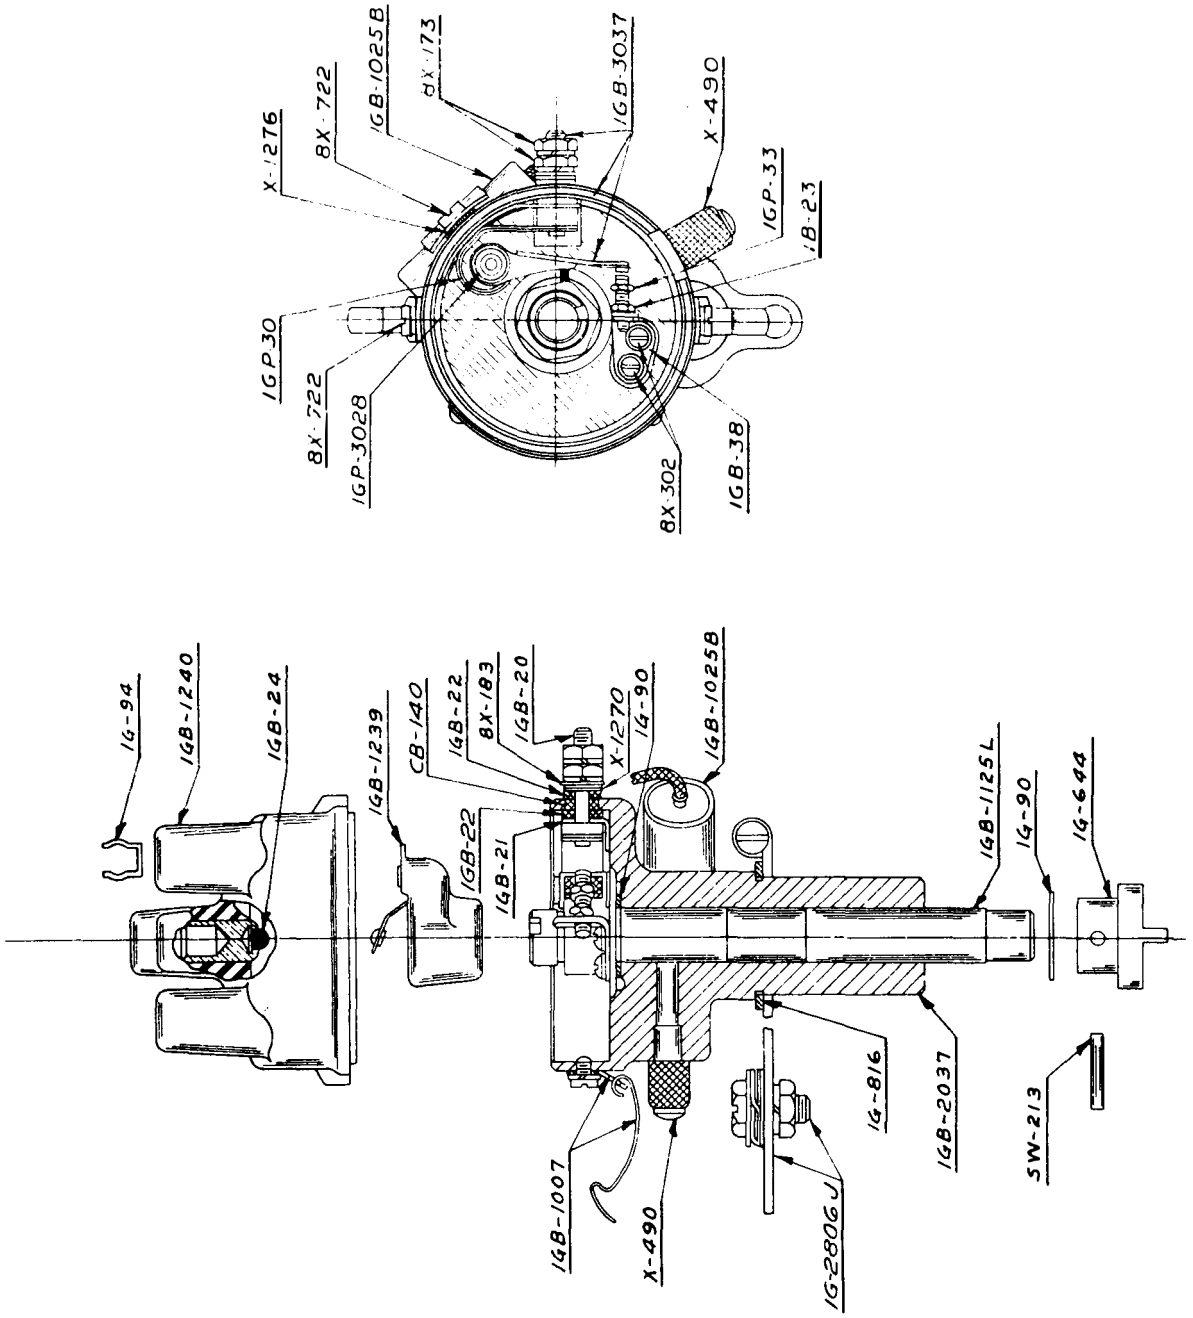

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2181RX	1	Drive Shaft & Gov. Assy.
IGB-14K	2	Weight
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1181R	1	Drive Shaft Assy.
IGC-78	2	Weight Spring
IGC-24N	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 9-30-36)

NOTE:- Use IGP-3028A breaker point set and IGC-78S weight spring set in servicing this unit.

"NOTE: Where p rt numbers are shown in parenthesis they re for reference only. By stocking sub-parts the complete part c n be ssembled s needed."

IGB-4325 DISTRIBUTOR ILLUSTRATION

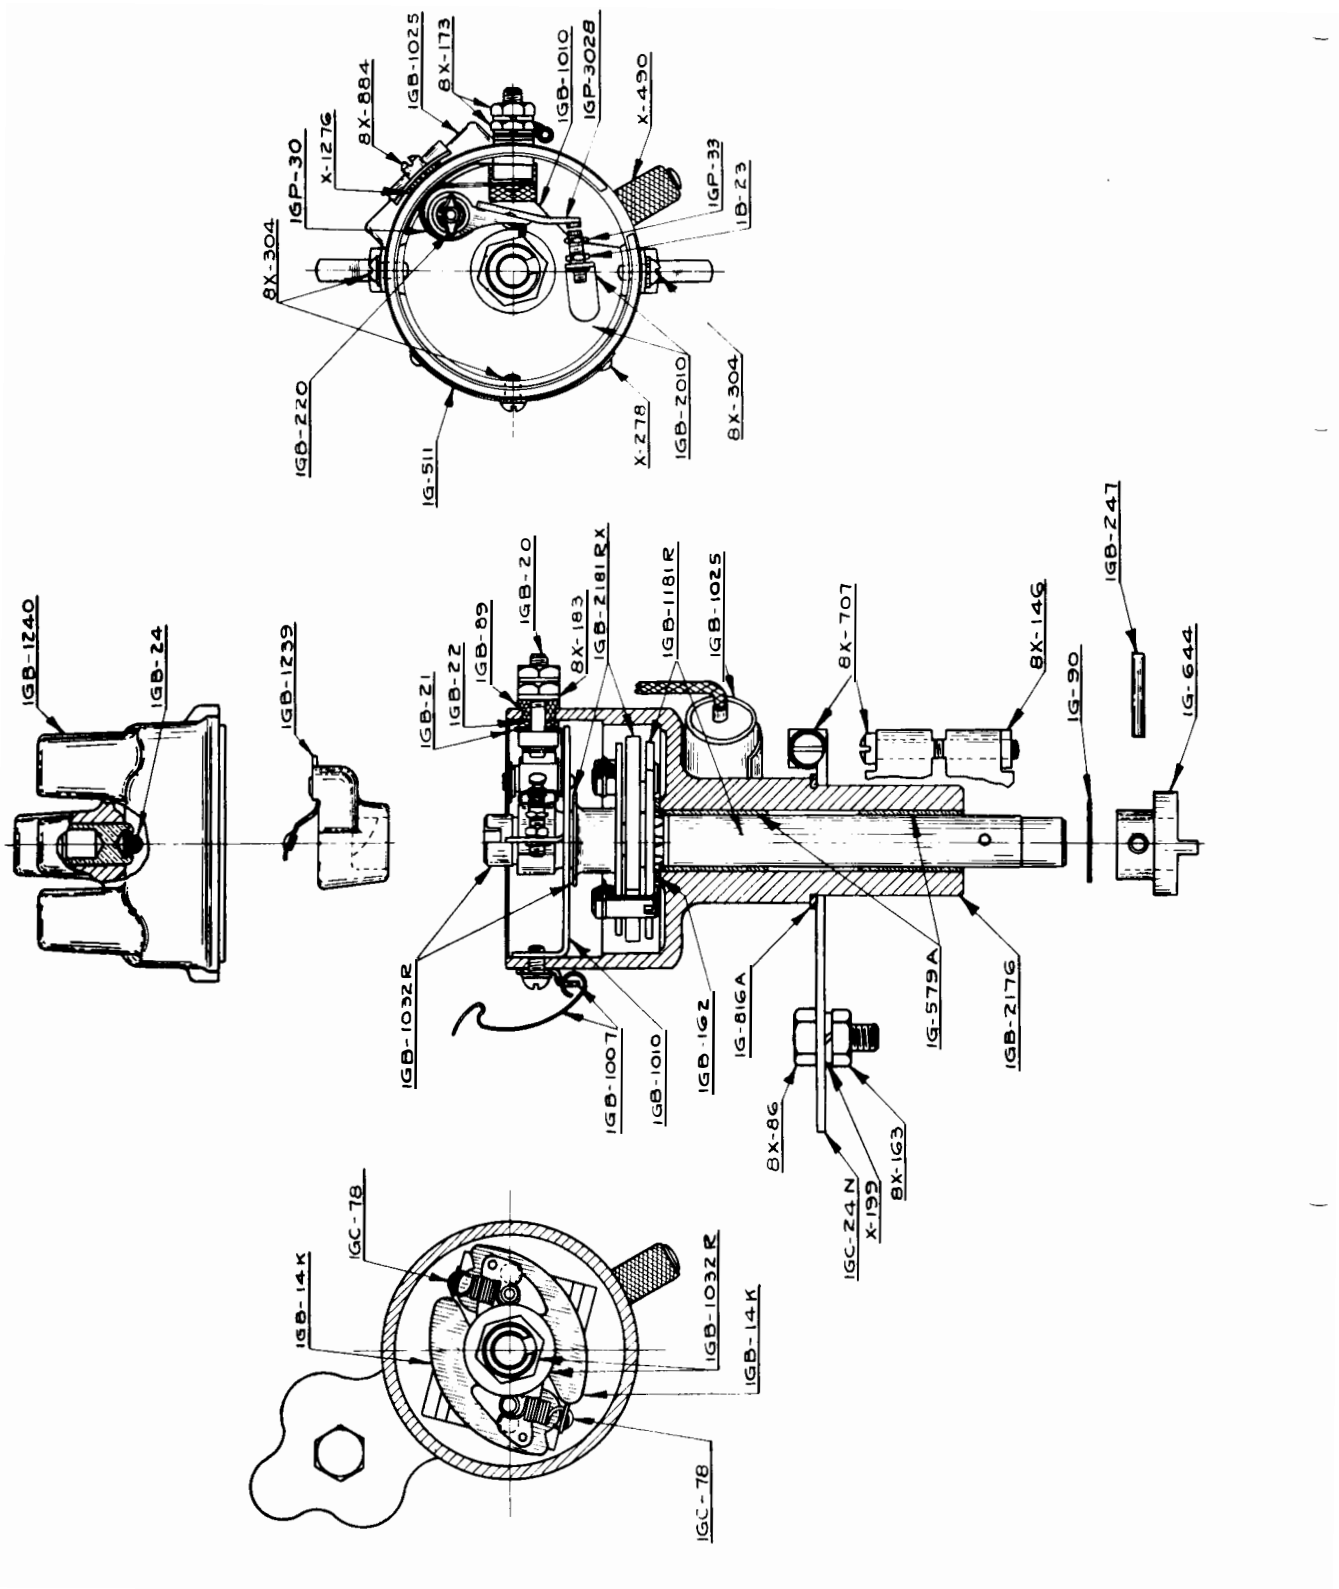

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGB-2181RX	1	Drive Shaft & Gov. Assy.
IGB-14K	2	Weight
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1181R	1	Drive Shaft Assy.
IGC-78	2	Weight Spring
IGC-24N	1	Advance Control Arm
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 9-30-36)

NOTE:- Use IGP-3028A breaker point set and IGC-78S weight spring set in servicing this unit.

"NOTE: Where p rt numbers are shown in parenthesis they re for reference only. By stocking sub-parts the complete part c n be ssembled s needed."

IGB-4325 DISTRIBUTOR ILLUSTRATION

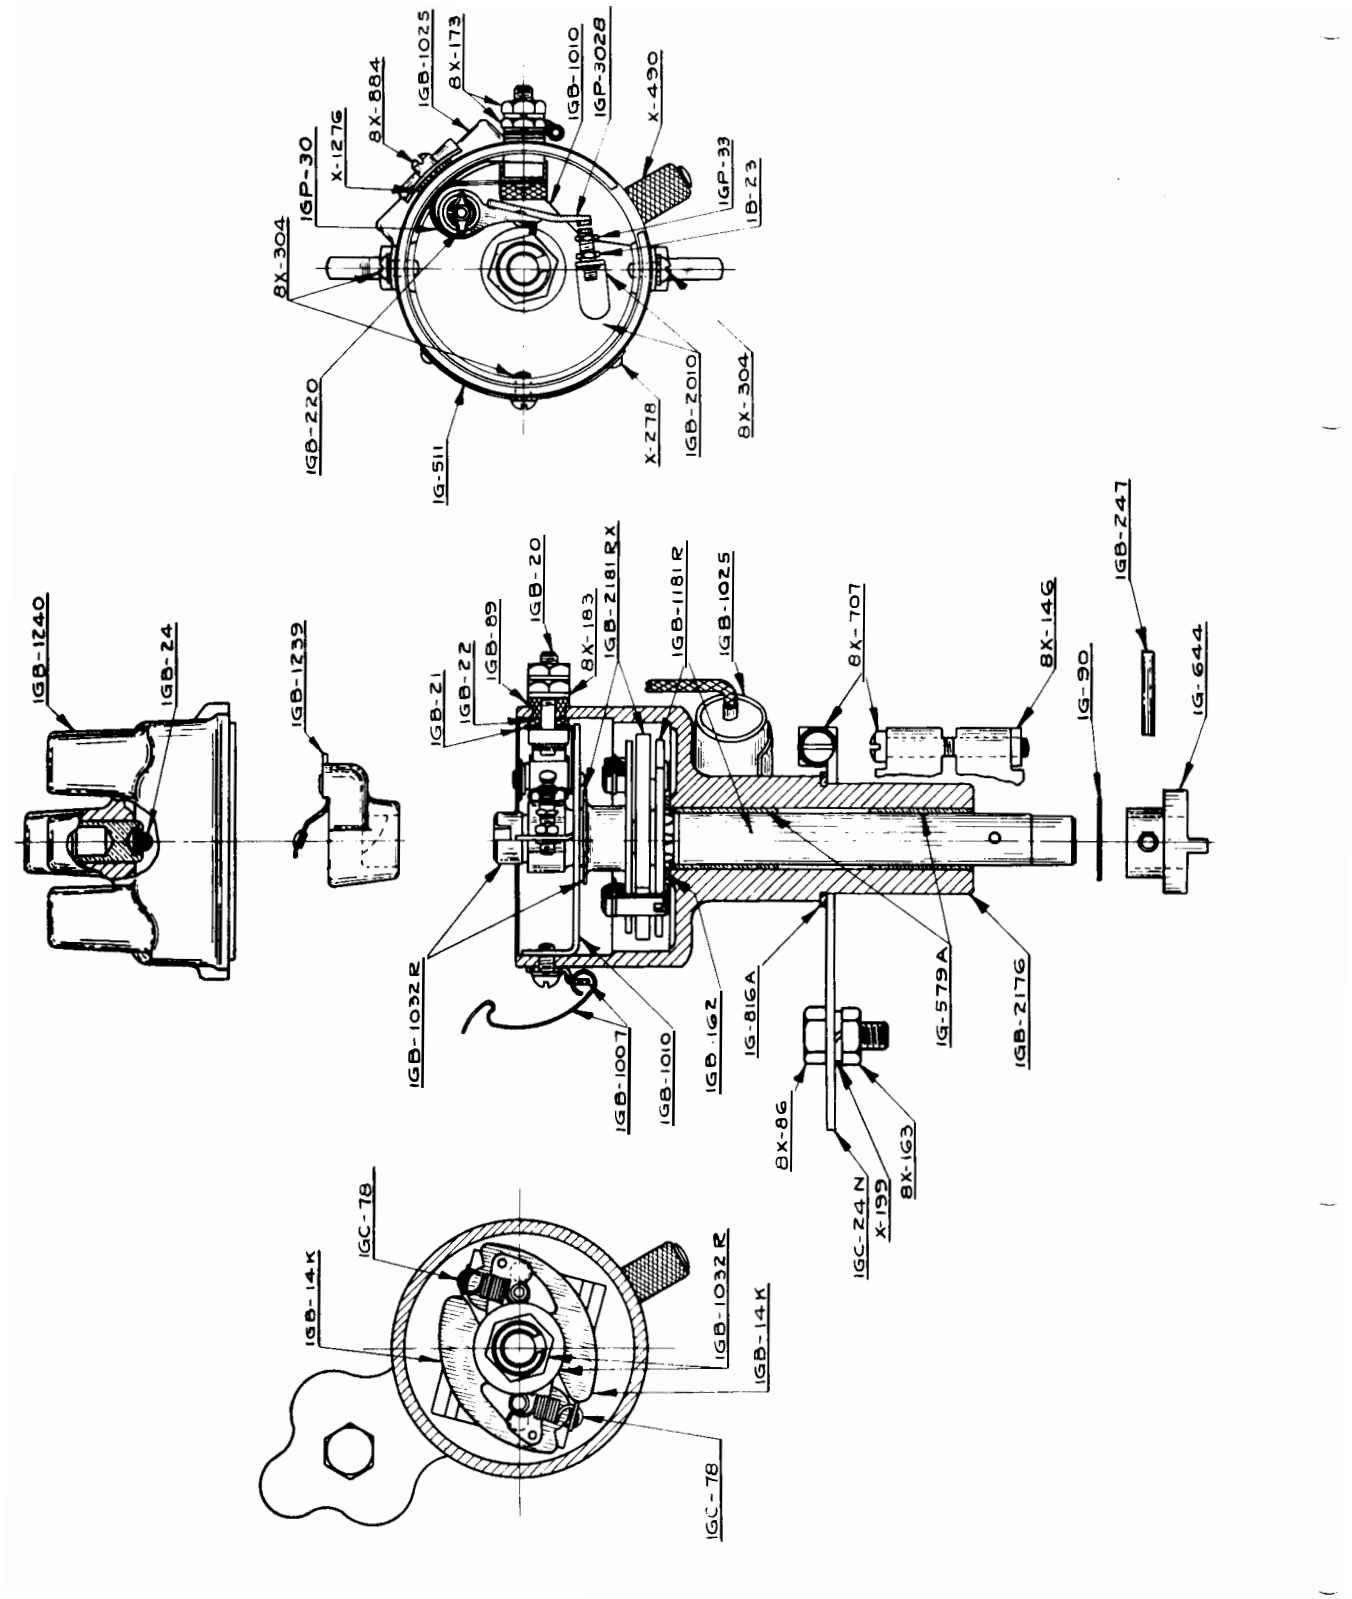

Part No.	No. Used	Name of Part
		1 2 3 4 5
GG-133	1	Dist. Drive Rivet
IG-90	1	Thrust Washer
IG-3927B	1	Condenser Assembly
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-152	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2268	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IGS-16	1	Name Plate
X-278	2	3/32x3/16 Tubular Rivet
X-382	1	1/8 Grease Cup
IGB-2269R	1	Drive Shaft & Gov. Assy.
IG-775‡	2	Weight Spring
IGB-14K	2	Weight Assembly
IGB-1269R	1	Drive Shaft Assy.
IGB-2267R	1	Cam & Stop Plate - 6 cyl. R.H.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-19	1	Drive Shaft Collar
IGS-1027S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	1	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
12X-195	3	#8 Lock Washer
12X-196	1	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 12-23-36)

† Used with assemblies having a suffix "-1".


‡ Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-775S.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4326 & -1 DISTRIBUTOR ILLUSTRATION

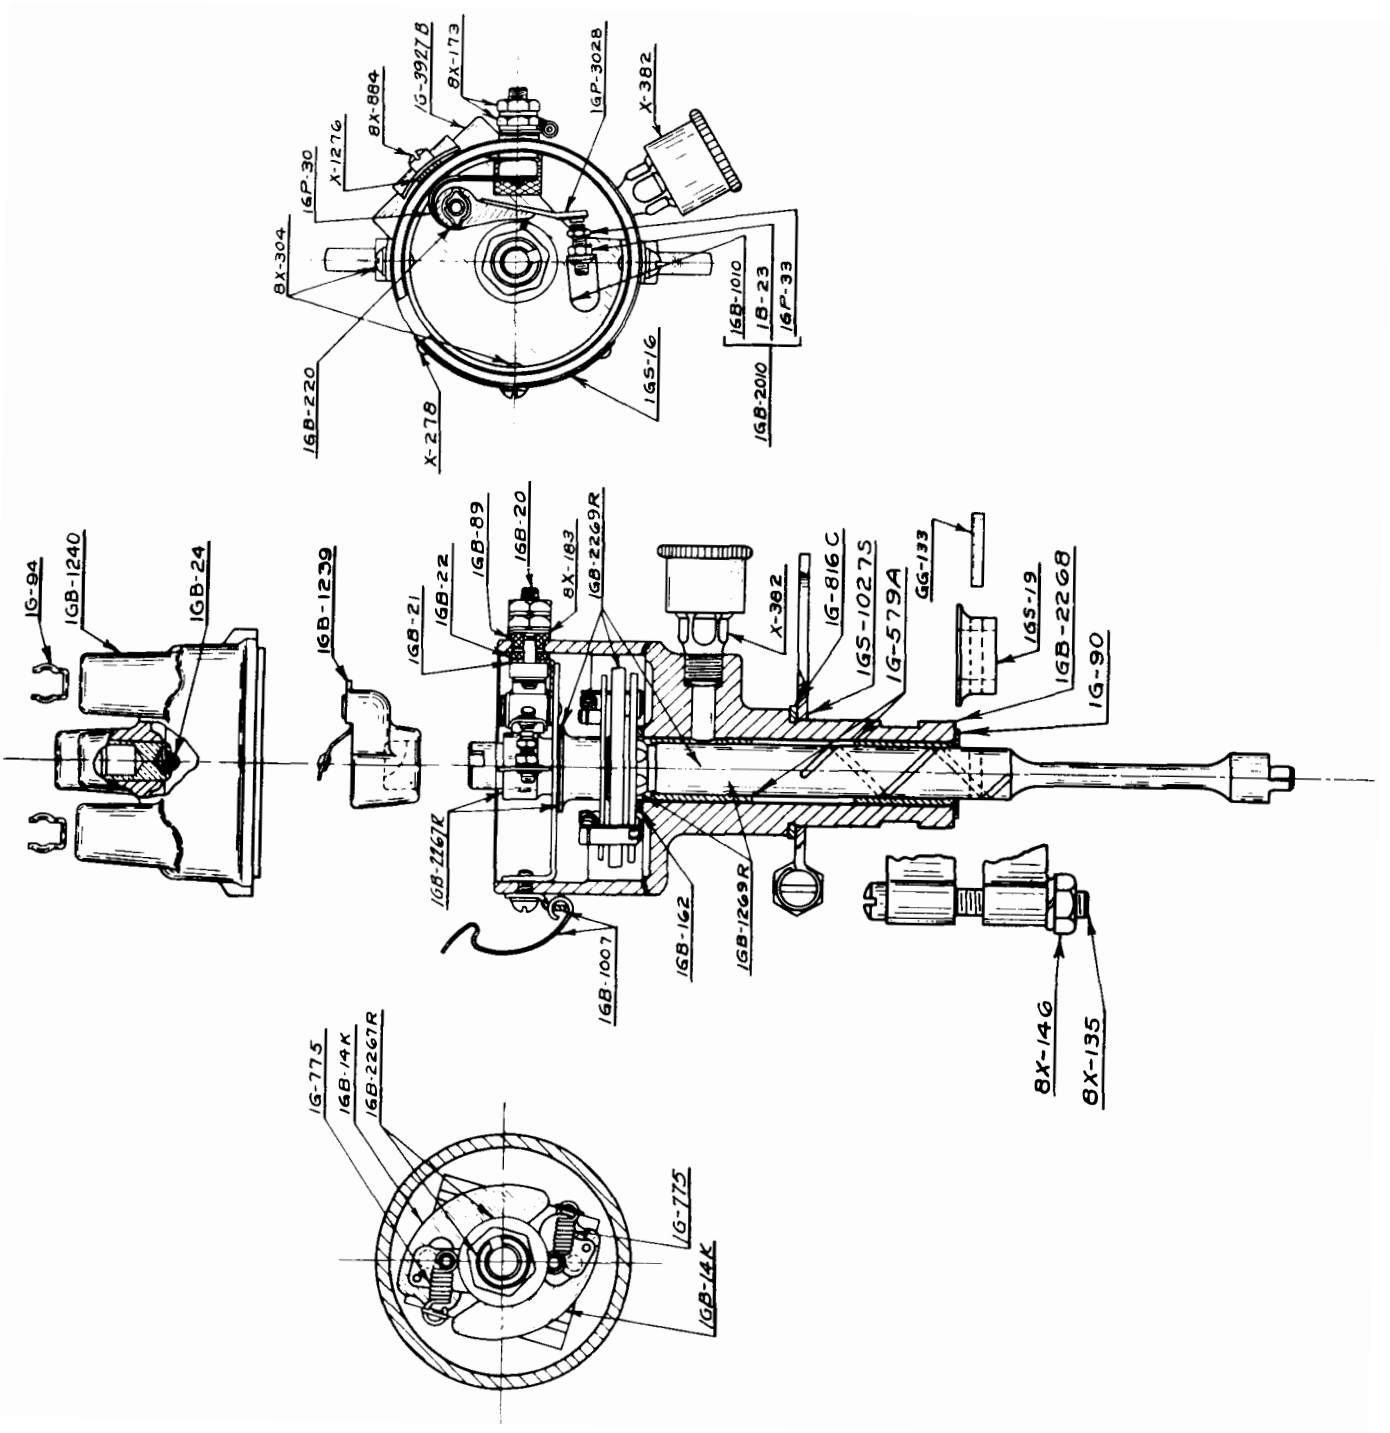

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-517	1	Dist. Gear - Follower
IG-686	1	Advance Control Screw - 1/4-28
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-816	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assembly
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2175RD	1	Drive Shaft & Gov. Assy.
IG-775‡	2	Weight Spring
IGB-14J	2	Weight
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1175R	1	Drive Shaft Assembly
IGB-2176	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGC-1053A	1	Advance Control Arm
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
SW-213	1	Dist. Drive Rivet
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Sc.
8X-794	1	#10-32 Square Nut
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-1063	1	1/4-28 Hex. Nut
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 8-5-35)
(R-3-24-37)

‡ Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-775S.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4327A DISTRIBUTOR ILLUSTRATION

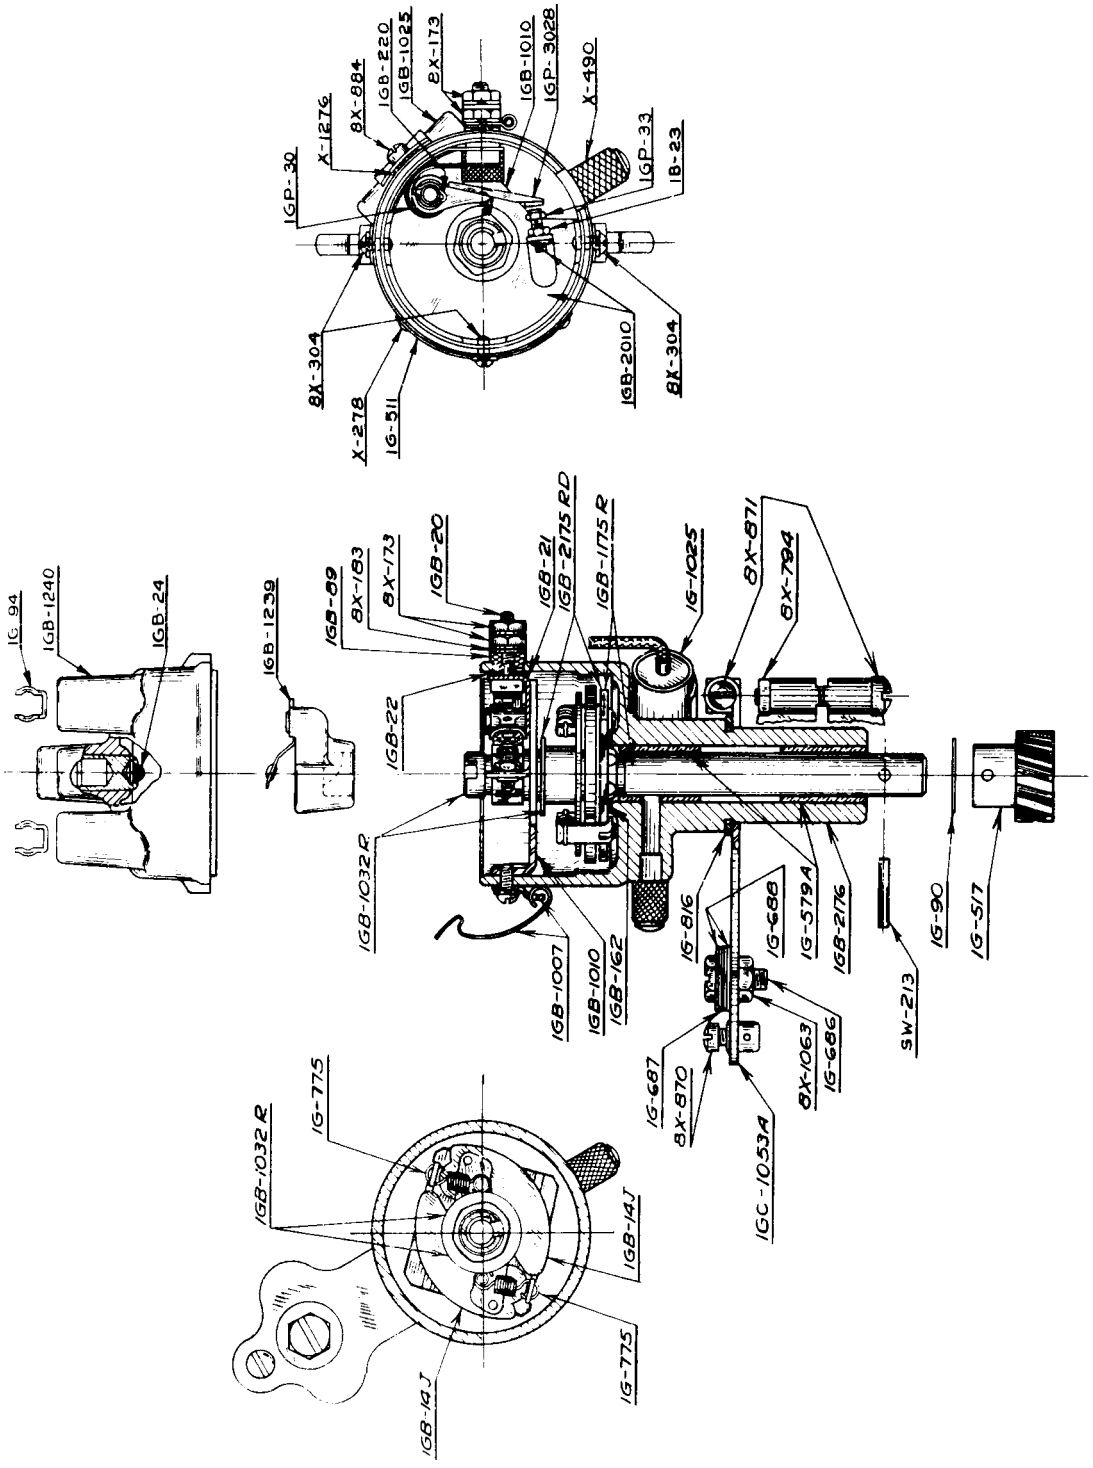

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-447	1	Dist. Drive Sleeve
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-271	1	Advance Control Arm
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
*	1	Drive Shaft & Gov. Assy.
*	2	Weight
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
*	1	Drive Shaft Assy.
*	2	Weight Spring
*	1	Dist. Base Assembly
*	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
SN-213	1	Dist. Drive Rivet 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
8X-146	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer 1 2 3 4 5

(Issued 5-8-36)


Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight	Weight Spring	Dist. Base Assy.	Name Plate	Weight Sp. Set
IGB-4328	IGB-2205RE	IGB-1205R	IGB-14F	IGE-29 (2)	IGB-2270	IG-511	IGE-29S
IGB-4328A	IGB-2205RF	IGB-1205RA	IGB-14D	IGE-30 IGB-281 1 ea.	IGB-2270A	IG-511B	IGB-281SS
IGB-4328B	IGB-2205RF	IGB-1205RA	IGB-14D	IGE-30 IGB-281 1 ea.	IGB-2270A	IG-511B	IGB-281SS

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4328,A,B DISTRIBUTOR ILLUSTRATION

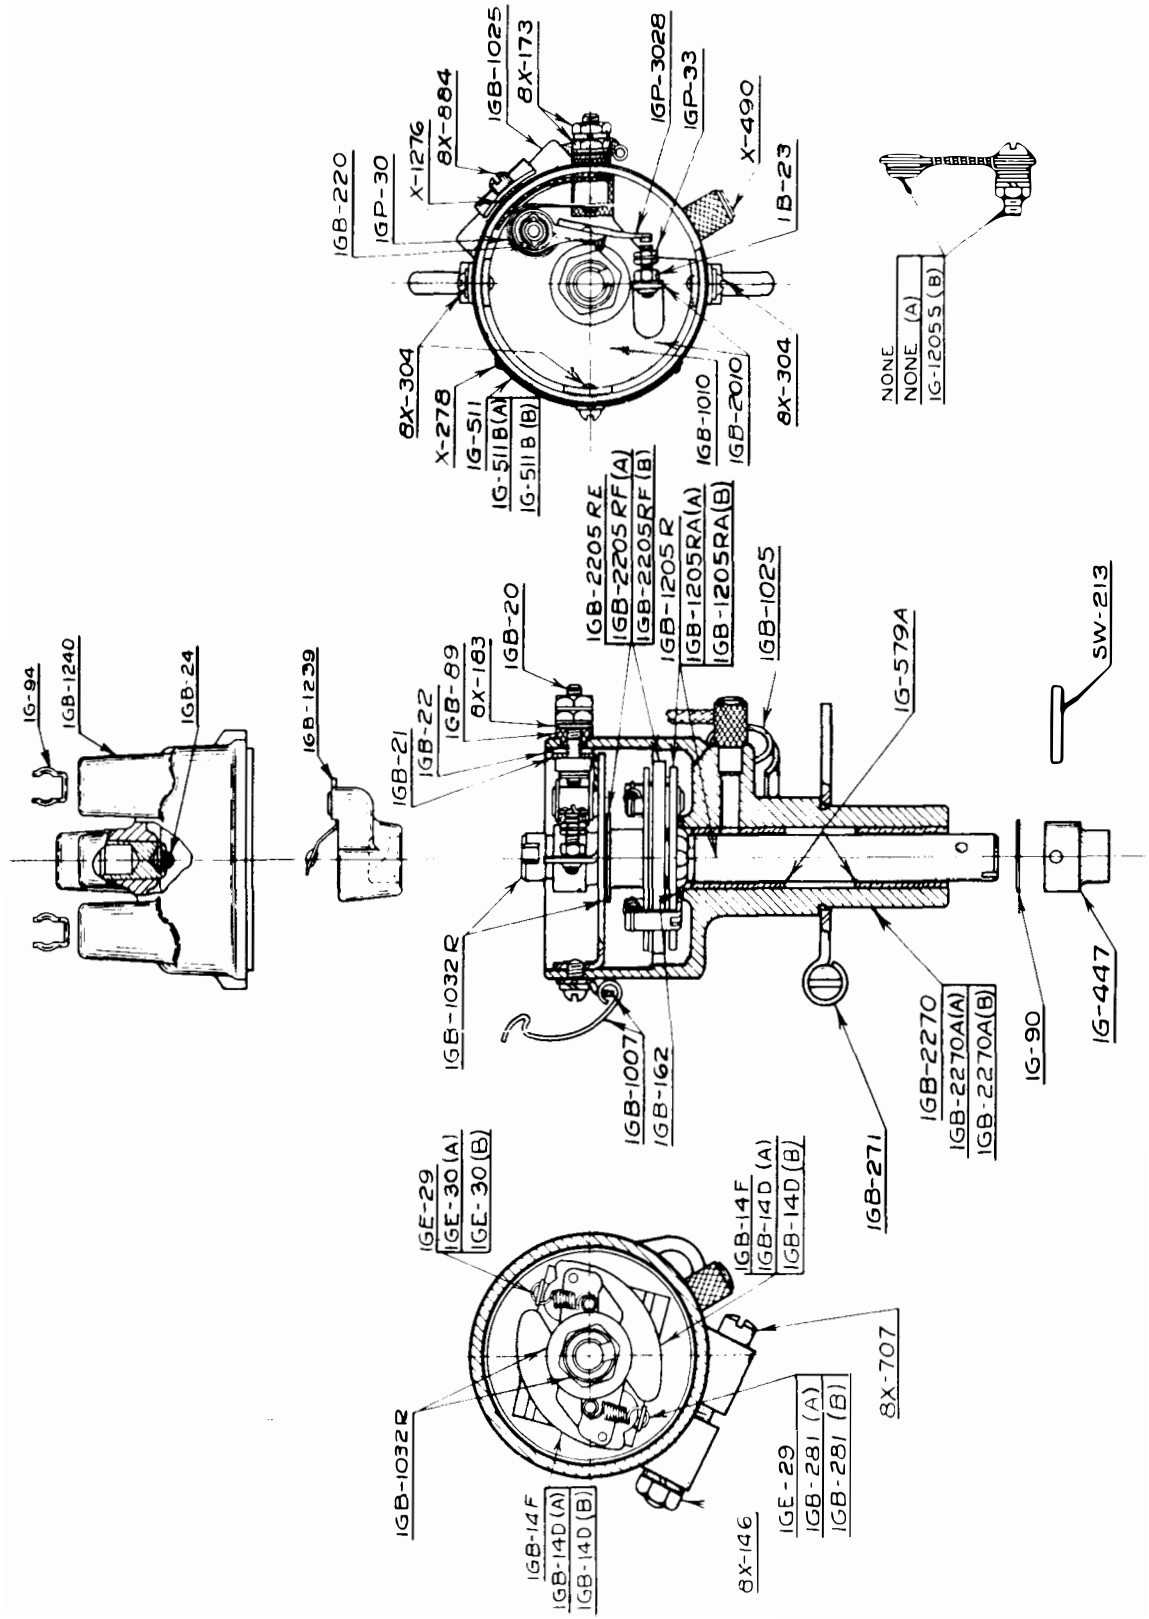

IGB-4330
IGB-4330-1 DISTRIBUTOR PARTS LIST IGB-4330
IGB-4330-1

Part No.	No. Used	Name of Part
		1 2 3 4 5
GG-133	1	Dist. Drive Rivet
IG-90	1	Thrust Washer
IG-3927B	1	Condenser Assembly
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assy.
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2268	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IGS-16	1	Name Plate
X-278	2	3/32x3/16 Tubular Rivet
X-382	1	1/8 Grease Cup
IGB-2272R	1	Drive Shaft & Gov. Assy.
IG-775	2	Weight Spring
IGB-14K	2	Weight
IGB-1272R	1	Drive Shaft Assy.
IGB-2267R	1	Cam & Stop Plate - 6 Cyl. R.H.
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-19	1	Drive Shaft Collar
IGS-1027S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Sc.
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	1	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
12X-195	3	#8 Lock Washer
12X-196	1	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 9-1-37)

† Assemblies having a "-1" suffix are the same as an assembly having an identical assembly number with the "-1" omitted except that the "-1" assembly includes the parts indicated with a "†".


NOTE:- Use IGP-3028A breaker point set and IG-775S weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4330,-1 DISTRIBUTOR ILLUSTRATION

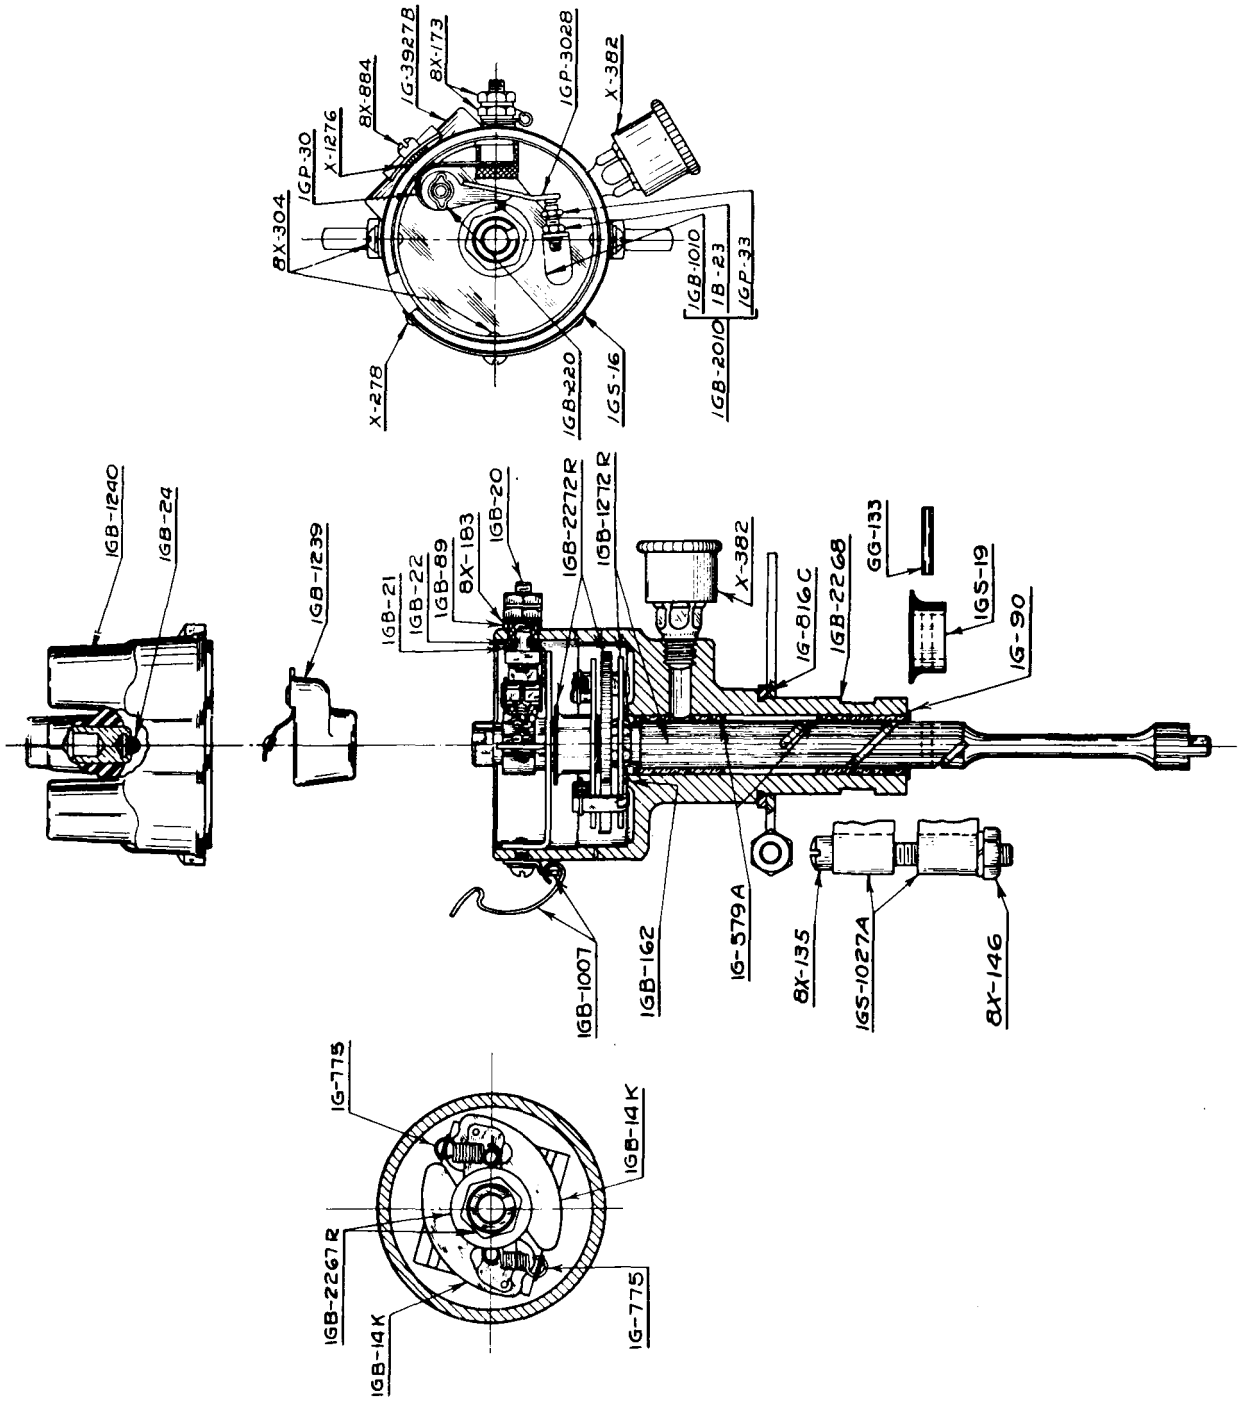

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-247	1	Dist. Drive Rivet
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33	1	Breaker Screw Point
IGB-2249RC	1	Drive Shaft & Gov. Assy.
IG-775	1	Weight Spring
IG-784	1	Weight Spring
IGB-14	2	Weight
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.
IGB-1249R	1	Drive Shaft Assy.
IGB-2254	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-1276	1	#8 Skpf. Washer
		1 2 3 4 5

(Issued 5-8-36)

NOTE:- Use IGP-3028A breaker point set and IG-775SS weight spring set in servicing this unit.

"NOTE: Where p t n mbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assemble as needed."

IGB-4332 DISTRIBUTOR ILLUSTRATION

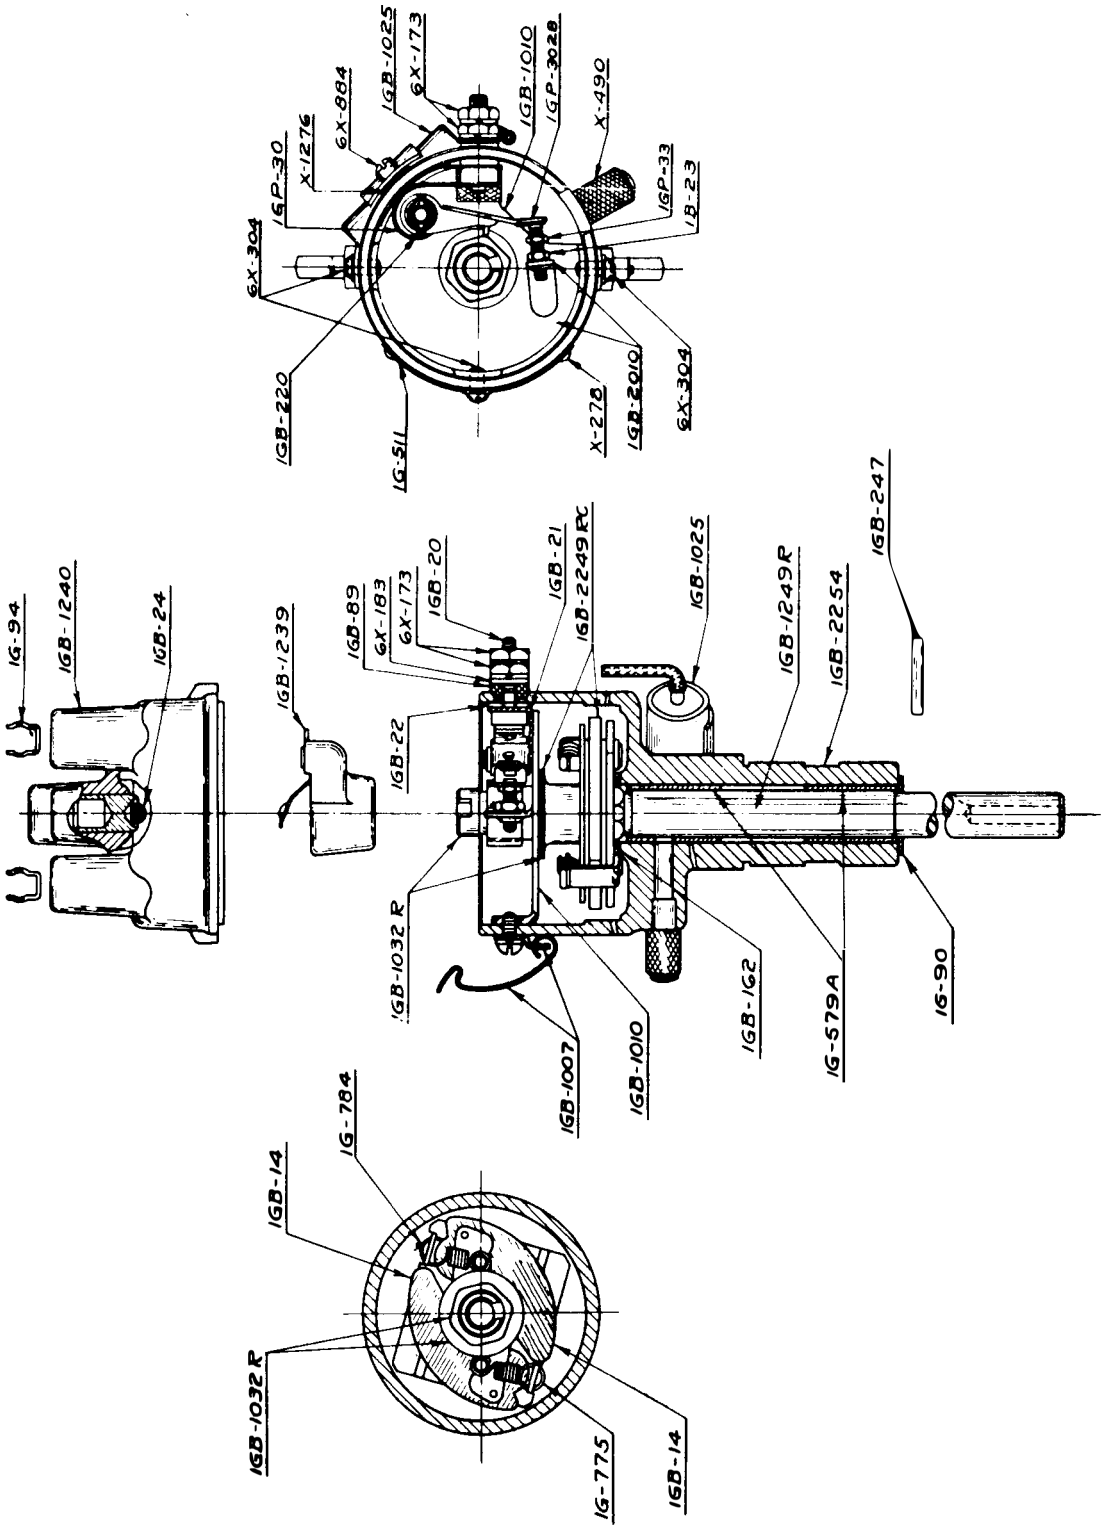

Part No.	No. Used	Name of Part 1 2 3 4 5
*	1	Dist. Gear - Follower
*	1	Dist. Drive Rivet
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-687	1	Spring Washer
IG-688	1	Advance Control Washer
IG-688A	1	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-816A	1	Thrust Washer
IGB-20	1	Terminal Post - #10-32
IGB-21	1	Terminal Post Insulation
IGB-22	1	Insulating Washer
IGB-89	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-220	1	Lock Spring
IGB-1007	2	Dist. Cap Spring & Hinge Assembly
IGB-1025	1	Condenser Assembly
IGB-1239	1	Rotor
IGB-1240	1	Dist. Cap Assembly
IGB-24	1	Contact Plunger
IGB-2010	1	Breaker Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGB-1010	1	Breaker Plate Part Assy.
IGP-33‡	1	Breaker Screw Point
IGB-2176	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
X-278	2	3/32x3/16 Tubular Rivet
X-490	1	Press in - Sleeve Oiler
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGB-1032R	1	Cam & Stop Plate - 6 Cyl. R.H.
IGB-1251R	1	Drive Shaft Assy.
*	1	Advance Control Arm
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-173	2	#10-32 Hex. Nut
8X-183	1	#10 Brass Washer
X-195	3	#8 Lock Washer
X-196	2	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
X-1276	1	#8 Skpf. Washer 1 2 3 4 5

(Issued 11-1-37)

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Advance Arm Assy.	Weight Sp. Set	Gear	Gear Rivet
IGB-4337A	IGB-2251RD	IGB-14A	IG-727	IGC-1024AC	IG-727S	GE-56	GJ-236
IGB-4337B	IGB-2251RE	IGB-14J	IGE-29	IGC-1024AE	IGE-29S	None	None
IGB-4337C	IGB-2251RE	IGB-14J	IGE-29	IGC-1024AC	IGE-29S	GE-56	GJ-236

* See table following parts list for part number applying to assembly wanted.


‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4337A,B,C DISTRIBUTOR ILLUSTRATION

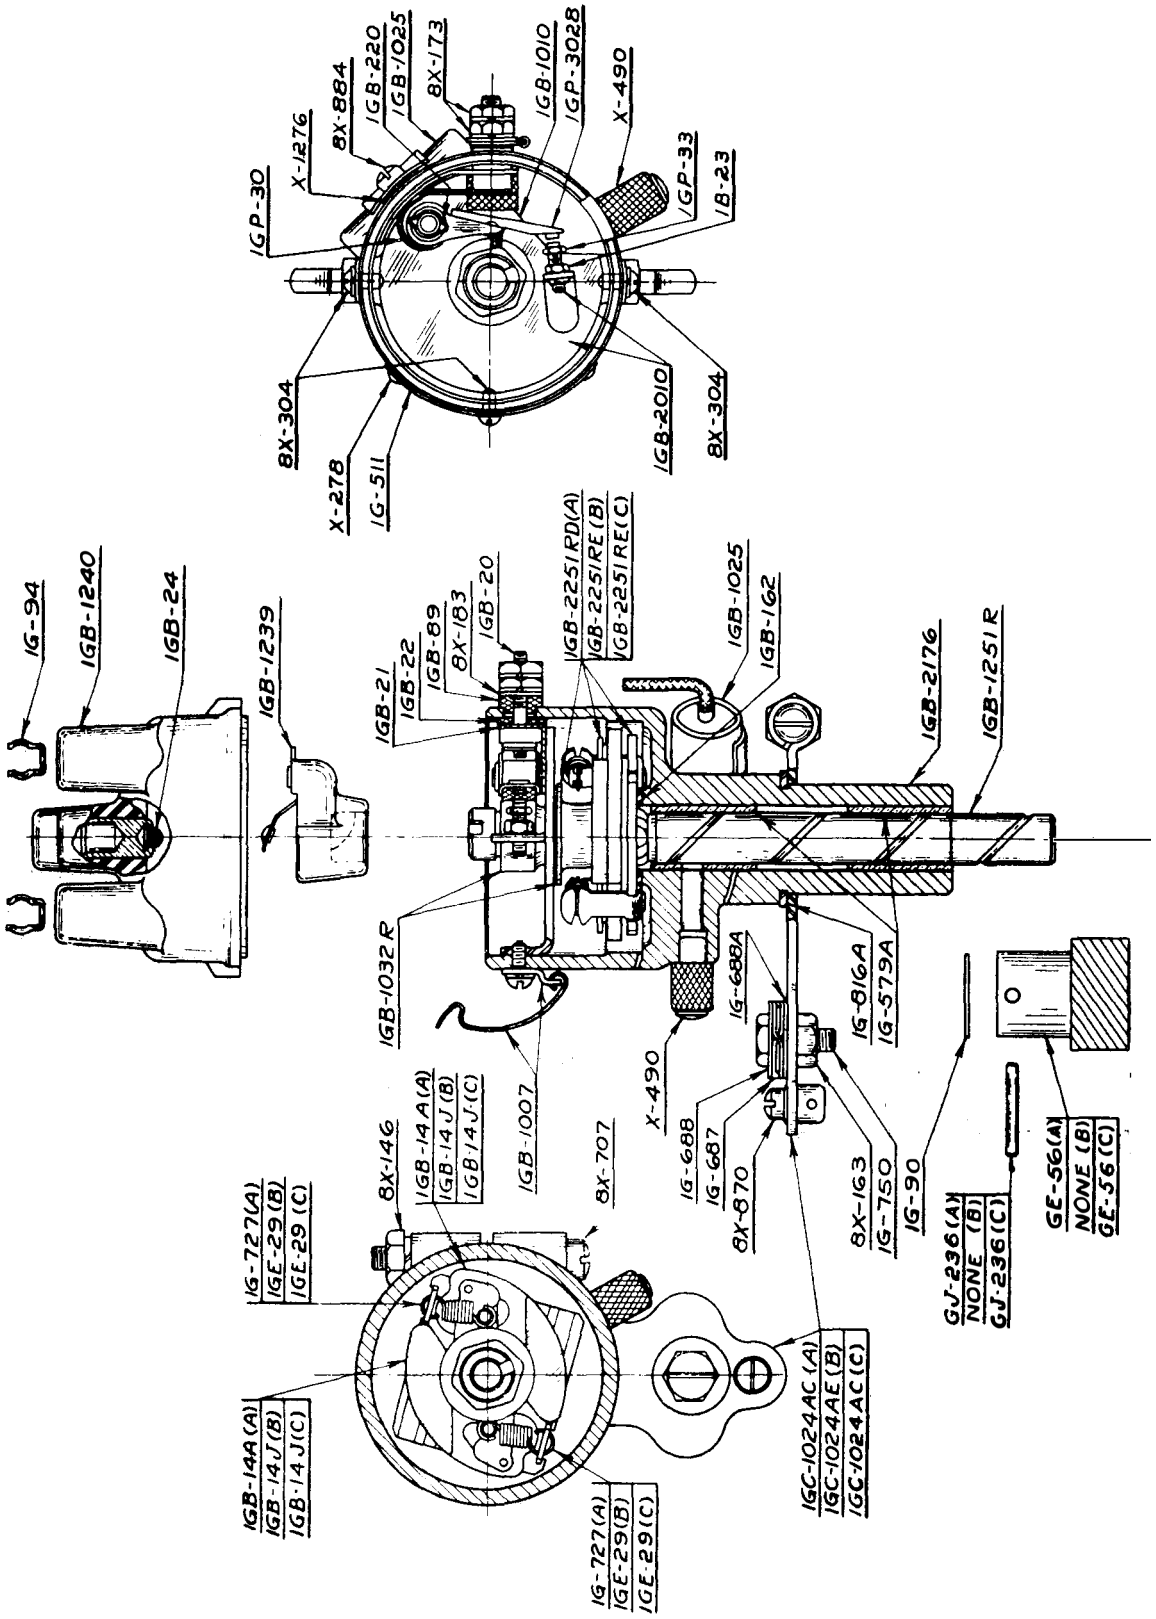



IGC-4000 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGC-4005B	6	Hercules, Le Blond Schacht
IGC-4007	4	Acadia
IGC-4031	6	Peter Pirsch
IGC-4032C	4	Hercules, Waukesha
IGC-4032E	4	Palmer Bros., Whitcomb
IGC-4033A	4	Continental, Towmotor
IGC-4033B	4	Continental, Williamette
IGC-4040B	6	Universal
IGC-4040C	6	Universal
IGC-4048C	4	Palmer Bros.
IGC-4054B	6	Continental
IGC-4054D	6	Ward LaFrance
IGC-4060A	4	Continental
IGC-4060B	4	Continental
IGC-4060C	4	Continental
IGC-4061A	6	Continental
IGC-4061B	6	Continental
IGC-4062	6	Reo Truck
IGC-4062A	6	Reo Truck
IGC-4063	6	Reo Truck
IGC-4064	6	Hercules, Le Blond Schacht
IGC-4065	6	Diamond T
IGC-4067	6	Peter Pirsch


Printed in U. S. A.


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

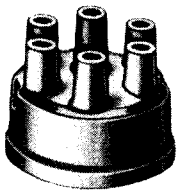

Cap


Rotor



Contact Set


Condenser

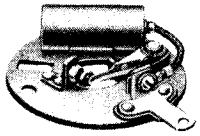

Breaker Plate Assy.

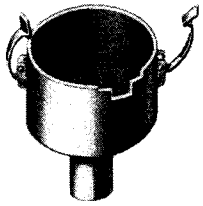
Base Assy.


Bearing

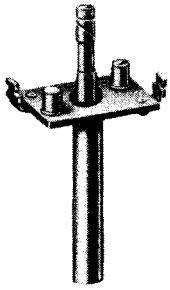
Drive Shaft


Weight Spring Set

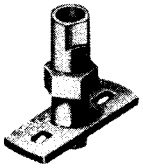
Cam & Stop Plate




Gear


Coupling

ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4005B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IA-77S	IGC-1143RC	- - -
IGC-4007	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2074	IG-579A	IGC-1011L	IG-636S	IGC-1459L	- - -
IGC-4031	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-2028R	- - -	- - -	IG-644
IGC-4032C	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-1034R	- - -	- - -	IG-261
IGC-4032E	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-1034R	- - -	- - -	GE-6
IGC-4033A	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1011R	IGC-42S	IGC-1459R	IG-261
IGC-4033B	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1011R	IG-775S	IGC-1143RH	GK-36
IGC-4040B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2051	IG-579	IGC-1050L	IG-775S	IGC-1143L	GAF-72
IGC-4040C	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2051	IG-579	IGC-1050L	IG-775S	IGC-1143L	GAF-73
IGC-4048C	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1072R	IG-636S	IGC-1067RJ	IG-454
IGC-4054B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IG-636S	IGC-1067LH	IG-644
IGC-4054D	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IG-636LS	IGC-1067LA	IG-644
IGC-4060A	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RB	IGC-42S	IGC-1067RC	GK-36
IGC-4060B	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RB	IG-776S	IGC-1067RX	GK-36
IGC-4060C	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RB	IGE-30BS	IGC-1067RZ	GK-36
IGC-4061A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1072R	IG-817S	IGC-1067RP	GG-9A
IGC-4061B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1072R	IGE-30AS	IGC-1067RV	GG-9A
IGC-4062	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RA	IGB-284BS	IGC-1067RY	IGL-44
IGC-4062A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RA	IGB-208S	IGC-1144RM	IGL-44
IGC-4063	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RA	IGB-284BS	IGC-1067RY	IGL-44
IGC-4064	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2140	IG-579A	IGC-2141R	- - -	- - -	- - -
IGC-4065	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGB-130S	IGC-1067RL	- - -
IGC-4067	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2140	IG-579A	IGC-2141RA	- - -	- - -	IGC-133

MISCELLANEOUS PARTS

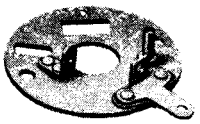Name	Part No.	No. Used	Used On
 ARM, ADVANCE	IG-1860A	1	IGC-4060A B,C,IGC-4061A,B
	IG-2806	1	IGC-4032C,D
	IG-2860A-2	1	IGC-4033A,B,IGC-4048C
	IG-2902	1	IGC-4005B
	IGB-2171E-5	1	IGC-4063
	IGC-2024A-3	1	IGC-4031
	IGC-2024AJ-14	1	IGC-4065
	IGC-2052	1	IGC-4054D
	IGC-2052-1	1	IGC-4054B
	IGC-2086	1	IGC-4064, IGC-4067
	IGS-1020	1	IGC-4062,A
 CLIP, Contact Arm Spring	IG-676	1	All
CONTACT, Dist. Cap Plunger	IG-514	1	All
LOCKWASHERS			
 A B (A) Breaker Plate Mtg. Sc. #10	12X-196	2	All
(B) Condenser & Clamp Sc. #6	X-194	2	All
(A) Terminal Sc. #10	12X-196	1	All
 NUT, Breaker Contact Lock	IB-23	1	All
 OILER, Dist. Base	X-490A	1	All
 PLATE, Breaker	IGC-2012	1	All
 POINTER, Advance Arm	IGS-21	1	IGC-4062,A
RIVETS			
A (A) Coupling	SW-213	1	IGC-4031,IGC-4054B,D,IGC-4062A, IGC-4063,IGC-4067
(A) Gear	SW-213	1	IGC-4032C,E,IGC-4033A,B,IGC-4048C, IGC-4060A,B,C,IGC-4061A,B
B (A) Gear	IG-86	1	IGC-4040B,C
(B) Tubular, Cap Spring	IG-326	2	IGC-4031,IGC-4032C,E,IGC-4064, IGC-4067
 C (C) Tubular, Cap Spring	X-1448	2	IGC-4005B,IGC-4007,IGC-4033A,B, IGC-4040B,C,IGC-4048C,IGC-4054B,D, IGC-4060A,B,C,IGC-4061A,B,IGC-4062,A, IGC-4063,IGC-4065
SCREWS			
 B A (A) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	8X-870	2	IGC-4005B,IGC-4007,IGC-4033A,B, IGC-4040B,C,IGC-4048C,IGC-4054B,D, IGC-4060A,B,C,IGC-4061A,B,IGC-4062,A, IGC-4063,IGC-4065
(A) Breaker Plate Mtg. Fill. Hd. #10-32x3/8	8X-902	2	IGC-4031,IGC-4032C,E,IGC-4064,IGC-4067
(B) Clamp Spring Rd. Hd. #6-32x1/4	8X-302	1	All
(A) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
(A) Terminal Fill. Hd. #10-32x1/4	8X-872	1	All
 SPACER, Cam	IGS-99	1	IGC-4048C,IGC-4054B,D,IGC-4060A,B,C, IGC-4061A,B,IGC-4062,A,IGC-4063,IGC-4065
SPRINGS			
 A C (C) Anti-Rattle	IGE-35	1	IGC-4060C,IGC-4061A,B,IGC-4062,A, IGC-4063
(C) Anti-Rattle	IGE-36	1	IGC-4054B
(B) Cap Clamp	IG-694	2	All
(A) Contact, Dist. Cap	IG-515A	1	All
WASHERS			
 A B (A) Thrust, Advance Arm	IG-816	1	IGC-4005B,IGC-4032C,E,IGC-4033A,B, IGC-4048C,IGC-4054B,D,IGC-4060A,B,C, IGC-4061A,B
(A) Thrust, Advance Arm	IG-816A	1	IGC-4031,IGC-4062,A,IGC-4063,IGC-4065
(B) Thrust, Drive Shaft (Lower)	IG-90	1	All
(B) Thrust, Drive Shaft (Upper)	IG-90	1	IGC-4005B,IGC-4007,IGC-4031,IGC-4032C,E, IGC-4033A,B,IGC-4040B,C,IGC-4064, IGC-4067
 C D (C) Thrust, Drive Shaft (Upper)	IGS-104	1	IGC-4054B,D,IGC-4060A,B,C,IGC-4062,A, IGC-4063,IGC-4065
(D) Thrust, Drive Shaft (Upper)	IGW-46	1	IGC-4048C,IGC-4061A,B

IGC-4000 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGC-4005B	6	Hercules, Le Blond Schacht
IGC-4007	4	Acadia
IGC-4031	6	Peter Pirsch
IGC-4032C	4	Hercules, Waukesha
IGC-4032E	4	Palmer Bros., Whitcomb
IGC-4033A	4	Continental, Towmotor
IGC-4033B	4	Continental, Williamette
IGC-4040B	6	Universal
IGC-4040C	6	Universal
IGC-4048C	4	Palmer Bros.
IGC-4054B	6	Continental
IGC-4054D	6	Ward LaFrance
IGC-4060A	4	Continental
IGC-4060B	4	Continental
IGC-4060C	4	Continental
IGC-4061A	6	Continental
IGC-4061B	6	Continental
IGC-4062	6	Reo Truck
IGC-4062A	6	Reo Truck
IGC-4063	6	Reo Truck
IGC-4064	6	Hercules, Le Blond Schacht
IGC-4065	6	Diamond T
IGC-4067	6	Peter Pirsch


Printed in U. S. A.

IGC-4200 SERIES DISTRIBUTOR PARTS LISTS


Model No.	No. Cyl.	CUSTOMER
IGC-4205	6	Buda, Hercules, Waukesha
IGC-4209B	4	Elwell Parker, Hercules
IGC-4210A	6	Ahrens Fox, Biederman, Maxim Motors
IGC-4214A	6	Brockway
IGC-4214B	6	Brockway
IGC-4216B	6	Bay City, Duplex, Peter Pirsch, Waukesha
IGC-4220A	6	Continental, Peter Pirsch
IGC-4225B	6	Buda, Dart Tr., Duplex Tr.
IGC-4225D	6	Bay City, Hercules
IGC-4225F	6	Buda, Hanson, Insley Mfg.
IGC-4227A	6	Climax, Sterling
IGC-4227B	6	Crown Body, Hercules, U.S. Motors
IGC-4227C	6	Four Wheel Drive, Hercules, U.S. Motors
IGC-4227E	6	Bay City, Hercules, Ross Carrier
IGC-4227F	6	Kermath
IGC-4228A	6	Climax, Fate Root Heath
IGC-4236A	6	Hanson Clutch, Sterling, Waukesha
IGC-4236B	6	Brockway, Continental
IGC-4236C	6	Continental, Massey Harris
IGC-4238	6	Hercules, Peter Pirsch
IGC-4240B	6	Hercules, Peter Pirsch
IGC-4241A	6	Continental
IGC-4246	6	Gray Marine
IGC-4246B	6	Hercules, U.S. Motors
IGC-4247	6	Duplex Tr.
IGC-4251	6	Hercules, Linn Mfg.
IGC-4251B	6	Galion, Hercules
IGC-4253A	6	Hercules, Hyster, Le Blond Schacht, Ross Carrier
IGC-4253B	6	Bay City, Hercules, Moreland
IGC-4259	6	Hercules, Kermath
IGC-4262	6	Hercules, Moreland
IGC-4264	4	Buda, Duplex
IGC-4272	6	Garford, White
IGC-4272A	6	Garford
IGC-4272A-1	6	Diamond T
IGC-4274	6	Diamond T
IGC-4274A	6	Diamond T
IGC-4275	6	Brockway
IGC-4276	6	Nash 6
IGC-4277	6	Hupp 6
IGC-4279	6	Chris Craft
IGC-4279-1	6	Kermath
IGC-4279A	6	Universal
IGC-4280A	6	Climax
IGC-4281	6	Hercules
IGC-4281A	6	Hercules
IGC-4281B	6	Young Engine
IGC-4284A	6	Southern Coach, Sterling, Harnischfeger
IGC-4285	6	Duplex
IGC-4285A	6	White
IGC-4285B	6	Lincoln Electric
IGC-4286	6	Diamond T
IGC-4287A	6	Universal
IGC-4287B	6	Universal
IGC-4288	6	Continental
IGC-4294	6	Lathrop Engine
IGC-4296	4	Lathrop Engine

Printed in U. S. A.


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

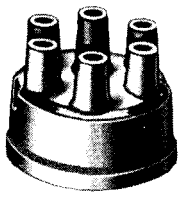

Cap


Rotor



Contact Set


Condenser

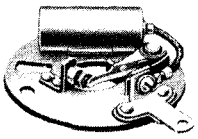

Breaker Plate Assy.

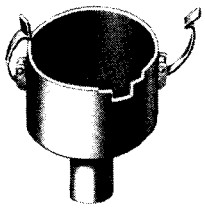
Base Assy.


Bearing

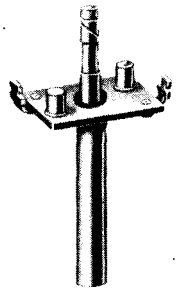
Drive Shaft


Weight Spring Set

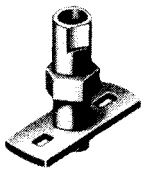
Cam & Stop Plate



Gear


Coupling

ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4205	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-2031R	- - -	- - -	- - -
IGC-4209B	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IG-776S	IGC-1459RA	- - -
IGC-4210A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-2031R	- - -	- - -	- - -
IGC-4214A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IGE-29S	IGC-1067LP	IG-644
IGC-4214B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IG-784S	IGC-1067LQ	IG-644
IGC-4216B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IG-776S	IGC-1144RF	- - -
IGC-4220A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IG-784S	IGC-1144L	IG-644
IGC-4225B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IG-784S	IGC-1144R	- - -
IGC-4225D	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1065RA	IGE-29S	IGC-1067RL	- - -
IGC-4225F	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGB-208S	IGC-1067RAC	- - -
IGC-4227A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IG-776S	IGC-1144RF	- - -
IGC-4227B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGB-130S	IGC-1067RU	- - -
IGC-4227C	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1065RA	IGE-29S	IGC-1067RL	- - -
IGC-4227E	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1065RA	IGB-130S	IGC-1067RL	- - -
IGC-4227F	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1065RA	IG-775S	IGC-1067RT	- - -
IGC-4228A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2172	IG-579A	IGC-2031R	- - -	- - -	- - -
IGC-4236A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IGC-42BS	IGC-1067LQ	IG-644
IGC-4236B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IGB-284S	IGC-1144LC	IG-644
IGC-4236C	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IGE-29S	IGC-1067LT	IG-644
IGC-4238	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-2028R	- - -	- - -	IG-644
IGC-4240B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2090	IG-579A	IGC-1085R	IG-776S	IGC-1144RK	- - -
IGC-4241A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1072R	IGB-146S	IGC-1144RC	GE-20
IGC-4246	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RA	IA-77S	IGC-1067RL	IG-644
IGC-4246B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RA	IGE-29S	IGC-1067RL	IG-644
IGC-4247	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IG-784S	IGC-1144R	- - -
IGC-4251	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IA-77S	IGC-1067RL	- - -
IGC-4251B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGB-130S	IGC-1067RL	- - -
IGC-4253A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGB-130S	IGC-1067RL	- - -
IGC-4253B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-29S	IGC-1067RL	- - -
IGC-4259	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1065LA	IGB-130S	IGC-1067LD	- - -
IGC-4262	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-2031R	- - -	- - -	- - -
IGC-4264	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-29S	IGC-1144RD	- - -
IGC-4272	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IA-77S	IGC-1067RL	- - -
IGC-4272A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-29S	IGC-1067RL	- - -
IGC-4272A-1	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-29S	IGC-1067RL	- - -
IGC-4274	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IG-457S	IGC-1067RL	- - -
IGC-4274A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGB-130S	IGC-1067RL	- - -
IGC-4275	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IGE-29S	IGC-1067LP	IG-644
IGC-4276	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2137	IG-579A	IGC-1138R	IG-817SS	IGC-1067RAD	- - -
IGC-4277	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2139	IG-579A	IGC-1105L	IGE-24S	IGC-1067LR	- - -
IGC-4279	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1150R	IGB-130S	IGC-1067RL	- - -
IGC-4279-1	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1150R	IGB-130S	IGC-1067RL	- - -
IGC-4279A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1150R	IGB-312S	IGC-1067RAN	- - -
IGC-4280A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2071	IG-579A	IGC-1064R	IGB-252S	IGC-1067RU	- - -
IGC-4281	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2090	IG-579A	IGC-1085R	IGB-222S	IGC-1144RO	- - -
IGC-4281A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2090	IG-579A	IGC-1085R	IG-775S	IGC-1144RP	- - -
IGC-4281B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2090	IG-579A	IGC-1085R	IGE-30HS	IGC-1067RT	- - -
IGC-4284A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064RB	IGB-178S	IGC-1144RG	GG-9A
IGC-4285	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGC-42FS	IGC-1067RAD	- - -
IGC-4285A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-29S	IGC-1067RL	- - -
IGC-4285B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-30HS	IGC-1067RT	GE-87
IGC-4286	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064R	IGE-29S	IGC-1067RL	IG-644A
IGC-4287A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1072L	IGB-349S	IGC-1067LU	IG-261
IGC-4287B	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1072L	IGB-349S	IGC-1067LU	GK-36
IGC-4288	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064L	IG-636MS	IGC-1144LE	IG-644
IGC-4294	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-2028R	- - -	- - -	IG-644
IGC-4296	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2029	IG-579	IGC-1028R	- - -	- - -	IG-644

MISCELLANEOUS PARTS

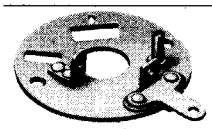Name	Part No.	No. Used	Used On
 ARM, Advance	IG-2806	1	IGC-4294
	IG-2806J	1	IGC-4296
	IG-2860A	1	IGC-4288
	IG-2860A-1	1	IGC-4241A, IGC-4284A, IGC-4287A, B
	IG-2902	1	IGC-4253A, B
	IG-2902C-2	1	IGC-4275
	IG-2902D	1	IGC-4210A, IGC-4238
	IG-2902E-3	1	IGC-4251, B
	IG-2902F-4	1	IGC-4272, A, IGC-4286
	IGB-1271	1	IGC-4276
	IGB-2154A-1	1	IGC-4277
	IGB-2171A-4	1	IGC-4216B
	IGC-1024AG-2	1	IGC-4279, A
	IGC-1024AL	1	IGC-4280A
	IGC-1024N-6	1	IGC-4209B
	IGC-1024Z-6	1	IGC-4228A
	IGC-2024A-3	1	IGC-4205
	IGC-2024AC-16	1	IGC-4214B
	IGC-2024F-3	1	IGC-4225B, D, F
	IGC-2024F-4	1	IGC-4220A
	IGC-2024G-15	1	IGC-4272A-1
	IGC-2024N-2	1	IGC-4227A, B, C, E, F, IGC-4236A, B, C, IGC-4246, B, IGC-4259, IGC-4262
	IGC-2024N-17	1	IGC-4279-1
	IGC-2084	1	IGC-4247
	IGC-2086A	1	IGC-4240B
	IGC-2155	1	IGC-4281, A, B
	IGC-3024E	1	IGC-4264
	IGC-3024E-1	1	IGC-4214A
	IGH-2062	1	IGC-4274, A
	IGS-2020-1	1	IGC-4285, A, B
 CLIP, Contact Arm Spring	IG-676	1	All
 COLLAR, Shaft	IG-489	1	IGC-4277
 CONTACT, Dist. Cap Plunger	IG-514	1	All
LOCKWASHERS			
 (A) Breaker Plate Mtg. Sc. #10	12X-196	2	All
A B (B) Condenser & Clamp Sc. #6	X-194	2	All
(A) Terminal Sc. #10	12X-196	1	All
 NUT, Breaker Contact Lock	IB-23	1	All
 OILER, Dist. Base	X-490A	1	All
 PLATE, Breaker	IGC-2012	1	All
RIVETS			
A (A) Coupling	SW-213	1	IGC-4214A, B, IGC-4220A, IGC-4236A, B, C, IGC-4238, IGC-4246, B, IGC-4275, IGC-4277, IGC-4286, IGC-4288, IGC-4294, IGC-4296
(A) Gear	GJ-236	1	IGC-4285B
(A) Gear	SW-213	1	IGC-4241A, IGC-4284A, IGC-4287A, B
(A) Sleeve	SW-213	1	IGC-4276
 B (B) Tubular, Cap Spring	IG-326	2	IGC-4205, IGC-4210A, IGC-4228A, IGC-4238, IGC-4262, IGC-4294, IGC-4296
 C (C) Tubular, Cap Spring	X-1448	2	IGC-4209B, IGC-4214A, B, IGC-4216B, IGC-4220A, IGC-4225B, D, F, IGC-4227A, B, C, E, F, IGC-4236A, B, C, IGC-4240B, IGC-4241A, IGC-4246, B, IGC-4247, IGC-4251, B, IGC-4253A, B, IGC-4259, IGC-4264, IGC-4272, A, A-1, IGC-4274, A, IGC-4275, IGC-4276, IGC-4277, IGC-4279, -1, A, IGC-4280A, IGC-4281, A, B, IGC-4284A, IGC-4285, A, B, IGC-4286, IGC-4287A, B, IGC-4288
SCREWS			
(B) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	8X-870	2	IGC-4209B, IGC-4214A, B, IGC-4216B, IGC-4220A, IGC-4225B, D, F, IGC-4227A, B, C, E, F, IGC-4236A, B, C, IGC-4240B, IGC-4241A, IGC-4246, B, IGC-4247, IGC-4251, B, IGC-4253A, B, IGC-4259, IGC-4264, IGC-4272, A, A-1, IGC-4274, A, IGC-4275, IGC-4276, IGC-4277, IGC-4279, -1, A, IGC-4280A, IGC-4281, A, B, IGC-4284A, IGC-4285, A, B, IGC-4286, IGC-4287A, B, IGC-4288
 A B (B) Breaker Plate Mtg. Fill. Hd. #10-32x3/8	8X-902	2	IGC-4205, IGC-4210A, IGC-4228A, IGC-4238, IGC-4262, IGC-4294, IGC-4296
(A) Clamp Spring Rd. Hd. #6-32x1/4	8X-302	1	All
(B) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
(B) Terminal Fill. Hd. #10-32x1/4	8X-872	1	All
 SLEEVE, Dist. Drive	IG-447	1	IGC-4276

MISCELLANEOUS PARTS (Cont.)

	Name	Part No.	No. Used	Used On
	SPACER, Cam	IGS-99	1	IGC-4214A,B,IGC-4216B,IGC-4220A,IGC-4225B,D,F, IGC-4227A,B,C,E,F,IGC-4236A,B,C,IGC-4240B, IGC-4241A,IGC-4246B,IGC-4247,IGC-4251,B, IGC-4253A,B,IGC-4259,IGC-4264,IGC-4272,A,A-1, IGC-4274,A,IGC-4275,IGC-4276,IGC-4277,IGC-4279,-1,A, IGC-4280A,IGC-4281,A,B,IGC-4284A,IGC-4285,A,B, IGC-4286,IGC-4287A,B,IGC-4288
	SPRINGS			
	(C) Anti-Rattle	IGE-35	1	IGC-4225F,IGC-4227B,IGC-4241A,IGC-4264, IGC-4276,IGC-4280A,IGC-4281,A,B,IGC-4284A, IGC-4285
	(C) Anti-Rattle	IGE-36	1	IGC-4214A,B,IGC-4220A,IGC-4236A,B,C,IGC-4275, IGC-4288
	(B) Cap Clamp	IG-694	2	All
	(A) Contact, Dist. Cap	IG-515A	1	All
	WASHERS			
	(A) Thrust, Advance Arm	IG-816	1	IGC-4210A,IGC-4238,IGC-4241A,IGC-4247,IGC-4251,B, IGC-4253A,B,IGC-4262,IGC-4272,A,A-1,IGC-4274,A, IGC-4275,IGC-4284A,IGC-4286,IGC-4287A,B,IGC-4288, IGC-4294,IGC-4296
	(A) Thrust, Advance Arm	IG-816A	1	IGC-4205,IGC-4209B,IGC-4214A,B,IGC-4216B, IGC-4220A,IGC-4225,B,D,F,IGC-4227A,B,C,E,F, IGC-4228A,IGC-4236A,B,C,IGC-4246,B,IGC-4259, IGC-4264,IGC-4279,-1,A,IGC-4280A,IGC-4285,A,B
	(B) Thrust, Drive Shaft (Lower)	IG-90	1	All
	(B) Thrust, Drive Shaft (Upper)	IG-90	1	IGC-4205,IGC-4209B,IGC-4210A,IGC-4228A,IGC-4238, IGC-4262,IGC-4294,IGC-4296
	(C) Thrust, Drive Shaft (Upper)	IGS-104	1	IGC-4214A,B,IGC-4216B,IGC-4220A,IGC-4225B,D,F, IGC-4227A,B,C,E,F,IGC-4236A,B,C,IGC-4240B, IGC-4246,B,IGC-4247,IGC-4251,B,IGC-4253A,B, IGC-4264,IGC-4272,A,A-1,IGC-4274,A,IGC-4275, IGC-4280A,IGC-4281,A,B,IGC-4284A,IGC-4285,A,B, IGC-4286,IGC-4287A,B,IGC-4288
	(D) Thrust, Drive Shaft (Upper)	IGW-46	1	IGC-4241A,IGC-4259,IGC-4276,IGC-4277,IGC-4279,-1,A
	WEIGHTS			
	Governor	IG-1322	2	IGC-4216B,IGC-4225D,IGC-4227A,C,E,F,IGC-4246B, IGC-4251,B,IGC-4253A,B,IGC-4272,A,A-1, IGC-4274,A,IGC-4279,-1,IGC-4285A,IGC-4286
	Governor	IG-1456	2	IGC-4209B,IGC-4225B,F,IGC-4227B,IGC-4240B, IGC-4241A,IGC-4247,IGC-4264,IGC-4276,IGC-4279A,IGC-4280A, IGC-4281,A,B,IGC-4284A,IGC-4285,B
	Governor	IG-2456	2	IGC-4214A,B,IGC-4220A,IGC-4236A,B,C,IGC-4275, IGC-4277,IGC-4287A,B,IGC-4288
	Governor	IG-2322	2	IGC-4259
	WICKS			
	(A) Felt, Cam Sleeve	IG-495	1	IGC-4209B,IGC-4214A,B,IGC-4216B,IGC-4220A, IGC-4225B,D,F,IGC-4227A,B,C,E,F,IGC-4236A,B,C, IGC-4240B,IGC-4241A,IGC-4246,B,IGC-4247,IGC-4251,B, IGC-4253A,B,IGC-4259,IGC-4264,IGC-4272,A,A-1, IGC-4274,A,IGC-4275,IGC-4276,IGC-4277,IGC-4279,-1,A IGC-4280A,IGC-4281,A,B,IGC-4284A,IGC-4285,A,B, IGC-4286,IGC-4287A,B,IGC-4288
	(B) Felt, Oiler	IGS-117	1	IGC-4205,IGC-4209B,IGC-4210A,IGC-4225B,IGC-4227A, B,C,E,F,IGC-4228A,IGC-4238,IGC-4240B,IGC-4262, IGC-4264,IGC-4274,A,IGC-4276,IGC-4277,IGC-4279,-1,A IGC-4280A,IGC-4281,A,B,IGC-4285,A,B,IGC-4287A,B, IGC-4288,IGC-4294,IGC-4296

Model No.	No. Cyl.	CUSTOMER
IGC-4401, -1	6	Dodge Truck
IGC-4401A, -1	6	Chrysler Marine
IGC-4401C, -1	6	Chrysler Marine
IGC-4402, -1	6	Chrysler Industrial, Dodge Truck
IGC-4402A, -1	6	Dodge Truck
IGC-4403, -1	6	Dodge Truck
IGC-4403A, -1	6	Chrysler Marine
IGC-4404A, -1	6	Dodge Truck
IGC-4406, -1	6	Dodge Truck
IGC-4406A, -2	6	Chrysler Marine
IGC-4007, -1	6	Chrysler Industrial, Dodge Truck
IGC-4407A, -1	6	Dodge Truck
IGC-4407B, -1	6	Dodge Truck
IGC-4407C, -1	6	Chrysler Industrial, Chrysler Marine
IGC-4407D, -1	6	Chrysler Industrial, Dodge Truck
IGC-4407E, -1	6	Chrysler Industrial
IGC-4408, -1	6	Dodge Truck
IGC-4409A	6	Reo Truck
IGC-4410	6	Gray Marine
IGC-4411	6	Gray Marine
IGC-4413	6	White Motor
IGC-4414, -1	6	Dodge Truck
IGC-4415	6	Nash 6
IGC-4417	6	Checker Cab

Printed in U. S. A.

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

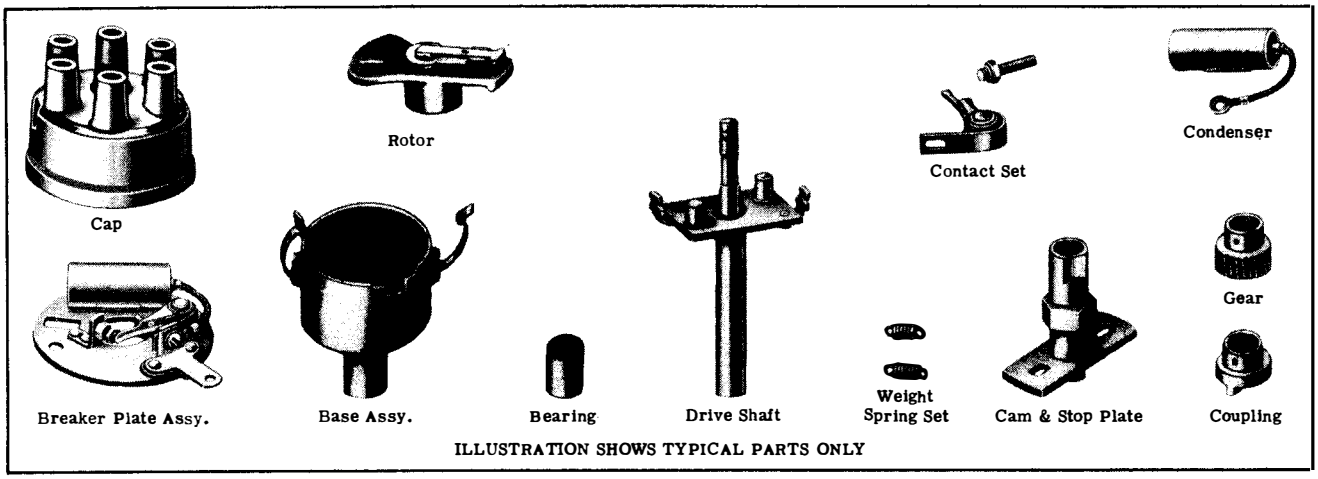





ILLUSTRATION SHOWS TYPICAL PARTS ONLY



Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam Stop Plate	Gear or Coupling
IGC-4401,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2001A	IG-579A	IGS-1024RA	IGC-42ES	IGS-1100RH	- - -
IGC-4401A,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2001A	IG-579A	IGS-1024RA	IG-775S	IGS-1100RN	- - -
IGC-4401C,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2001A	IG-579A	IGS-1024RA	IG-636DS	IGS-1100RH	- - -
IGC-4402,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2001A	IG-579A	IGS-1025RD	IG-636DS	IGS-1100RC	- - -
IGC-4402A,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2001A	IG-579A	IGS-1025RA	IG-636SS	IGS-1100RO	- - -
IGC-4403,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1002R	IGC-119S	IGS-1100RH	- - -
IGC-4403A,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1002RA	IG-775S	IGS-1100RN	- - -
IGC-4404A,-1	IGC-1123B*	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2001A	IG-579A	IGS-1040RA	IGC-120S	IGS-1100RAC	IGL-44
IGC-4406,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1042R	IGC-119S	IGS-1100RH	- - -
IGC-4406A,-2	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1042RA	IG-775S	IGS-1100RN	- - -
IGC-4407,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1054RB	IGB-208S	IGS-1100RO	- - -
IGC-4407A,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1054RB	IGC-118S	IGS-1100RH	- - -
IGC-4407B,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1054RB	IGC-119S	IGS-1100RH	- - -
IGC-4407C,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1054RA	IG-636DS	IGS-1100RH	- - -
IGC-4407D,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1054RB	IGB-208S	IGS-1100RD	- - -
IGC-4407E,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2028A	IG-579A	IGS-1054RF	IG-636NS	IGS-1100R	- - -
IGC-4408,-1	IGC-1107S	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2061	IG-579A	IGS-1060R	IG-636FS	IGS-1100RD	IGC-133
IGC-4409A	IGC-1123B*	IGS-1016B	IGP-3028A	IG-2671	IGC-3012	IGS-2062B	IG-579A	IGS-1053RC	IG-784S	IGS-1100RL	- - -
IGC-4410	IGC-1123L**	IGS-1016B	IGP-3028A	IG-2671	IGC-3012	IGS-2064	IG-579A	IGS-1065L	IGB-293S	IGS-1100L	- - -
IGC-4411	IGC-1123B*	IGS-1016B	IGP-3028A	IG-2671	IGC-3012	IGS-2066	IG-579A	IGS-1063R	IGB-284S	IGS-1100RM	- - -
IGC-4413	IGC-1107S	IGS-1016B	IGP-3028A	IG-2671	IGC-3012	IGS-2068	IG-579A	IGS-1053R	IG-884S	IGS-1100RJ	IGC-136
IGC-4414,-1	IGC-1123B*	IGS-1016B	IGP-3028A	IG-3927C	IGC-3012C	IGS-2061	IG-579A	IGS-1060R	IG-636FS	IGS-1100RE	IGC-133
IGC-4415	IGC-1123B*	IGS-1016B	IGP-3028A	IG-2671	IGC-3012	IGS-2071	IG-579A	IGS-1070R	IG-817SS	IGS-1022RQ	- - -
IGC-4417	IGC-1107S	IGS-1016B	IGP-3028A	IG-2671	IGC-3012	IGS-2041A	IG-579A	IGS-1053RA	IGC-42CS	IGS-1100RH	IG-644

* IGC-1124 Dist. Cap Cover.
** IGC-1124L Dist. Cap Cover.

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	ARM, Advance	IG-2860A-3	1	IGC-4410, IGC-4411
		IGB-1271	1	IGC-4415
		IGC-1134	1	IGC-4408-1, IGC-4414-1
		IGC-2024AF-13	1	IGC-4409A
		IGS-1020	1	IGC-4417
		IGS-1020S	1	IGC-4404A-1, IGC-4406-1
		IGS-1027S	1	IGC-4401-1, A-1, C-1, IGC-4402-1, A-1, IGC-4403-1, A-1, IGC-4406A-2, IGC-4407-1, A-1, B-1, C-1, D-1, E-1
	CLIP, Contact Arm Spring	IG-676	1	All
 (A) (B)	COLLARS			
	(A) Shaft	IGB-199	1	IGC-4410, IGC-4411
	(B) Shaft	IGS-19S	1	IGC-4401, -1, A, A-1, C, C-1, IGC-4402, -1, A, A-1, IGC-4403, -1, A, A-1, IGC-4406, -1, A, A-2, IGC-4407, -1, A, A-1, B, B-1, C, C-1, D, D-1, E, E-1
	CONTACT, Dist. Cap Plunger	IG-514	1	All
	COVER, Terminal Slot	IGC-117	1	All
	COVERS			
	Dist. Cap	IGC-1124	1	IGC-4404A, A-1, IGC-4409A, IGC-4411, IGC-4414, -1, IGC-4415
	Dist. Cap	IGC-1124L	1	IGC-4410
	CUP, Grease	X-382	1	IGC-4401, -1, A, A-1, C, C-1, IGC-4402, -1, A, A-1, IGC-4403, -1, A, A-1, IGC-4404A, A-1, IGC-4406, -1, A-2, IGC-4407, -1, A, A-1, B, B-1, C, C-1, D, D-1, E, E-1, IGC-4408, -1, IGC-4413, IGC-4414, -1, IGC-4417
	GASKET, Dist. Cap Cover	IGB-230	3	IGC-4404A, -1, IGC-4409A, IGC-4410, IGC-4411, IGC-4414, -1, IGC-4415
 (A) (B)	LOCKWASHERS			
	(A) Condenser & Clamp Sc. #6	X-194	2	All
	(B) Terminal Screw #10	X-196	1	IGC-4409A, IGC-4410, IGC-4411, IGC-4413, IGC-4415, IGC-4417
	NUT, Breaker Contact Lock	IB-23	1	All
	OILER, Dist. Base	X-490A	1	IGC-4409A, IGC-4410, IGC-4411, IGC-4415
	PLATE, Breaker	IGC-2012	1	All
	PLUG, Rubber Dist. Cap Vent. Hole	IGS-32	1	IGC-4401, -1, A, A-1, C, C-1, IGC-4402, -1, A, A-1, IGC-4403, -1, A, A-1, IGC-4406, -1, A, A-2, IGC-4407, IGC-4407-1, A, A-1, B, B-1, C, C-1, D, D-1, E, E-1, IGC-4408, -1, IGC-4413, IGC-4417
	POINTERS			
	Advance Arm	IGC-135	1	IGC-4408-1, IGC-4414-1
	Advance Arm	IGS-21	1	IGC-4403-1, IGC-4404A-1, IGC-4406-1, A-2, IGC-4417
 (A) (B)	RIVETS			
	(A) Collar, Coupling or Sleeve	SW-213	1	All
	(B) Tubular, Cap Spring	X-1448	2	All
 (A) (B) (C)	SCREWS			
	(A) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	8X-870	2	All
	(B) Clamp Spring Rd. Hd. #6-32x1/4	8X-302	1	All
	(A) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
	(C) Dist. Cap Cover, Ctsk. Hd. #8-32x3/4	8X-1340	3	IGC-4404A, -1, IGC-4409A, IGC-4410, IGC-4411, IGC-4414, -1, IGC-4415
	(A) Terminal, Fill. Hd. #10-32x1/4	8X-872	1	IGC-4409A, IGC-4410, IGC-4413, IGC-4415, IGC-4417
	SLEEVE, Dist. Drive	IG-447	1	IGC-4415
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACER, Cam	IGS-99	1	All
 (B) (C) (A)	SPRINGS			
	(A) Anti-Rattle	IGT-69	1	IGC-4410
	(A) Anti-Rattle	IGT-70	1	IGC-4401, -1, C, C-1, IGC-4402, -1, A, A-1, IGC-4403, -1, IGC-4404A, -1, IGC-4406, -1, IGC-4407, -1, A, A-1, B, B-1, C, C-1, D, D-1, E, E-1, IGC-4408, -1, IGC-4409A, IGC-4411, IGC-4413, IGC-4414, -1, IGC-4415, IGC-4417
	(B) Cap Clamp	IG-694	2	All
	(C) Contact, Dist. Cap	IG-515A	1	All

MISCELLANEOUS PARTS (Continued)

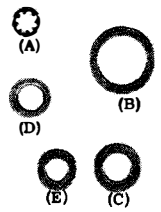	Name	Part No.	No. Used	Used On
	WASHERS			
	(A) Breaker Plate Mtg. Skpf. #10	X-1270	2	All
	(B) Thrust, Advance Arm	IG-816	1	IGC-4410,IGC-4411
	(B) Thrust, Advance Arm	IG-816A	1	IGC-4409A,IGC-4417
	(C) Thrust, Drive Shaft (Lower)	IG-90	1	IGC-4401,-1,A,A-1,C,C-1,IGC-4402,-1,A,A-1, IGC-4403,-1,A,A-1,IGC-4404A,A-1,IGC-4406,-1,A,A-2, IGC-4407,-1,A,A-1,B,B-1,C,C-1,D,D-1,E,E-1, IGC-4409A,IGC-4410,IGC-4411,IGC-4413,IGC-4415, IGC-4417
	(C) Thrust, Drive Shaft (Lower)	IG-90A	1	IGC-4408,-1,IGC-4414,-1
	(D) Thrust, Drive Shaft (Upper)	IGS-104	1	IGC-4401,-1,A,A-1,C,C-1,IGC-4402,-1,A,A-1, IGC-4403,-1,A,A-1,IGC-4404A,A-1,IGC-4406,-1,A,A-2, IGC-4407,-1,A,A-1,B,B-1,C,C-1,D,D-1,E,E-1, IGC-4408,-1,IGC-4409A,IGC-4410,IGC-4411,IGC-4413, IGC-4414,-1,IGC-4417
	(E) Thrust, Drive Shaft (Upper)	IGW-46	1	IGC-4415
	WEIGHTS			
	Governor	IG-1322	2	IGC-4401A,A-1,IGC-4403A,A-1,IGC-4406A,A-2
	Governor	IG-1456	2	IGC-4401,-1,C,C-1,IGC-4402,-1,A,A-1,IGC-4403,-1, IGC-4404A,A-1,IGC-4406,-1,IGC-4407,-1,A,A-1,B,B-1, IGC-4407C,C-1,D,D-1,E,E-1,IGC-4408,-1,IGC-4409A, IGC-4411,IGC-4413,IGC-4414,-1,IGC-4415,IGC-4417
	Governor	IG-2456	2	IGC-4410
	WICKS			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Oiler	IGS-117	1	IGC-4410,IGC-4411,IGC-4415
	(B) Felt, Grease Cup	IGS-117A	1	IGC-4401,-1,A,A-1,C,C-1,IGC-4402,-1,A,A-1, IGC-4403,-1,A,A-1,IGC-4404A,A-1,IGC-4406,-1,A,A-2, IGC-4407,-1,A,A-1,B,B-1,C,C-1,D,D-1,E,E-1, IGC-4408,-1,IGC-4413,IGC-4414,-1

IGC-4500 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGC-4501, -1	6	Dodge Truck, Chrysler Industrial
IGC-4501-2	6	Dodge Truck
IGC-4502-1	6	Dodge Truck
IGC-4502A-1	6	Dodge Truck
IGC-4503	6	Packard
IGC-4505	6	Packard
IGC-4506, -1	6	Chrysler Industrial
IGC-4508-1	6	Dodge Truck
IGC-4508A-1	6	Dodge Truck, Chrysler Industrial
IGC-4508B-1	6	Dodge Truck, Chrysler Industrial
IGC-4510-1M	6	Chrysler Marine
IGC-4511-1M	6	Chrysler Marine
IGC-4512	6	Nash 6
IGC-4513	6	Willys 6
IGC-4514	6	Willys 6
IGC-4515-1	6	Dodge Truck
IGC-4515A-1	6	Dodge Truck
IGC-4516-1	6	Dodge Truck
IGC-4517-1	6	Dodge Truck
IGC-4517A-1	6	Dodge Truck
IGC-4518-1	6	Dodge Truck
IGC-4518A-1	6	Dodge Truck

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

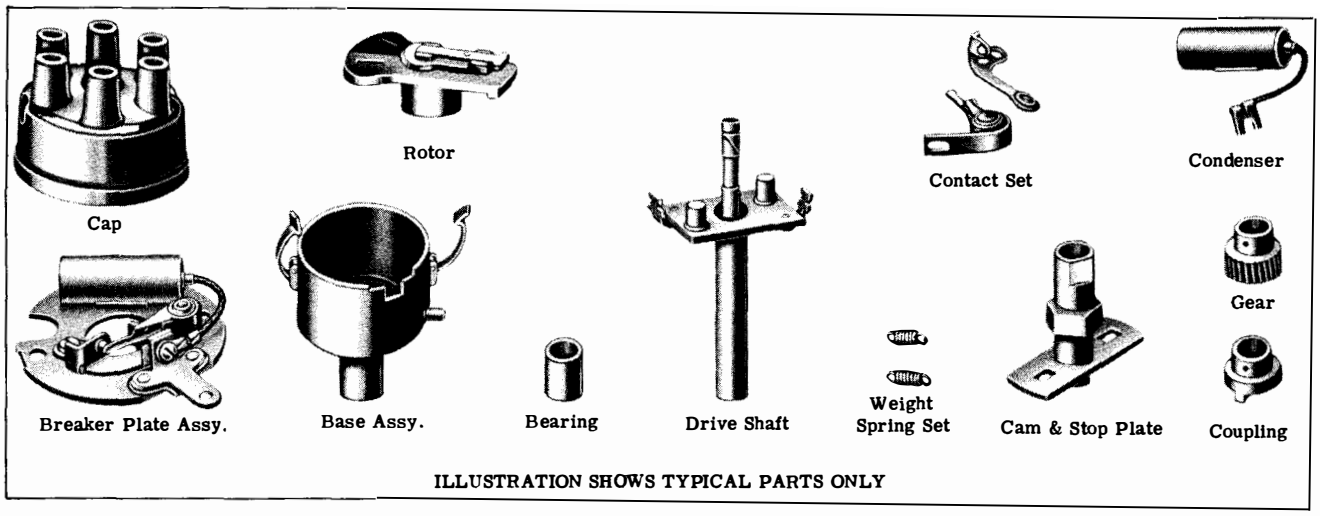




ILLUSTRATION SHOWS TYPICAL PARTS ONLY




Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4501,-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2028A	IG-579A	IGS-1081RB	IG-636HS	IGS-1100RA	- - -
IGC-4501-2	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2028A	IG-579A	IGS-1081RB	IG-636HS	IGS-1100RA	- - -
IGC-4502-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2061	IG-579A	IGS-1060R	IG-636FS	IGS-1100RD	IGC-133
IGC-4502A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2061	IG-579A	IGS-1060R	IG-636AS	IGS-1100RC	IGC-133
IGC-4503	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3128	IGC-2148	IGS-2109	IG-579A	IGT-1020LB	IGB-293S	IGS-1100LA	- - -
IGC-4505	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3128	IGC-2148	IGC-2160	IG-579A	IGT-1020LB	IGB-293S	IGS-1100LA	- - -
IGC-4506,-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2028A	IG-579A	IGS-1024RC	IG-636HS	IGS-1100RB	- - -
IGC-4508-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2120	IG-579A	IGS-1060R	IG-636AS	IGS-1100RC	IGC-133
IGC-4508A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2120	IG-579A	IGS-1060R	IG-636HS	IGS-1100R	IGC-133
IGC-4508B-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2120	IG-579A	IGS-1060R	IG-636HS	IGS-1100RW	IGC-133
IGC-4510-1M	IGC-1123C*	IGS-1016B	IGP-3028VS	IG-3927K	IGC-2148G	IGS-2028B	IG-579A	IGS-1054RJ	IG-636NS	IGS-1100RA-3	- - -
IGC-4511-1M	IGC-1123C*	IGS-1016B	IGP-3028VS	IG-3927K	IGC-2148G	IGS-2028B	IG-579A	IGS-1154RA	IGB-292SS	IGS-1100RAD	- - -
IGC-4512	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2188	IG-579A	IGS-1187L	IGB-327FS	IGS-1100LV	- - -
IGC-4513	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2190	IG-579A	IGS-1189L	IGB-336AS	IGS-1100LM	- - -
IGC-4514	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2192	IG-579A	IGS-1189L	IGB-336AS	IGS-1100LM	- - -
IGC-4515-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2200	**IG-579A	IGS-1199R	IG-636HS	IGS-1100RW	†IGC-133
IGC-4515A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2200	**IG-579A	IGS-1199R	IG-636HS	IGS-1100R	†IGC-133
IGC-4516-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2144	**IG-579A	IGS-1124RA	IG-636QS	IGS-1100RA	†
IGC-4517-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2200	**IG-579A	IGS-1199RA	IG-636HS	IGS-1100RW	†IGC-133
IGC-4517A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2200	**IG-579A	IGS-1199RA	IG-636HS	IGS-1100R	†IGC-133
IGC-4518-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2144	**IG-579A	IGS-1124RB	IG-636QS	IGS-1100RA	†
IGC-4518A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2144	**IG-579A	IGS-1124RB	IGB-292SS	IGS-1100RX	†

† See Miscellaneous Parts Section For Tachometer Drive Gears.
** See Miscellaneous Parts Section For Other Bearings.
* IGC-1124B Dist. Cap Cover.

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	ARM, Advance	IGC-1134	1	IGC-4502-1, A-1, IGC-4508-1, A-1, B-1, IGC-4515-1, A-1, IGC-4517-1, A-1
		IGS-1020	1	IGC-4501-1, IGC-4506-1, IGC-4516-1, IGC-4518-1, A-1
		IGS-1020-2	1	IGC-4510-1M, IGC-4511-1M
		IGT-1044	1	IGC-4503
		IGT-2067	1	IGC-4501-2
	BEARING, Ball S.A.E. 202 Tach. Drive	X-294	1	IGC-4515-1, A-1, IGC-4516-1, IGC-4517-1, A-1, IGC-4518-1, A-1
	BRACKETS			
	(A) Vacuum Control	IGC-161	1	IGC-4505, IGC-4513, IGC-4514
	(B) Vacuum Chamber	VC-107	1	IGC-4505
	(B) Vacuum Chamber	VC-151	1	IGC-4513, IGC-4514
	CLAMPS			
	(A) Plunger Link Screw	IGW-122	1	IGC-4505, IGC-4513, IGC-4514
	(B) Vacuum Chamber Bracket	VC-106	1	IGC-4505
	(B) Vacuum Chamber Bracket	VC-152	1	IGC-4513, IGC-4514
	CLIPS			
	(A) Contact Arm Spring	IG-676	1	All
	(B) Vacuum Control Link	IGW-118	1	IGC-4505, IGC-4513, IGC-4514
	COLLARS			
	(A) Dist. Shaft	IGB-199	1	IGC-4513, IGC-4514
	(B) Dist. Shaft	IGS-19S	1	IGC-4501,-1,-2, IGC-4506,-1, IGC-4510-1M, IGC-4511-1M, IGC-4512, IGC-4516-1, IGC-4518-1, A-1
	CONTACT, Dist. Cap Plunger	IG-514	1	All

MISCELLANEOUS PARTS (Continued)

Name	Part No.	No. Used	Used On
 COVERS			
(A) Dist. Cap	IGC-1124B	1	IGC-4510-1M,IGC-4511-1M
(B) Terminal Slot	IGC-117	1	All
(C) Tachometer Shaft Housing	IGS-38	1	IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
 CUP, Grease	X-382	1	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503, IGC-4505,IGC-4506,-1,IGC-4516-1,IGC-4518-1,A-1
	X-382A	1	IGC-4510-1M,IGC-4511-1M
 GASKETS			
(A) Dist. Cap Cover	IGB-230	3	IGC-4510-1M,IGC-4511-1M
(B) Vacuum Chamber Plug	VC-14	1	IGC-4505,IGC-4513,IGC-4514
 GEARS			
(A) Tachometer Drive	GE-47	1	IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1,IGC-4518-1,A-1
(B) Tachometer Follower	GE-48	1	IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1,IGC-4518-1,A-1
 LEAD, Ground	DG-107	1	IGC-4505,IGC-4513,IGC-4514
 LOCKWASHERS			
(A) Condenser & Clamp Sc. #6	12X-194	2	All
(B) Terminal Sc. #10	12X-196	1	IGC-4503,IGC-4505,IGC-4512,IGC-4513,IGC-4514
(B) Vacuum Bracket Clamp Sc. #10	12X-196	1	IGC-4505
(B) Vacuum Chamber Mtg. #10	12X-196	2	IGC-4505,IGC-4513,IGC-4514
(B) Vacuum Control Bracket to Base #10	12X-196	2	IGC-4505,IGC-4513,IGC-4514
(A) Vacuum Control Link Sc. #8	12X-195	1	IGC-4505,IGC-4513,IGC-4514
 NUT; Vacuum Chamber Mtg. Hex. #10-32	8X-173	2	IGC-4505,IGC-4513,IGC-4514
 OILERS			
(A) Elbow Oiler	X-488	1	IGC-4508-1,A-1,B-1
(B) Sleeve Oiler	X-490A	1	IGC-4512,IGC-4513,IGC-4514
(A) Elbow Oiler	X-1590	1	IGC-4515-1,A-1,IGC-4517-1,A-1
 PLATE, Breaker	IGC-1148	1	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505 IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
	IGC-1148B	1	IGC-4510-1M,IGC-4511-1M
 PLUGS			
(A) Rubber Vent. Hole	IGS-32	1	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505, IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1
(B) Vacuum Chamber	VC-15	1	IGC-4505,IGC-4513,IGC-4514
 POINTER, Advance Arm	IGC-135	1	IGC-4502-1,A-1,IGC-4508-1,A-1,B-1,IGC-4515-1,A-1
	IGS-21	1	IGC-4516-1,IGC-4518-1,A-1
RIVETS			
(A) Collar	SW-213	1	IGC-4501,-1,-2,IGC-4506,-1,IGC-4510-1M,IGC-4511-1M, IGC-4512,IGC-4513,IGC-4514,IGC-4516-1,IGC-4518-1,A-1
(A) Coupling	SW-213	1	IGC-4502-1,A-1,IGC-4508-1,A-1,B-1,IGC-4515-1,A-1, IGC-4517-1,A-1
(A) Extension Shaft	IGH-55	1	IGC-4503,IGC-4505
(A) Gear,Tachometer Driver	SW-213	1	IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1,IGC-4518-1,A-1
(A) Sleeve	SW-213	1	IGC-4503,IGC-4505
(B) Tubular, Cap Spring	X-1448	2	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505, IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
(B) Tubular,Cap Spring	8X-2893	2	IGC-4510-1M,IGC-4511-1M
 SCREWS			
(A) Breaker Contact Lock Fill. Hd. #8-32x3/16	8X-884	1	IGC-4501-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505, IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
(A) Breaker Contact Lock Fill. Hd. #8-32x3/16	19X-884	1	IGC-4510-1M,IGC-4511-1M
(A) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	8X-870	2	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505, IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
(A) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	19X-870	2	IGC-4510-1M,IGC-4511-1M
(B) Clamp Spring Hex. Hd. #6-32x5/16	IGC-175	1	IGC-4510-1M,IGC-4511-1M
(C) Clamp Spring Rd. Hd. #6-32x1/4	8X-302	1	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505, IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
(A) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	IGC-4501,-1,-2,IGC-4502-1,A-1,IGC-4503,IGC-4505, IGC-4506,-1,IGC-4508-1,A-1,B-1,IGC-4512,IGC-4513, IGC-4514,IGC-4515-1,A-1,IGC-4516-1,IGC-4517-1,A-1, IGC-4518-1,A-1
(A) Condenser Mtg. Fill. Hd. #6-32x5/32	19X-1546	1	IGC-4510-1M,IGC-4511-1M
(D) Dist. Cap Cover Ctsk. Hd. #8-32x3/4	X-2932	3	IGC-4510-1M,IGC-4511-1M
(A) Terminal Fill. Hd. #10-32x1/4	8X-872	1	IGC-4503,IGC-4505,IGC-4512,IGC-4513,IGC-4514

Screw Data Continued on Next Page

IGC-4500 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGC-4501, -1	6	Dodge Truck, Chrysler Industrial
IGC-4501-2	6	Dodge Truck
IGC-4502-1	6	Dodge Truck
IGC-4502A-1	6	Dodge Truck
IGC-4503	6	Packard
IGC-4505	6	Packard
IGC-4506, -1	6	Chrysler Industrial
IGC-4508-1	6	Dodge Truck
IGC-4508A-1	6	Dodge Truck, Chrysler Industrial
IGC-4508B-1	6	Dodge Truck, Chrysler Industrial
IGC-4510-1M	6	Chrysler Marine
IGC-4511-1M	6	Chrysler Marine
IGC-4512	6	Nash 6
IGC-4513	6	Willys 6
IGC-4514	6	Willys 6
IGC-4515-1	6	Dodge Truck
IGC-4515A-1	6	Dodge Truck
IGC-4516-1	6	Dodge Truck
IGC-4517-1	6	Dodge Truck
IGC-4517A-1	6	Dodge Truck
IGC-4518-1	6	Dodge Truck
IGC-4518A-1	6	Dodge Truck

IGC-4600 SERIES DISTRIBUTOR PARTS LISTS

Model No.	No. Cyl.	CUSTOMER
IGC-4601	6	Brockway, Continental
IGC-4601-1	6	Brockway
IGC-4601-2	6	Brockway
IGC-4601A-1	6	Brockway
IGC-4601A-2	6	Brockway
IGC-4602	6	Brockway
IGC-4604	4	White Motor
IGC-4605	4	White Motor
IGC-4606	6	Ward La France
IGC-4606A	6	Ward La France
IGC-4607	6	International Harvester
IGC-4608	6	International Harvester

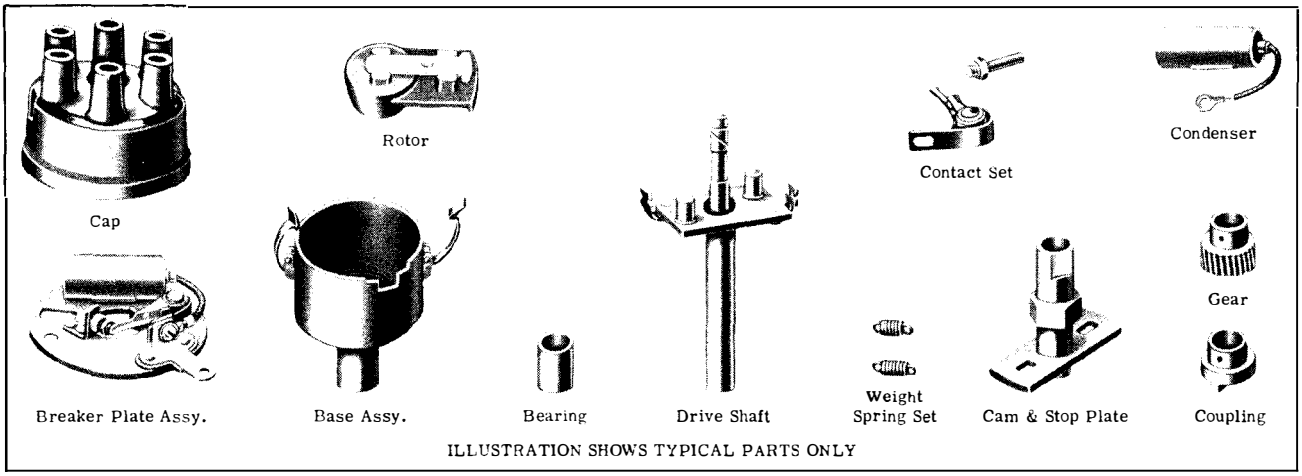


ILLUSTRATION SHOWS TYPICAL PARTS ONLY




Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4601	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064LE	IGB-284S	IGC-1144LC	IG-644
IGC-4601-1	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064LE	IGB-284S	IGC-1144LC	IG-644
IGC-4601-2	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064LE	IGB-284S	IGC-1144LC	IG-644
IGC-4601A-1	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064LF	IGB-222S	IGC-1067LW	IG-644
IGC-4601A-2	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064LF	IGB-222S	IGC-1067LW	IG-644
IGC-4602	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1064LE	IGB-284S	IGC-1144LC	IG-644
IGC-4604	IG-1324	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2169	IG-579A	IGC-1170R	IGB-165S	IGC-1067RAE	- - -
IGC-4605	IG-1324A	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2174	IG-579A	IGC-1173L	IGB-165S	IGC-1067LV	- - -
IGC-4606	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1186L	IG-817AS	IGC-1067LQ	IGC-1180
IGC-4606A	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2063	IG-579A	IGC-1186L	IG-636QS	IGC-1067LX	IGC-1180
IGC-4307	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2193	IG-579A	IGC-1194R	IG-913SS	IGC-1067RAL	- - -
IGC-4608	IG-1323	IG-1320	IGP-3028A	IG-2671	IGC-3012	IGC-2196	IG-579A	IGC-1072LA	IG-796AS	IGC-1067LG	- - -

(See Reverse Side for Miscellaneous Parts.)

Printed in U. S. A.

IGC-4600 SERIES DISTRIBUTOR PARTS LISTS

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	ARM, Advance	IGB-1154A	1	IGC-4605
		IGC-1024N-6	1	IGC-4604
		IGC-2049A-1	1	IGC-4601-1, A-1
		IGC-2068A-1	1	IGC-4601
		IGC-2068B	1	IGC-4602
		IGC-2084A	1	IGC-4606, A
		IGH-2062C	1	IGC-4601-2, A-2
	CLIP, Contact Arm Spring	IG-676	1	All
 A B C	COLLARS			
	(A) Shaft	IGB-199	1	IGC-4604, IGC-4605
	(B) Shaft	IGC-192	1	IGC-4607
	(C) Shaft	IGC-195	1	IGC-4608
	CONTACT, Dist. Cap Plunger	IG-514	1	All
 A B	LOCKWASHERS			
	(A) Breaker Plate Mtg. #10	12X-196	2	All
	(B) Condenser & Clamp Sc. #6	X-194	2	All
	(A) Terminal Screw #10	12X-196	1	All
	NUT, Breaker Contact Lock	IB-23	1	All
 B A	OILERS			
	(A) Elbow, Dist. Base	X-488	1	IGC-4604
	(B) Sleeve, Dist. Base	X-490A	1	IGC-4601, -1, -2, A-1, A-2, IGC-4602, IGC-4605, IGC-4606, A, IGC-4607, IGC-4608
	PLATE, Breaker	IGC-2012	1	All
 A  B	RIVETS			
	(A) Collar, Shaft	SW-213	1	IGC-4604, IGC-4605, IGC-4607
	(A) Coupling, Shaft	GJ-236	1	IGC-4608
	(A) Coupling, Shaft	SW-213	1	IGC-4601, -1, -2, A-1, A-2, IGC-4602, IGC-4606, A
	(B) Tubular, Cap Spring	X-1448	2	All
 A B	SCREWS			
	(B) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	8X-870	2	All
	(A) Clamp Spring Rd. Hd. #6-32x1/4	8X-302	1	All
	(B) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
	(3) Terminal, Fill. Hd. #10-32x1/4	8X-872	1	All
	SPACER, Cam	IGS-99	1	All
 C B A	SPRINGS			
	(A) Anti-Rattle	IGE-35	1	IGC-4607
	(A) Anti-Rattle	IGE-36	1	IGC-4601, -1, -2, A-1, A-2, IGC-4602, IGC-4606, A
	(B) Cap Clamp	IG-694	2	All
	(C) Contact, Dist. Cap	IG-515A	1	All
 A B C	WASHERS			
	(A) Thrust, Advance Arm	IG-816	1	IGC-4601, -1, -2, A-1, A-2, IGC-4602, IGC-4604, IGC-4605, IGC-4606, A
	(B) Thrust, Drive Shaft (Lower)	IG-90	1	All
	(C) Thrust, Drive Shaft (Upper)	IGS-104	1	All
	WEIGHTS			
	Governor	IGC-2168L	2	IGC-4601, -1, -2, A-1, A-2, IGC-4602, IGC-4605, IGC-4606, A, IGC-4608
	Governor	IGC-2168R	2	IGC-4604, IGC-4607
 A B	WICKS			
	(A) Felt, Cam Sleeve	IG-495	1	All
	(B) Felt, Oiler	IGS-117	1	IGC-4604, IGC-4605, IGC-4606, A, IGC-4607, IGC-4608

Model No.	No. Cyl.	CUSTOMER
IGC-4702A	6	Buffalo Springfield Roller
IGC-4703A	6	Dodge Truck
IGC-4703A-1	6	Chrysler Industrial, Dodge Truck
IGC-4705	4	Willys (U.S. Gov. Jeep)
IGC-4710-1	6	Continental
IGC-4710-2	6	Four Wheel Drive, Harnischfeger
IGC-4710A-1	6	Continental, Onan
IGC-4711	4	Willys, Valentine Welder
IGC-4713A	6	Continental
IGC-4721	6	Chrysler Industrial
IGC-4721-1	6	Chrysler Industrial
IGC-4723M	6	Chrysler Industrial, Chrysler Marine
IGC-4723-1M	6	Chrysler Industrial, Chrysler Marine
IGC-4724M	6	Chrysler Marine
IGC-4724-1M	6	Chrysler Marine
IGC-4725-1M	6	Chrysler Marine

Printed in U. S. A.

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

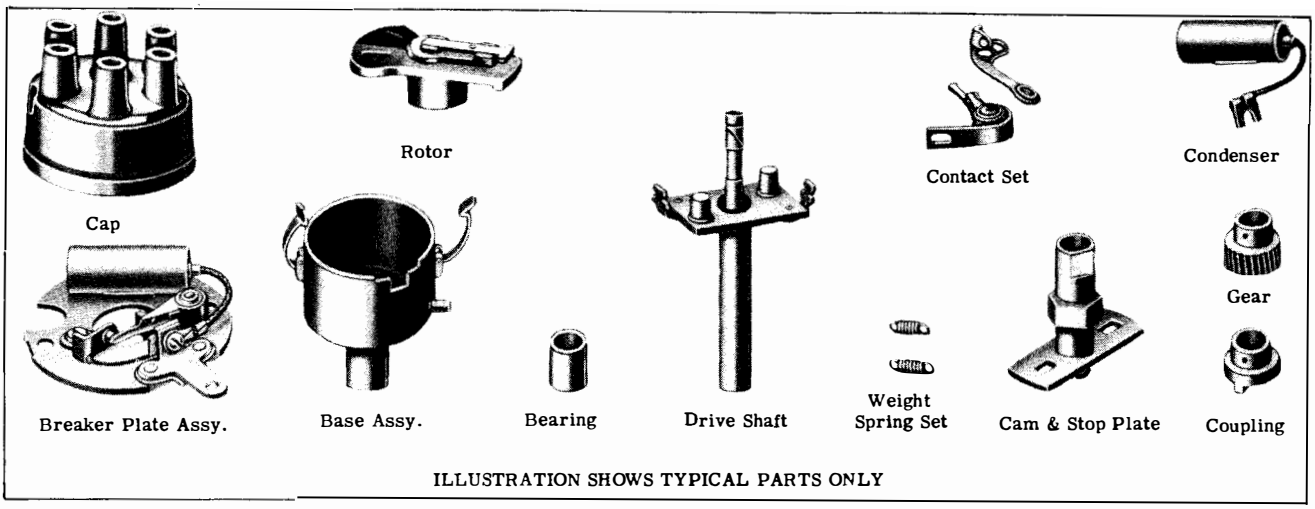






ILLUSTRATION SHOWS TYPICAL PARTS ONLY





Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4702A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053RC	IGE-29S	IGS-1100RW	- - -
IGC-4703A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2127A	IG-579A	IGS-1113R	IGB-292SS	IGS-1100RA	- - -
IGC-4703A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2127A	IG-579A	IGS-1113R	IGB-292SS	IGS-1100RA	- - -
IGC-4705	IG-1324	IG-1657R	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2135	IG-579A	IGS-1134L	IGB-202S	IGC-1132LB	- - -
IGC-4710-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053LB	IG-636PS	IGS-1100LG	IG-644A
IGC-4710-2	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053LB	IGC-42BS	IGS-1100LN	IG-644A
IGC-4710A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053LB	IGC-42CS	IGS-1100LH	IG-644A
IGC-4711	IG-1324	IG-1657R	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2142	IG-579A‡	IGS-1141L	IGB-202S	IGC-1132LB	†
IGC-4713A	IGC-1123L*	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053LB	IG-775S	IGS-1100LJ	IG-644A
IGC-4721	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2127A	IG-579A	IGS-1112R	IG-636NS	IGS-1100R	- - -
IGC-4721-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2127A	IG-579A	IGS-1112R	IG-636NS	IGS-1100R	- - -
IGC-4723M	IGC-1107S	IGS-1016B	IGP-3028VS	IGW-3139	IGC-2148F	IGS-2028B	IG-579A	IGS-1054RG	IG-636NS	IGS-1100R	- - -
IGC-4723-1M	IGC-1107S	IGS-1016B	IGP-3028VS	IGW-3139	IGC-2148F	IGS-2028B	IG-579A	IGS-1054RG	IG-636NS	IGS-1100R	- - -
IGC-4724M	IGC-1107S	IGS-1016B	IGP-3028VS	IGW-3139	IGC-2148F	IGS-2028B	IG-579A	IGS-1154R	IG-636HS	IGS-1100RX	- - -
IGC-4724-1M	IGC-1107S	IGS-1016B	IGP-3028VS	IGW-3139	IGC-2148F	IGS-2028B	IG-579A	IGS-1154R	IG-636HS	IGS-1100RX	- - -
IGC-4725-1M	IGC-1123B**	IGS-1016B	IGP-3028VS	IGW-3139	IGC-2148F	IGS-2028B	IG-579A	IGS-1054RH	IG-636NS	IGS-1100RL	- - -

* IGC-1124L Dist. Cap Cover.
** IGC-1124 Dist. Cap Cover.
‡ See Miscellaneous Parts Section for Other Bearings.
† See Miscellaneous Parts Section for Other Gears.

MISCELLANEOUS PARTS

Name	Part No.	No. Used	Used On
 ARM, Advance	IG-2860A	1	IGC-4710-1,A-1
	IGC-2024N-2	1	IGC-4710-2,IGC-4713A
	IGS-114	1	IGC-4703A-1,IGC-4721-1
	IGS-1020	1	IGC-4702A
	IGS-1020-2	1	IGC-4723-1M,IGC-4724-1M,IGC-4725-1M
	IGS-1080	1	IGC-4705,IGC-4711
 BEARING, Ball, S.A.E. #202 Tach. Drive	X-294	1	IGC-4711
 Clip, Contact Arm Spring	IG-676	1	All
 COLLARS			
(A) Shaft	IGB-199	1	IGC-4705,IGC-4711
(B) Shaft	IGS-198	1	IGC-4703A,A-1,IGC-4721,-1,IGC-4723M,-1M, IGC-4724M,-1M,IGC-4725-1M
 CONTACT, Dist. Cap Plunger	IG-514	1	All
 COVERS			
(A) Terminal Slot	IGC-117	1	All
(B) Dist. Cap	IGC-1124	1	IGC-4725-1M
(B) Dist. Cap	IGC-1124L	1	IGC-4713A
(C) Tachometer Shaft Housing	IGS-38	1	IGC-4711
 CUP, Grease	X-382	1	IGC-4711
	X-382A	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
 GASKET, Dist. Cap Cover	IGB-230	3	IGC-4713A,IGC-4725-1M
 GEARS			
(A) Tachometer Drive	GE-47	1	IGC-4711
(B) Tachometer Follower	GE-48	1	IGC-4711
 LOCKWASHERS			
(A) Advance Arm Mtg., 1/4	12X-199	1	IGC-4721-1
(A) Advance Arm. Mtg. Skpf. 1/4	X-171	1	IGC-4703A-1
(B) Breaker Plate Mtg. Skpf. #10	X-1270	2	All
(C) Condenser & Clamp Sc. #6	12X-194	2	All
(D) Terminal Screw #10	X-196	1	IGC-4702A,IGC-4705,IGC-4710-1,-2,A-1,IGC-4711,IGC-4713A
 OILERS			
(A) Elbow Dist. Base	X-1590	1	IGC-4703A,A-1,IGC-4721,-1
(B) Sleeve Dist. Base	X-490A	1	IGC-4702A,IGC-4705,IGC-4710-1,-2,A-1,IGC-4713A
 PLATES, Breaker	IGC-1148	1	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4711,IGC-4713A,IGC-4721,-1
	IGC-1148B	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
 PLUG, Rubber Dist. Cap Vent Hole	IGS-32	1	IGC-4702A,IGC-4703A,A-1,IGC-4710-1,-2,A-1,IGC-4721,-1, IGC-4723M,-1M,IGC-4724M,-1M
 POINTER, Advance Arm	IGS-21	1	IGC-4702A
 RIVETS			
(A) Collar, Shaft	SW-213	1	IGC-4703A,A-1,IGC-4705,IGC-4711,IGC-4721,-1,IGC-4723M,-1M, IGC-4724M,-1M,IGC-4725-1M
(A) Coupling, Shaft	SW-213	1	IGC-4710-1,-2,A-1,IGC-4713A
(A) Gear	GJ-236	1	IGC-4702A,IGC-4711
(B) Tubular, Cap Spring	X-1448	2	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4711,IGC-4713A,IGC-4721,-1
(B) Tubular, Cap Spring	8X-2893	2	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
 SCREWS			
(B) Advance Arm Hex. 1/4-20x1/2	8X-85	1	IGC-4703A-1
(B) Advance Arm Hex. 1/4-20x5/8	8X-86	1	IGC-4721-1
(D) Breaker Contact Lock, Fill. Hd. #8-32x3/16	8X-884	1	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4711,IGC-4713A,IGC-4721,-1
(D) Breaker Contact Lock, Fill. Hd. #8-32x3/16	19X-884	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
(A) Clamp Spring, Hex. Hd. #6-32x5/16	IGC-175	1	All
(D) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4711,IGC-4713A,IGC-4721,-1
(D) Condenser Mtg. Fill. Hd. #6-32x5/32	19X-1546	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
(C) Dist. Cap Cover, Ctsk. Hd. #8-32x3/4	8X-1340	3	IGC-4713A
(C) Dist. Cap Cover, Ctsk. Hd. #8-32x3/4	X-2932	3	IGC-4725-1M
(D) Terminal, Fill. Hd. #10-32x1/4	8X-872	1	IGC-4702A,IGC-4705,IGC-4710-1,-2,A-1,IGC-4711,IGC-4713A
SHAFT, Drive, Tachometer	IGS-37	1	IGC-4711
 SNAP RING, Cam Retaining	IG-680	1	All
 SPACER, Cam	IGS-99	1	All

MISCELLANEOUS PARTS (Con't.)

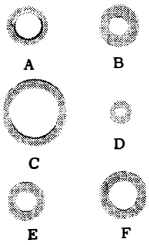	Name	Part No.	No. Used	Used On
	SPRINGS			
	(A) Anti-Rattle	IGT-69	1	IGC-4705,IGC-4710-2,IGC-4711
	(B) Cap Clamp	IG-694	2	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4711,IGC-4713A,IGC-4721,-1
	(B) Cap Clamp	IG-694A	2	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
	(C) Contact, Dist. Cap	IG-515A	1	All
	WASHERS			
	(B) Advance Arm Mtg. Sc.	SW-634	1	IGC-4721-1
	(D) Clamp Sc. (Plain) #6	8X-353	1	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4711,IGC-4713A,IGC-4721,-1
	(D) Clamp Sc. (Plain) #6	19X-353	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
	(D) Contact Lock Sc. (Plain) #8	8X-350	1	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1 IGC-4711,IGC-4713A,IGC-4721,-1
	(D) Contact Lock Sc. (Plain) #8	19X-350	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M
	(C) Thrust, Advance Arm	IG-816	1	IGC-4705,IGC-4710-1,A-1,IGC-4711,IGC-4723-1M, IGC-4724-1M,IGC-4725-1M
	(C) Thrust, Advance Arm	IG-816A	1	IGC,4702A,IGC-4710-2,IGC-4713A
	(F) Thrust, Drive Shaft, Lower	IG-90	1	All
	(F) Thrust, Drive Shaft, Upper	IG-90	1	IGC-4711
	(A) Thrust, Drive Shaft, Upper	IGS-104	1	IGC-4702A,IGC-4703A,A-1,IGC-4705,IGC-4710-1,-2,A-1, IGC-4713A,IGC-4721,-1,IGC-4723M,-1M,IGC-4724M,-1M, IGC-4725-1M,
	(E) Thrust, Tachometer Shaft	IGS-39	1	IGC-4711
	WEIGHTS			
	Governor	IG-1322	2	IGC-4702A
	Governor	IG-1456	2	IGC-4703A,A-1,IGC-4721,-1,IGC-4723M,-1M, IGC-4724M,-1M,IGC-4725-1M
	Governor	IG-2456	2	IGC-4705,IGC-4710-1,-2,A-1,IGC-4711,IGC-4713A
	WICKS			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Oiler	IGS-117	1	IGC-4703A,A-1,IGC-4705,IGC-4713A,IGC-4721,-1
	(B) Felt, Grease Cup	IGS-117A	1	IGC-4723M,-1M,IGC-4724M,-1M,IGC-4725-1M

IGC-4800 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGC-4801	6	Studebaker
IGC-4802	6	Studebaker
IGC-4805	6	Studebaker
IGC-4806	6	White Motor
IGC-4807A	6	Continental
IGC-4808A	6	Diamond T.
IGC-4810	6	Owens Yacht

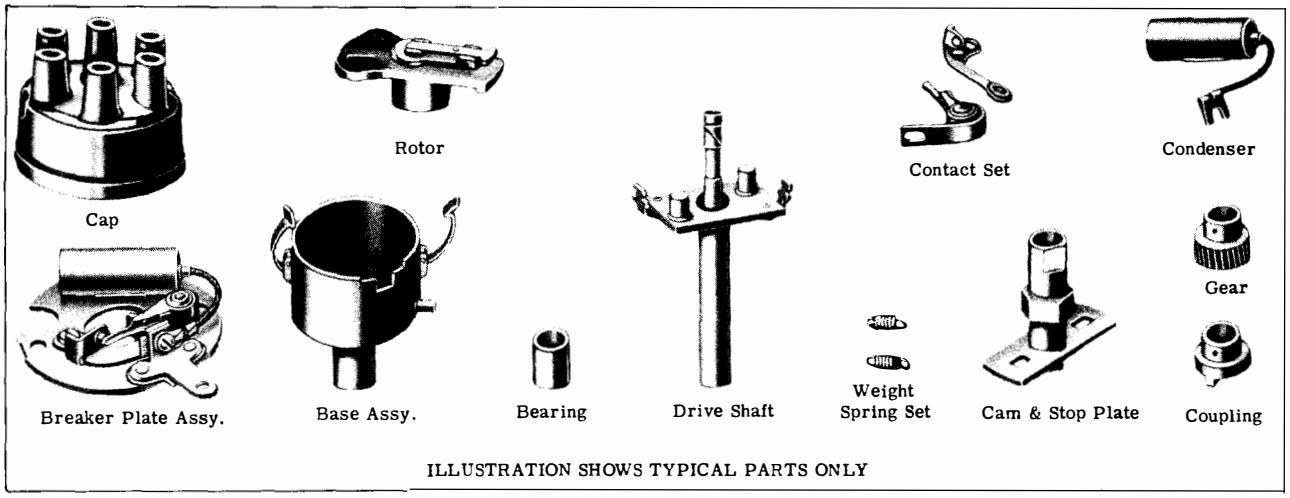


ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4801	IGC-1107S	IGS-1016	IGP-3028FS	IG-2671	IGC-2148D	IGS-2128A	IG-579A	IGS-1129L	IGB-337S	IGS-1100LE	- - - -
IGC-4802	IGC-1107S	IGS-1016	IGP-3028FS	IG-2671	IGC-2148D	IGS-2128	IG-579A	IGS-1130L	IGB-338S	IGS-1100LA	- - - -
IGC-4805	IGC-1107S	IGS-1016	IGP-3028FS	IG-2671	IGC-2148D	IGS-2128A	IG-579A	IGS-1159L	IGB-337S	IGS-1100LE	- - - -
IGC-4806	IGC-1123B*	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2173	IG-579A	IGS-1172R	IGB-350S	IGS-1100RK	IGC-136
IGC-4807A	IGC-1123B*	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2160	IG-579A	IGS-1151RB	IGB-328GS	IGS-1100RE	GG-9A
IGC-4808A	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2144A	IG-579A‡	IGS-1174R	IGE-29S	IGS-1100RX	GE-41†
IGC-4810	IGC-1123B*	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2194	IG-579A‡	IGS-1195R	IG-884S	IGS-1100RAH	- - - -




* IGC-1124 Dist. Cap Cover.
† See Miscellaneous Parts Section for other Drive Gears.
‡ See Miscellaneous Parts Section for other bearings.

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used On
	ARM, Advance	IG-2860A IGB-2296A	1 1	IGC-4807A IGC-4808A
	BEARING, Ball S.A.E. #202 Tach. Drive	X-294	1	IGC-4808A, IGC-4810
	CLIP, Contact Arm Spring	IG-676	1	All

File in
Equipment & Parts List Binder

MISCELLANEOUS PARTS (Continued)

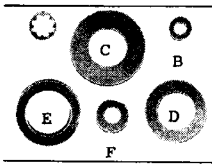	Name	Part No.	No. Used	Used On
	COLLAR, Shaft	IGB-199	1	IGC-4801, IGC-4802, IGC-4805, IGC-4810
	CONTACT, Dist. Cap Plunger	IG-514	1	All
 A B C	COVERS			
	(A) Terminal Slot	IGC-117	1	All
	(B) Dist. Cap	IGC-1124	1	IGC-4806, IGC-4807A, IGC-4810
	(C) Tachometer Shaft Housing	IGS-38	1	IGC-4808A, IGC-4810
	CUP, Grease	X-382	1	IGC-4801, IGC-4802, IGC-4805, IGC-4806, IGC-4808A, IGC-4810
	GASKET, Dist. Cap Cover	IGB-230	3	IGC-4806, IGC-4807A, IGC-4810
 A B	GEARS			
	(A) Tachometer Drive	GE-47	1	IGC-4808A, IGC-4810
	(B) Tachometer Follower	GE-48	1	IGC-4808A, IGC-4810
 B A	LOCKWASHERS			
	(A) Condenser & Clamp Screw #6	X-194	2	All
	(B) Terminal Screw #10	1ZX-196	1	IGC-4801, IGC-4802, IGC-4805, IGC-4806, IGC-4807A, IGC-4808A
	OILER, Dist. Base	X-490A	1	IGC-4807A
	PLATE, Breaker	IGC-1148	1	All
 A B	RIVETS			
	(A) Collar, Shaft	SW-213	1	IGC-4801, IGC-4802, IGC-4805, IGC-4810
	(A) Coupling, Shaft	SW-213	1	IGC-4806
	(A) Gear	SW-213	1	IGC-4807A, IGC-4808A, IGC-4810
	(A) Gear	GJ-236	1	IGC-4808A
	(B) Tubular, Cap Spring	X-1448	2	All
 C B A	SCREWS			
	(A) Breaker Contact Lock, Fill. Hd. #8-32x3/16	8X-884	1	All
	(A) Breaker Plate Mtg. Fill. Hd. #10-32x5/16	8X-870	2	All
	(B) Clamp Spring, Rd. Hd. #6-32x1/4	8X-302	1	All
	(A) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
	(C) Dist. Cap Cover Ctsk. Hd. #8-32x3/4	8X-1340	3	IGC-4806, IGC-4807A, IGC-4810
	(A) Terminal, Fill. Hd. #10-32x1/4	8X-872	1	IGC-4801, IGC-4802, IGC-4805, IGC-4806, IGC-4807A, IGC-4808A
	SHAFT, Drive, Tachometer	IGS-148	1	IGC-4808A, IGC-4810
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACER, Cam	IGS-99	1	All
 B C A	SPRINGS			
	(A) Anti-Rattle	IGT-69	1	IGC-4801, IGC-4802, IGC-4805
	(A) Anti-Rattle	IGT-70	1	IGC-4806, IGC-4807A, IGC-4810
	(B) Cap Clamp	IG-694	2	All
	(C) Contact, Dist. Cap	IG-515A	1	All
 C B E D F	WASHERS			
	(A) Breaker Plate Mtg. Skpf. #10	X-1270	2	All
	(B) Contact Lock Sc. (Plain) #8	8X-350	1	All
	(C) Thrust, Advance Arm	IG-816	1	IGC-4807A, IGC-4808A, IGC-4810
	(D) Thrust, Drive Shaft, Lower	IG-90	1	All
	(D) Thrust, Drive Shaft, Upper	IG-90	1	IGC-4808A, IGC-4810
	(E) Thrust, Drive Shaft, Upper	IGS-104	1	IGC-4801, IGC-4802, IGC-4805, IGC-4806, IGC-4807A
	(F) Thrust, Tachometer Shaft	IGS-39	1	IGC-4808A, IGC-4810
	WEIGHTS			
	Governor	IGC-2168L	2	IGC-4801, IGC-4802, IGC-4805
	Governor	IGC-2168R	2	IGC-4806, IGC-4807A, IGC-4808A, IGC-4810
 A B	WICKS			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Grease Cup	IGS-117A	1	IGC-4801, IGC-4802, IGC-4805, IGC-4806

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGC-4900 SERIES DISTRIBUTOR PARTS LISTS

IGC-4900 Series
(Issued 1-10-52)

Model No.	No. Cyl.	CUSTOMER
IGC-4904	6	Harnischfeger, Available Tr.
IGC-4905	6	Continental
IGC-4905A	6	Continental
IGC-4907	6	Continental
IGC-4908	6	Brockway
IGC-4908A	6	Brockway
IGC-4909A-1	6	Brockway
IGC-4913	6	Ward LaFrance
IGC-4914	6	Aktiebolaget Volvo (Export)
IGC-4914A	6	Aktiebolaget Volvo (Export)
IGC-4914B	6	Aktiebolaget Volvo (Export)


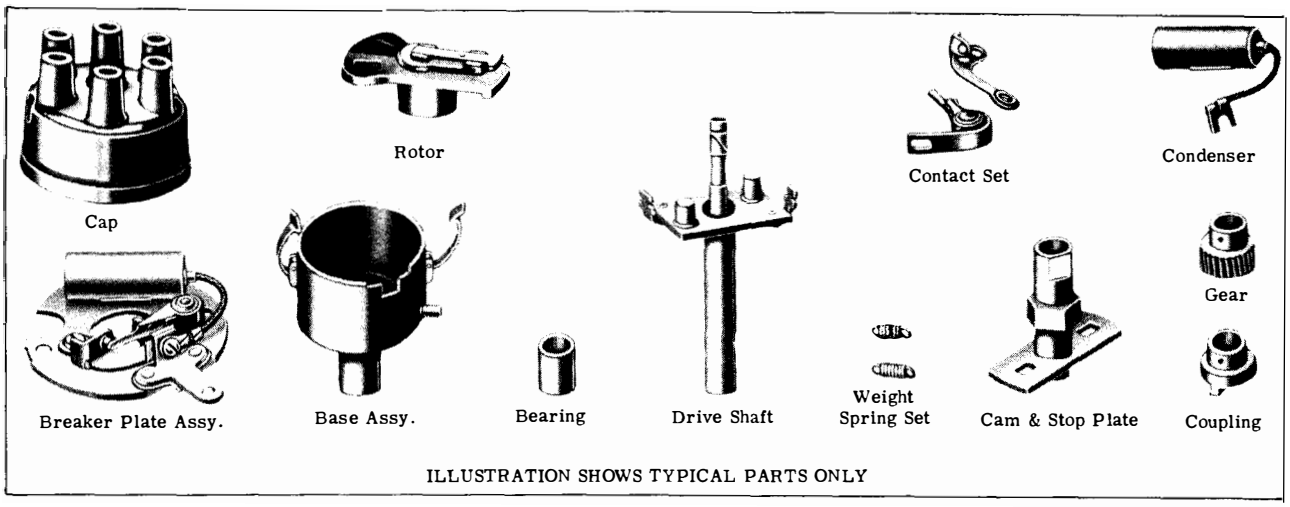


ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-4904	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053RD	IG-775S	IGS-1100RD	IG-644A
IGC-4905	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053LC	IGC-42MS	IGS-1100LO	IG-644A
IGC-4905A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1053LC	IG-636US	IGS-1100LT	IG-644A
IGC-4907	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-1062B	IG-579A	IGS-1171L	IGB-337S	IGS-1100LC	IG-644
IGC-4908	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2149	IG-579A	IGS-1150L	IGC-42JS	IGS-1100LP	IGC-1180
IGC-4908A	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2149	IG-579A	IGS-1150L	IG-817AS	IGS-1100LN	IGC-1180
IGC-4909A-1	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2062B	IG-579A	IGS-1171LB	IGB-344S	IGS-1100LS	IG-644
IGC-4913	IGC-1107S	IGS-1016B	IGP-3028FS	IGW-3139	IGC-2148C	IGS-2142	IG-579A‡	IGS-1155L	IGB-337S	IGS-1100LC	IG-644*
IGC-4914	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2182	IG-579A	IGS-1180RB	IGE-30KS	IGS-1100RP	- - - -
IGC-4914A	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2182	IG-579A	IGS-1180RB	IGB-327ES	IGS-1100RAB	- - - -
IGC-4914B	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2182	IG-579A	IGS-1180RB	IGC-200S	IGS-1100RV	- - - -

* See Miscellaneous Parts Section for other Drive Gears.
‡ See Miscellaneous Parts Section for other Bearings.

MISCELLANEOUS PARTS







Name	Part No.	No. Used	Used On
ARM, Advance	IG-2860A	1	IGC-4905, A
	IGC-2024AT-15	1	IGC-4913
	IGC-2024N-2	1	IGC-4904
	IGC-2049A-1	1	IGC-4907
	IGC-2049A-2	1	IGC-4909A-1
	IGS-1020	1	IGC-4908, A

File in
Equipment & Parts List Binder

Printed in U. S. A.

MISCELLANEOUS PARTS (Continued)

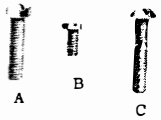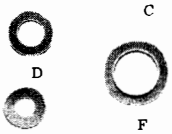	Name	Part No.	No. Used	Used On
	BEARING, Ball S.A.E. #202 Tach. Drive	X-294	1	IGC-4913
	CLIP, Contact Arm Spring	IG-676	1	All
	CONTACT, Dist. Cap Plunger	IG-514	1	All
 A B	COVERS			
	(A) Terminal Slot	IGC-117	1	All
	(B) Tachometer Shaft Housing	IGS-38	1	IGC-4913
	CUP, Grease	X-382	1	IGC-4913
 A B	GEARS			
	(A) Tachometer Drive	GE-47	1	IGC-4913
	(B) Tachometer Follower	GE-48	1	IGC-4913
 B A	LOCKWASHERS			
	(A) Condenser & Clamp Screw #6	X-194	2	All
	(B) Terminal Screw #10	12X-196	1	All
	OILER, Dist. Base	X-490A	1	IGC-4904, IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4914, A, B
	PLATE, Breaker	IGC-1148	1	All
	PLUG, Rubber, Dist. Cap Vent. Hole	IGS-32	1	All
	POINTER, Advance Arm	IGS-21	1	IGC-4908, A
 A B	RIVETS			
	(A) Coupling, Shaft	SW-213	1	IGC-4904, IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4913
	(A) Gear	SW-213	1	IGC-4913
	(B) Tubular, Cap Spring	X-1448	2	All
 A B C	SCREWS			
	(A) Breaker Contact Lock, Fill Hd. #8-32x3/16	8X-884	1	All
	(A) Breaker Plate Mtg., Fill. Hd. #10-32x5/16	8X-870	2	All
	(B) Clamp, Spring, Hex. Hd. #6-32x5/16	IGC-175	1	IGC-4904, IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4913
	(C) Clamp, Spring, Rd. Hd. #6-32x1/4	8X-302	1	IGC-4914, A, B
	(A) Condenser Mtg., Fill. Hd. #6-32x5/32	8X-1546	1	All
	(A) Terminal, Fill. Hd. #10-32x1/4	8X-872	1	All
	SHAFT, Drive Tachometer	IGS-148	1	IGC-4913
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACER, Cam	IGS-99	1	All
 B C A	SPRINGS			
	(A) Anti-Rattle	IGT-69	1	IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4913
	(A) Anti-Rattle	IGT-70	1	IGC-4904, IGC-4914, A, B
	(B) Cap Clamp	IG-694	2	All
	(C) Contact, Dist. Cap	IG-515A	1	All
 A B C	WASHERS			
	(A) Breaker Plate Mtg. Skpf. #10	X-1270	2	All
	(B) Clamp Screw (Plain) #6	8X-353	1	IGC-4904, IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4913
	(B) Contact Lock Sc. (Plain) #8	8X-350	1	All
 D E F	(C) Thrust, Advance Arm	IG-816	1	IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4913
	(C) Thrust, Advance Arm	IG-816A	1	IGC-4904
	(D) Thrust, Drive Shaft Lower	IG-90	1	All
	(D) Thrust, Drive Shaft Upper	IG-90	1	IGC-4913
	(E) Thrust, Drive Shaft Upper	IGS-104	1	IGC-4904, IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4914, A, B
	(F) Thrust, Tachometer Shaft	IGS-39	1	IGC-4913
	WEIGHTS			
	Governor	IGC-2168L	2	IGC-4905, A, IGC-4907, IGC-4908, A, IGC-4909A-1, IGC-4913
	Governor	IGC-2168R	2	IGC-4904, IGC-4914, A, B
 A B	WICKS			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Oiler	IGS-117	1	IGC-4907, IGC-4908, A, IGC-4914, A, B

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H. T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-816A	1	Washer, Thrust, Advance Arm
**	1	SPRING SET, GOV. WEIGHT
IGC-117	1	Cover, Terminal Slot
IGC-1107S	1	CAP ASSY., DISTRIBUTOR
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-1180	1	Coupling, Drive, Distributor
IGC-2148K	1	Plate Assy., Breaker
IAD-3128S	1	CONTACT SET, BREAKER
IG-676	1	Clip, Spring, Contact Arm
IG-3927C	1	CONDENSER
IGC-1148	1	Plate, Breaker
12X-194	2	Lockwasher, Condenser & Clamp Screw, #6
8X-302	1	Screw, Spring Clamp, Rd. Hd. #6-32x1/4
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-21	1	Pointer, Advance Arm
IGS-32	1	Plug, Vent. Hole, Rubber
IGS-99	1	Spacer, Cam
IGS-117	1	Wick, Felt
IGS-1016B	1	ROTOR
IGS-1020	1	Arm, Advance
**	1	Cam & Stop Plate, 6 Cyl. L. H.
IGS-1150L	1	SHAFT, DRIVE
IGS-2062B	1	Base Assy., Distributor
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
X-1448	2	Pin, Hinge, Cap Spring
IGT-69	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
X-490A	1	Oiler
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
8X-872	1	Screw, Terminal, Fill. Hd. #10-32x1/4
X-1270	3	Washer, Breaker Plate Mtg. & Terminal Sc., Skpf. #10

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Spring Set, Gov. Weight	Cam & Stop Plate
IGC-5001	IGC-42JS	IGS-1100LP
IGC-5001A	IG-817AS	IGS-1100LN
IGC-5001B	IG-817BS	IGS-1100LR
IGC-5001C	IGB-327MS	IGS-1100LZ
IGC-5001D	IGB-327NS	IGS-1100LN

UNIT	APPLICATION
IGC-5001	Brockway (Truck), Continental
IGC-5001, A, B, C, D	Brockway (Truck)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-775S	1	Spring Set, Gov. Weight
IGC-117	1	Cover, Terminal Slot
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGC-2148D	1	Plate Assy., Breaker
IG-676	1	Clip, Spring, Contact Arm
IG-2671	1	CONDENSER
IGC-1148	1	Plate, Breaker
IGP-3028FS	1	CONTACT SET, BREAKER
8X-302	1	Screw, Spring Clamp, Rd. Hd. #6-32x1/4
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
X-1012	2	Lockwasher, Condenser & Clamp Screw, #6
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-32	1	Plug, Rubber, Vent. Hole
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1016B	1	ROTOR
IGS-1100RH	1	Cam & Stop Plate, 6Cyl. R.H.
IGS-1178R	1	Shaft, Drive
IGS-2062B	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
X-490A	1	Oiler, Sleeve, Press in, 1/4
X-1448	2	Pin, Hinge, Cap Spring
IGT-70	1	Spring, Anti-Rattle
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
8X-872	1	Screw, Terminal, Fill. Hd. #10-32x1/4
X-1270	3	Washer, Breaker Plate Mtg. & Terminal Sc., Skpf. #10
		1 2 3 4 5

UNIT	APPLICATION
IGC-5501A	Nordberg Mfg.

Printed in U. S. A. (Issued 4-19-48) File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGC-6000 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGC-6001-1A	6	Ward LaFrance
IGC-6001-1F	6	International Harvester
IGC-6001-1L	6	Available
IGC-6001-1P	6	Hercules
IGC-6001-2D	6	Lincoln Electric
IGC-6001-2F	6	Harnischfeger, Sterling Truck
IGC-6001-2L	6	Maxim Motor
IGC-6001	6	Bay City Shovel, Sterling Truck
IGC-6001A	6	Buda
IGC-6001B	6	Buda
IGC-6001C	6	Bay City Shovel, Hercules, U. S. Motors
IGC-6001E	6	Hercules
IGC-6001G	6	Bay City Shovel, Crown Body, Hercules
IGC-6001H	6	Kermath
IGC-6001M-2A	6	Gray Marine
IGC-6001MA	6	Gray Marine
IGC-6001N	6	Duplex Truck
IGC-6001S	6	Harnischfeger
IGC-6001W	6	Climax
IGC-6002-1A	6	Checker Cab
IGC-6002-1AA	6	Continental
IGC-6002-1AB	6	Continental
IGC-6002-1AC	6	Checker Cab
IGC-6002-1AD	6	Checker Cab
IGC-6002-1AE	6	Brockway
IGC-6002-1AF	6	Brockway
IGC-6002-1AG	6	Brockway
IGC-6002-1AH	6	Brockway
IGC-6002-1E	6	Brockway, Continental
IGC-6002-1P	6	Continental
IGC-6002-1Q	6	Ward LaFrance
IGC-6002-1R	6	Brockway
IGC-6002-1S	6	Brockway
IGC-6002-1T	6	Four Wheel Drive
IGC-6002-1U	6	Continental, Onan
IGC-6002-1V	6	Continental, Onan
IGC-6002-2B	6	Universal
IGC-6003B	4	Climax
IGC-6003C	4	Hercules, Keller, Playboy, U. S. Motors
IGC-6004-1	4	Continental
IGC-6005-2A	6	Continental
IGC-6005-2B	6	Continental
IGC-6005B	6	Duplex Truck
IGC-6006-1	6	Continental
IGC-6010-1B	6	Brockway
IGC-6010-1C	6	Brockway
IGC-6010-1D	6	Brockway
IGC-6010-1E	6	Brockway

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

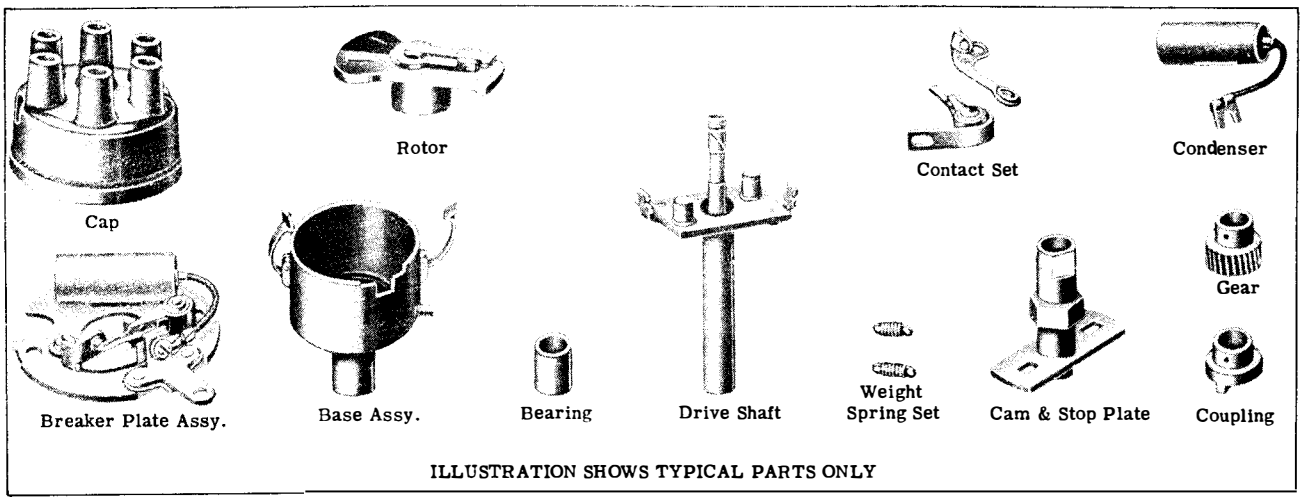


ILLUSTRATION SHOWS TYPICAL PARTS ONLY



Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGC-6001-1A	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053RE	IGB-339AS	IGS-1100RH	IG-644A
IGC-6001-1F	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053RE	IGC-201S	IGS-1100RAE	IG-644A
IGC-6001-1L	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053RE	IGC-207S	IGS-1100RD	IG-644A
IGC-6001-1P	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053RE	IGB-208S	IGS-1100RO	IG-644A
IGC-6001-2D	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-317DS	IGS-1100RV	GE-87
IGC-6001-2F	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-207S	IGS-1100RD	IA-135
IGC-6001-2L	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-204S	IGS-1100RJ	IA-135
IGC-6001	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-207S	IGS-1100RD	- - -
IGC-6001A	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-208S	IGS-1100RV	- - -
IGC-6001B	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-204S	IGS-1100RP	- - -
IGC-6001C	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-208S	IGS-1100RAE	- - -
IGC-6001E	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-208S	IGS-1100RJ	- - -
IGC-6001G	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-201S	IGS-1100RAE	- - -
IGC-6001H	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-206S	IGS-1100RV	- - -
IGC-6001M-2A	IGC-1107S	IGS-1016B	IGP-3028VS	IG-2671	IGC-2148DM	IGS-2062BM	IG-579A	IGS-1180RM	IGC-206S	IGS-1100R-3	GE-88
IGC-6001MA	IGC-1107S	IGS-1016B	IGP-3028VS	IG-2671	IGC-2148DM	IGS-2062BM	IG-579A	IGS-1180RM	IGC-206S	IGS-1100R-3	- - -
IGC-6001N	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-327HS	IGS-1100RO	- - -
IGC-6001S	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-327DS	IGS-1100RO	- - -
IGC-6001W	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-214S	IGS-1100RX	- - -
IGC-6002-1A	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-293S	IGS-1100LQ	IG-644A
IGC-6002-1AA	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-317HS	IGS-1100LY	IG-644A
IGC-6002-1AB	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LC	IG-636US	IGS-1100LT	IG-644A
IGC-6002-1AC	IGC-1107S	IGS-1016B	IGP-3028FS	IG-3927C	IGC-2148A	IGS-2062B	IG-579A	IGS-1053LE	IGB-293S	IGS-1100LQ	IG-644A
IGC-6002-1AD	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2062C	IG-579A	IGS-1053LE	IGB-222S	IGS-1100LQ	IG-644A
IGC-6002-1AE	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2062B	IG-579A	IGS-1053LE	IGE-24S	IGS-1100LQ	IG-644A
IGC-6002-1AF	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2062B	IG-579A	IGS-1053LE	IGC-202S	IGS-1100LS	IG-644A
IGC-6002-1AG	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2062B	IG-579A	IGS-1053LE	IGC-201S	IGS-1100LC	IG-644A
IGC-6002-1AH	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2062B	IG-579A	IGS-1053LE	IGB-284FS	IGS-1100LD	IG-644A
IGC-6002-1E	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGE-24S	IGS-1100LQ	IG-644A
IGC-6002-1P	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGC-200S	IGS-1100LU	IG-644A
IGC-6002-1Q	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-317GS	IGS-1100LD	IG-644A
IGC-6002-1R	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGC-201S	IGS-1100LC	IG-644A
IGC-6002-1S	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGC-202S	IGS-1100LS	IG-644A
IGC-6002-1T	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-339AS	IGS-1100LN	IG-644A
IGC-6002-1U	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-327BS	IGS-1100LV	IG-644A
IGC-6002-1V	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-327FS	IGS-1100LA	IG-644A
IGC-6002-2B	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180L	IGE-24S	IGS-1100LQ	GE-89
IGC-6003B	IG-1324D	IG-1657R	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGC-204S	IGC-1132RD	- - -
IGC-6003C	IG-1324D	IG-1657R	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGE-30KS	IGC-1132RK	- - -
IGC-6004-1	IG-1324D	IG-1657R	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IG-727S	IGC-1132LC	IG-644A
IGC-6005-2A	IGC-1123B*	IGS-1016B	IGP-3028FS	IG-2871	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-317HS	IGS-1100RE	IA-135
IGC-6005-2B	IGC-1123B*	IGS-1016B	IGP-3028FS	IG-2871	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-327FS	IGS-1100RAH	IA-135
IGC-6005B	IGC-1123B*	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1180R	IGB-208S	IGS-1100RAP	- - -
IGC-6006-1	IGC-1123L‡	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2062B	IG-579A	IGS-1053LE	IGB-208S	IGS-1100LAA	IG-644A
IGC-6010-1B	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2142	IG-579A	IGS-1145LA	IGC-202S	IGS-1100LS	IG-644A
IGC-6010-1C	IGC-1107S	IGS-1016B	IGP-3028FS	IG-2671	IGC-2148D	IGS-2142	IG-579A	IGS-1145LA	IGB-293SS	IGS-1100LZ	IG-644A
IGC-6010-1D	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2142	IG-579A	IGS-1145LA	IGB-293SS	IGS-1100LZ	IG-644A
IGC-6010-1E	IGC-1107S	IGS-1016B	IAD-3128S	IG-3927C	IGC-2148K	IGS-2142	IG-579A	IGS-1145LA	IG-727AS	IGS-1100LD	IG-644A

* IGC-1124 Distributor Cap Cover.
‡ IGC-1124L Distributor Cap Cover.

MISCELLANEOUS PARTS

	Name	Part No.	No. Used	Used on
	BEARING, Ball, S. A. E. #202, Tach. Drive	X-294	1	IGC-6010-1B, 1C, 1D, 1E
	CLIP, Contact Arm Spring	IG-676	1	All
	CONTACT, Dist. Cap Plunger	IG-514	1	All
 A B C	COVERS			
	(A) Terminal Slot	IGC-117	1	All
	(B) Dist. Cap	IGC-1124	1	IGC-6005-2A, 2B, B
	(B) Dist. Cap	IGC-1124L	1	IGC-6006-1
	(C) Tachometer Shaft Housing	IGS-38	1	IGC-6010-1B, 1C, 1D, 1E
	CUP, Grease	X-382	1	IGC-6010-1B, 1C, 1D, 1E
	GASKET, Dist. Cap Cover	IGB-230	3	IGC-6005-2A, 2B, B, IGC-6006-1
 A B	GEARS			
	(A) Tachometer Drive	GE-47	1	IGC-6010-1B, 1C, 1D, 1E
	(B) Tachometer Follower	GE-48	1	IGC-6010-1B-1C-1D-1E
	LOCKWASHERS			
	Condenser & Clamp Screw, #6	X-194	2	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC IGC-6002-1E, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B IGC-6003C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6010-1B, 1C
	Condenser & Clamp Screw, #6	12X-194	2	IGC-6001M-2A, MA, IGC-6002-1AD, 1AE, 1AF 1AG, 1AH, 1P IGC-6003B, IGC-6006-1, IGC-6010-1D, 1E
	OILER, Dist. Base	X-490A	1	IGC-6001-1A, 1F, 1L, 1P, 2D, 2F, 2L, IGC 6001, A, B, C, E, G, H, M-2A, MA, N, S, W, IGC-6002-1A, 1AA 1AB, 1AC, 1AD 1AE 1AF, 1AG, 1AH, IGC-6002-1E, 1P, 1Q, 1R, 1S, 1T. 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC 6004-1, IGC-6005-2A, 2B, B, IGC-6006-1
	PLATE, Breaker	IGC-1148	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, IGC-6002-1AD, 1AE, 1AF, 1AG, 1AH, IGC-6002-1E, 1P, 1Q, 1R, 1S 1T, IGC-6002-1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC 6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
		IGC-1148B	1	IGC-6001M-2A, MA
	PLUG, Rubber, Dist. Cap Vent. Hole	IGS-32	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6001M-2A, MA. IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6010-1D, 1E
	RIVETS			
	(A) Coupling, Shaft	SW-213	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, IGC-6002-1R, 1S, 1T, 1U, 1V, IGC-6004-1, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
 A	(A) Gear	SW-213	1	IGC-6001-2F, 2L, IGC-6001M-2A, IGC-6002-2B, IGC-6005-2A, IGC-6005-2B, IGC-6010-1B, 1C, 1D, 1E
	(A) Gear	GJ-236	1	IGC-6001-2D
B	(B) Tubular, Cap Spring	X-1448	2	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, IGC-6002-1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
	(B) Tubular, Cap Spring	8X-2893	2	IGC-6001M-2A, MA
	SCREWS			
 C B A	(A) Breaker Contact Lock, Fill. Hd. #8-32x3/16	8X-884	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, IGC-6002-1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
	(A) Breaker Contact Lock, Fill. Hd. #8-32x3/16	19X-884	1	IGC-6001M-2A, MA
	(A) Breaker Plate Mtg., Fill. Hd. #10-32x3/16	8X-870	2	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1 IGC-6010-1B, 1C, 1D, 1E
	(A) Breaker Plate Mtg., Fill Hd. #10-32x5/16	19X-870	2	IGC-6001M-2A, MA
	(B) Spring Clamp, Rd. Hd. #6-32x1/4	8X-302	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E

MISCELLANEOUS PARTS (Continued)

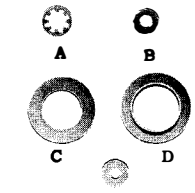	Name	Part No.	No. Used	Used on
	SCREWS (Continued)			
	(B) Spring Clamp, Rd. Hd. #6-32x1/4	19X-302	1	IGC-6001M-2A, MA
	(A) Condenser Mtg., Fill. Hd. #6-32x5/32	8X-1546	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B-1C-1D-1E
	(A) Condenser Mtg., Fill.Hd. #6-32x5/32	19X-1546	1	IGC-6001M-2A, MA
	(C) Dist. Cap Cover, Ctsk. Hd. #8-32x3/4	8X-1340	3	IGC-6005-2A, 2B, IGC-6006-1
	(A) Terminal, Fill. Hd. #10-32x1/4	8X-872	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
	(A) Terminal, Fill. Hd. #10-32x1/4	19X-872	1	IGC-6001M-2A, MA
	SHAFT, Drive, Tachometer	IGS-148	1	IGC-6010-1B, 1C, 1D, 1E
	SNAP RING, Cam Retaining	IG-680	1	All
	SPACER, Cam	IGS-99	1	All
	SPRINGS			
	(A) Anti-Rattle	IGT-69	1	IGC-6002-1A, 1AA, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6004-1, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
	(A) Anti-Rattle	IGT-70	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6001M-2A, MA, IGC-6003B, C, IGC-6005-2A, IGC-6005-2B, B
	(B) Cap Clamp	IG-694	2	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG 1AH, 1E, 1P, 1Q, IGC-6002-1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E.
	(B) Cap Clamp	IG-694A	2	IGC-6001M-2A, MA
	(C) Contact, Dist. Cap	IG-515A	1	All
	WASHERS			
	(A) Breaker Plate Mtg., Skpf. #10	X-1270	2	All
	(B) Contact Lock Sc., (Plain) #8	8X-350	1	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6003B, C, IGC-6004-1, IGC-6005-2A, 2B, B, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
	(B) Contact Lock Sc. (Plain) #8	19X-350	1	IGC-6001M-2A, MA
	(A) Terminal Sc. Skpf. #10	X-1270	1	All
	(C) Thrust, Drive Shaft, Lower	IG-90	1	All
	(D) Thrust, Drive Shaft, Upper (Inner)	IAO-10	1	All
	(D) Thrust, Drive Shaft, Upper (Outer)	IAO-11	1	All
	(E) Thrust, Tachometer Shaft	IGS-39	1	IGC-6010-1B, 1C, 1D, 1E
	WEIGHTS			
	Governor	IGC-2168L	2	IGC-6002-1A, 1AA, 1AB, 1AC, 1AD, 1AE, 1AF, 1AG, 1AH, 1E, 1P, 1Q, 1R, 1S, 1T, 1U, 1V, IGC-6002-2B, IGC-6004-1, IGC-6006-1, IGC-6010-1B, 1C, 1D, 1E
	Governor	IGC-2168R	2	IGC-6001-1A, 1F, 1L, 1P, IGC-6001-2D, 2F, 2L, IGC-6001, A, B, C, E, G, H, N, S, W, IGC-6001M-2A, MA, IGC-6003B, C, IGC-6005-2A, 2B, B
	WICKS			
	(A) Felt, Cam Sleeve	IGH-28	1	All
	(B) Felt, Dist. Oiler	IGS-117	1	All

Part No.	No. Used	Name of Part
	1 2 3 4 5	
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-644	1	Coupling, Drive, Dist.
IG-816	1	Washer, Thrust, Advance Arm
IG-816A	1	Washer, Thrust, Advance Arm
*	1	Arm, Advance
IGE-36	1	Spring, Anti-Rattle, Gov.
IGE-1003L	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSY.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
*	1	Cam, & Stop Plate, 6 Cyl., L.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-14	1	Lead Assy., Primary Terminal
IGB-132	2	
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub, Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
12X-194	4	Lockwasher, Condenser & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd., #6-32x1/4
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd., #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd., #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
12X-1012	2	Lockwasher, Condenser Mtg., #6
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fil. Hd., #6-32x5/32
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IG-2456	2	Weight, Governor
IGE-1020L	1	Shaft, Drive
IGE-2051	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
X-480	1	Oiler, Elbow, Press In, 1/4
*	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
SW-213	1	Rivet, Coupling, Drive Shaft
8X-119	2	Screw, Breaker Plate, Fil. Hd. #10-32x1/2
X-196	4	Washer, Lock, #10
8X-872	2	Screw, Terminal, Fil. Hd. #10-32x1/4
	1 2 3 4 5	

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Shaft & Gov. Assy.	Spring Set Gov. Weight	Arm Advance	Cam Spacer
IGE-4003	IGE-1190L	IGE-2020L	IG-776S	IGC-2052-3	None
IGE-4003A	IGE-1190L	IGE-2020LA	IG-654S	IGC-2052-3	None
IGE-4003B	IGE-1143L	IGE-2020LB	IG-829S	IGC-2052-3	None
IGE-4003C	IGE-1190LB	IGE-2020LB-2	IG-829S	IGC-2052-3	None
IGE-4003D	IGE-1190LC	IGE-2020LD	IGE-30S	IGC-2052-3	None
IGE-4003E	IGE-1143LA	IGE-2020LE	IGB-210BS	IGC-2052-3	None
IGE-4003F	IGE-1190LE	IGE-2020LF	IGB-252S	IGC-2052-3	None
IGE-4003G	IGE-1067LC	IGE-2020LB-1	IG-829S	IGC-2052-3	IGS-99
IGE-4003H	IGE-1067LC	IGE-2020LB-1	IG-829S	IGC-2052-2	IGS-99
IGE-4003H-1	IGE-1067LC	IGE-2020LB-1	IG-829S	IGC-2068C-1	IGS-99

UNIT	APPLICATION
IGE-4003	Brockway
IGE-4003A,B, C,D	Continental
IGE-4003E	Brockway
IGE-4003F	Brockway, Continental
IGE-4003G,H-1	Brockway
IGE-4003H	Brockway, Continental

Printed in U. S. A.

(Issued 10-3-47)

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4007 -A-B DISTRIBUTOR PARTS LIST

IGE-4007 -A-B

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	14	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-750	1	Advance Control Screw - 1/4-20
IG-816	1	Thrust Washer
IG-816A	1	Thrust Washer
*	1	Governor Control Spring
IG-902	1	Advance Control Arm
IGE-1003	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
*	1	Cam & Stop Plate - 6 cyl. R.H.
IGE-2001	1	Dist. Base Assy.
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assy.
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Screw Point
IGE-1012	1	Breaker Sub-Plate Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Screw Point
IGP-3028	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGE-1027R	1	Drive Shaft Assy.
8X-119	2	#10-32x1/2 Fill. Hd. Screw
8X-163	1	1/4-20 Hex. Nut
X-196	4	#10 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 12-12-35)

Assembly No.	Dr. Shaft & Gov.	Weight Assy.	Weight Spring	Cam Assembly	Control Spring
IGE-4007	IGE-2027R	IG-1322	IA-77	IGE-1190RD	None
IGE-4007A	IGE-2027RB	IG-1322	IGB-178	IGE-1190RD	IG-869
IGE-4007B	IGE-2027RD	IG-1456	IGB-208	IGE-1190RG	IGE-35


* See table following parts list for part number applying to assembly wanted.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4007,A,B DISTRIBUTOR ILLUSTRATION

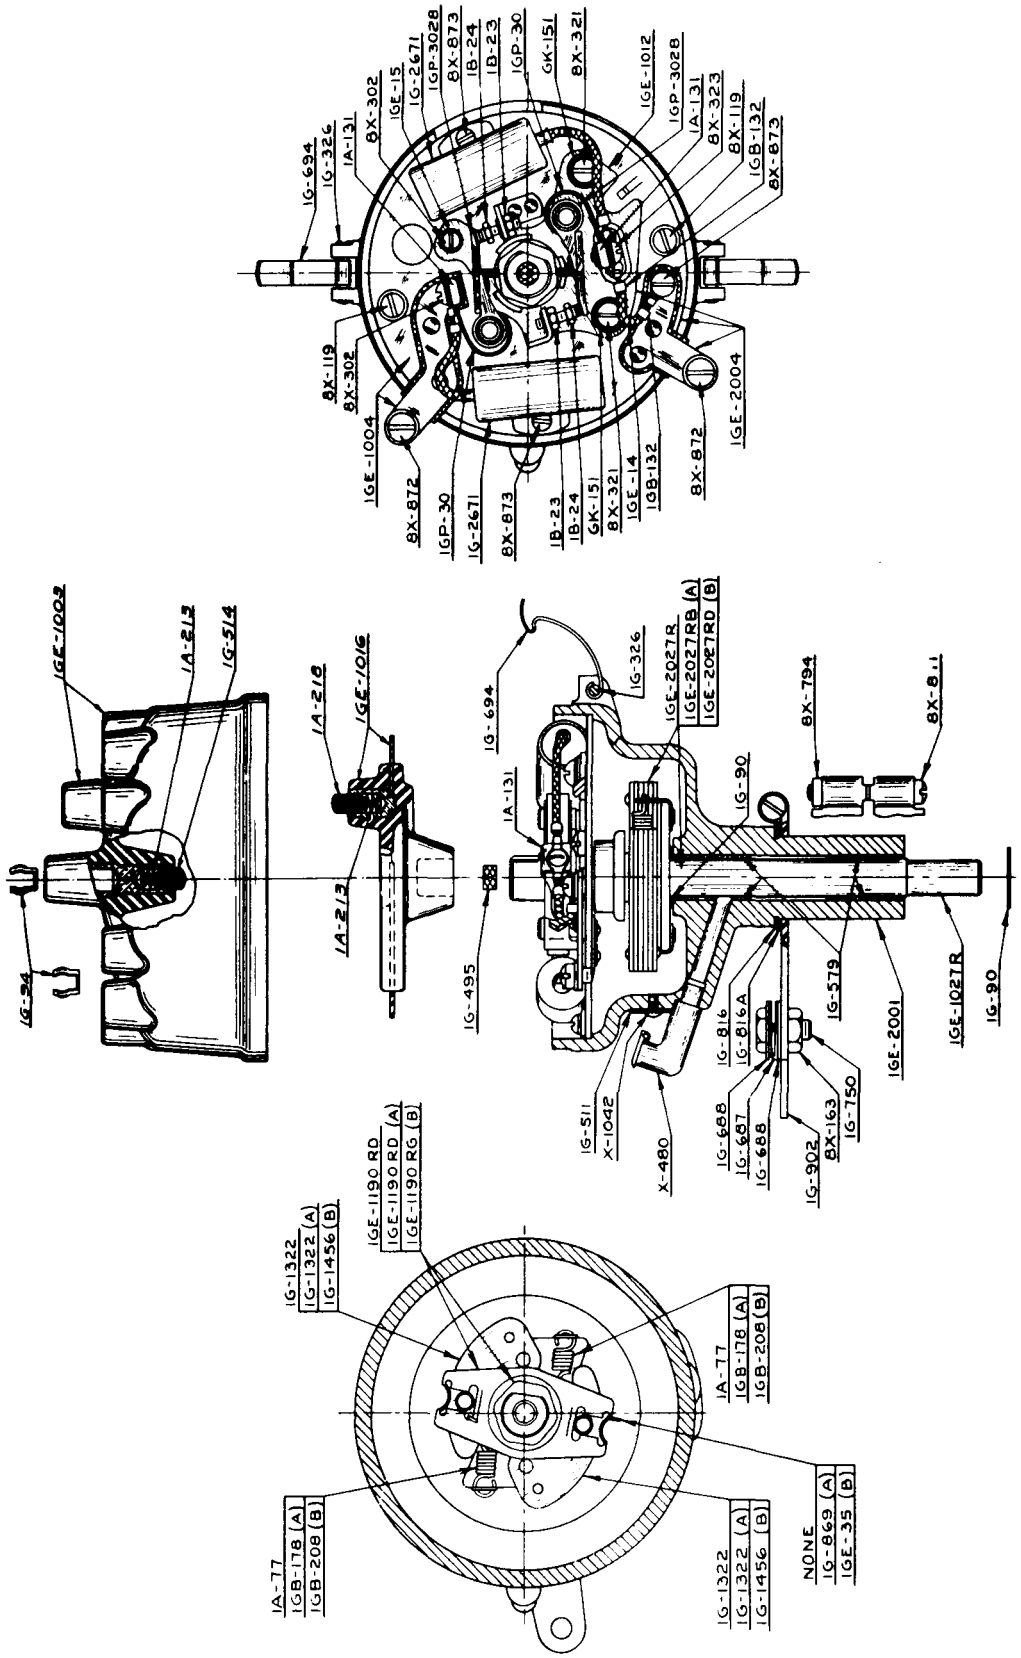

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	14	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IGC-24N	1	Advance Control Arm
*	1	Governor Control Spring
IGE-1003	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assy.
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
*	1	Cam & Stop Plate - 6 cyl. R.H.
IGE-2001	1	Dist. Base Assembly
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assembly
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IGP-3028	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGE-1027R	1	Drive Shaft Assy.
8X-86	1	1/4-20x5/8 Hex. Hd. Sc.
8X-119	2	#10-32x1/2 Fill. Hd. Sc.
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
X-196	4	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 10-5-36)

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Sp. Set	Weight Assembly	Cam Assembly	Control Spring
IGE-4008	IGE-2027R	IA-77	IA-77S	IG-1322	IGE-1190RD	None
IGE-4008A	IGE-2027RC	IGE-24	IGE-24S	IG-1456	IGE-1190RF	IGE-35

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028BS breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part c n be assembled a needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-84	14	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IGC-24N	1	Advance Control Arm
*	1	Governor Control Spring
IGE-1003	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
*	1	Cam & Stop Plate - 6 cyl. L.H.
IGE-2001	1	Dist. Base Assy.
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assembly
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IGP-3028	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGE-1027L	1	Drive Shaft Assy.
8X-86	1	1/4-20x5/8 Hex. Hd. Sc.
8X-119	2	#10-32x1/2 Fill. Hd. Sc.
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
X-196	4	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 10-5-36)

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Sp. Set	Weight Assembly	Cam Assembly	Control Spring
IGE-4009	IGE-2027L	IA-77	IA-77S	IG-2322	IGE-1190LA	None
IGE-4009A	IGE-2027LA	IGE-24	IGE-24S	IG-2456	IGE-1190LE	IGE-36

* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028BS breaker point set and * weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4012, A,B,C — DISTRIBUTOR PARTS LIST — IGE-4012, A,B,C

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816C	1	Washer, Thrust, Advance Arm
IG-853	1	Collar, Shaft, Dist.
*	2	Spring, Anti-Rattle, Gov.
IGE-1003L	1	Cap Assembly, Dist.
IA-213	1	Spring, Contact
IG-514	1	Contact, Plunger
IGE-1016	1	Rotor Assembly
IA-213	1	Spring, Contact
IA-218	1	Contact, Plunger
IGE-1031	1	Arm, Advance
*	1	Cam, & Stop Plate, 6 cyl., L.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IG-2671	2	Condenser
IGE-14	1	Lead Assy., Primary
IGB-132	2	Terminal
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004	1	Plate Assy., Breaker, Partial
IB-23	1	Nut, Lock, Contact Screw
IGP-33†	1	Contact, Breaker Screw
IGE-1012	1	Plate Assy., Sub, Breaker
IB-23	1	Nut, Lock, Contact Screw
IGP-33†	1	Contact, Breaker Screw
IGP-3028†	2	Arm Assy., Breaker
IGP-30	2	Spring
X-194	4	Lock Washer, Condenser & Primary Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd., #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd., #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd., #6-32x5/16
X-537	2	Lock Washer, Sub Plate Mtg., #10
X-1012	2	Lock Washer, Condenser Mtg., #6
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fil. Hd., #6-32x5/32
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Base Assembly, Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
X-480	1	Oiler, Elbow, Press in, 1/4
*	1	Shaft & Gov. Assembly
*	1	Spring Set, Gov. Weight
IG-2456	2	Weight, Governor
IGE-1033L	1	Shaft, Drive
IGK-26	1	Spacer, Cam
IGW-46	1	Washer, Thrust
SW-213	1	Rivet, Collar, Drive Shaft
8X-119	2	Screw, Attaching, Breaker Plate Fil. Hd., #10-32x1/2
X-196	4	Lock Washer, Breaker Plate & Terminal Screw, #10
8X-872	2	Screw, Terminal, Fil. Hd., #10-32x1/4
		1 2 3 4 5

(Issued 5-14-45)

† Contact Set, Service IGP-3028BS.

* See table following parts list for part number applying to assembly wanted.


Assembly No.	Spring	Cam	Base Assy.	Dr. Shaft Assy.	Spring Set
IGE-4012	IGE-36	IGE-1067L	IGE-2032	IGE-2033L	IG-817S
IGE-4012A	IGE-36	IGE-1067LA	IGE-2032	IGE-2033L	IG-817S
IGE-4012B	IGE-36	IGE-1144L	IGE-2032B	IGE-2033LA	IG-913S
IGE-4012C	IGE-36B	IGE-1067LC	IGE-2032C	IGE-2033LB	IG-817SS

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4012,A,B,C DISTRIBUTOR ILLUSTRATION

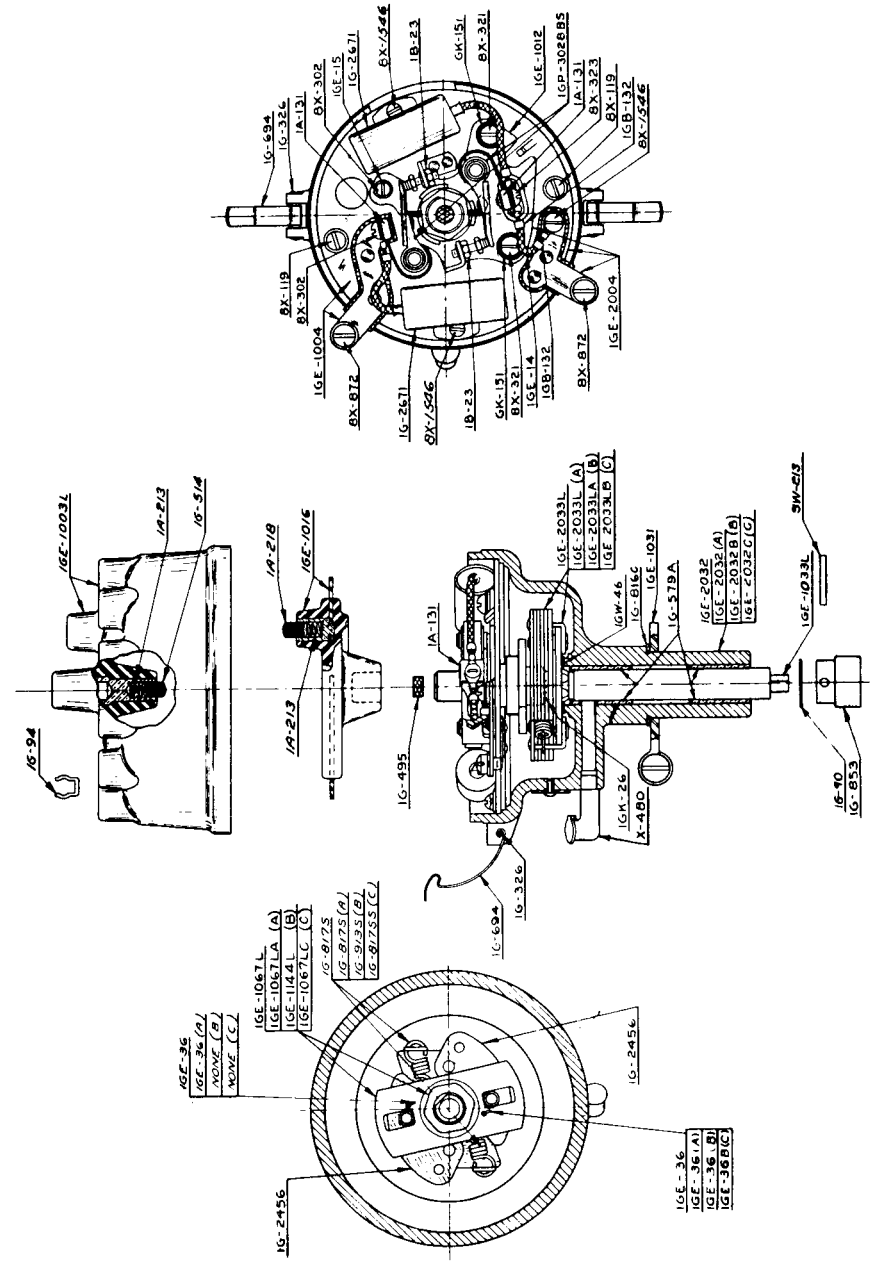


Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	14	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-644	1	Dist. Drive Coupling
IG-816	1	Thrust Washer
IGB-247	1	Dist. Drive Rivet
IGC-24N	1	Advance Control Arm
IGE-1003	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1190RD	1	Cam & Stop Plate - 6 cyl. R.H.
IGE-2001	1	Dist. Base Assy.
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assembly
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IGE-1012	1	Breaker Sub-Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IGP-3028	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2020RA	1	Drive Shaft & Gov. Assy.
IA-77	2	Weight Spring
IG-1322	2	Weight Assy.
IGE-1020R	1	Drive Shaft Assy.
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-119	2	#10-32x1/2 Fill. Hd. Sc.
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
X-196	4	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 3-2-36)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assemble as needed."

IGE-4013 DISTRIBUTOR ILLUSTRATION

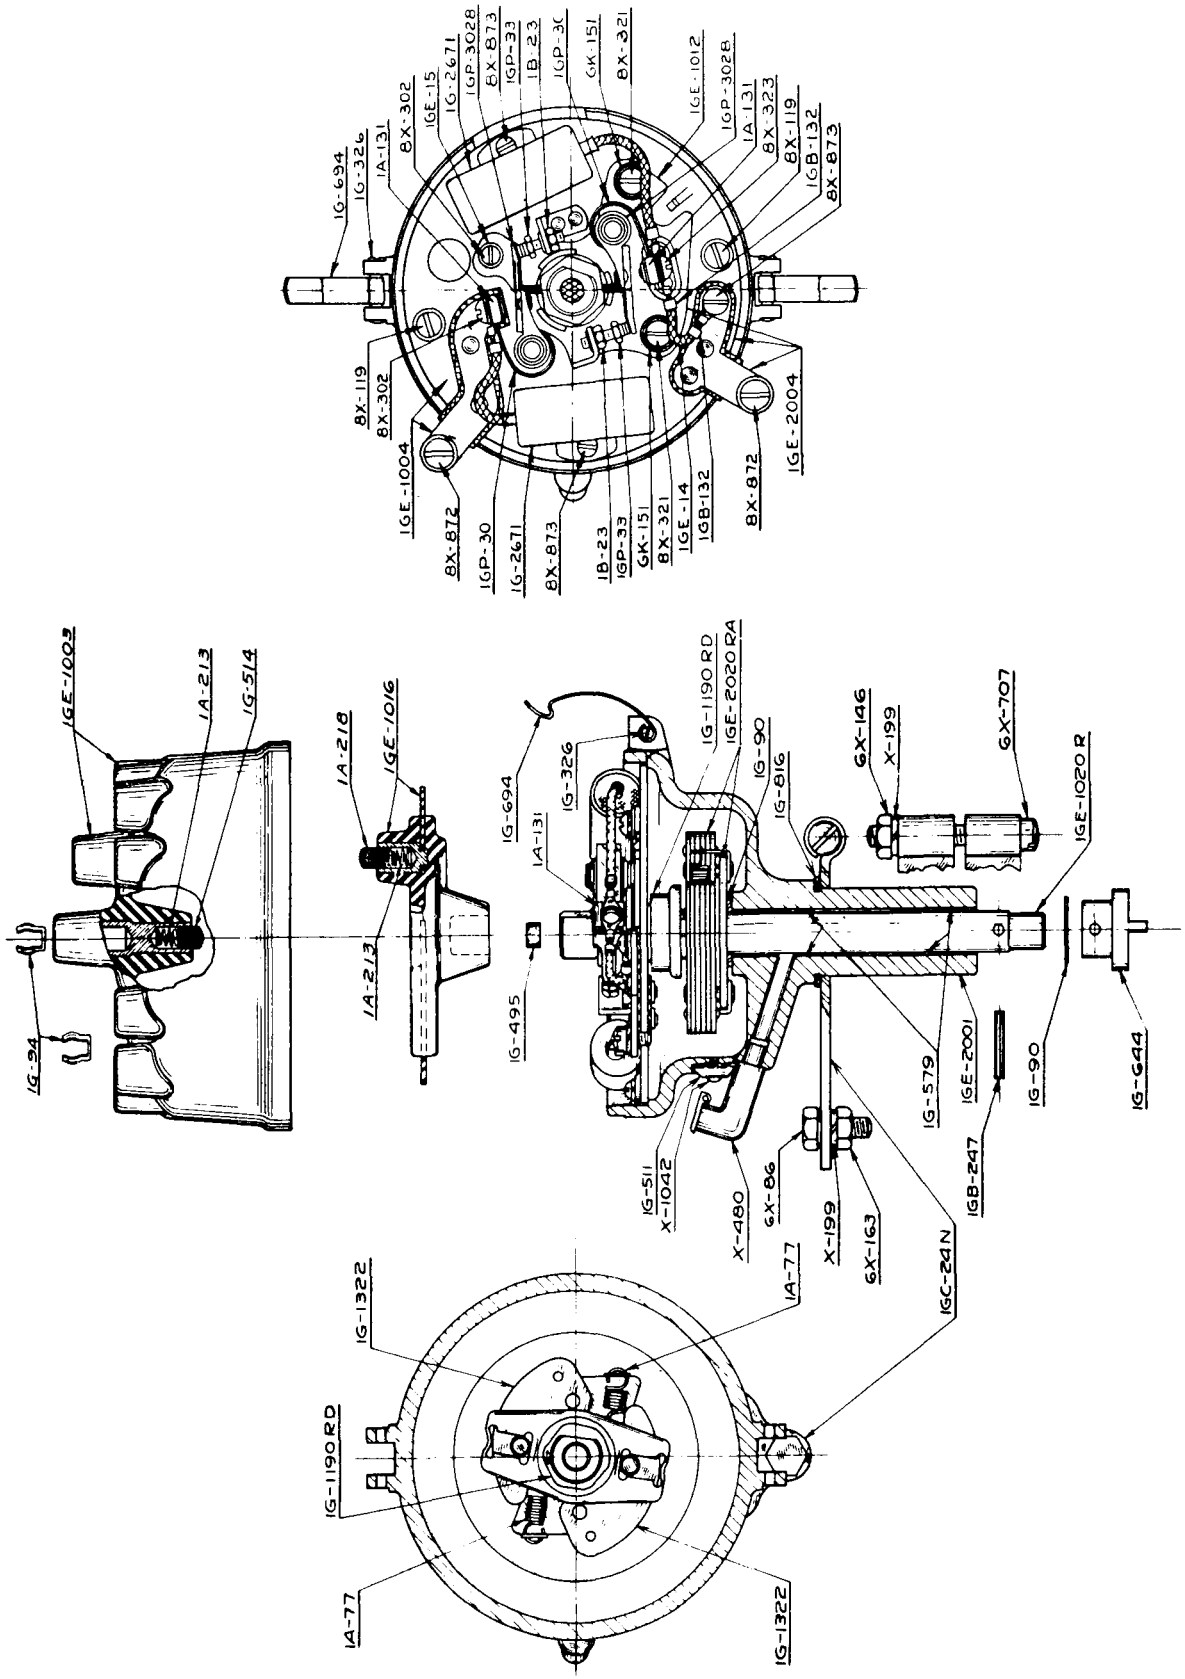

IGE-4014A DISTRIBUTOR PARTS LIST IGE-4014A

Part No.	No. Used	Name of Part
		1 2 3 4 5
GK-36	1	Dist. Gear - Follower
IG-90	2	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-816A	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-247	1	Dist. Drive Rivet
IGE-1003	1	Dist. Cap Assembly
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1190RD	1	Cam & Stop Plate - 6 cyl. R.H.
IGE-2001	1	Dist. Base Assembly
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler-Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assy.
IGB-3664	2	Breaker Arm Assy.
IGB-209	2	Breaker Arm Spring
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Point Screw
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Point Screw
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Screw
X-1012	2	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2026RA	1	Drive Shaft & Gov. Assy.
IA-77	2	Weight Spring
IG-1322	2	Weight Assembly
IGE-1026R	1	Drive Shaft Assy.
6X-86	1	1/4-20x5/8 Hex. Hd. Screw
6X-119	2	#10-32x1/2 Fill. Hd. Screw
6X-163	1	1/4-20 Hex. Nut
X-196	4	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-794	1	#10-32 Square Nut
6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
6X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5


(Issued 10-11-34)
(R-8-7-36)

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4014A DISTRIBUTOR ILLUSTRATION

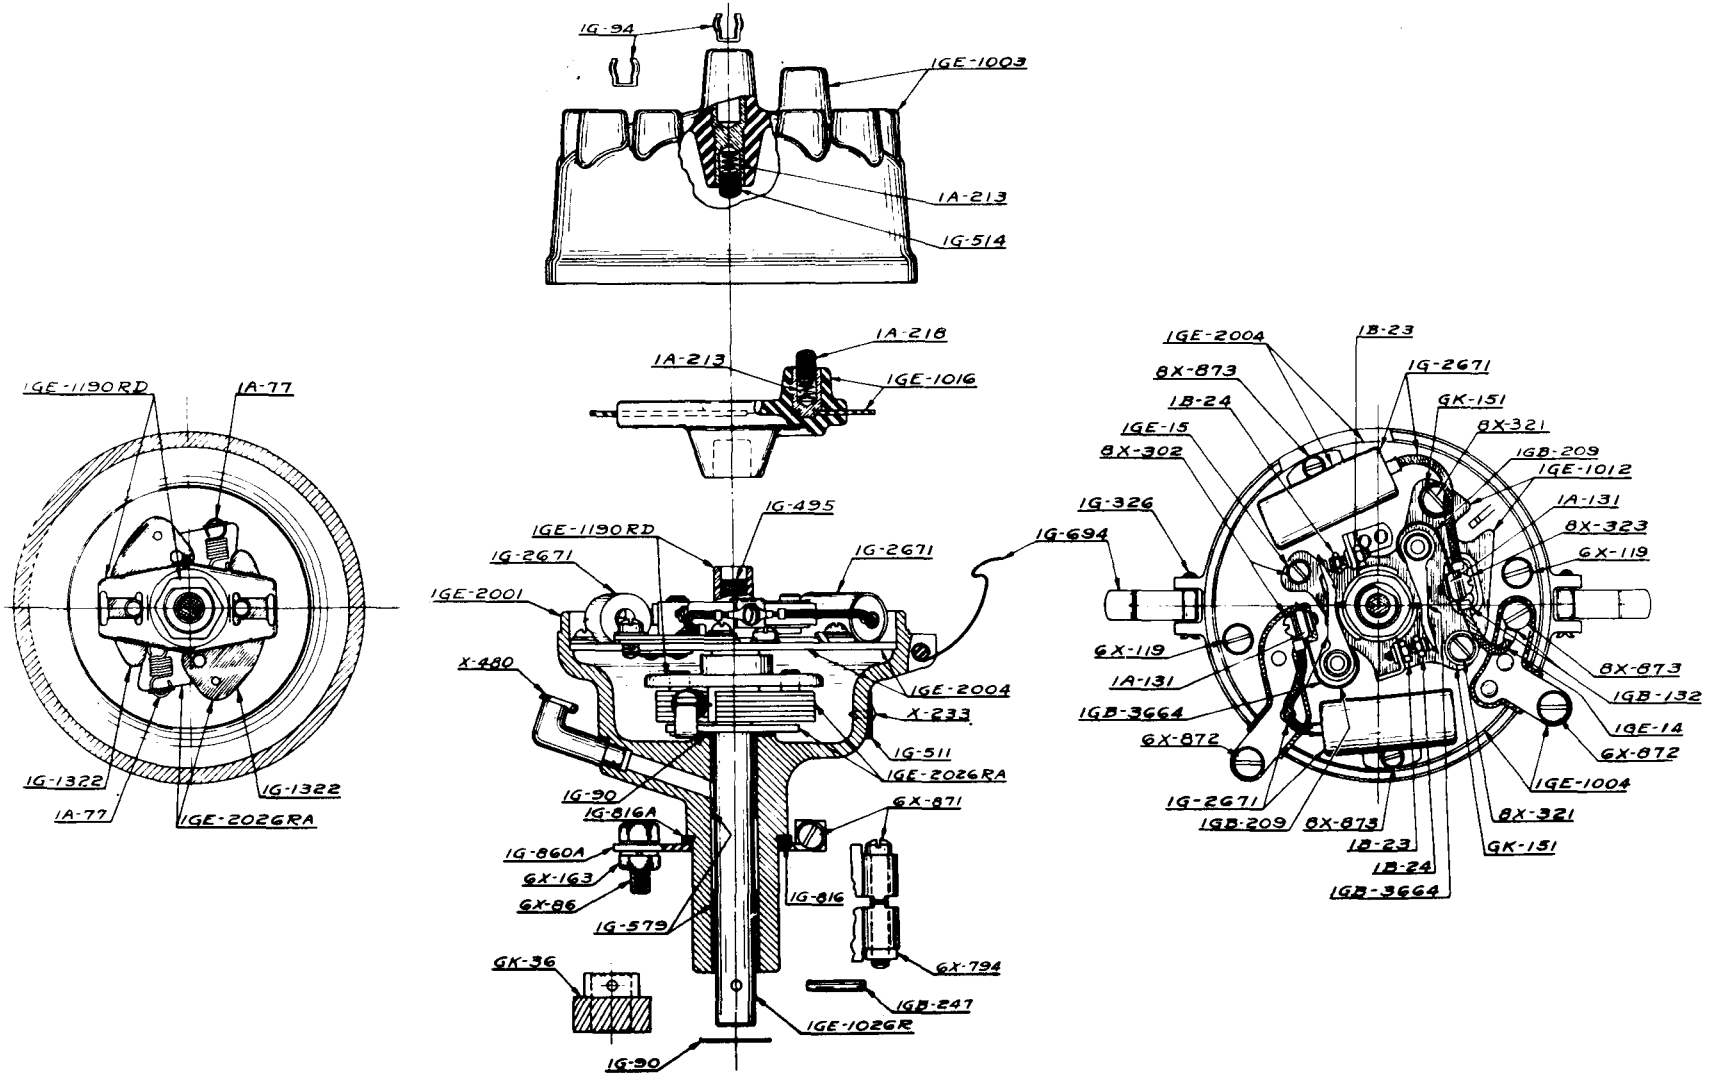

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGE-4015 DISTRIBUTOR PARTS LIST — IGE-4015

PRELIMINARY

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IGB-162	1	Thrust Washer
IGC-2086A	1	Advance Control Arm Assy.
IGE-35	1	Anti-Rattle Spring
IGE-1003	1	DISTRIBUTOR CAP ASSEMBLY
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	ROTOR ASSEMBLY
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1067R	1	Cam & Stop Plate - 6 Cyl. R.H.
IGE-2004	1	Breaker Plate Assembly
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	CONDENSER ASSEMBLY
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy
IB-23	1	Brkr. Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Brkr. Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
X-1012	2	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2042R	1	Drive Shaft & Gov. Assy.
IG-775S	1	Weight Spring Set
IG-1456	2	Weight Assembly
IGE-1042R	1	Drive Shaft Assembly
IGE-2043	1	Distributor Base Assembly
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGS-99	1	Washer
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 10-6-41)

‡ SERVICE CONTACT SET IGP-3028BS.

UNIT	APPLICATION
IGE-4015	Oshkosh Truck, Biederman

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-816A	1	Thrust Washer
IGB-162	1	Thrust Washer
IGC-53B	1	Advance Control Arm
IGE-36	1	Governor Control Spring
IGE-1003L	1	Dist. Cap Assembly
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-216	1	Contact Spring Plunger
IGE-1067LB	1	Cam & Stop Plate - 6 cyl. L.H.
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assembly
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2032A	1	Dist. Base Assembly
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2045L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assy.
IGC-42‡	2	Weight Spring
IGE-1045L	1	Drive Shaft Assy.
IGK-26	1	Washer - .020" Thick
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 8/12/38)

‡ Service Breaker Point Set IGP-3028BS & Service Weight Spring Set IGC-42S.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4016 DISTRIBUTOR ILLUSTRATION

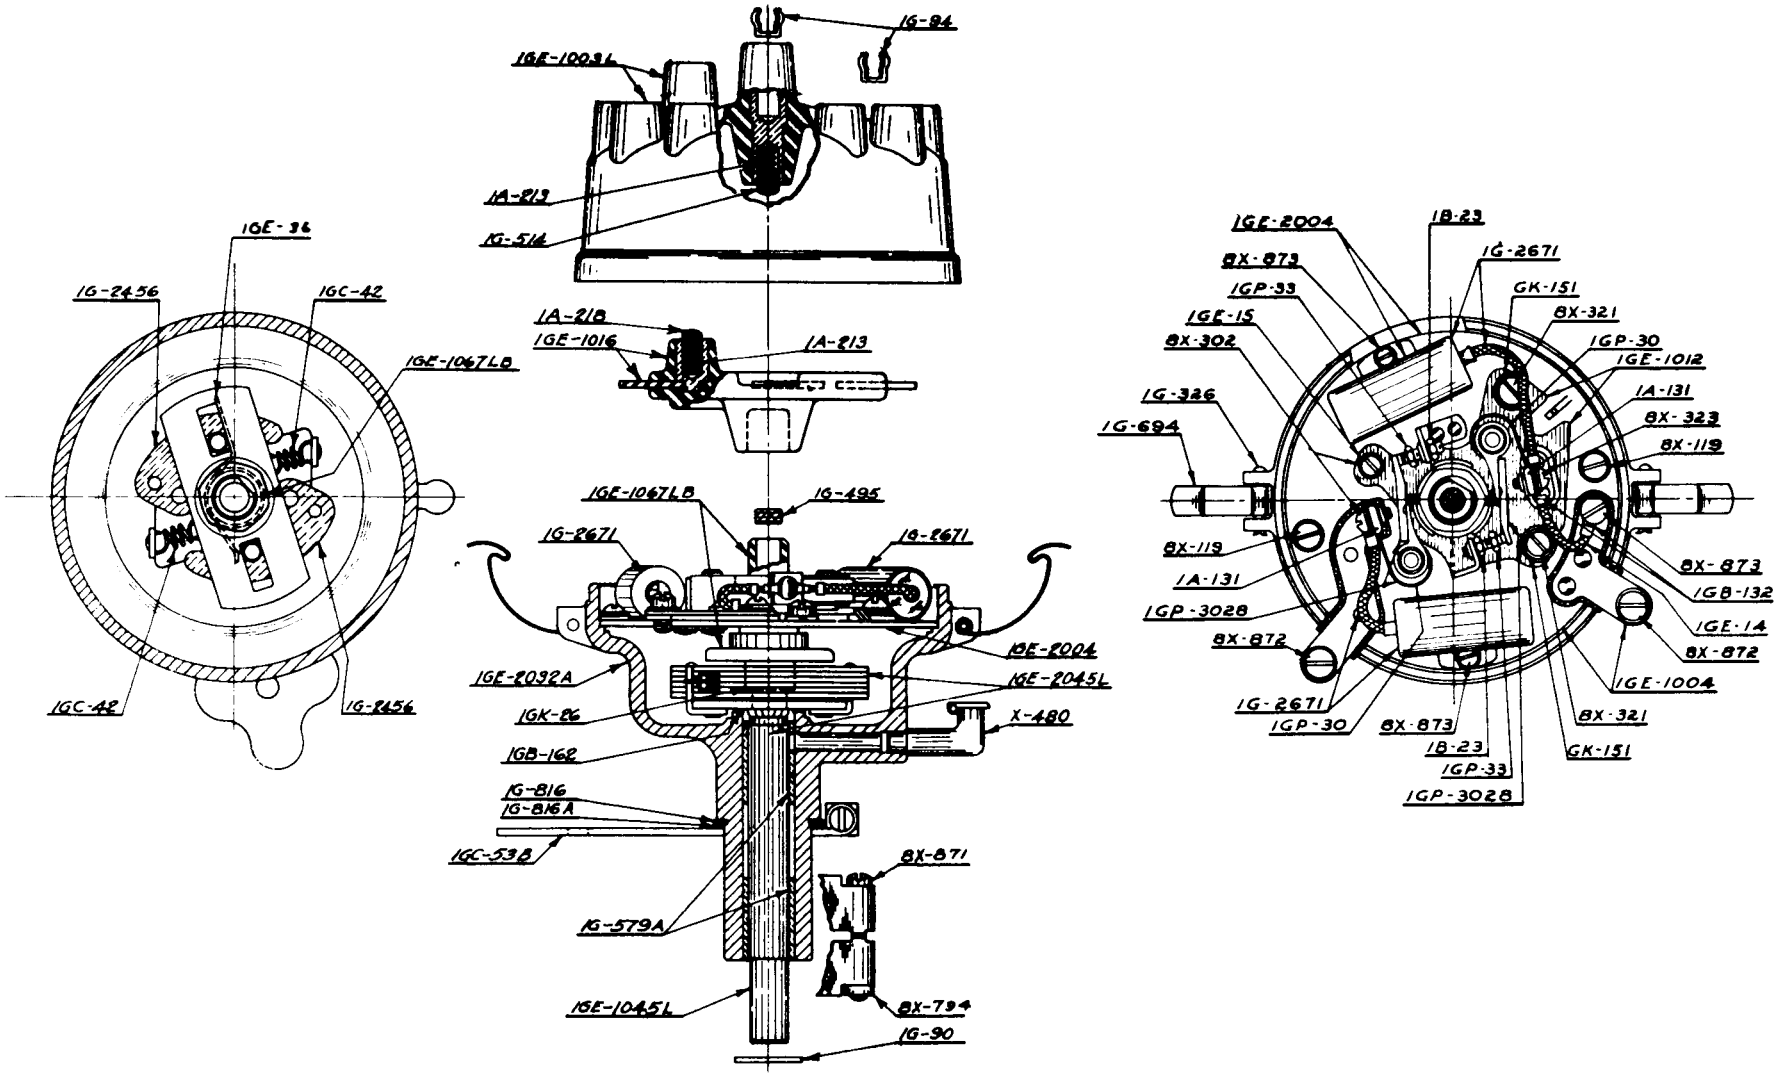

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm, .065" Thick
IG-816A	1	Washer, Thrust, Advance Arm, .032" Thick
IG-1456	2	Weight, Governor
IGC-1053B	1	Arm, Advance
IGE-35	1	Spring, Anti-Rattle
IGE-1003	1	CAP ASSY., DISTRIBUTOR
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSEMBLY
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1045RA	1	Shaft, Drive
**	1	Cam & Stop Plate, 6 Cyl. R.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mounting, #10
IA-131	2	Clip, Spring, Contact Arm
IAT-14	1	Lead Assy., Primary
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate Mounting, #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub Breaker
IGP-3028BS	2	Contact Set, Breaker
12X-194	6	Lockwasher, Condenser Mtg. & Primary Lead Screw, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd. #10-32x5/16
8X-323	1	Screw, Primary & Condenser Lead, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mounting, #10
8X-1546	3	Screw, Primary Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
IGE-2032A	1	Base Assembly, Distributor
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
**	1	Spring Set, Gov. Weight
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGT-117	1	Felt Wick
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
12X-196	4	Lockwasher, Breaker Plate & Terminal Screw, #10
X-480	1	Oiler
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set Gov. Weight
IGE-4017	IGE-1067RA	IGC-42S
IGE-4017A	IGE-1067RC	IGB-328BS

UNIT	APPLICATION
IGE-4017	Kermath Marine
IGE-4017A	Kermath Marine

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	4	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-853	1	Dist. Drive Sleeve
IGB-162	1	Thrust Washer
IGE-36B	1	Governor Control Spring
IGE-1003L	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assy.
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1046	1	Hold Down Arm Assy.
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGE-1067LC	1	Cam & Stop Plate - 6 Cyl. L.H.
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assy.
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGF-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGE-1012	1	Breaker Sub-Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
8X-321	2	#10-32x5/16 Rd. Hd.Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
IGE-2033LB	1	Drive Shaft & Gov. Assy.
IG-817‡	1	Weight Spring
IG-863‡	1	Weight Spring
IG-2456	2	Weight Assy.
IGE-1033L	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2047	1	Dist. Base Assy.
IG-326	2	Hinge Pin
IG-511A	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGK-26	1	Washer - .020" Thick
SW-213	1	Distributor Drive Rivet
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 10-18-37)

‡ Service Breaker Point Set IGP-3028BS & Service Weight Spring Set IG-817SS.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGE-4018 DISTRIBUTOR ILLUSTRATION

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-853	1	Dist. Drive Sleeve
IGB-162	1	Thrust Washer
IGE-36B	1	Governor Control Spring
IGE-1003L	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	Rotor Assy.
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1048	1	Hold Down Arm Assy.
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc
*	1	Cam & Stop Plate- 6 Cyl.L.H.
IGE-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assy.
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Drive Shaft & Gov. Assy.
IG-817‡	1	Weight Spring
IG-863‡	1	Weight Spring
IG-2456	2	Weight Assy.
IGE-1033L	1	Drive Shaft Assy.
*	1	Dist. Base Assy.
IG-326	2	Hinge Pin
*	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGK-26	1	Washer - .020" Thick
SW-213	1	Dist. Drive Rivet
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5


(Issued 10-18-38)

Assy. No.	Cam & Stop Plate Assy.	Dr. Shaft & Gov. Assy.	Dist. Base Assy.	Name Plate
IGE-4019	IGE-1067LC	IGE-2033LB	IGE-2050	IG-511A
IGE-4019A	IGE-1144LA	IGE-2033LB-1	IGE-2050A	IG-511

‡ Service Breaker Point Set IGP-3028BS, & Service Weight Spring Set IG-817SS.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGE-4019,A DISTRIBUTOR ILLUSTRATION

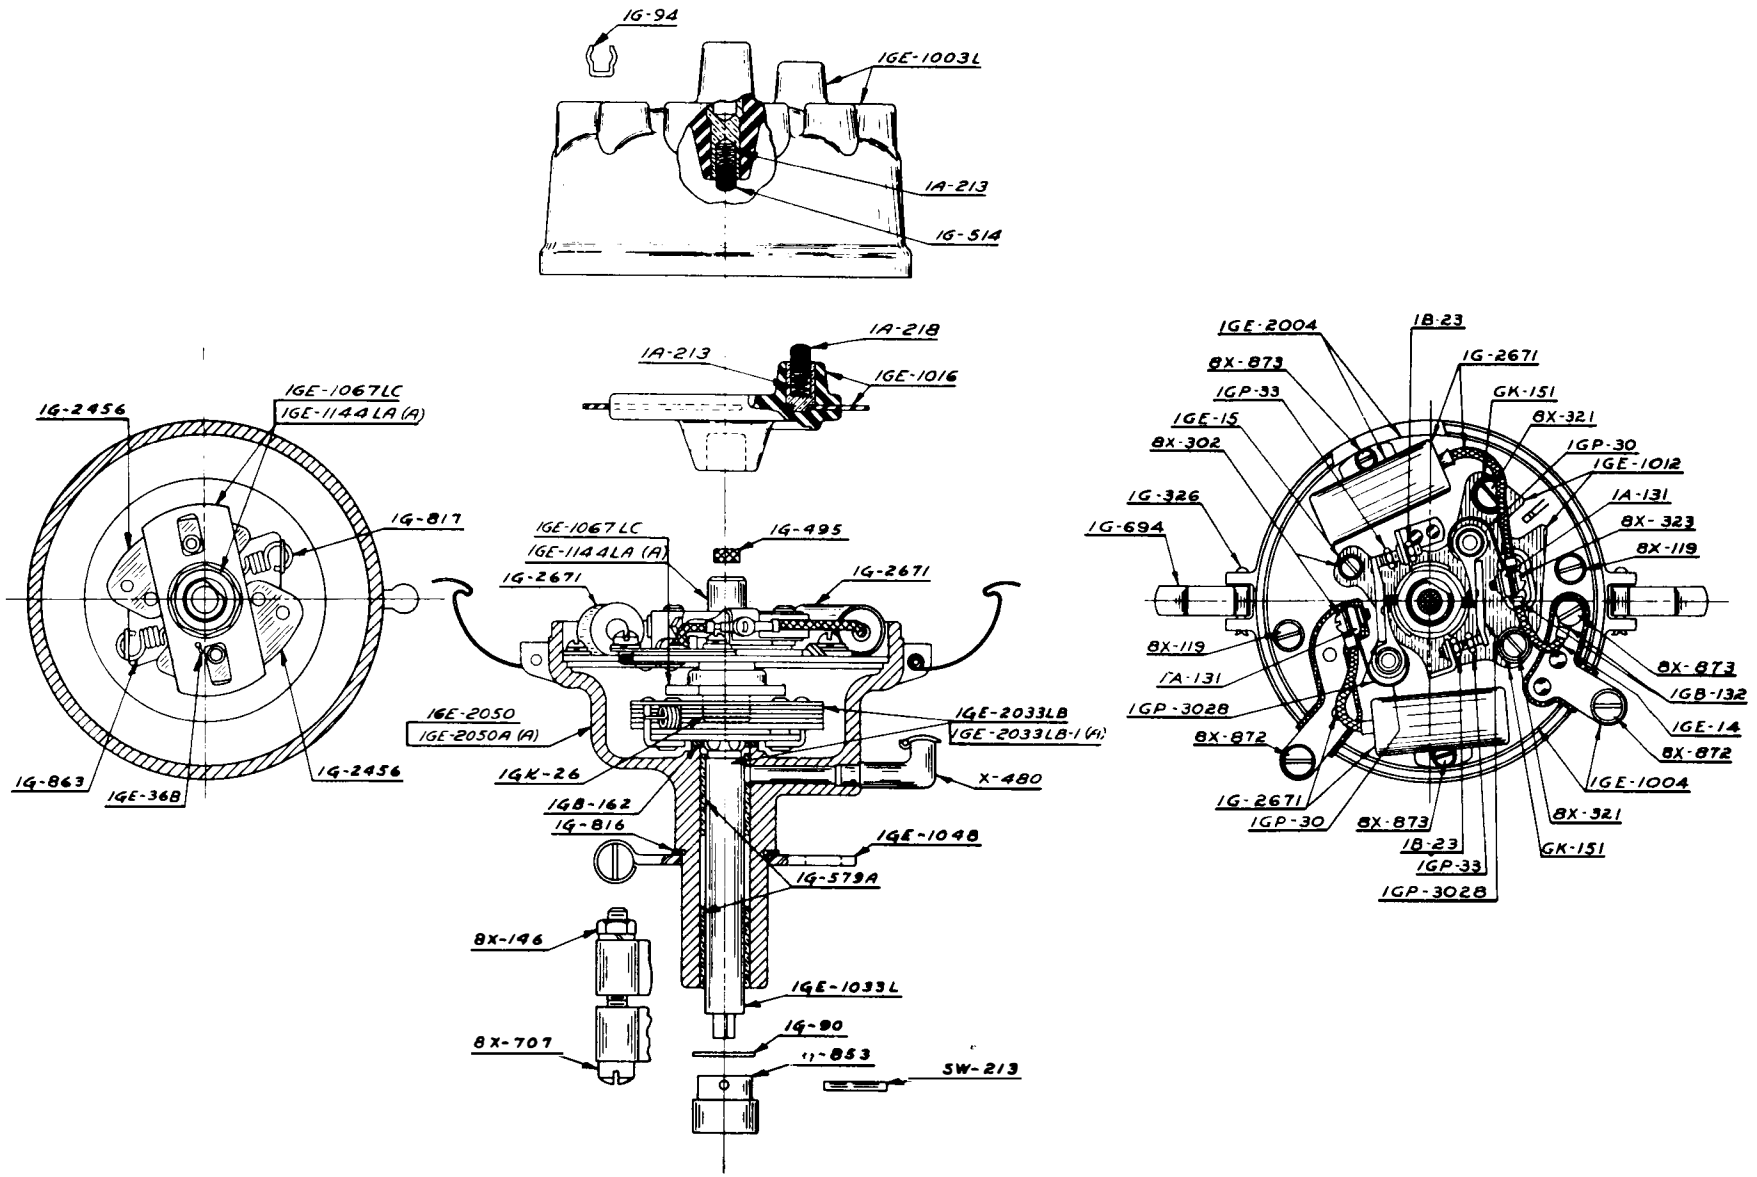

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-816A	1	Thrust Washer
IG-2902F-5	1	Advance Control Arm Assy.
IG-687	1	Spring Washer
IG-688	2	Advance Control Washer
IG-750	1	Advance Control Screw
8X-163	1	1/4-20 Hex. Nut
8X-794	1	#10-32 Square Nut
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-264	3	Rubber Plug
IGE-35	1	Governor Control Spring
IGE-1003	1	DISTRIBUTOR CAP ASSY.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	ROTOR ASSEMBLY
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1067RB	1	Cam & Stop Plate - 6 Cyl.R.H.
IGE-2004	1	Breaker Plate Assembly
GK-151	2	Plain Steel Washer
IA-131	2	Brkr. Arm Spring Clip
IG-2671	2	CONDENSER ASSEMBLY
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Brkr. Plate Part Assy.
IB-23	1	Brkr. Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGE-1012	1	Breaker Sub-Plate Assy.
IB-23	1	Brkr. Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
X-1012	2	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2045RA	1	Drive Shaft & Gov. Assy.
IG-1322	2	Weight Assembly
IGB-178‡	2	Weight Spring
IGE-1045R	1	Drive Shaft Assy.
IGE-2051	1	Distributor Base Assy.
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGK-26	1	Washer - .020" Thick
IGP-41	2	Terminal Slot Cover
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5


(Issued 8-22-39)

‡ Service BREAKER POINT SET IGP-3028BS & Service Weight Spring Set IGB-178S.

UNIT	APPLICATION
IGE-4020	Oshkosh

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4020 DISTRIBUTOR ILLUSTRATION

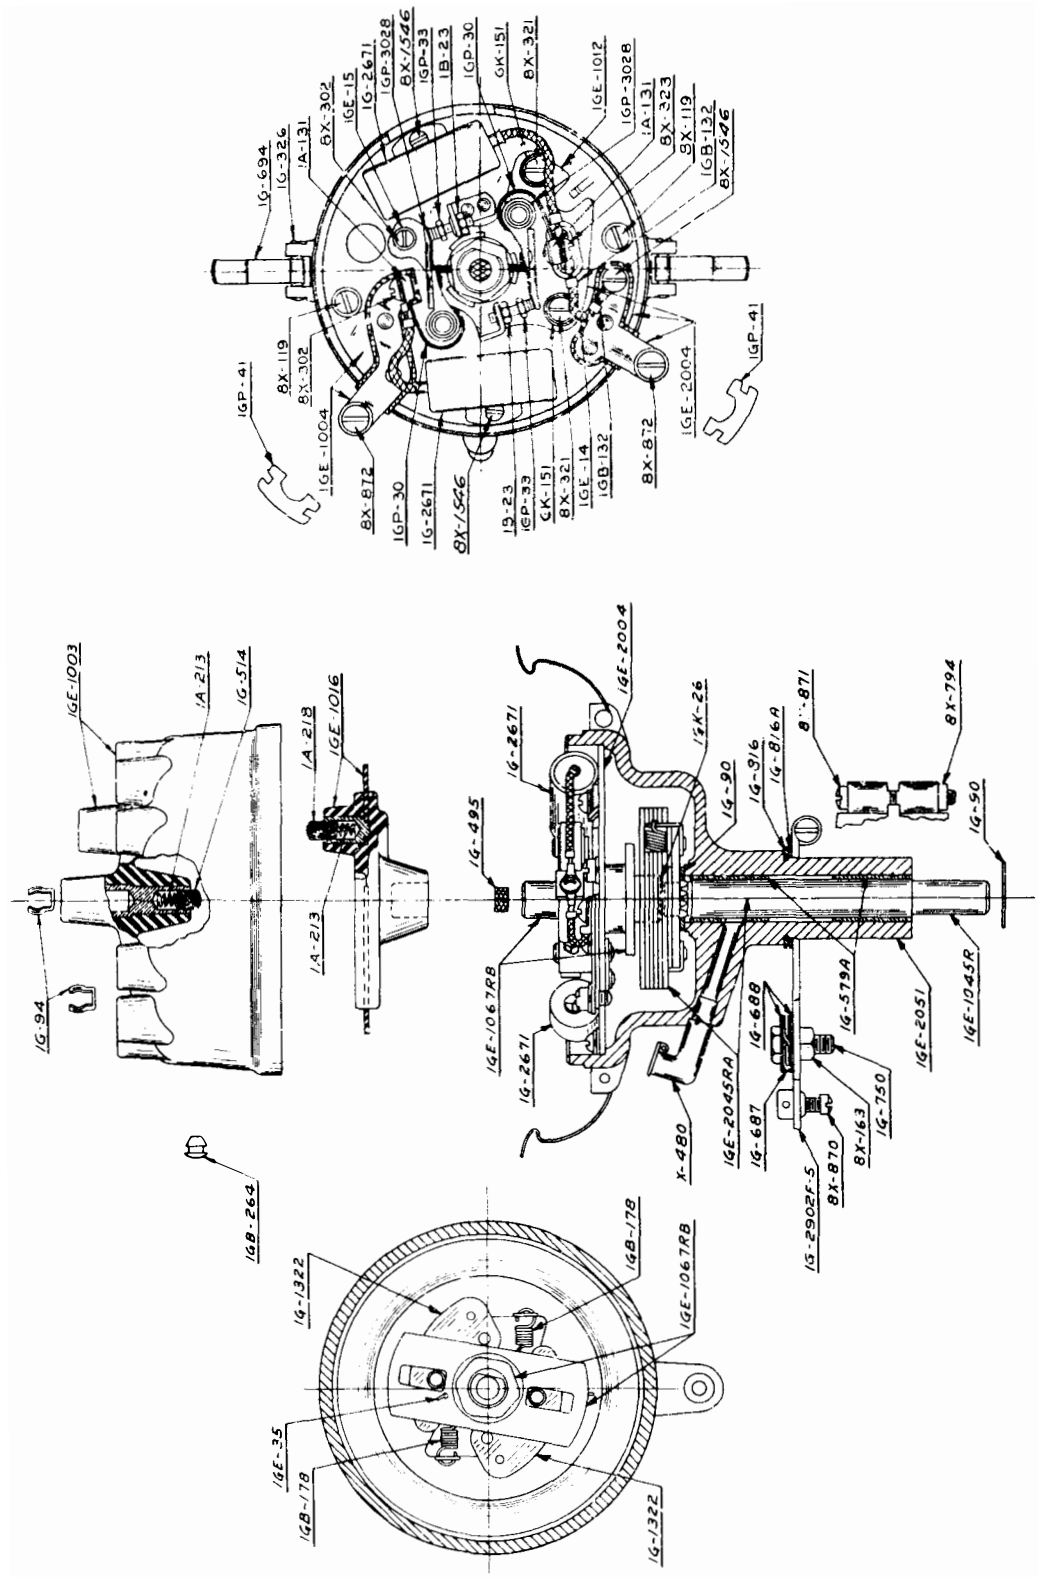

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816A†	1	Thrust Washer
IGB-162	1	Thrust Washer
IGC-2024N-17†	1	Advance Control Arm Assy.
IGE-35	1	Anti-Rattle Spring
IGE-1003	1	DISTRIBUTOR CAP ASSEMBLY
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	ROTOR ASSEMBLY
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1144R	1	Cam & Stop Plate - 6 Cyl. R.H.
IGE-2004	1	Breaker Plate Assembly
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-267‡	2	CONDENSER ASSEMBLY
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assy.
IB-23	1	Brkr. Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Brkr. Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
X-1012	2	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2052	1	Distributor Base Assembly
IG-326	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGE-2053R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGE-29S	1	Weight Spring Set
IGE-1053R	1	Drive Shaft Assembly
IGS-99	1	Washer
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 10-6-41)

‡ SERVICE CONTACT SET IGP-3028BS.

† Used with assemblies having the suffix "-1".

UNIT	APPLICATION
IGE-4021,-1	Kermath

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IGC-2024N-2	1	Arm, Advance
IGE-35	1	Spring, Anti-Rattle, Gov.
IGE-1003	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSY.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1144RA	1	Cam & Stop Plate, 6 Cyl., R.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub, Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
12X-194	4	Lockwasher, Condenser & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd. #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
12X-1012	2	Lockwasher, Condenser Mtg., #6
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
IGE-2045RB	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGE-30S	1	Spring Set, Gov. Weight
IGE-1045R	1	Shaft, Drive
IGE-2051	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
X-480	1	Oiler, Elbow, Press in, 1/4
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
X-196	4	Lockwasher, Breaker Plate & Termianl Sc., #10
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4

1 2 3 4 5

UNIT	APPLICATION
IGE-4023	Kermath

Printed in U. S. A. (Issued 4-26-48) File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	14	H. T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816C	1	Thrust Washer
IG-853	1	Dist. Drive Sleeve
IGE-35A	1	Governor Control Spring
IGE-1003	1	DISTRIBUTOR CAP ASSY.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGE-1016	1	ROTOR ASSEMBLY
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGE-1048	1	Hold Down Arm Assembly
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Screw
IGE-1144RA	1	Cam & Stop Plate - 6 cyl. R.H.
IGE-2004	1	Breaker Plate Assembly
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	CONDENSER ASSEMBLY
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGE-1004	1	Breaker Plate Part Assembly
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IGE-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IGP-3028†	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Sc.
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-537	2	#10 Lock Washer
X-1012	2	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2054R	1	Drive Shaft & Gov. Assy.
IG-817SS	1	Weight Spring Set
IG-1456	2	Weight Assembly
IGE-1054R	1	Drive Shaft Assembly
IGE-2056	1	Distributor Base Assy.
IG-326	2	Hinge Pin
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-480	1	1/4 Oiler-Press in Elbow
IGS-99	1	Washer
IGS-104	1	Thrust Washer
SW-213	1	Distributor Drive Rivet
8X-119	2	#10-32x1/2 Fill. Hd. Screw
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 7-9-40)

† Service BREAKER POINT SET IGP-3028BS.


UNIT	APPLICATION
IGE-4024	Nash

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4024 DISTRIBUTOR ILLUSTRATION

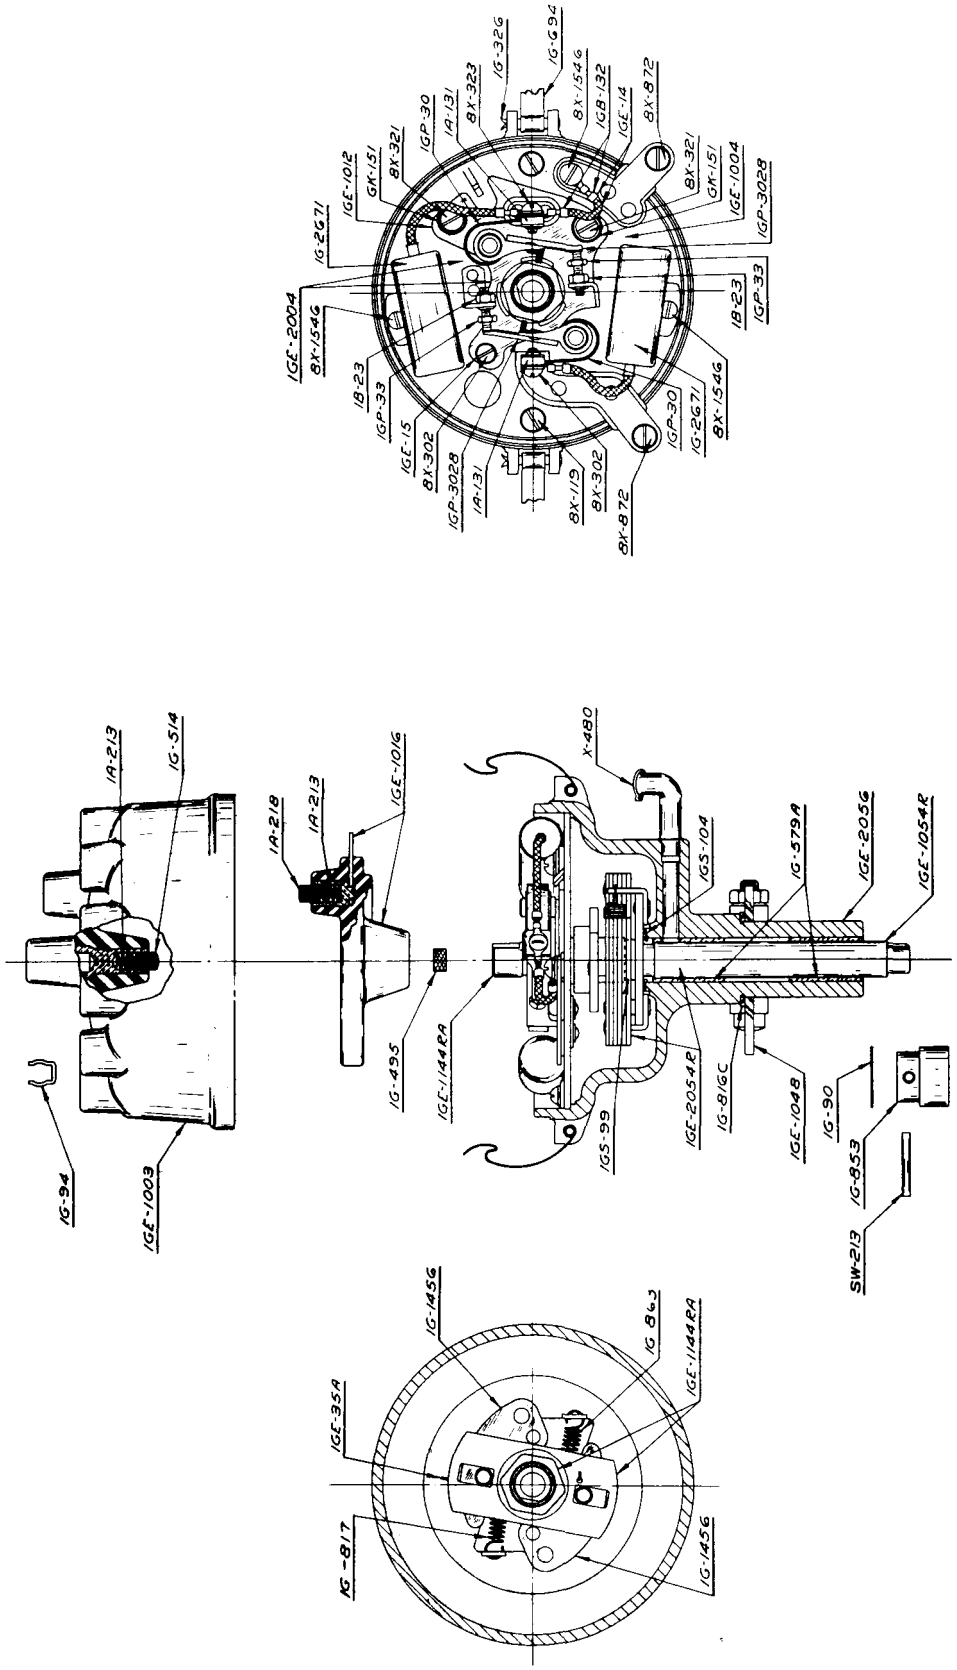

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-644	1	Coupling, Drive, Dist.
IG-816	1	Washer, Thrust, Advance Arm
IGC-2024N-11	1	Arm, Advance
IGE-36	1	Spring, Anti-Rattle, Gov.
IGE-1003L	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSY.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
*	1	Cam & Stop Plate, 6 Cyl., L.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate, Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub, Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
12X-194	4	Lockwasher, Condenser & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd. #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
12X-1012	2	Lockwasher, Condenser Mtg., #6
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Governor Weight
IG-2456	2	Weight, Governor
IGE-1020L	1	Shaft, Drive
IGE-2051	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
X-480	1	Oiler, Elbow, Press in, 1/4
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
SW-213	1	Rivet, Coupling, Drive Shaft
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
X-196	4	Lockwasher, Breaker Plate & Terminal Sc., #10
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4
		1 2 3 4 5

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov.	Cam	Spring Set
IGE-4028	IGE-2020LG	IGE-1067LF	IG-636RS
IGE-4028A	IGE-2020LH	IGE-1067LG	IGC-78S
IGE-4028B	IGE-2020LJ	IGE-1067LJ	IGB-345SS
IGE-4028C	IGE-2020LK	IGE-1067LC	IGB-328GS

UNIT	APPLICATION
IGE-4028,A,B,C	Continental

(Issued 4-26-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-94	14	Terminal, H.T. Wire
IG-313	1	Washer, Thrust, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IGE-35	1	Spring, Anti-Rattle, Gov.
IGE-1003L	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSY.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1067RD	1	Cam & Stop Plate, 6 Cyl., R.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub, Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
12X-194	4	Lockwasher, Condenser & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd. #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
12X-1012	2	Lockwasher, Condenser Mtg., #6
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGE-2063	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGE-69	1	Arm, Advance
X-61	4	Screw, Advance Arm, Flat Hd. #10-32x7/16
X-480	1	Oiler, Elbow, Press in, 1/4
IGE-2064R	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-343S	1	Spring Set, Gov. Weight
IGE-1064R	1	Shaft, Drive
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
X-196	4	Lockwasher, Breaker Plate & Terminal Sc., #10
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4
		1 2 3 4 5

UNIT	APPLICATION
IGE-4029	Hall Scott

(Issued 4-26-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4032 DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-816A	1	Washer, Thrust, Advance Arm
IGC-2024AU-3	1	Arm, Advance
IGE-72	1	Wick, Felt
IGE-1003	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSEMBLY
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1068RA	1	Shaft & Cam, 6 Cyl. R.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub, Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
12X-194	6	Lockwasher, Condenser Mtg. & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd., #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
IGE-2066	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
X-196	4	Lockwasher, Breaker Plate & Terminal Screw, #10
X-490A	1	Oiler
8X-872	2	Screw, Terminal, Fill. Hd., #10-32x1/4

UNIT	APPLICATION
IGE-4032	Buda

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IG-94	14	Terminal, H.T. Wire
IG-313	1	Washer, Thrust, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-913AS	1	Spring, Set, Gov. Weight
IGC-117	1	Cover, Terminal Slot
IGC-2168R	2	Weight, Governor
IGE-1460	1	Cam & Stop Plate, 6 Cyl., R.H.
IGE-35	1	Spring, Anti-Rattle, Gov.
IGE-1003LA	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	Rotor Assy.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1064RA	1	Shaft, Drive
IGE-2004A	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IB-23	2	Nut, Lock, Contact Screw
IG-3927C	2	Condenser
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate Breaker, Sub
IGP-3028BS	1	Contact Set, Breaker
IGS-89	1	Lead Assy.
12X-194	6	Lockwasher, Condenser Mtg. & Pri. Lead #6
8X-302	2	Screw, Cond. Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd. Hd. #10-32x5/16
8X-323	1	Screw, Pri., & Cond. Leads, Rd. Hd., #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg. #10
8X-1546	3	Screw, Pri. Lead & Cond. Mtg., Fill. Hd. #6-32x5/32

Part No.	No. Used	Name of Part
IGE-2070	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
IGE-69	1	Arm, Advance
IGE-71	1	Gasket
IGS-117	1	Oil Wick
X-61	4	Screw, Attaching, Advance Arm Flat Hd., #10-32x7/16
X-480	1	Oiler, Elbow, Press in, 1/4
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
8X-119	2	Screw, Breaker Plate, Fill. Hd. #10-32x1/2
12X-196	4	Lockwasher, Breaker Plate & Terminal Screw, #10
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4

UNIT	APPLICATION
IGE-4103	Hall Scott

(Issued 10-21-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4104 DISTRIBUTOR PARTS LIST

IGE-4104
(Issued 4-4-51)

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-264	3	Plug, Rubber, Vent. Hole
IGC-2155	1	Arm, Advance
IGC-2168R	2	Weight, Governor
IGE-24S	1	Spring Set, Gov. Weight
IGE-35	1	Spring, Anti-Rattle, Gov.
IGE-1003	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSY.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1042RA	1	Shaft, Drive
IGE-1067R	1	Cam & Stop Plate, 6 Cyl., R.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IAT-14	1	Lead Assy.
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub, Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
12X-194	6	Lockwasher, Condenser Mtg. & Condenser & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg. Rd. Hd. #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
IGE-2043	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
IGP-41	2	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGT-117	1	Wick, Felt
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
12X-196	4	Lockwasher, Breaker Plate & Terminal Screw, #10
X-480	1	Oiler
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4

UNIT	APPLICATION
IGE-4104	Oshkosh (Truck)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGE-4106 DISTRIBUTOR PARTS LIST

IGE-4106
(Issued 4-21-52)

Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	14	Terminal, H. T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-264	3	Plug, Rubber, Vent. Hole
IGC-2155	1	Arm, Advance
IGC-2168R	2	Weight, Governor
IGE-24S	1	SPRING SET, GOV. WEIGHT
IGE-35	1	Spring, Anti-Rattle
IGE-1003A	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1016	1	ROTOR ASSY.
IA-218	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGE-1042RA	1	Shaft, Drive
IGE-1067R	1	Cam & Stop Plate, 6 Cyl. R.H.
IGE-2004	1	Plate Assy., Breaker
GK-151	2	Washer, Plain, Sub Plate Mtg., #10
IA-131	2	Clip, Spring, Contact Arm
IAT-14	1	Lead Assy., Ground
IB-23	2	Nut, Lock, Contact Screw
IG-2671	2	CONDENSER
IGE-15	1	Washer, Plain, Sub Plate Mtg., #6
IGE-1004S	1	Plate, Breaker, Partial
IGE-1012S	1	Plate, Sub. Breaker
IGP-3028BS	1	CONTACT SET, BREAKER
12X-194	6	Lockwasher, Cond. Mtg., & Cond. & Pri. Lead, #6
8X-302	2	Screw, Condenser Lead & Sub Plate Mtg., Rd. Hd. #6-32x1/4
8X-321	2	Screw, Sub Plate Mtg., Rd Hd. #10-32x5/16
8X-323	1	Screw, Primary & Condenser Leads, Rd. Hd. #6-32x5/16
12X-537	2	Lockwasher, Sub Plate Mtg., #10
8X-1546	3	Screw, Pri. Lead & Condenser Mtg., Fill. Hd. #6-32x5/32
IGE-2043A	1	Base Assy., Dist.
IG-326	2	Pin, Hinge, Cap Spring
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
IGP-41	2	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGT-117	1	Wick, Felt
8X-119	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x1/2
12X-196	4	Lockwasher, Breaker Plate & Terminal Screw, #10
X-480	1	Oiler
8X-872	2	Screw, Terminal, Fill. Hd. #10-32x1/4

UNIT	APPLICATION
IGE-4106	Oshkosh

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGH-4015A, B,C DISTRIBUTOR PARTS LIST IGH-4015A, B,C

Part No.	No Used	Name of Part
		1 2 3 4 5
GE-12	1	Dist. Gear - Follower
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IG-1325	1	Distributor Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IG-1576	1	Rotor
IGB-162	1	Thrust Washer
*	1	Dist. Drive Rivet
IGB-1025C	1	Condenser Assembly
IGH-28	1	Cam Sleeve Felt Wick
*	1	Cam & Stop Plate - 8 cyl. 4 R.H.
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Springs
IG-1456	2	Weight Assembly
IGH-1026R	1	Drive Shaft Assy.
IGH-2027	1	Dist. Base Assy.
IG-352	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-374	2	3/32x1/4 Split Rivet
X-490	1	Press in - Sleeve Oiler
IGH-2831	1	Breaker Plate Assy.
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	2	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Screw Point
IG-1839	1	Breaker Point
IGP-3028	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Sc.
8X-305	2	#8-32x1/4 Rd. Hd. Sc.
8X-312	1	#10-32x1/4 Rd. Hd. Sc.
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
IGK-26	1	Washer - .020" Thick
X-196	4	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Screw
8X-888	1	#8-32x5/16 Fill. Hd. Screw
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5

(Issued 10-22-36)

Assembly No.	Drive Rivet	Cam & Stop Plate	Dr. Shaft & Gov.	Weight Spring	Weight Sp. Set
IGH-4015A	IGB-247	IGH-1011RA	IGH-2026R	IG-884	IG-884S
IGH-4015B	IGB-247	IGH-1011R	IGH-2026RA	IGE-24	IGE-24S
IGH-4015C	IG-86	IGH-1011R	IGH-2026R-1	IG-884	IG-884S

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGC-3028S breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be ass mbled as needed."

IGH-4015A-B-C DISTRIBUTOR ILLUSTRATION

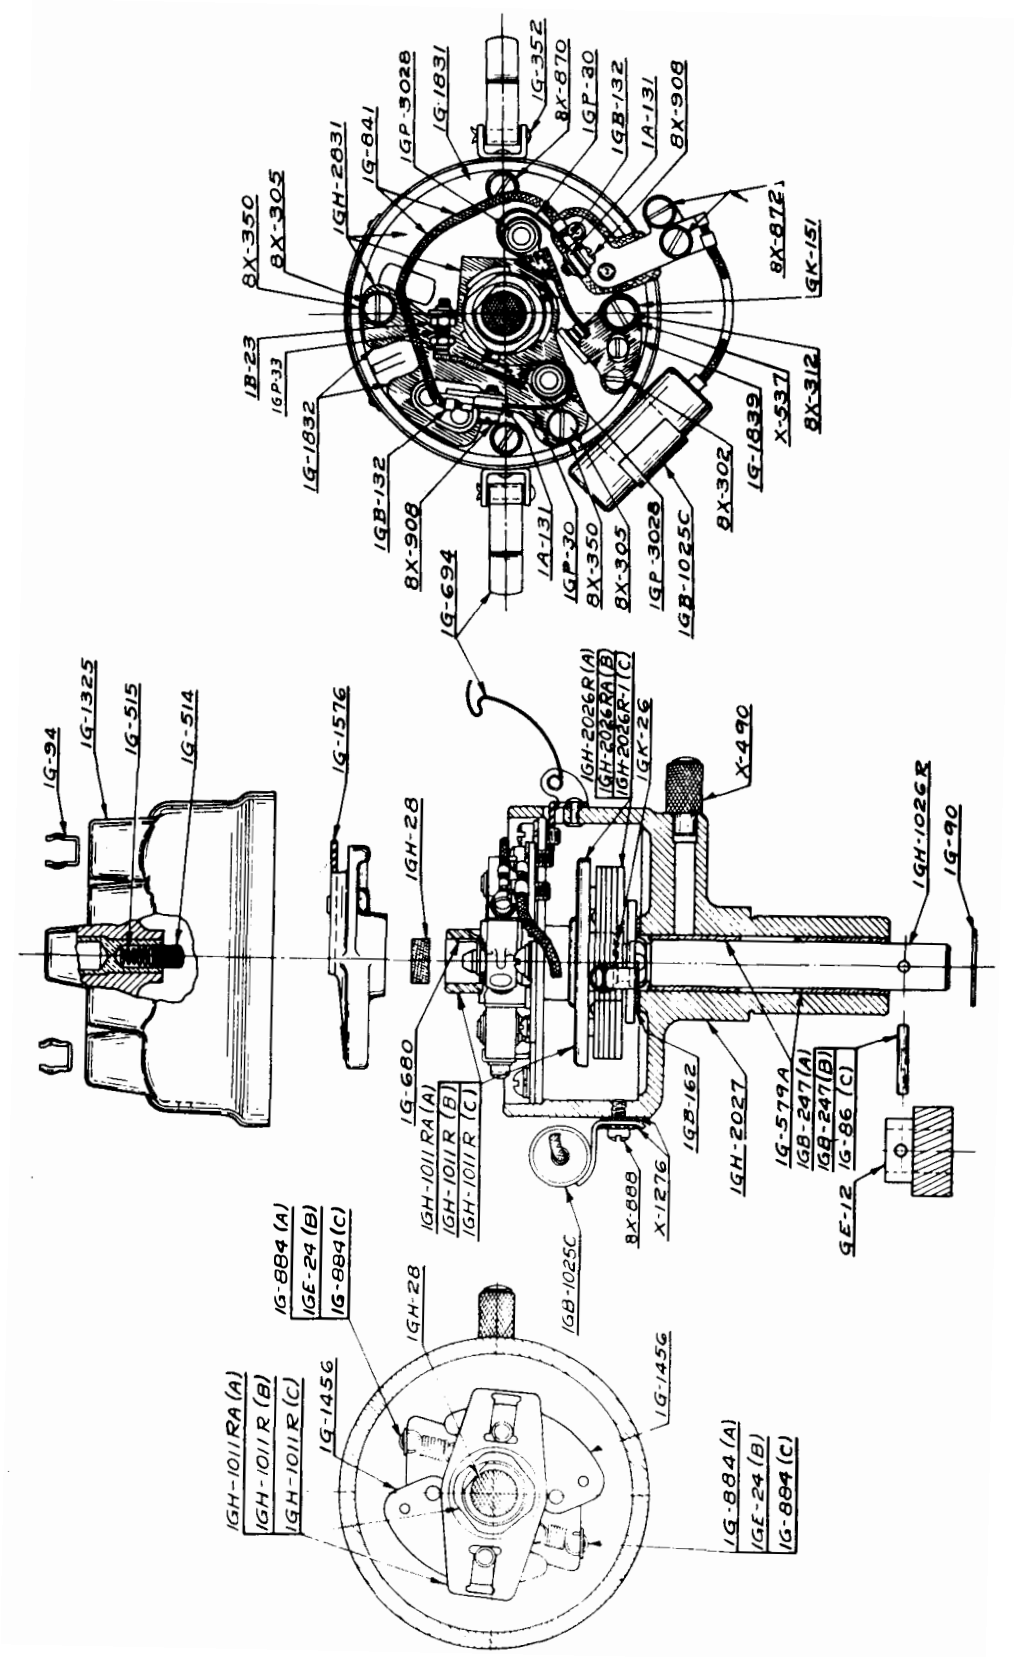

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IG-1325	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IG-1576	1	ROTOR
IGB-162	1	Thrust Washer
IGC-1025C	1	CONDENSER ASSEMBLY
IGC-1024L-5	1	Advance Control Arm
IGH-28	1	Cam Sleeve Felt Wick
IGH-1011LA	1	Cam & Stop Plate - 8 Cyl. 4 L.H.
IGH-2037	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-490	1	Press In-Sleeve Oiler
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGH-2038L	1	Drive Shaft & Gov. Assy.
IG-884S	1	Weight Spring Set
IG-2456	2	Weight Assembly
IGH-1038L	1	Drive Shaft Assembly
IGH-2831	1	Breaker Plate Assembly
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	2	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IG-1839†	1	Breaker Point
IGP-3028†	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Screw
X-1012	3	#6 Lock Washer
IGK-26	1	Washer - .020" Thick
X-196	4	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
8X-888	1	#8-32x5/16 Fill. Hd. Screw
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5

(Issued 7-3-41)

† SERVICE CONTACT SET IGC-3028S.

UNIT	APPLICATION
IGH-4016	Climax

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
GJ-306	1	Distributor Drive Rivet
*	1	DIST. GEAR - FOLLOWER
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Insulating Bushing
IG-1325	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IG-1576	1	ROTOR
IGB-162	1	Thrust Washer
IGB-1025C	1	CONDENSER ASSEMBLY
IGH-28	1	Cam Sleeve Felt Wick
*	1	Cam & Stop Plate - 8 Cyl. 4 - L.H.
*	1	Drive Shaft & Gov. Assembly
IG-2456	2	Weight Assembly
*	1	Weight Spring Set
IGH-1042L	1	Drive Shaft Assembly
IGH-2043	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-490	1	Press in - Sleeve Oiler
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGH-2831	1	Breaker Plate Assembly
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	2	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-1839‡	1	Breaker Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
IGK-26	1	Washer - .020" Thick
X-196	4	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Sc.
8X-888	1	#8-32x5/8 Fill. Hd. Screw
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5

(Issued 7-30-40)

‡ SERVICE BREAKER POINT SET IGC-3028S.


* See table following parts list for part number applying to assembly wanted.

Assembly No.	Gear - Follower	Cam Assembly	Dr. Shaft & Gov.	Spring Set
IGH-4019A	IB-168	IGH-1011L	IGH-2042L	IGB-178S
IGH-4019B	IB-168	IGH-1011LB	IGH-2042LA	IGC-78S
IGH-4019C	GAF-72	IGH-1011LB	IGH-2042LA	IGC-78S
IGH-4019D	GAF-73	IGH-1011LB	IGH-2042LA	IGC-78S

UNIT	APPLICATION
IGH-4019A,B,C,D	Universal

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGH-4019A,B,C,D DISTRIBUTOR ILLUSTRATION

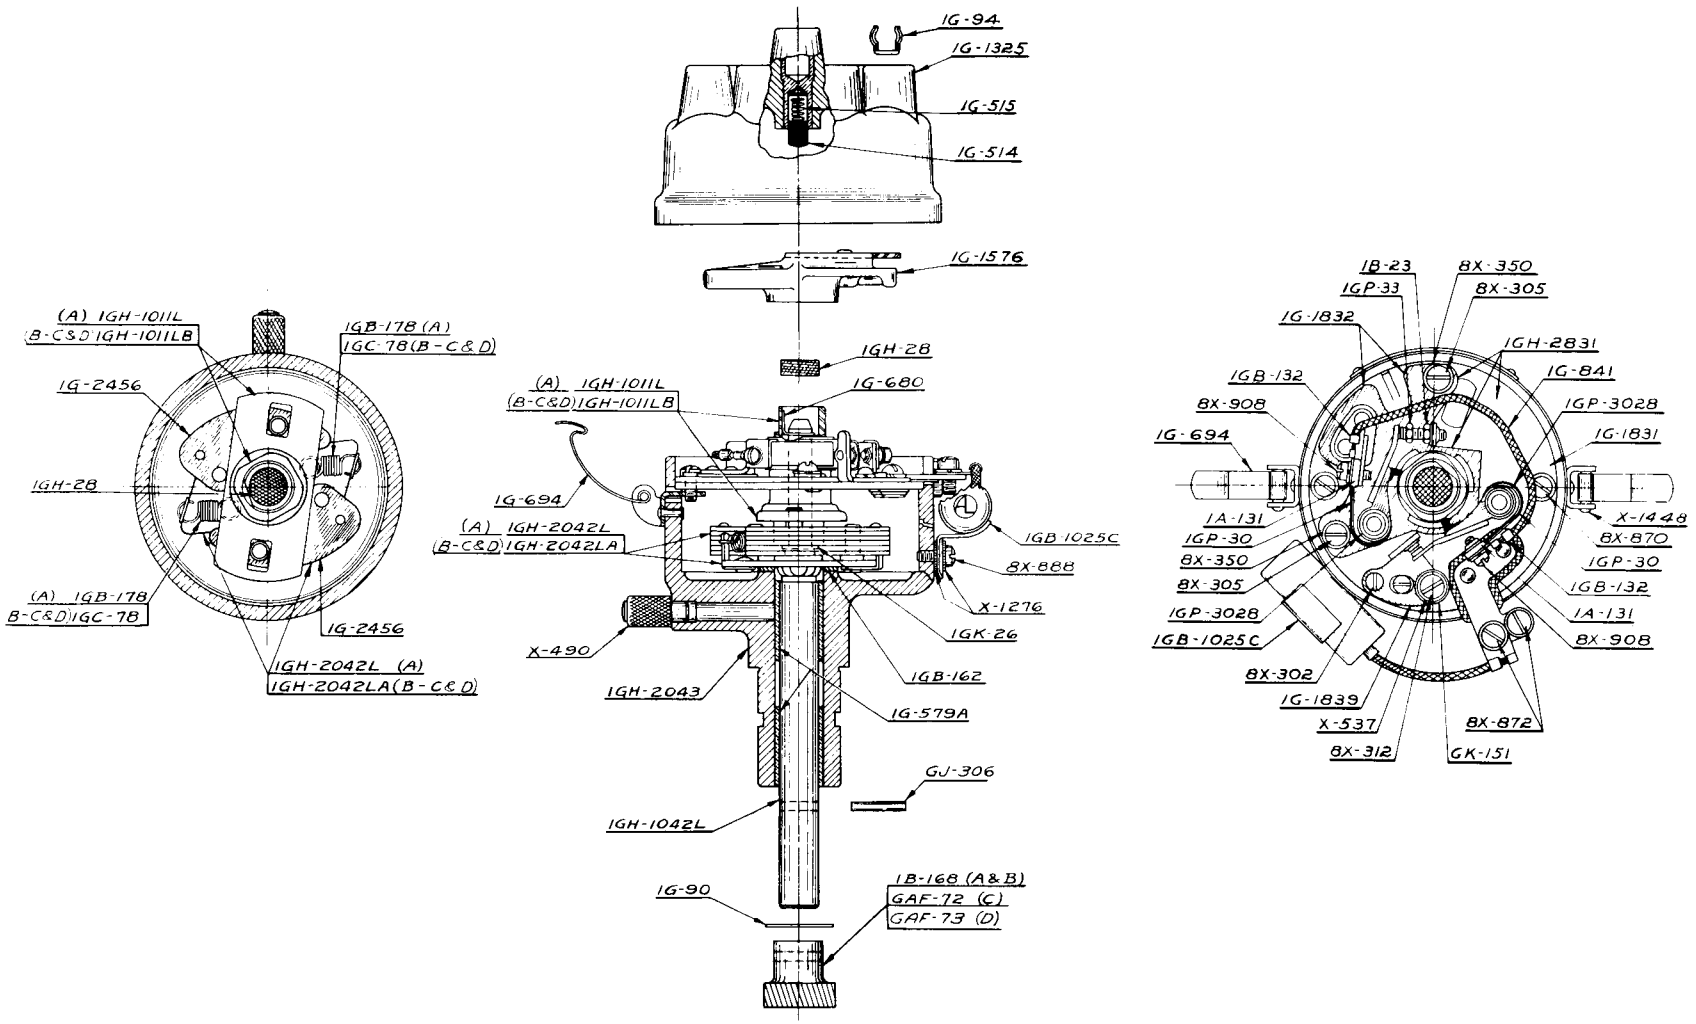

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGB-1025C	1	CONDENSER ASSEMBLY
IGH-28	1	Cam Sleeve Felt Wick
IGH-53	1	Drive Shaft Extension
IGH-54	1	Distributor Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGH-1011LE	1	Cam & Stop Plate - 8 Cyl. 4 L.H.
IGH-1060	1	Advance Control Arm
IGH-2051	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-380	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
*	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
*	1	Weight Spring Set
*	1	Drive Shaft Assembly
IGH-2831	1	Breaker Plate Assembly
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	2	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-1839‡	1	Breaker Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
IGK-26	1	Washer - .020" Thick
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	ROTOR
SW-213	1	Distributor Drive Rivet
X-196	4	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Sc.
8X-888	1	#8-32x5/8 Fill. Hd. Screw
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5

(Issued 7-30-40)

‡ SERVICE BREAKER POINT SET IGC-3028S.


* See table following parts list for part number applying to assembly wanted.

Assembly No.	Dr. Shaft & Gov.	Spring Set	Drive Shaft
IGH-4026	IGH-2052L	IGC-81SS	IGH-1052L
IGH-4026A	IGH-2052LA	IGB-277S	IGH-1052LA

UNIT	APPLICATION
IGH-4026,A	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGH-4026,A DISTRIBUTOR ILLUSTRATION

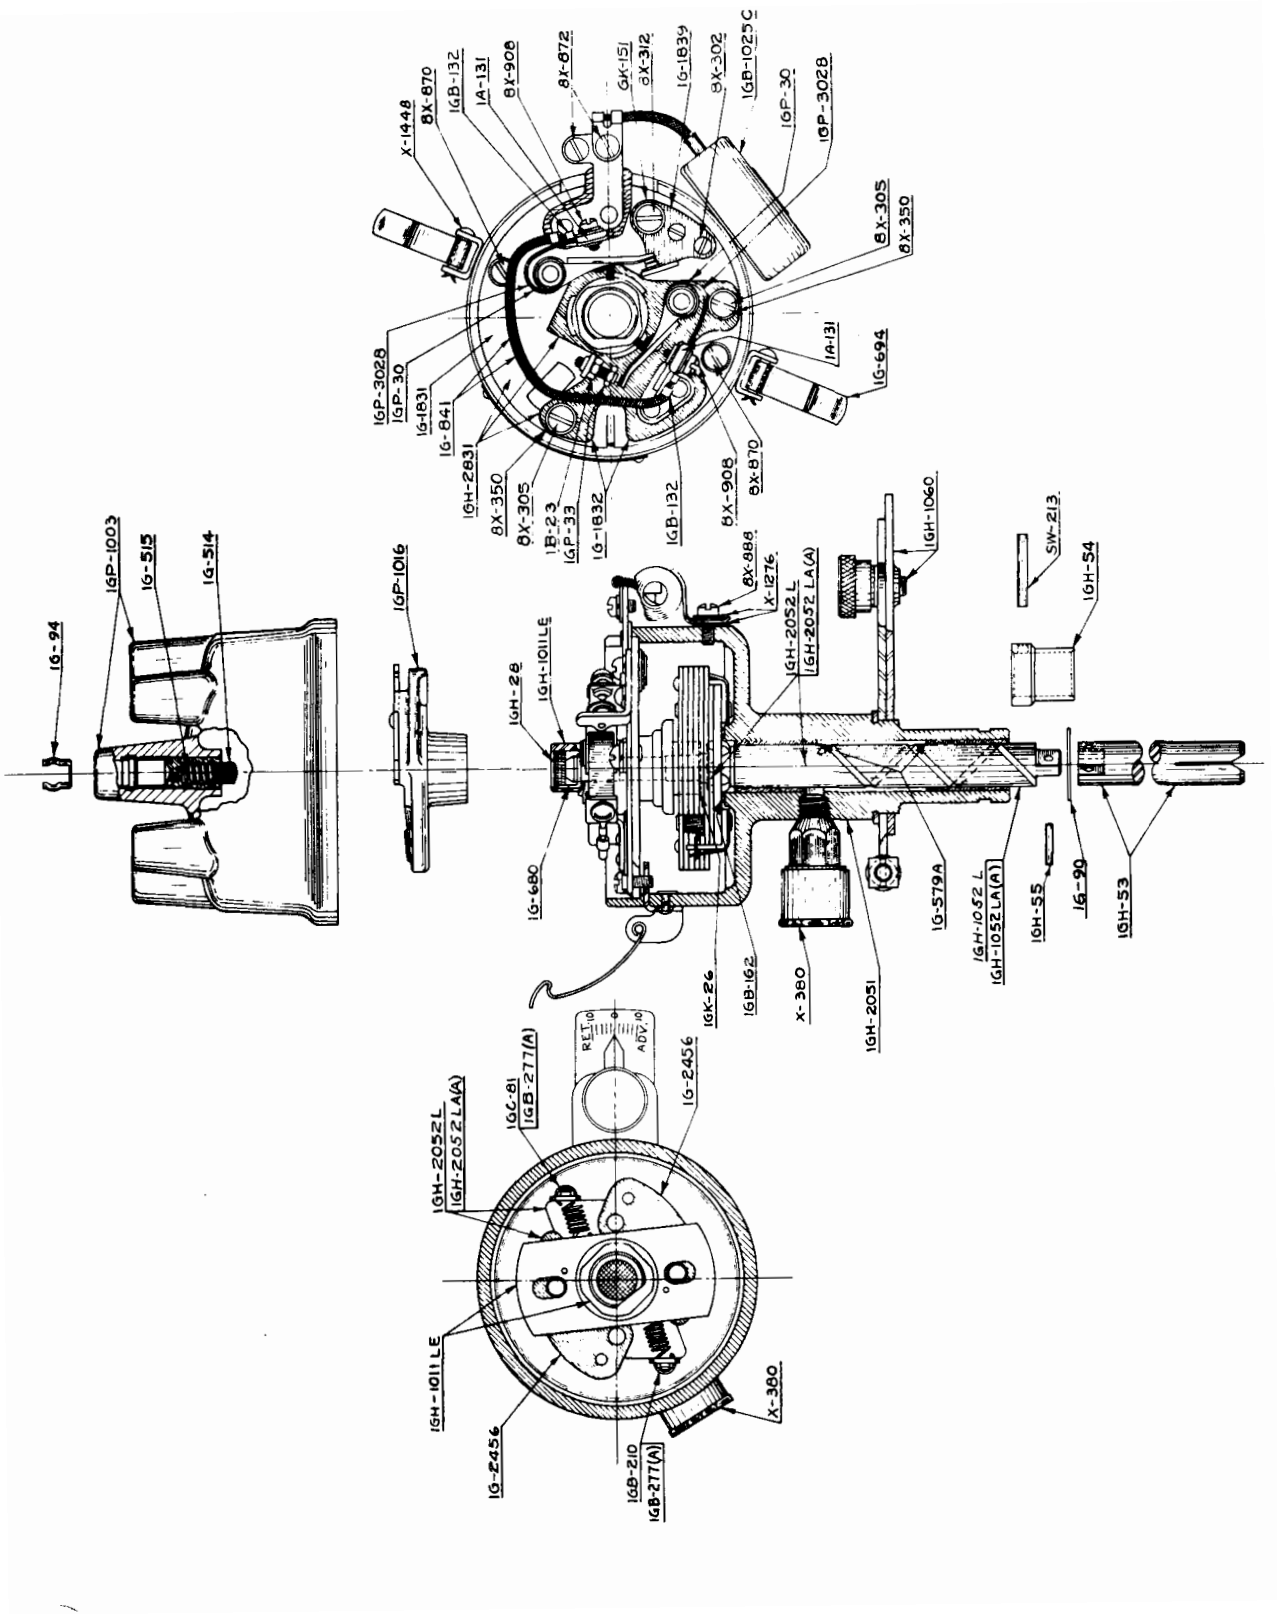

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IG-869	1	Governor Control Spring
IGB-162	1	Thrust Washer
IGB-1025C	1	Condenser Assembly
IGC-24N	1	Advance Control Arm
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	Dist. Cap Cover
IGH-36	1	Dist. Cap Nut
IGH-1011RG	1	Cam & Stop Plate - 8 cyl. 4 R.H.
IGH-1041	1	Rotor
IGH-1045A	1	Dist. Cap Assembly
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGH-2022A	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGP-34	1	Felt Wick
X-488	1	1/4 Oiler - Press in Elbow
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGH-2038RD	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
IGB-210‡	2	Weight Spring
IGH-1038R	1	Drive Shaft Assy.
IGH-2831	1	Breaker Plate Assy.
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	2	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IG-1839‡	1	Breaker Point
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
IGK-26	1	Washer - .020" Thick
SW-213	1	Dist. Drive Rivet
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-183	1	#10 Brass Washer
X-196	5	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
8X-888	1	#8-32x5/16 Fill. Hd. Screw
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5

(Issued 12-28-36)

‡ Service Breaker Point Set IGC-3028S & Service Weight Spring Set IGB-210S.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGH-4028 DISTRIBUTOR ILLUSTRATION

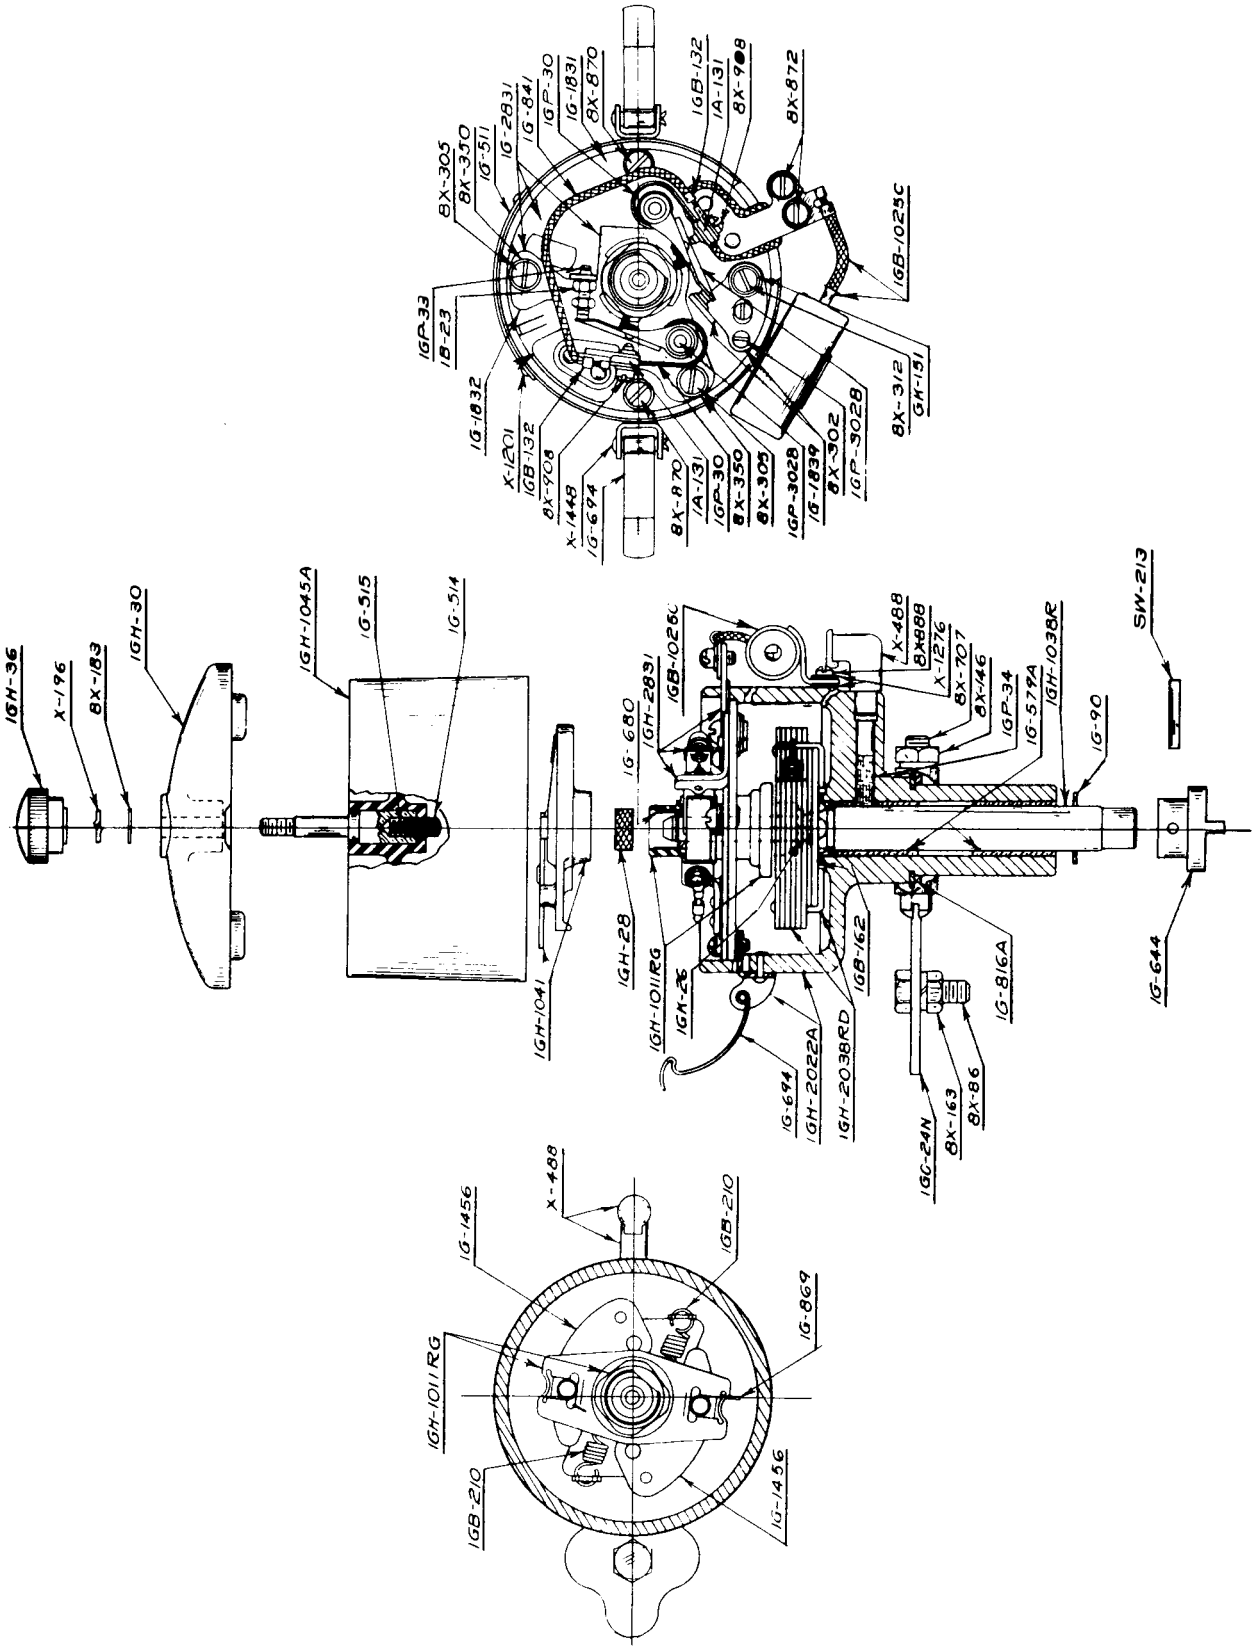

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-1025C	1	CONDENSER ASSEMBLY
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	DISTRIBUTOR CAP COVER
IGH-36	1	Distributor Cap Nut
IGH-68	1	Dist. Drive Coupling
IGH-1011RJ	1	Cam & Stop Plate - 8 cyl. 4 R.H.
IGH-1029	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGH-1041	1	ROTOR
IGH-2067	1	Distributor Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGH-2069R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-284S	1	Weight Spring Set
IGH-1069R	1	Drive Shaft Assy.
IGH-2831	1	Breaker Plate Assembly
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	2	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IG-1839†	1	Breaker Point
IGP-3028†	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Sc.
8X-305	2	#8-32x1/4 Rd. Hd. Sc.
8X-312	1	#10-32x1/4 Rd. Hd. Sc.
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
IGS-99	1	Washer
IGS-104	1	Thrust Washer
SW-213	1	Distributor Drive Rivet
8X-183	1	#10 Brass Washer
X-196	5	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Sc.
8X-888	1	#8-32x5/16 Fill. Hd. Sc.
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5


(Issued 6-25-40)


† Service BREAKER POINT SET IGC-3028S.


UNIT	APPLICATION
IGH-4029	Studebaker

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGH-4029 DISTRIBUTOR ILLUSTRATION

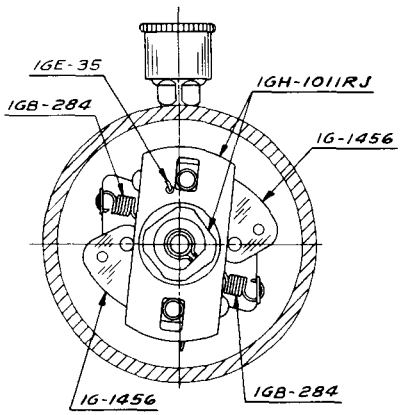

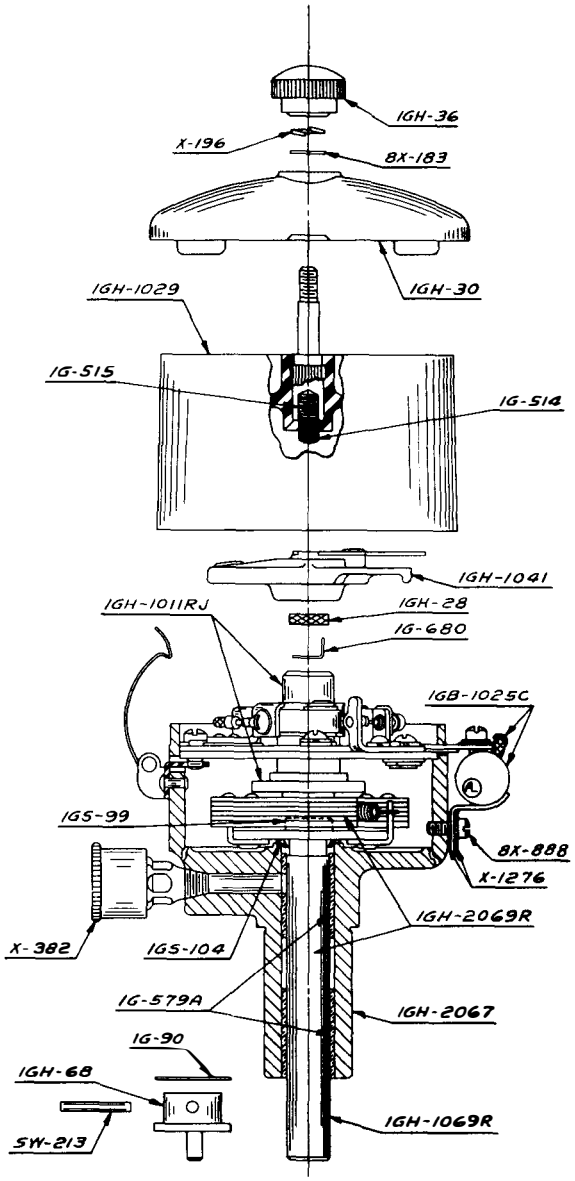

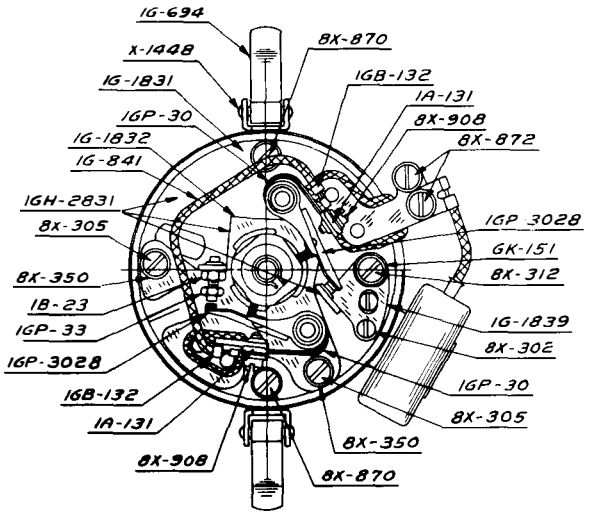

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
*	1	DIST. GEAR - Follower
IG-680	1	Lock Spring Ring
IG-816C	1	Thrust Washer
IG-1325	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IG-1576	1	ROTOR
IG-2860A-1	1	Advance Arm Assembly
IGB-1025C	1	CONDENSER
IGH-28	1	Cam Sleeve Felt Wick
IGH-1011LB	1	Cam & Stop Plate-8 Cyl. 4 L.H.
IGH-2022	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-490	1	Press In- Sleeve Oiler
X-1448	2	Hinge Pin
IGH-2070L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGC-78S	1	Weight Spring Set
IGH-1070L	1	Drive Shaft Assembly
IGH-2831	1	Breaker Plate Assembly
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-841	1	Primary Connector Assy.
IGB-132	1	Terminal
IG-1831	1	Breaker Plate Part Assy.
IG-1832	1	Breaker Sub-Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IG-1839‡	1	Breaker Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
		1 2 3 4 5
IGS-99	1	Washer
IGS-104	1	Thrust Washer
SW-213	1	Distributor Drive Rivet
X-196	4	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
8X-888	1	#8-32x5/16 Fill. Hd. Screw
X-1276	2	#8 Skpf. Washer
		1 2 3 4 5

(Issued 1-16-42)

* See table following parts list for part number applying to assembly wanted.

‡ SERVICE CONTACT SET IGC-3028S.

Assembly No.	Gear
IGH-4030A	IG-261
IGH-4030B	GK-36

UNIT	APPLICATION
IGH-4030A,B	Universal

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGE-35	1	Anti-Rattle Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	DISTRIBUTOR CAP COVER
IGH-36	1	Distributor Cap Nut
IGH-68	1	Dist. Drive Coupling
IGH-1011RJ	1	Cam & Stop Plate - 8 Cyl. 4 R.H.
IGH-1029	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGH-1041	1	ROTOR
IGH-2069R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-284S	1	Weight Spring Set
IGH-1069R	1	Drive Shaft Assembly
IGH-2071	1	Breaker Plate Assembly
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-1839†	1	Breaker Point
IGH-73	1	Lead Assembly
IGB-132	2	Terminal
IGH-1071	1	Breaker Plate Part Assy.
IGH-1072	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IGH-3076	1	CONDENSER ASSEMBLY
IGP-3028†	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-908	2	#6-32x1/4 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
IGH-2075	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	Grease Cup
X-1448	2	Hinge Pin
IGS-99	1	Washer
IGS-104	1	Thrust Washer
SW-213	1	Distributor Drive Rivet
8X-183A	1	#10 Plain Washer
X-196	4	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
X-1012	1	#6 Skpf. Washer
8X-1546	1	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 8-13-41)

† SERVICE CONTACT SET IGC-3028S.

UNIT	APPLICATION
IGH-4101	Studebaker

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the

Part No.	No. Used	Name of Part
		1 2 3 4 5
GK-151	2	Plain Steel Washer
IG-90	1	Thrust Washer
IG-94	18	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-853	1	Dist. Drive Sleeve
IGB-162	1	Thrust Washer
IGE-35	2	Governor Control Spring
IGE-1031	1	Hold Down Arm Assy.
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Screw
IGK-26	1	Washer - .020" Thick
IGK-1003	1	Dist. Cap Assembly
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGK-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
*	1	Cam & Stop Plate - 8 Cyl. R.H.
*	1	Dist. Base Assembly
IG-326	2	Hinge Pin
*	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGK-7	2	Dist. Cap Spring
X-488	1	Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
IGK-2004	1	Breaker Plate Assembly
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assembly
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGK-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGK-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Screw
X-1012	2	#6 Lock Washer
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IG-1456	2	Weight Assembly
IGK-1039R	1	Drive Shaft Assembly
SW-213	1	Dist. Drive Rivet
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
		1 2 3 4 5

(Issued 11-16-37)


Assembly No.	Dr. Shaft & Gov.	Dist. Base Assy.	Name Plate	Weight Spring	Weight Sp. Set	Cam & Stop Plate
IGK-4101	IGK-2039R	IGK-2001	IG-511	IG-817 (2)	IG-817S	IGK-1030R
IGK-4101A	IGK-2039RA	IGK-2001A	IG-511B	IGB-266 (2)	IGB-266S	IGK-1030RA
IGK-4101B	IGK-2039RB	IGK-2001B	IG-511A	IG-913 IGC-42 1 ea.	IGC-42AS	IGK-1030RB

* See table following parts list for part number applying to assembly wanted.

‡ Service Breaker Point Set IGP-3028BS.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGK-4101,A,B DISTRIBUTOR ILLUSTRATION

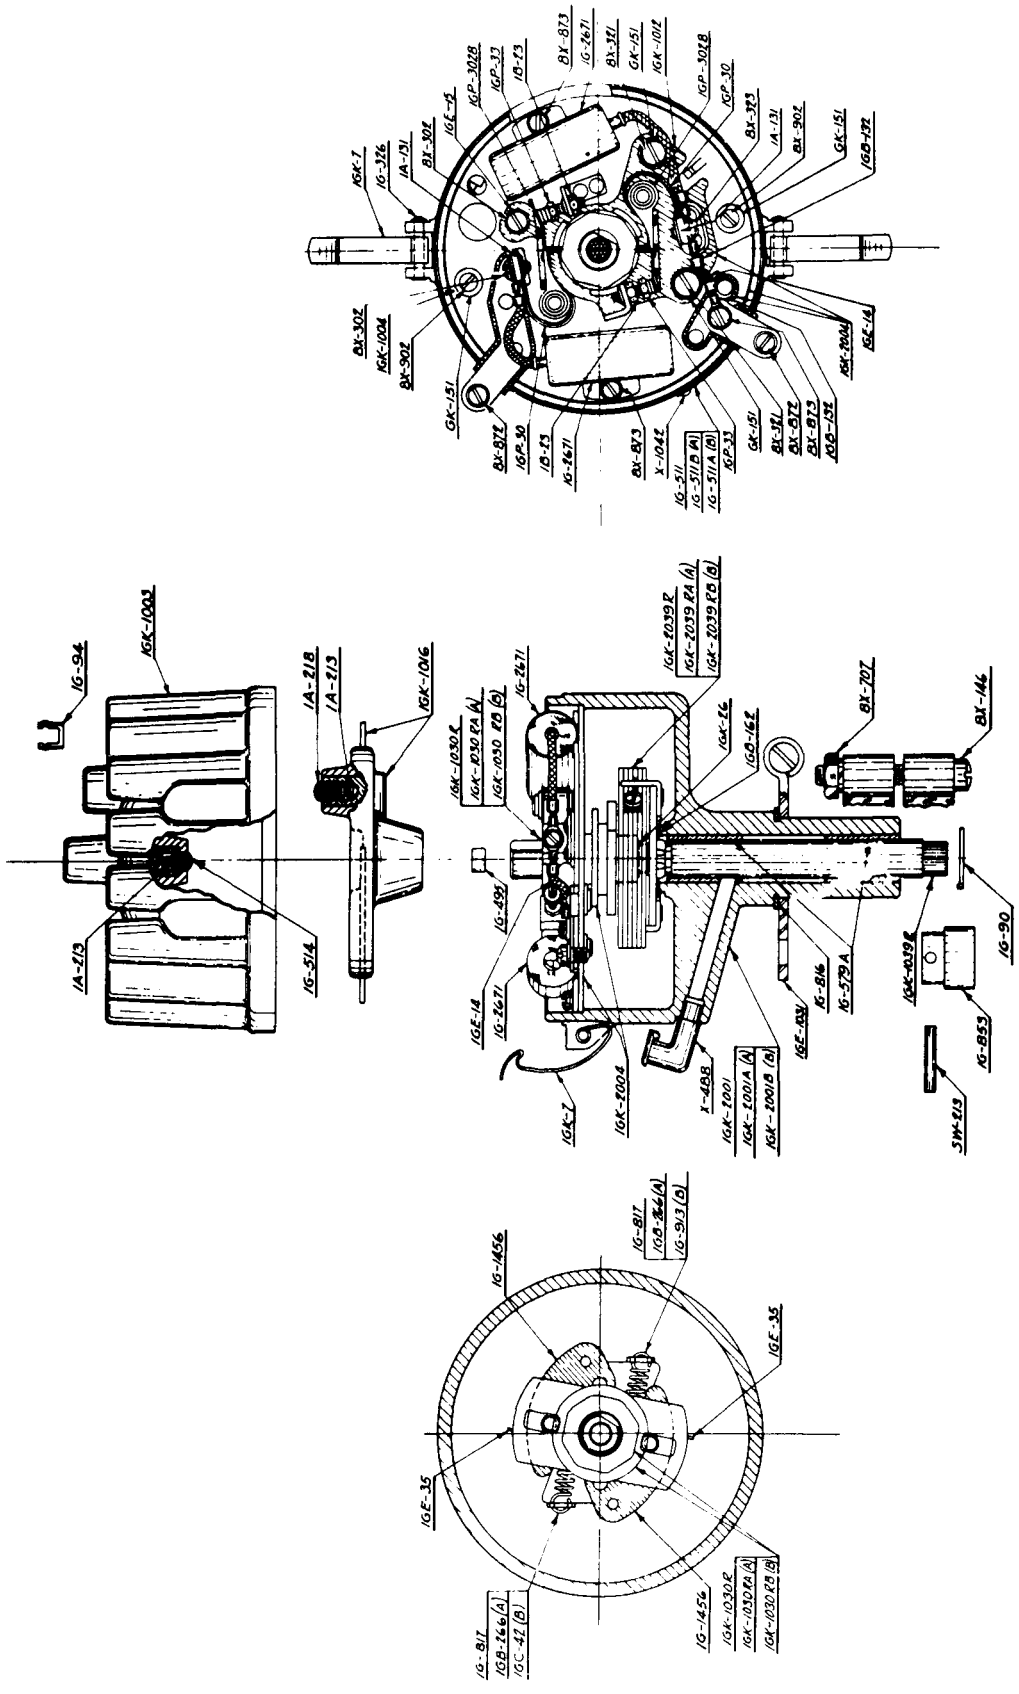

Part No.	No. Used	Name of Part
		1 2 3 4 5
GK-151	2	Plain Steel Washer
IG-90	1	Thrust Washer
IG-94	18	H.T. Wire Terminal
IG-495	1	Cam Sleeve Felt Wick
IG-816	1	Thrust Washer
IG-853	1	Dist. Drive Sleeve
IGB-162	1	Thrust Washer
IGE-35	2	Governor Control Spring
IGE-1046	1	Hold Down Arm Assy.
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill.Hd.Sc.
IGK-26	1	Washer - .020" Thick
IGK-1003	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGK-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGK-1030RB	1	Cam & Stop Plate - 8 Cyl.R.H.
IGK-2004	1	Breaker Plate Assy.
GK-151	2	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671	2	Condenser Assy.
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGE-15	1	#6 Plain Washer
IGK-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGK-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	4	#6 Lock Washer
8X-302	2	#6-32x1/4 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-537	2	#10 Lock Washer
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	2	#6 Lock Washer
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
IGK-2039RB	1	Drive Shaft & Gov. Assy.
IG-913‡	1	Weight Spring
IG-1456	2	Weight Assy.
IGC-42‡	1	Weight Spring
IGK-1039R	1	Drive Shaft Assy.
IGK-2040	1	Dist. Base Assy.
IG-326	2	Hinge Pin
IG-511A	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGK-7	2	Dist. Cap Spring
X-488	1	Oiler - Press in Elbow
X-1042	2	#13x3/16 Escutcheon Pin
SW-213	1	Distributor Drive Rivet
X-196	4	#10 Lock Washer
8X-872	2	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
		1 2 3 4 5


(Issued 10-18-37)


‡ Service Breaker Point Set IGP-3028BS & Service Weight Spring Set IGC-42AS.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGK-4102 DISTRIBUTOR ILLUSTRATION

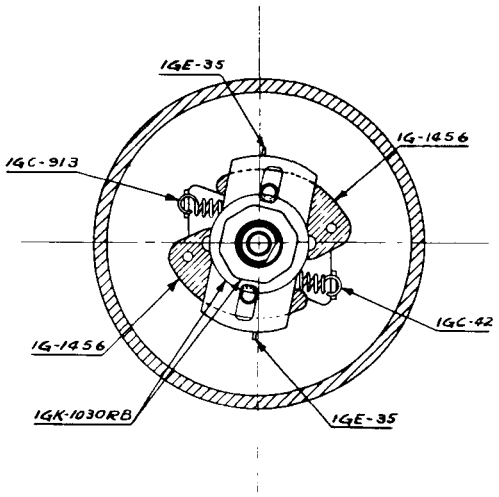

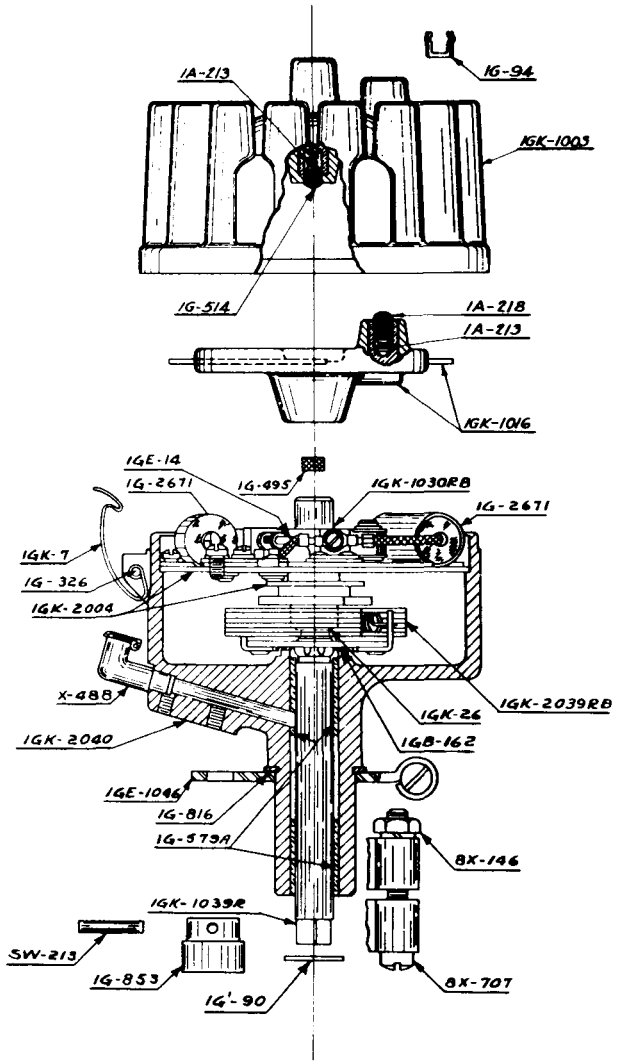

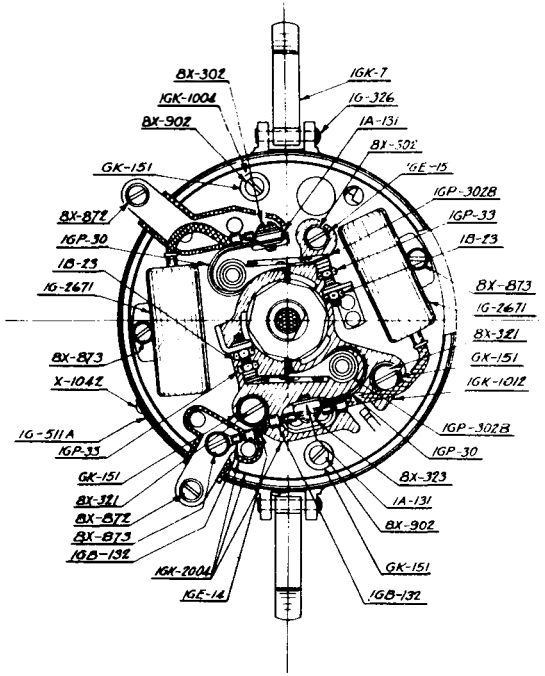

Part No.	No. Used	Name of Part 1 2 3 4 5
CA-35A	4	#10-32 Nut
DB-13	1	Flat Felt Guard
IG-313	1	Shaft Thrust Washer
IG-687	1	Spring Washer
IG-688D	3	Advance Control Washer
IGB-162	1	Thrust Washer
IGL-7	2	Terminal Insulation
IGL-8A	2	Terminal Post - #10-32
IGL-9	2	Insulating Washer
IGL-10	2	Insulating Bushing
IGL-38	1	Felt Washer
IGL-42A	1	Advance Control Screw
IGL-44	1	Distributor Drive Coupling
IGL-1028	1	Oiler Assy.
IGL-28	1	Oil Wick
X-475	1	3/8-24 Elbow Oiler
IGL-1035	1	Cam Lock Screw
IGM-22L	1	Breaker Cam - 12Cyl. 6 L.H.
IGM-26	1	Oil Wick
IGM-1016	1	Rotor Assy.
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
*	1	Breaker Cam Shaft Assy.
IGL-25	1	1/2 Spec. Lock Washer
IGL-26	1	1/2-20 Nut
*	1	Stop Plate
IGL-90	2	Spacing Washer
IGM-24	1	Breaker Cam Shaft
X-367	1	Ball Bearing
IGM-2001A	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGL-1020	2	Dist. Cap Spring & Bracket Assy.
IG-217	2	Dist. Cap Spring
IGL-20	2	Dist. Cap Spring Bracket
IGL-21	2	Hinge Pin
IGM-1027	1	Advance Control Arm
SA-31	1	Wick
X-61	4	#10-32x7/16 Flat Hd. Sc.
X-474	1	Oiler - Elbow
8X-908	4	#6-32x1/4 Fill. Hd. Sc.
X-1025	4	#6 Lock Washer
8X-1042	2	#13x3/16 Escutcheon Pin 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IG-2456	2	Weight Assy.
*	1	Drive Shaft Assy.
IGM-2004	1	Breaker Plate Assy.
GK-151A	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-1839A‡	1	Breaker Point
IG-2671A	1	Condenser Assy.
IG-2671E	1	Condenser Assy.
IGL-13	1	Primary Connector Assy.
IGB-132	1	Terminal
IGL-5	1	Terminal
IGL-14	1	Primary Connector Assy.
IGB-132	1	Terminal
IGL-6	1	Terminal
IGL-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGM-1004	1	Breaker Plate Part Assy.
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	2	#6 Lock Washer
X-195	3	#8 Lock Washer
8X-323	2	#6-32x5/16 Rd. Hd. Sc.
8X-350	3	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
8X-1348	1	#6-32x5/16 Fill. Hd. Sc.
8X-1349	3	#8-32x3/8 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
8X-119	2	#10-32x1/2 Fill. Hd. Screw
8X-163	2	1/4-20 Hex. Nut
8X-183	2	#10 Brass Washer
X-196	6	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-932	1	1/4-20x15/16 Hex. Hd. Screw 1 2 3 4 5

(Issued 11-21-38)

Assy. No.	Shaft & Gov. Assy.	Weight Spring	Weight Spr. Set
IGM-4003	IGM-2002LD	IGB-250	IGB-250S
IGM-4003A	IGM-2002LF	IG-727	IG-727S

Assy. No.	Drive Shaft Assy.	Cam Assy.	Stop Plate
IGM-4003	IGM-1002L	IGM-1024B	IGL-46B
IGM-4003A	IGM-1002LB	IGM-1024	IGL-46

‡ Service Breaker Point Set IGP-3028DS.


* See table following parts list for part number applying to assembly wanted.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGM-4003-A DISTRIBUTOR ILLUSTRATION

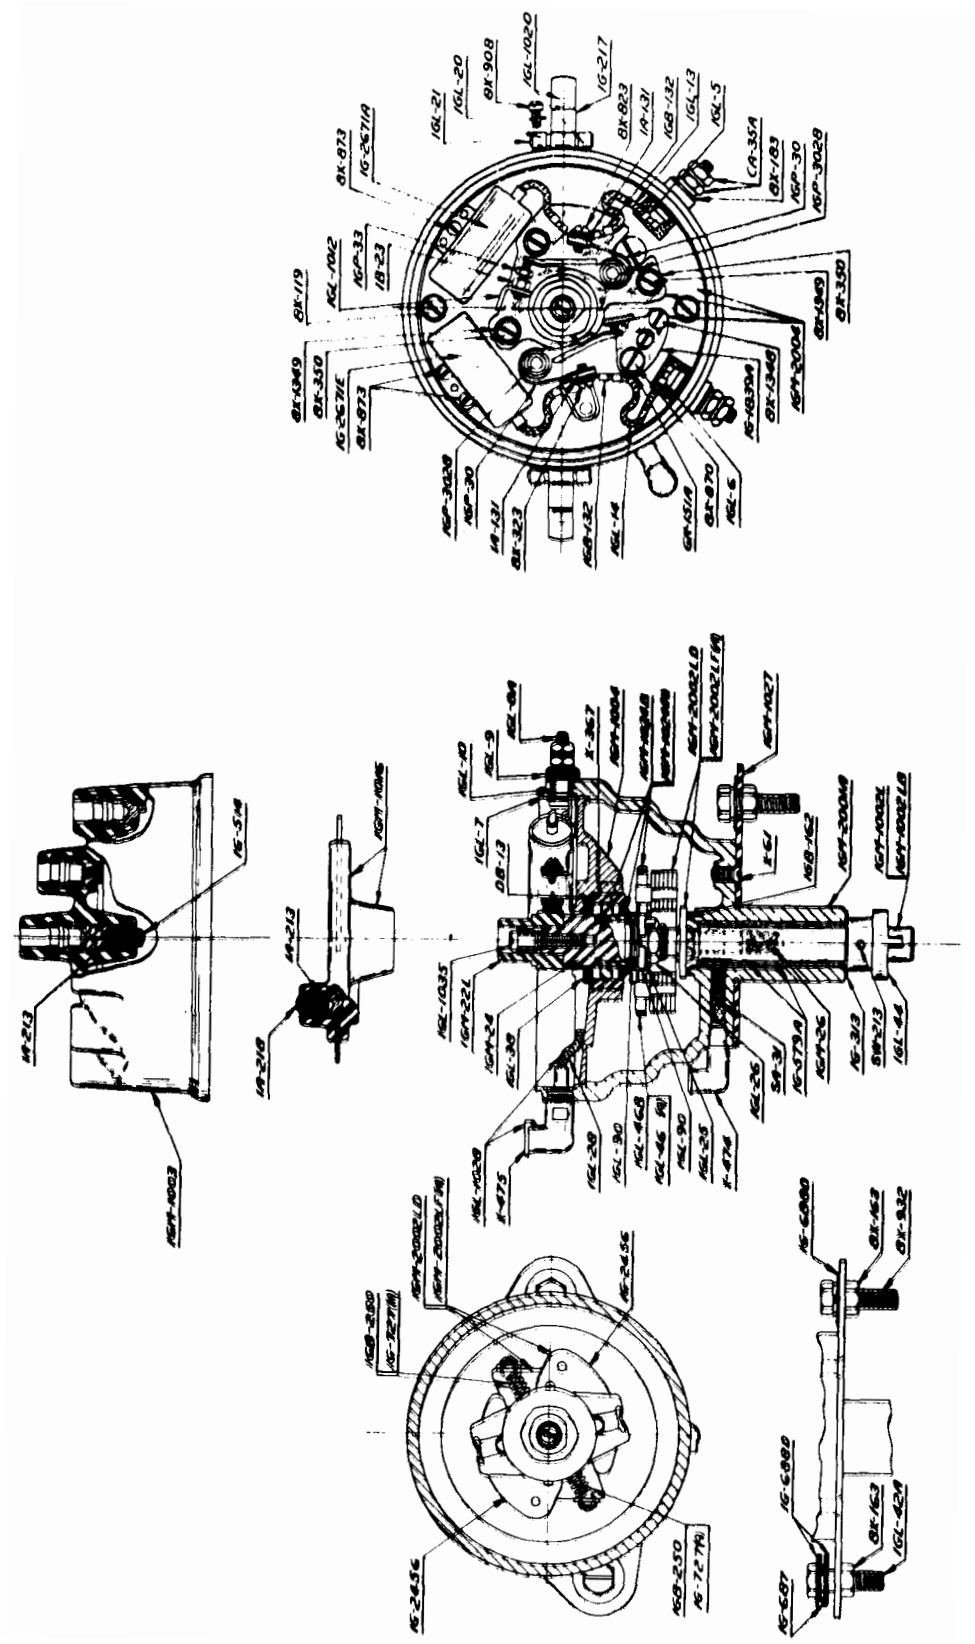

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGM-4005 DISTRIBUTOR PARTS LIST

IGM-4005

PRELIMINARY

Part No.	No. Used	Name of Part
		1 2 3 4 5
CA-35	4	#10-32 Hex. Nut
DB-13	1	Flat Felt Guard
IG-94	14	H. T. Wire Terminal
IG-313	2	Shaft Thrust Washer
IG-687	2	Spring Washer
IG-688D	4	Advance Control Washer
IGL-7	2	Terminal Insulation
IGL-8	2	Terminal Post - #10-32
IGL-9	2	Insulating Washer
IGL-10	2	Insulating Bushing
IGL-38	1	Felt Washer
IGL-42A	2	Advance Control Screw
IGL-1028	1	Oiler Assembly
IGL-28	1	Oil Wick
X-475	1	3/8-24 Elbow Oiler
IGL-1035	1	Cam Lock Screw
IGM-6	1	Drive Shaft Assembly
IGM-7	1	Spacer
IGM-22L	1	Breaker Cam - 12 Cyl. 6 L.H.
IGM-1003L	1	DISTRIBUTOR CAP ASSEMBLY
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGM-1016	1	ROTOR ASSEMBLY
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGM-1034A	1	Advance Control Arm
IGM-2004	1	Breaker Plate Assembly
GK-151A	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-1839A†	1	Breaker Point
IG-2671A	1	CONDENSER ASSEMBLY
IG-2671E	1	CONDENSER ASSEMBLY
IGL-13	1	Primary Connector Assy.
IGB-132	1	Terminal
IGL-5	1	Terminal
IGL-14	1	Primary Connector Assy.
IGB-132	1	Terminal
IGL-6	1	Terminal
IGL-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IGM-1004	1	Breaker Plate Part Assy.
IGP-3028†	2	Breaker Arm Assembly
IGP-30	2	Breaker Arm Spring
X-194	2	#6 Lock Washer
X-195	3	#8 Lock Washer
8X-323	2	#6-32x5/16 Rd. Hd. Screw
8X-350	3	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
8X-1348	1	#6-32x5/16 Fill. Hd. Sc.
8X-1349	3	#8-32x3/8 Fill. Hd. Sc.
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGM-2005	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGL-1020	2	Dist. Cap Spring & Bracket Assembly
IG-217	2	Dist. Cap Spring
IGL-20	2	Dist. Cap Spring Bracket
IGL-21	2	Hinge Pin
SA-31	1	Wick
X-474	1	Oiler - Elbow
8X-908	4	#6-32x1/4 Fill. Hd. Sc.
X-1025	4	#6 Lock Washer
8X-1042	2	#13x3/16 Escutcheon Pin
X-61	4	#10-32x7/16 Flat Hd. Screw
8X-119	2	#10-32x1/2 Fill. Hd. Screw
8X-163	2	1/4-20 Hex. Nut
8X-183A	2	#10 Plain Washer
X-196	6	#10 Lock Washer
X-367	1	Ball Bearing
		1 2 3 4 5

(Issued 7-3-41)

† SERVICE CONTACT SET IGP-3028DS.

UNIT	APPLICATION
IGM-4005	Auto Engine Works

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CA-35	4	#10-32 Nut
IG-313	1	Shaft Thrust Washer
IG-644	1	Dist. Drive Coupling
IGB-162	1	Thrust Washer
IGL-7	2	Terminal Insulation
IGL-8	2	Terminal Post - #10-32
IGL-9	2	Insulating Washer
IGL-10	2	Insulating Bushing
IGL-36	1	Dist. Cap Nut
IGL-40	2	#10-32 Nut
IGM-26	1	Oil Wick
IGO-37	1	Dist. Cap Cover
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGO-1002L	1	Drive Shaft Assy.
*	1	Governor Control Spring
IGO-1003	1	Dist. Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGO-1016	1	Rotor Assy.
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGO-1028	1	Oiler Assy.
IGO-28	1	Oil Wick
X-400	1	3/8 Elbow Oiler
IGO-1033	1	Breaker Cam Oiler
IGO-2001	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IGO-1020	2	Dist. Cap Spring & Bracket Assy.
IGO-20	2	Dist. Cap Spring Bracket
IGO-21	2	Hinge Pin
IGO-50	2	Dist. Cap Spring
SA-31	1	Felt Wick
X-474	1	1/4 Oiler - Press in Elbow
2X-908	4	#6-32x1/4 Fill. Hd. Screw
X-1025	4	#6 Lock Washer
2X-1042	2	#13x3/16 Escutcheon Pin
IGO-2004	1	Breaker Plate Assy.
GK-151A	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-2671A	1	Condenser Assy.
IG-2671E	1	Condenser Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGO-14	1	Primary Connector Assy.
IGB-132	1	Terminal
IGL-5	1	Terminal
IGO-15	1	Primary Connector Assy.
IGB-132	1	Terminal
IGL-6	1	Terminal
IGO-1004	1	Breaker Plate Part Assy.
IGO-1013	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGO-1034‡	1	Breaker Point
IGP-3028‡	2	Breaker Arm Assy.
IGP-30	2	Breaker Arm Spring
X-194	2	#6 Lock Washer
X-195	2	#8 Lock Washer
8X-323	2	#6-32x5/16 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-870	1	#10-32x5/16 Fill. Hd. Sc.
X-1012	3	#6 Lock Washer
8X-1349	2	#8-32x3/8 Fill. Hd. Sc.
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
*	1	Breaker Cam Shaft Assy.
DB-13	1	Flat Felt Guard
IGL-26	1	1/2-20 Nut
IGL-38	1	Felt Washer
IGL-90	1	Spacing Washer
*	1	Stop Plate
IGO-48	1	1/2 Special Lock Washer
IGO-1024L	1	Cam & Shaft
X-367	1	Ball Bearing
SW-213	1	Dist. Drive Rivet
8X-119	2	#10-32x1/2 Fill. Hd. Screw
2X-183	3	#10 Brass Washer
X-195	1	#8 Lock Washer
X-196	20	#10 Lock Washer
8X-350	1	#8 Plain Washer
2X-902	12	#10-32x3/8 Fill. Hd. Screw
X-1012	1	#6 Lock Washer
8X-1348	1	#6-32x5/16 Fill. Hd. Screw
8X-1349	1	#8-32x3/8 Fill. Hd. Screw
		1 2 3 4 5

‡ Service Breaker Point Set IGP-3028DS.

* See table following parts list for part number applying to assembly wanted.


Assembly No.	Dr. Shaft & Gov. Assy.	Cam Shaft Assy.	Stop Plate	Control Spring	Weight Assy.
IGO-4002	IGM-2002LA	IGO-2024L	IGO-47	None	IG-2456
IGO-4002A	IGO-2002LA	IGO-2024LB	IGO-47B	IGO-36	IG-2322

Assembly No.	Weight Spring	Weight Spr. Set
IGO-4002	IG-776	IG-776S
IGO-4002A	IG-775	IG-775S

(Issued 7-30-40)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGO-4002,A DISTRIBUTOR ILLUSTRATION

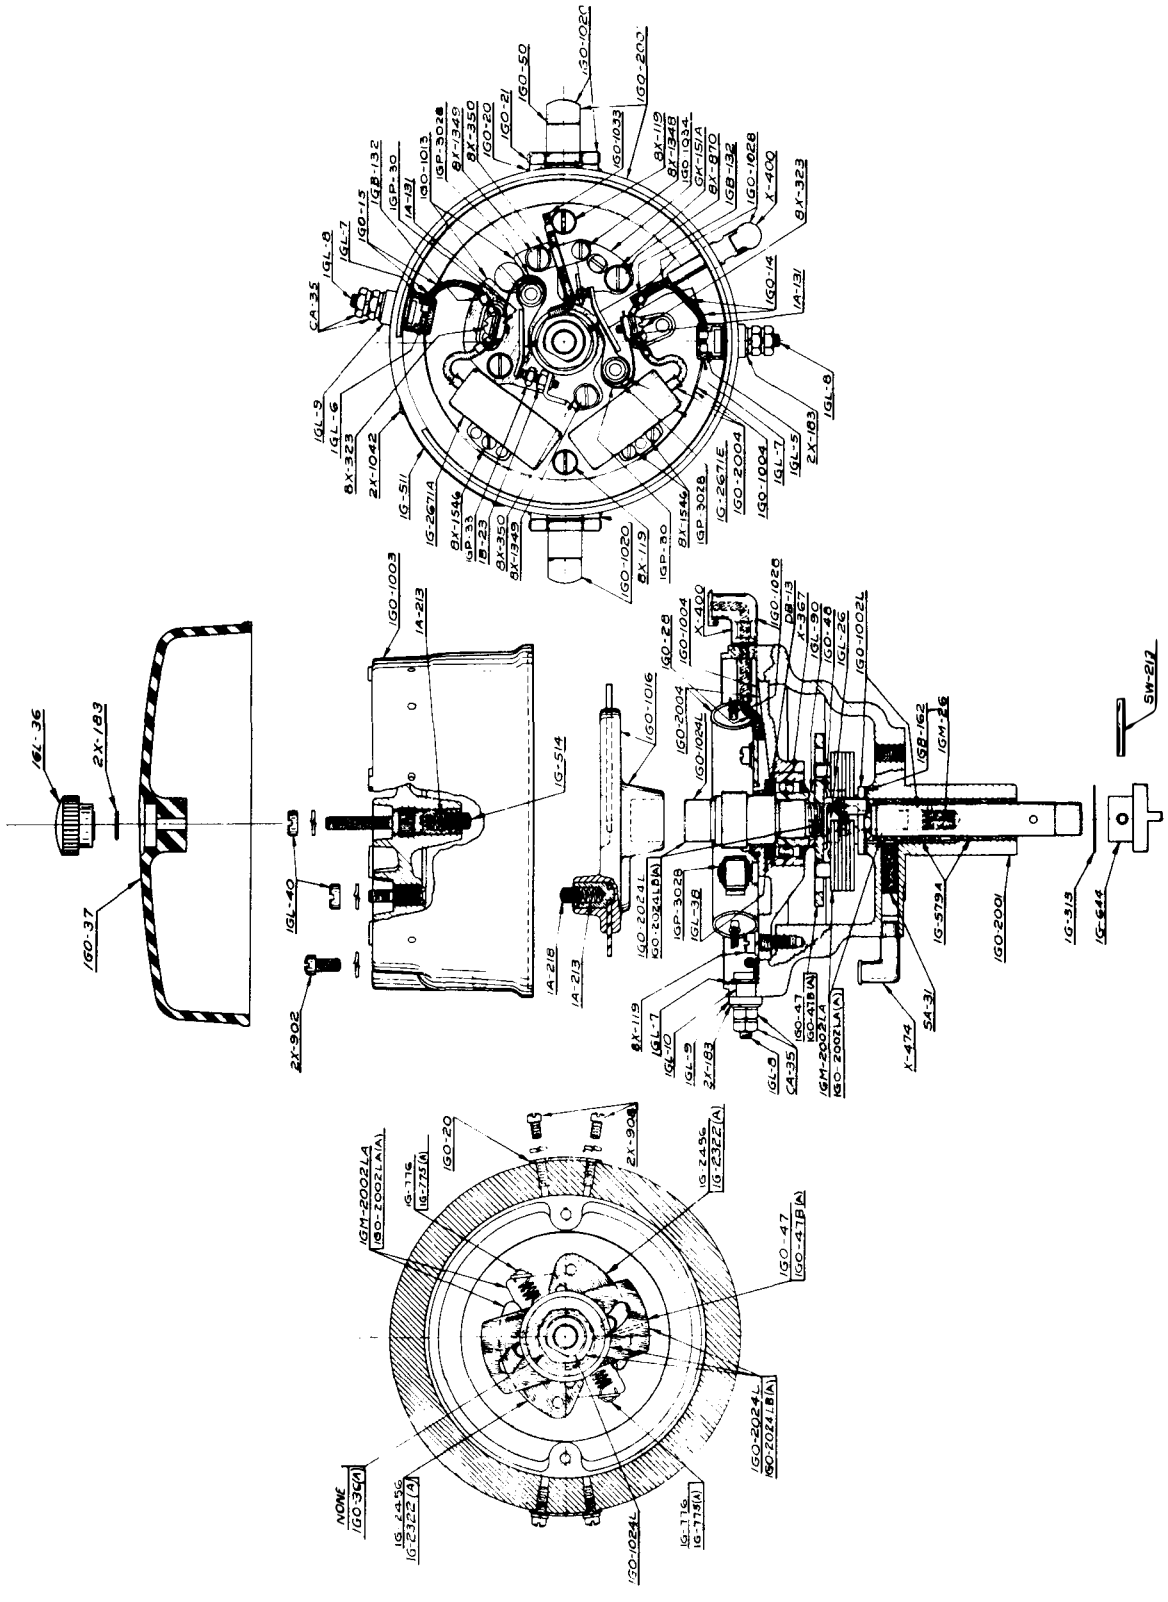

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-40	1	Dist. Gear - Follower
IA-278	9	Secondary Term. Rubber Cap
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IG-1325	1	Distributor Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IG-1576	1	Rotor
IGB-182	1	Thrust Washer
IGB-216	1	Advance Control Arm
IGH-28	1	Cam Sleeve Felt Wick
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IG-1456	2	Weight Assembly
*	1	Drive Shaft Assembly
IGK-26	1	Washer - .020" Thick
IGP-1023R	1	Cam & Stop Plate - 8 cyl. R. H.
IGP-2001	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-374	2	3/32x1/4 Split Rivet
X-488	1	1/4 Oiler - Press in Elbow
X-1448	2	Hinge Pin
IGP-2004A	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-2671	1	Condenser Assembly
IGP-1004A	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill. Hd. Sc.
X-1012	1	#6 Lock Washer
IGS-32	1	Rubber Plug
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
SW-213	1	Distributor Drive Rivet
SP-4009	1	Resistance Unit Assy.
8X-196	1	#10 Lock Washer
6X-321	1	#10-32x5/16 Rd. Hd. Sc.
X-196	4	#10 Lock Washer
6X-794	1	#10-32 Square Nut
6X-870	2	#10-32x5/16 Fill. Hd. Sc.
6X-872	2	#10-32x1/4 Fill. Hd. Sc.
6X-891	1	#10-32x1 1/2 Fill. Hd. Sc.
X-999	1	Terminal
		1 2 3 4 5

(Issued 7-10-35)
(R-3-24-37)


Assembly No.	Dr. Shaft & Gov.	Weight Spring	Dr. Shaft Assy.
IGP-4001A	IGH-2048R	IA-77 IG-796	IGH-1048R
IGP-4001B	IGH-2048RA	IGB-252	IGH-1048RA

* See table following parts list for part number applying to assembly wanted.

‡ Service Breaker Point Set IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4001A-B DISTRIBUTOR ILLUSTRATION

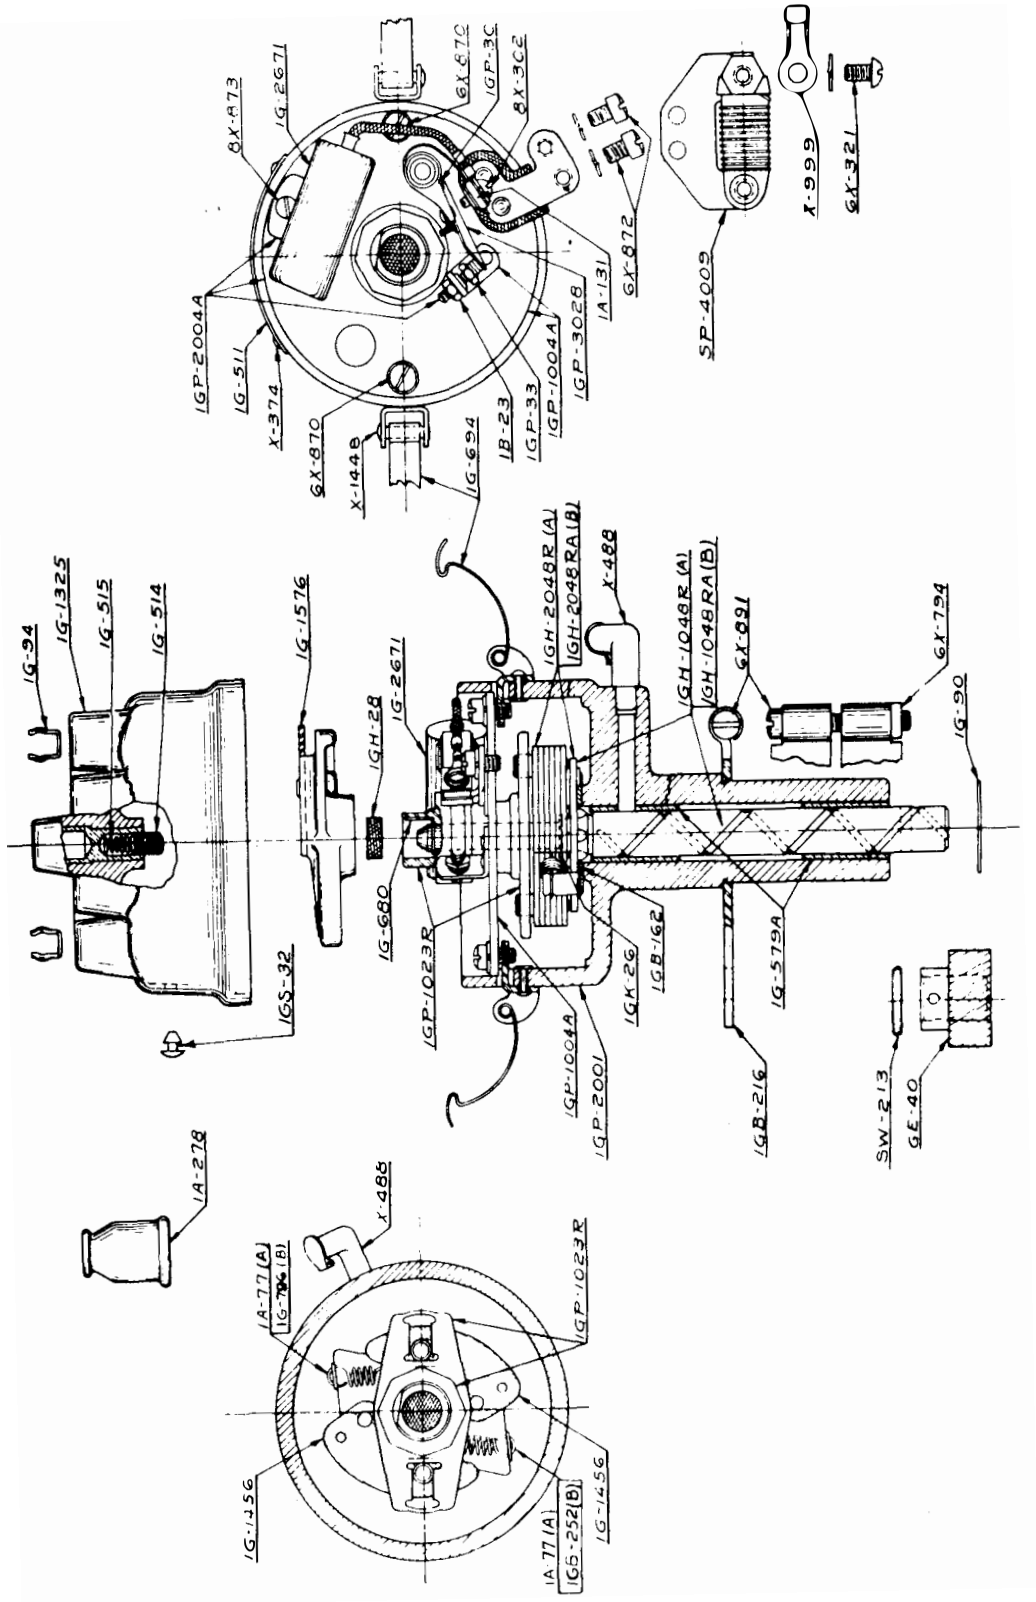

IGP-4002, A,B DISTRIBUTOR PARTS LIST IGP-4002, A,B

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IGB-162	1	Thrust Washer
IGB-247	1	Dist. Drive Rivet
IGC-24N	1	Advance Control Arm
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	Dist. Cap Cover
IGH-36	1	Dist. Cap Nut
IGH-1041	1	Rotor
IGH-1045	1	Distributor Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
*	2	Weight Assy.
IGH-1038LA	1	Drive Shaft Assy.
IGK-26	1	Washer - .020" Thick
*	1	Cam & Stop Plate - 8 cyl. L.H.
IGP-2004	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-2671	1	Condenser Assy.
IGP-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Point Screw
IGP-3028	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill. Hd. Screw
X-1012	1	#6 Lock Washer
*	1	Dist. Base Assembly
IG-352	2	Hinge Pin
*	1	Name Plate
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGP-34	1	Felt Wick
X-374	2	3/32x1/4 Split Rivet
X-488	1	1/4 Oiler-Press in Elbow
8X-86	1	1/4-20x5-8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-183	1	#10 Brass Washer
X-196	4	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
		1 2 3 4 5

(Issued 10-23-36)

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Sp. Set	Weight Assy.	Cam & Stop Plate	Dist. Base	Name Plate
IGP-4002	IGH-2038LA-1	IG-913	IG-913S	IG-2322	IGP-1023L	IGP-2035A	IG-511A
IGP-4002A	IGH-2038LC	IGB-252	IGB-252S	IG-2322	IGP-1023L	IGP-2035	IG-511
IGP-4002B	IGH-2038LD	IGB-210	IGB-210S	IG-2456	IGP-1023LA	IGP-2035	IG-511

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4002-A-B DISTRIBUTOR ILLUSTRATION

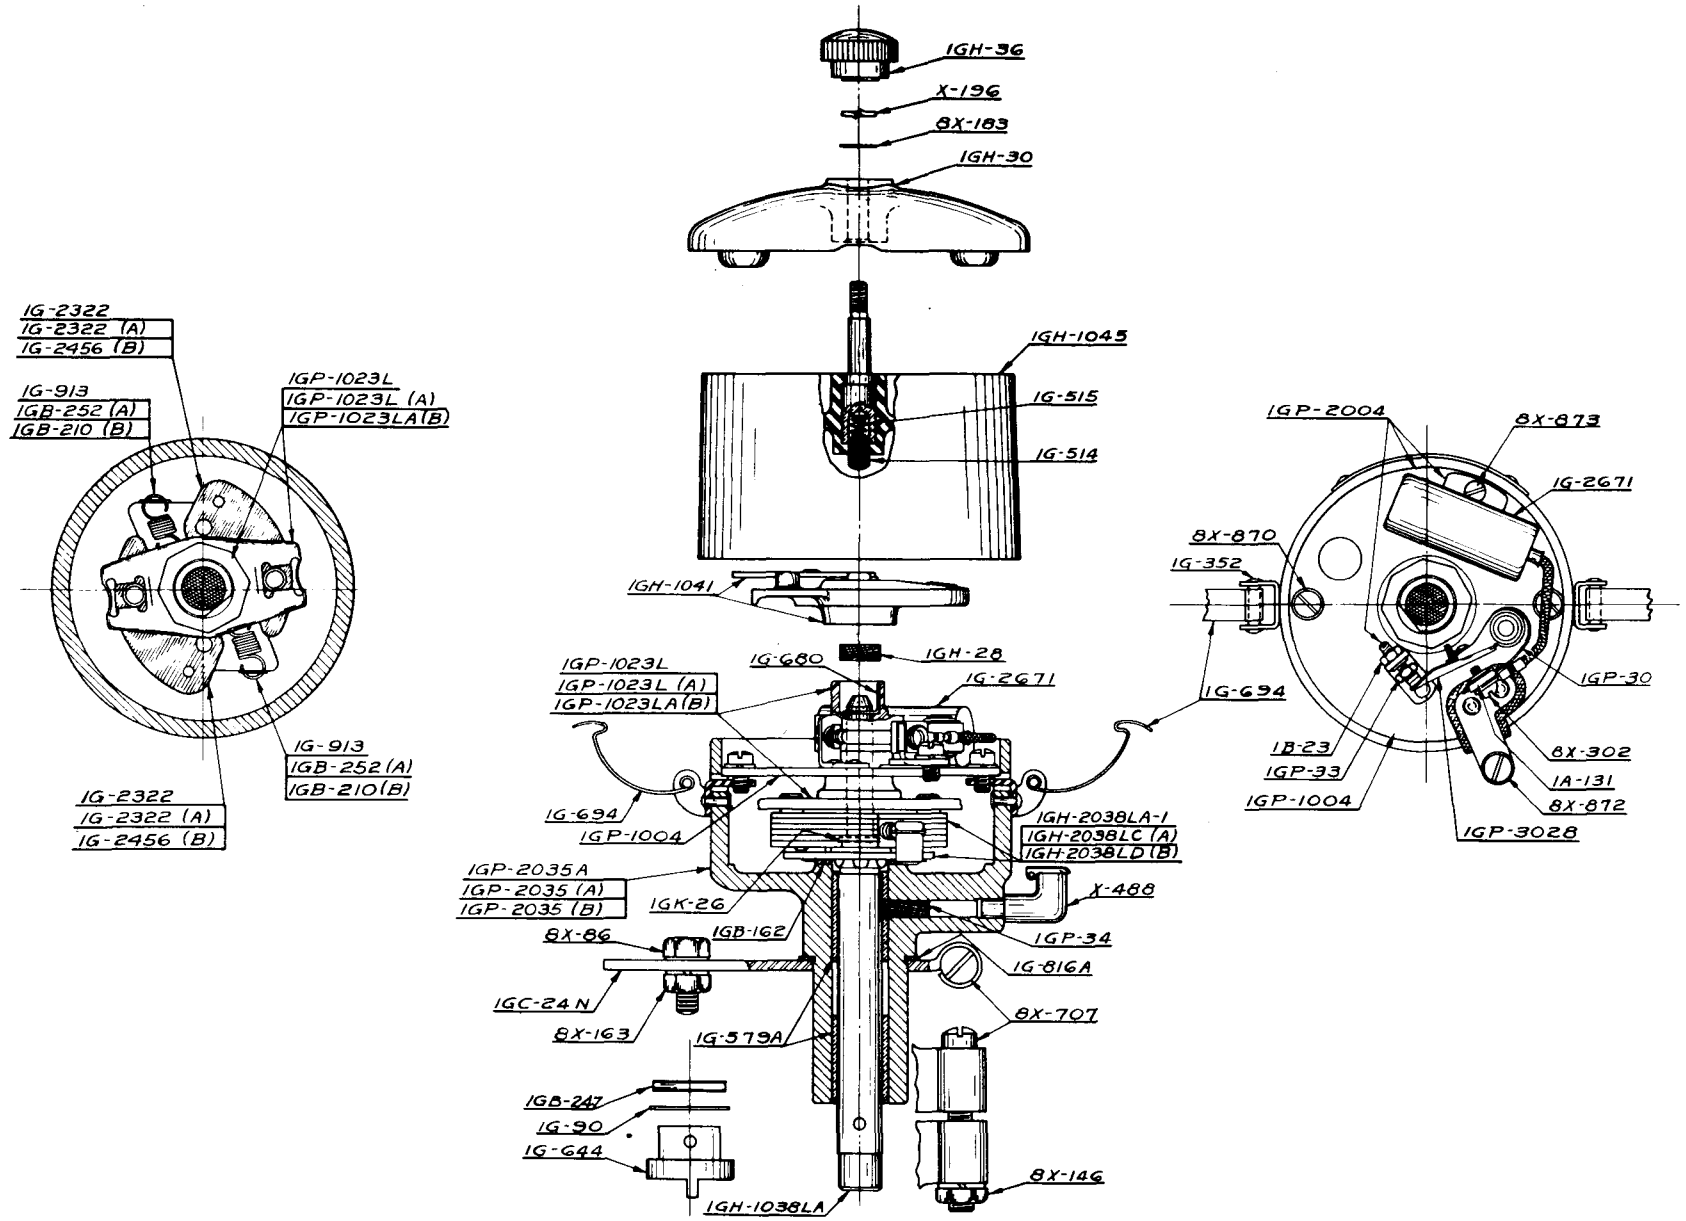

IGP-4003 DISTRIBUTOR PARTS LIST IGP-4003

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IGB-154A	1	Advance Control Arm
IGB-162	1	Thrust Washer
IGB-247	1	Dist. Drive Rivet
IGC-104	1	Advance Arm Pointer
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	Dist. Cap Cover
IGH-36	1	Dist. Cap Nut
IGH-1041	1	Rotor
IGH-1045	1	Dist. Cap Assembly
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGH-2038RB	1	Drive Shaft & Gov. Assy.
IG-884	2	Weight Spring
IG-1456	2	Weight Assembly
IGH-1038R	1	Drive Shaft Assy.
IGK-26	1	Washer - .020" Thick
IGP-1023RA	1	Cam & Stop Plate - 8 cyl. R.H.
IGP-2004	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-2671	1	Condenser Assembly
IGP-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Point Screw
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill. Hd. Sc.
X-1012	1	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGP-2039	1	Dist. Base Assembly
IG-352	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGP-34	1	Felt Wick
X-374	2	3/32x1/4 Split Rivet
X-490	1	Press in - Sleeve Oiler
6X-183	1	#10 Brass Washer
X-196	3	#10 Lock Washer
6X-794	1	#10-32 Square Nut
6X-870	2	#10-32x5/16 Fill. Hd. Screw
6X-872	1	#10-32x1/4 Fill. Hd. Screw
6X-891	1	#10-32x1 1/2 Fill. Hd. Sc.
		1 2 3 4 5


(Issued 9-26-34)
(R-8-7-36)

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4003 DISTRIBUTOR ILLUSTRATION

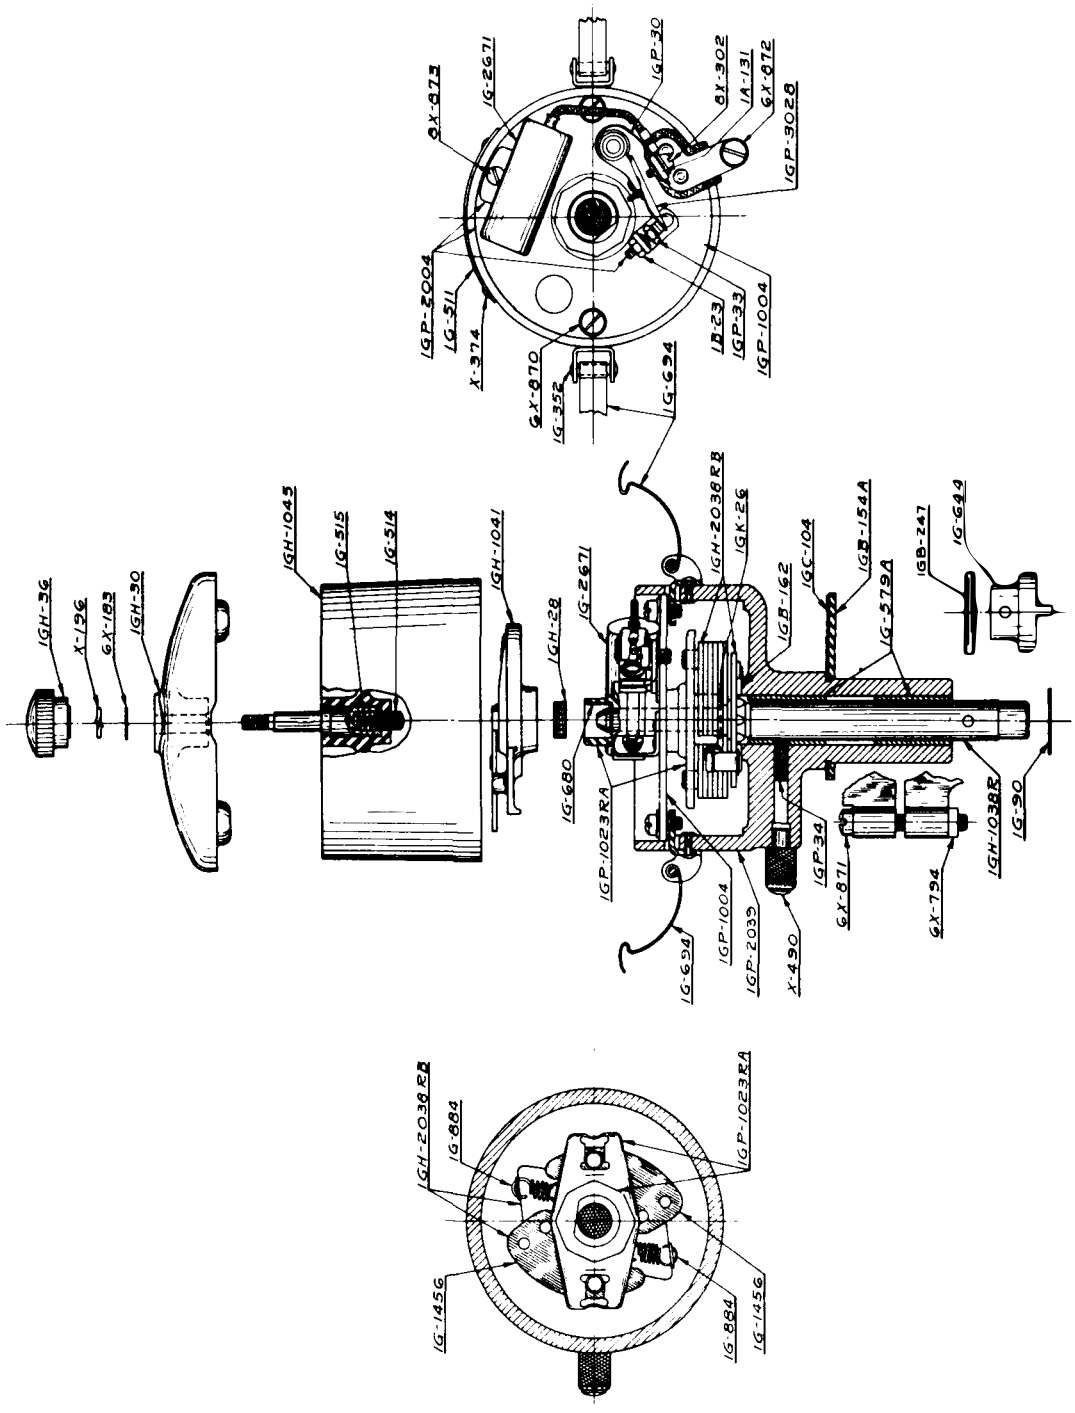


Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IGB-162	1	Thrust Washer
IGB-247	1	Dist. Drive Rivet
IGC-24N	1	Advance Control Arm
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	Dist. Cap Cover
IGH-36	1	Dist. Cap Nut
IGH-1041	1	Rotor
IGH-1063	1	Dist. Cap Assembly
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGH-2038RC	1	Drive Shaft & Gov. Assy.
IG-913	2	Weight Spring
IG-1322	2	Weight Assembly
IGH-1038R	1	Drive Shaft Assy.
IGK-26	1	Washer - .020" Thick
IGP-1023RB	1	Cam & Stop Plate - 8 cyl. R.H.
IGP-2004	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-2671	1	Condenser Assy.
IGP-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33	1	Breaker Point Screw
IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill. Hd. Sc.
X-1012	1	#6 Lock Washer
IGP-2035	1	Dist. Base Assembly
IG-352	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGP-34	1	Felt Wick
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
X-374	2	3/32x1/4 Split Rivet
X-488	1	1/4 Oiler - Press in Elbow
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
8X-183	1	#10 Brass Washer
X-196	4	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
		1 2 3 4 5


(Issued 11-5-35)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4006 DISTRIBUTOR ILLUSTRATION

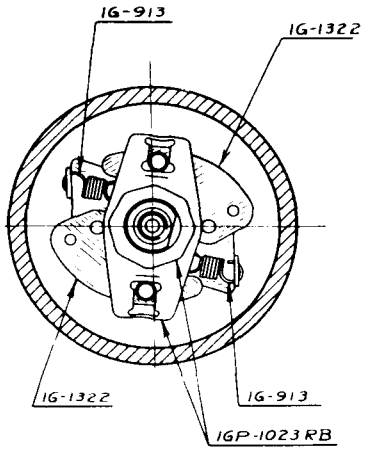

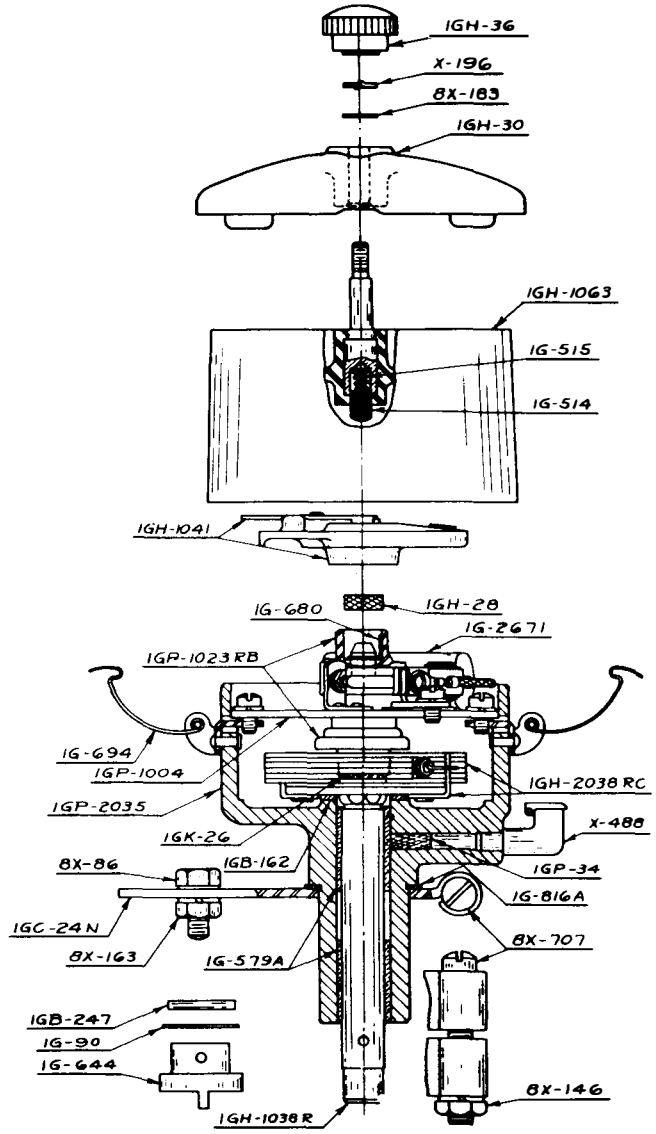

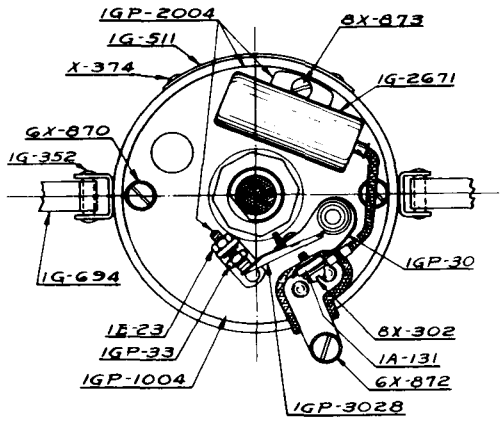

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H.T. Wire Terminal
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IGB-162	1	Thrust Washer
IGC-24N	1	Advance Control Arm
IGH-28	1	Cam Sleeve Felt Wick
IGH-2026RA	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
IGE-24‡	2	Weight Spring
IGH-1026R	1	Drive Shaft Assy.
IGK-26	1	Washer - .020" Thick
IGP-1003	1	Dist. Cap Assembly
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	Rotor
IGP-1023RC	1	Cam & Stop Plate - 8 Cyl. R.H.
IGP-2004	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-2671	1	Condenser Assembly
IGP-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill. Hd. Sc.
X-1012	1	#6 Lock Washer
IGP-2035	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGP-34	1	Felt Wick
X-374	2	3/32x1/4 Split Rivet
X-488	1	1/4 Oiler - Press in Elbow
X-1448	2	Hinge Pin
		1 2 3 4 5


Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
X-196	3	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 6-18-37)

‡ Service Weight Spring Set IGE-24S & Service Breaker Point Set IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4007 DISTRIBUTOR ILLUSTRATION

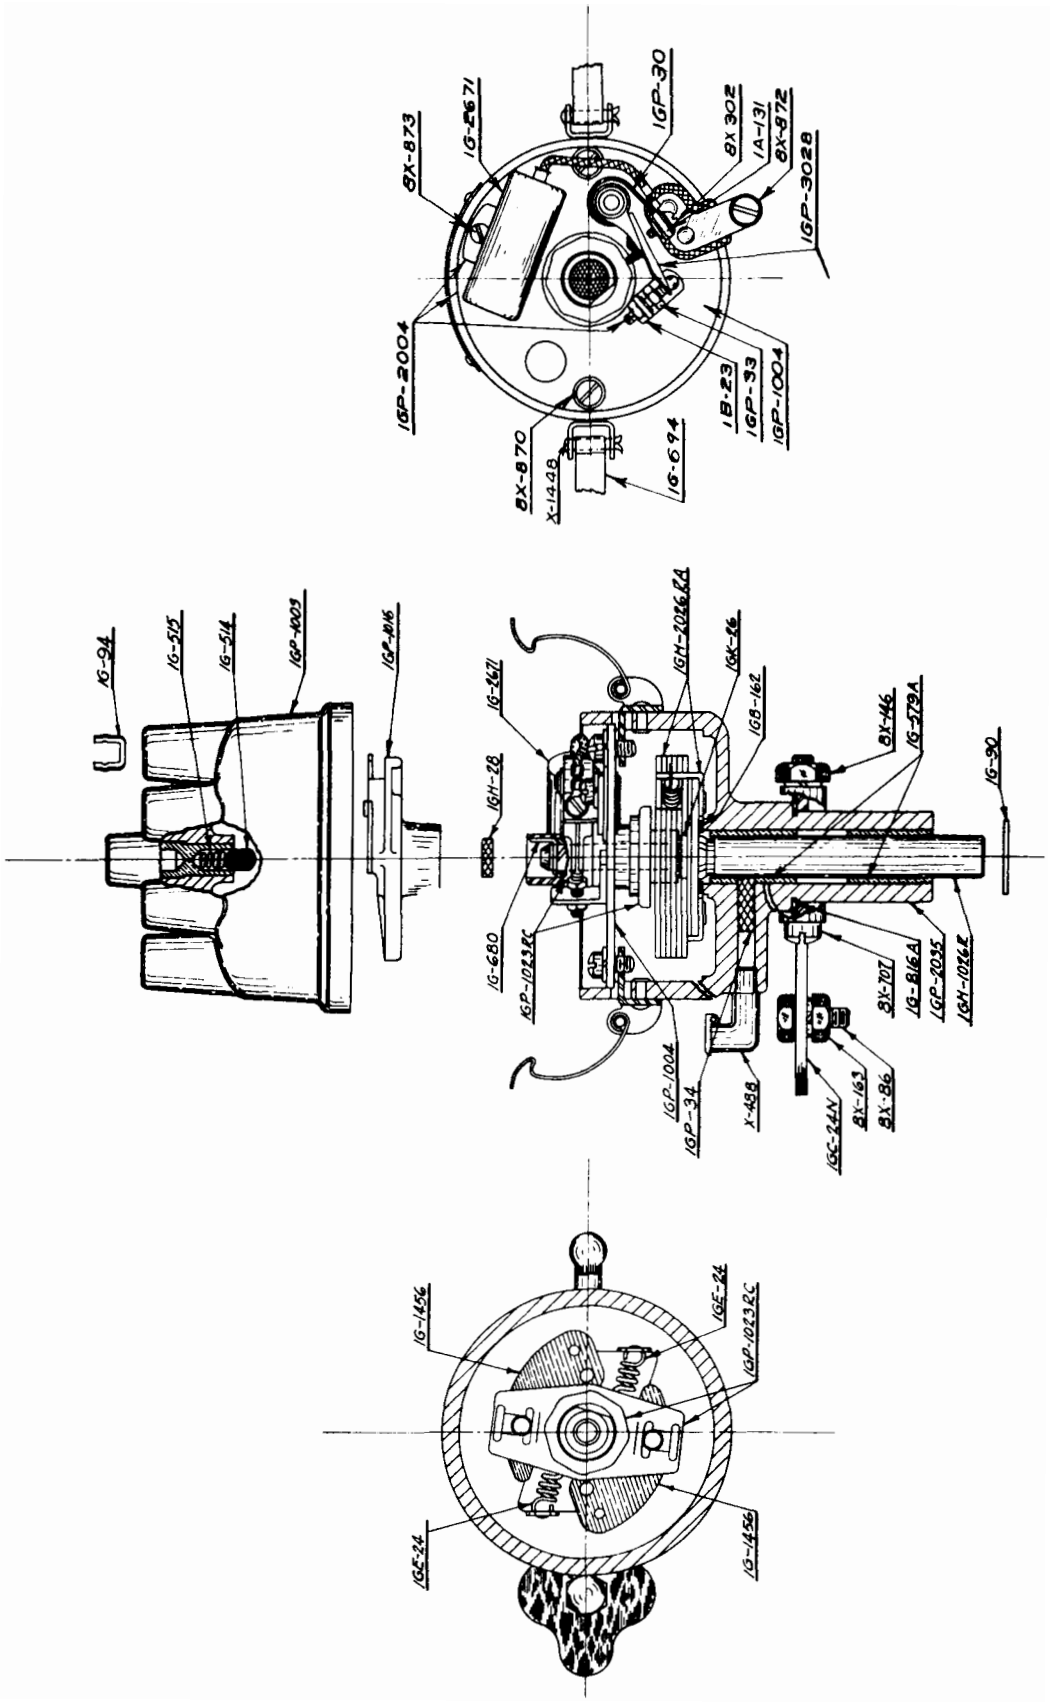

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-40	1	Gear, Dist., Follower
IA-278	9	Cap, Rubber, Secondary Term.
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	9	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-1325	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515	1	Spring, Contact
IG-1576	1	Rotor
IGB-1216	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
*	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
*	1	Spring Set, Gov. Weight
*	1	Shaft, Drive
*	1	Spacer, Cam
*	1	Cam, & Stop Plate, 8 Cyl., R.H.
IGP-2001	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring
X-488	1	Oiler, Elbow, Press in, 1/4
X-1448	2	Pin, Hinge, Cap Spring
IGP-2004A	1	Plate Assy., Breaker
IA-131	1	Clip, Contact Spring
IG-2671	1	Condenser
IGP-1004A	1	Plate Assy., Partial
IB-23	1	Nut, Lock, Contact Screw, Hex., 3.5mm.
IGP-33†	1	Contact, Breaker Screw
IGP-3028†	1	Arm Assy., Breaker
IGP-30	1	Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
X-194	1	Lockwasher, Contact Spring Screw, #6
8X-302	1	Screw, Contact Spring, Rd. Hd., #6-32x1/4
X-1012	1	Lockwasher, Condenser Mtg., #6
8X-1546	1	Screw, Condenser Mtg., Fil. Hd., #6-32x5/32
IGS-32	1	Plug, Rubber, Vent. Hole
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
*	1	Spring, Anti-Rattle
SW-213	1	Rivet, Gear
X-196	3	Lockwasher, Breaker Plate & Terminal Screw, #10
8X-321	1	Screw, Lead Connection Rd. Hd. #10-32x5/16
8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
X-999	1	Terminal
		1 2 3 4 5

† Service Contact Set IGP-3028A.

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assembly	Spring Set Gov. Weight	Shaft Drive	Spacer Cam	Cam & Stop Plate	Spring
IGP-4008A	IGH-2048RA	IGB-252SS	IGH-1048RA	IGK-26	IGP-1023R	IGT-70
IGP-4008B	IGH-2088R	IGB-328KS	IGH-1088R	IGS-99	IGP-1067R	None

(Issued 2-13-46)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
*	1	Dist. Gear-Follower
IG-680	1	Lock Spring Ring
IG-816	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-162	1	Thrust Washer
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-2026R2	1	Drive Shaft & Gov. Assy.
IG-884‡	2	Weight Spring
IG-1456	2	Weight Assy.
IGH-1026R	1	Drive Shaft Assy.
IGK-26	1	Washer - .020" Thick
IGP-1003	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	Rotor
IGP-1023RD	1	Cam & Stop Plate - 8 Cyl. R.H.
IGP-2004	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-2671	1	Condensor Assy.
IGP-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill.Hd. Sc.
X-1012	1	#6 Lock Washer
IGP-2035	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGP-34	1	Felt Wick
X-374	2	3/32x1/4 Split Rivet
X-488	1	1/4 Oiler - Press In Elbow
X-1448	2	Hinge Pin
SW-213	1	Distributor Drive Rivet
X-196	3	#10 Lock Washer
X-199	1	1/4 Lock Washer
8X-343	1	1/4-28x5/8 Cap Screw
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-794	1	#10-32 Square Nut
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Screw
8X-1063	1	1/4-28 Hex. Nut
		1 2 3 4 5

(Issued 10-22-37)


Assy. No.	Gear Follower
IGP-4009A	IG-261
IGP-4009B	GK-36

* See table following parts list for part number applying to assembly wanted.

‡ Service Breaker Point Set IGP-3028BS & Service Weight Spring Set IG-884S.

"NOTE: Where part numbers re shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4009A,B DISTRIBUTOR ILLUSTRATION

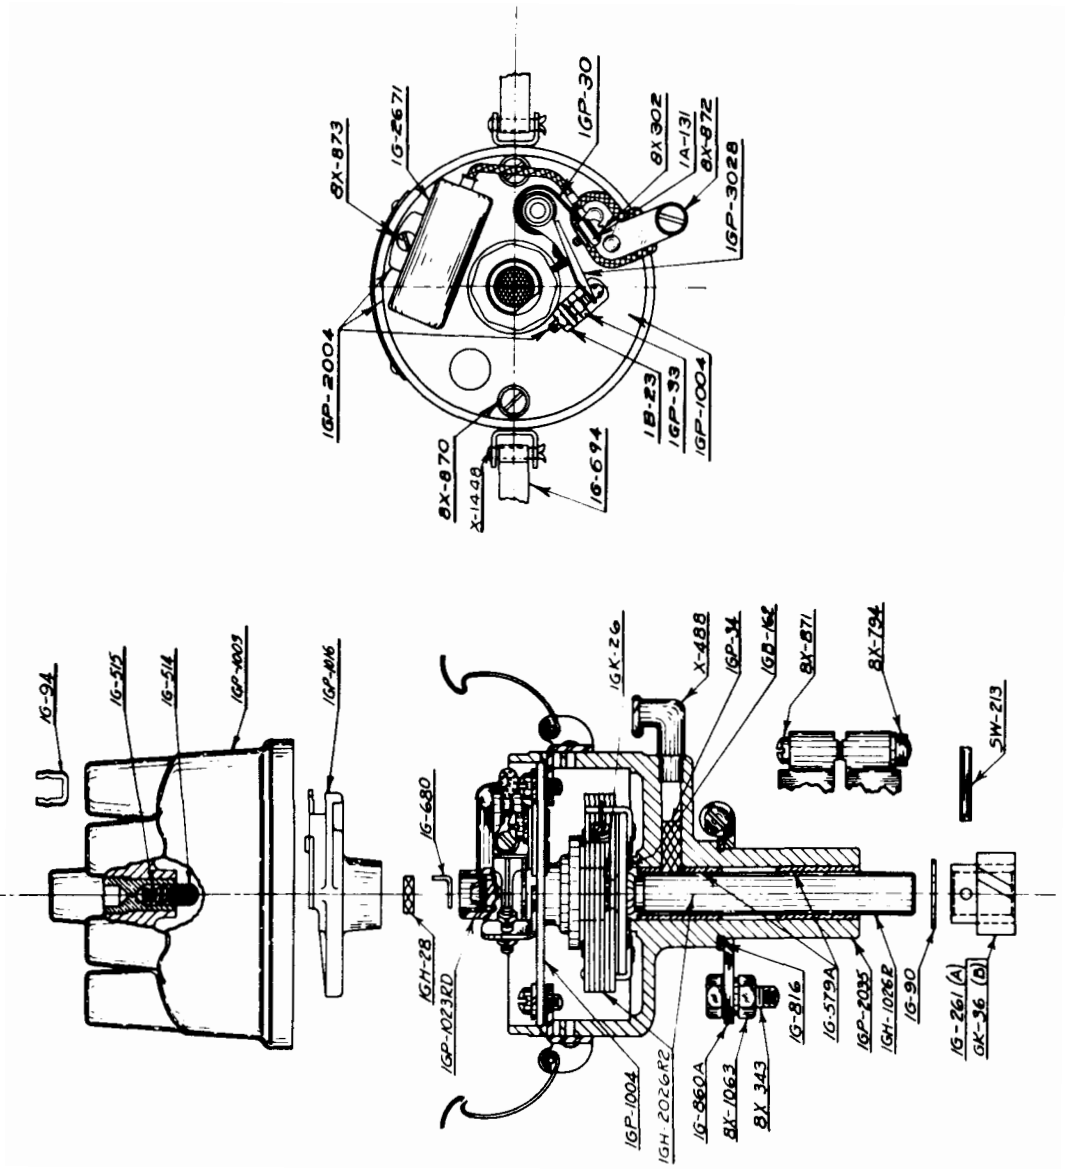

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGL-44	1	Dist. Drive Coupling
IGP-41	1	Terminal Slot Cover
IGP-1003	1	Dist. Cap Assembly
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	Rotor
IGP-2004B	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-3927D	1	Condenser Assembly
IGP-1004	1	Breaker Plate Part Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
X-194	1	#6 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-873	1	#6-32x3/16 Fill. Hd. Screw
X-1012	1	#6 Lock Washer
IGS-21†	1	Advance Pointer
IGS-1020S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
*	1	Cam & Stop Plate - 8 cyl. R.H.
IGT-2001A	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	2	1/8 Grease Cup
X-1448	2	Hinge Pin
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IG-1456	2	Weight Assembly
IGT-1024R	1	Drive Shaft Assembly
SW-213	1	Dist. Drive Rivet
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	2	#10 Skpf. Washer
		1 2 3 4 5

(Issued 4-12-37)

Assembly No.	Dr. Shaft & Gov.	Cam Assembly	Weight Spring	Weight Sp. Set
IGP-4401	IGT-2024R	IGT-1022RC	IA-77 (2)	IA-77S
IGP-4401A	IGT-2024RA	IGT-1022RD	IG-636 IGB-284 1 ea.	IG-636AS


† Used with assemblies having a suffix "-1".

* See table following parts list for part number applying to assembly wanted.

‡ Service Breaker Point Set IGP-3028A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4401,A & -1 DISTRIBUTOR ILLUSTRATION

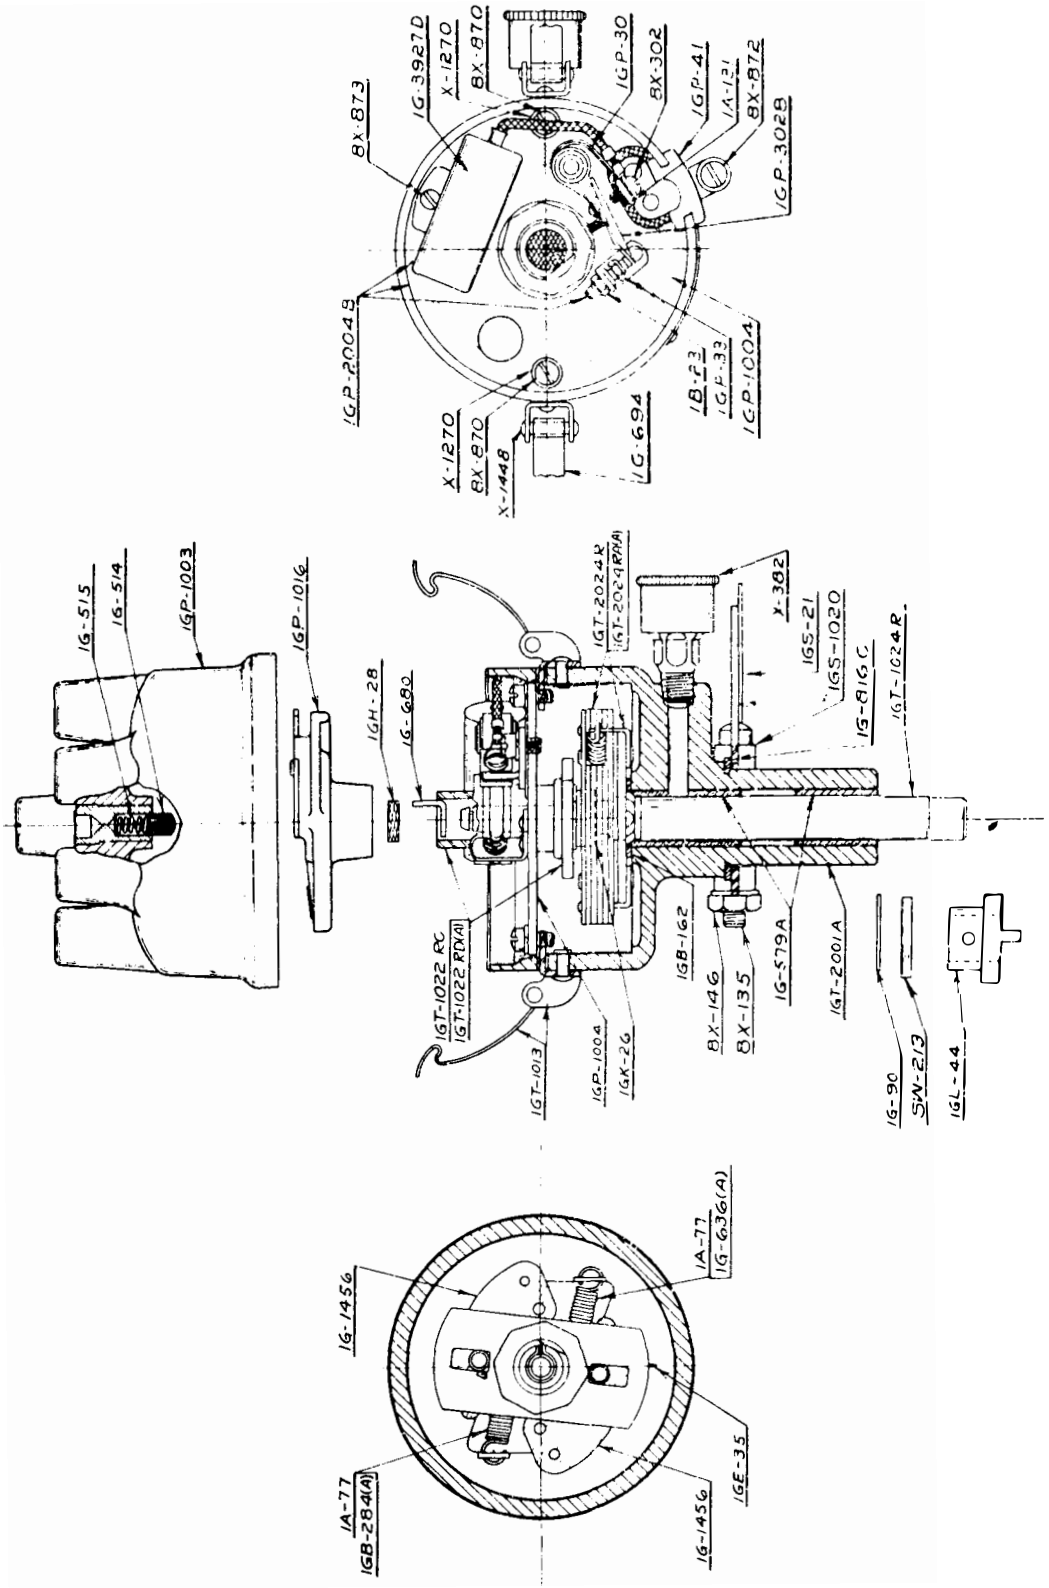

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-816**	1	Washer, Thrust, Advance Arm
IGB-199	1	Collar, Shaft, Dist.
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-41	1	Cover, Terminal Slot
IGP-1003	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGP-1016B	1	ROTOR
IGP-2004B	1	Breaker Plate Assy.
IA-131	1	Clip, Spring, Contact Arm.
IB-23	1	Nut, Lock, Contact Screw
IG-3927K	1	CONDENSER
IGP-1004S	1	Plate Breaker, Partial
IGP-3028A	1	CONTACT SET, BREAKER
X-194	1	Lockwasher, Contact Spring Sc., #6
8X-302	1	Screw, Contact Spring Rd. Hd. #6-32x1/4
X-1012	1	Lockwasher, Condenser Mtg., #6
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IGS-21**	1	Pointer, Advance Arm
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1020S**	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
*	1	Cam, & Stop Plate, 8 Cyl., R.H.
IGT-2001A	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IG-694	2	Spring, Clamp, Cap
X-382	1	Cup, Grease, 1/8
X-1448	2	Pin, Hinge, Cap Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Gov.
*	1	Shaft, Drive
SW-213	1	Rivet, Collar, Drive Shaft
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-1270	2	Washer, Breaker Plate Mtg., Skpf. #10
		1 2 3 4 5

** Used with assemblies having the suffix -1.

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Shaft & Gov.	Spring Set	Shaft Drive
IGP-4402,-1	IGT-1021RF	IGT-2002RC	IA-77S	IGT-1002RA
IGP-4402A,-1	IGT-1021RG	IGT-2002RG	IG-636AS	IGT-1002RA
IGP-4402B,-1	IGT-1021R	IGT-2072R	IGB-292SS	IGT-1072R

UNIT	APPLICATION
IGP-4402,-1,A,A-1,B,B-1	Chrysler (Marine) Chrysler (Industrial)


(Issued 1-19-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4402,A,B,-1 DISTRIBUTOR PARTS ILLUSTRATION

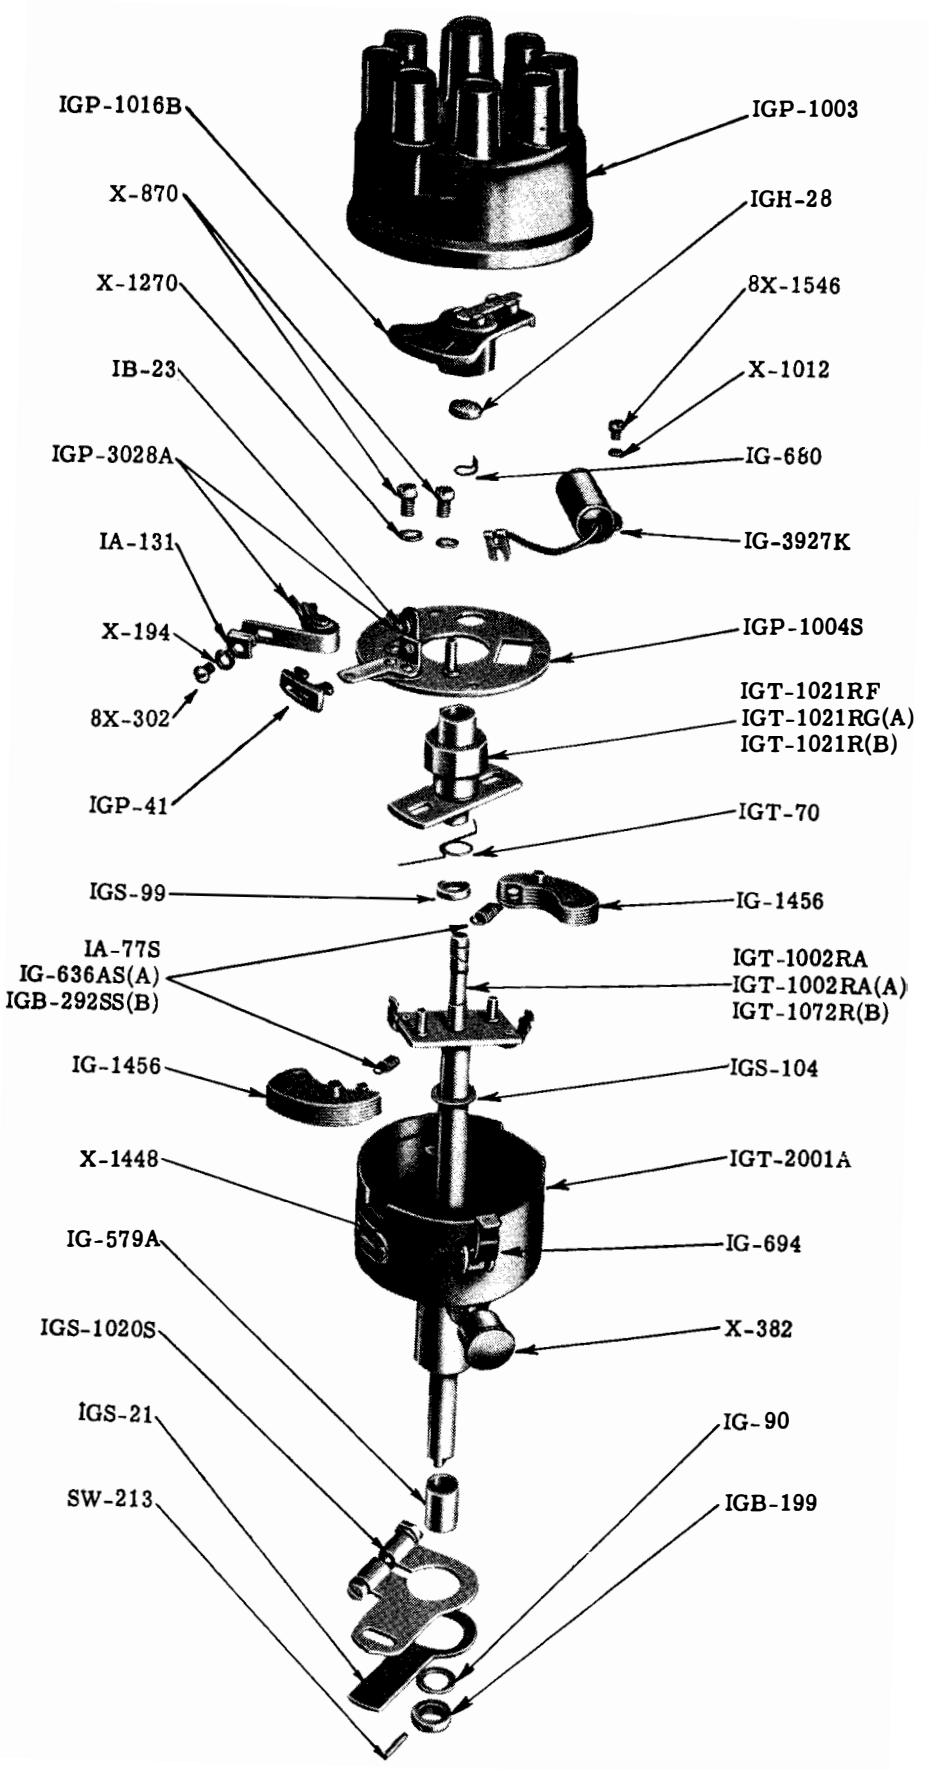

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGP-41	1	Terminal Slot Cover
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGP-2045	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGP-2046	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-2671K	1	CONDENSER ASSEMBLY
IGP-1046	1	Breaker Plate Part Assy.
IGP-1047M‡	1	Breaker Point
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
8X-59	1	#8-32x3/16 Rd. Hd. Sc.
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-350	1	#8 Plain Washer
X-1012	2	#6 Lock Washer
8X-1546	1	#6-32x5/32 Fill. Hd. Sc.
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGT-69	1	Governor Control Spring
*	1	Cam & Stop Plate - 8 Cyl. L. H. 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
IGT-1044	1	Advance Control Arm Assy.
8X-136	1	1/4-20x1 1/4 Fill. Hd. Sc.
12X-199	1	1/4 Lock Washer
8X-791	1	1/4-20 Square Nut
*	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
*	2	Weight Spring
*	1	Drive Shaft Assembly
SW-213	1	Distributor Drive Rivet
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	3	#10 Skpf. Washer 1 2 3 4 5

‡ Service BREAKER POINT SET IGP-3028KS.

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Shaft & Gov. Assy.	Weight Spring	Spring Set	Dr. Shaft Assembly
IGP-4501	IGT-1021LA	IGT-2020LA	IG-829 1 ea. IGB-277	IG-829AS	IGT-1020LA
IGP-4501A	IGT-1021L	IGT-2020LB	IGB-293 1 ea. IGB-329	IGB-329SS	IGT-1020L

UNIT	APPLICATION
IGP-4501,A	Packard


(Issued 12-7-39)


Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4501,A DISTRIBUTOR ILLUSTRATION

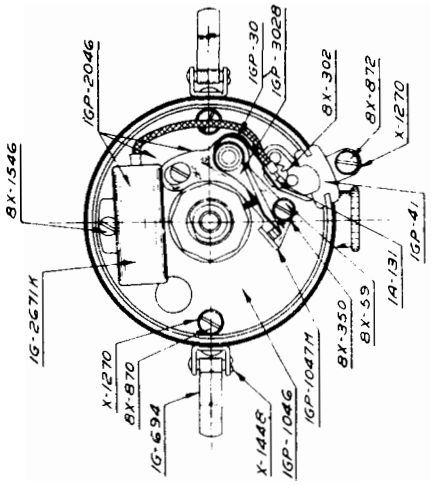

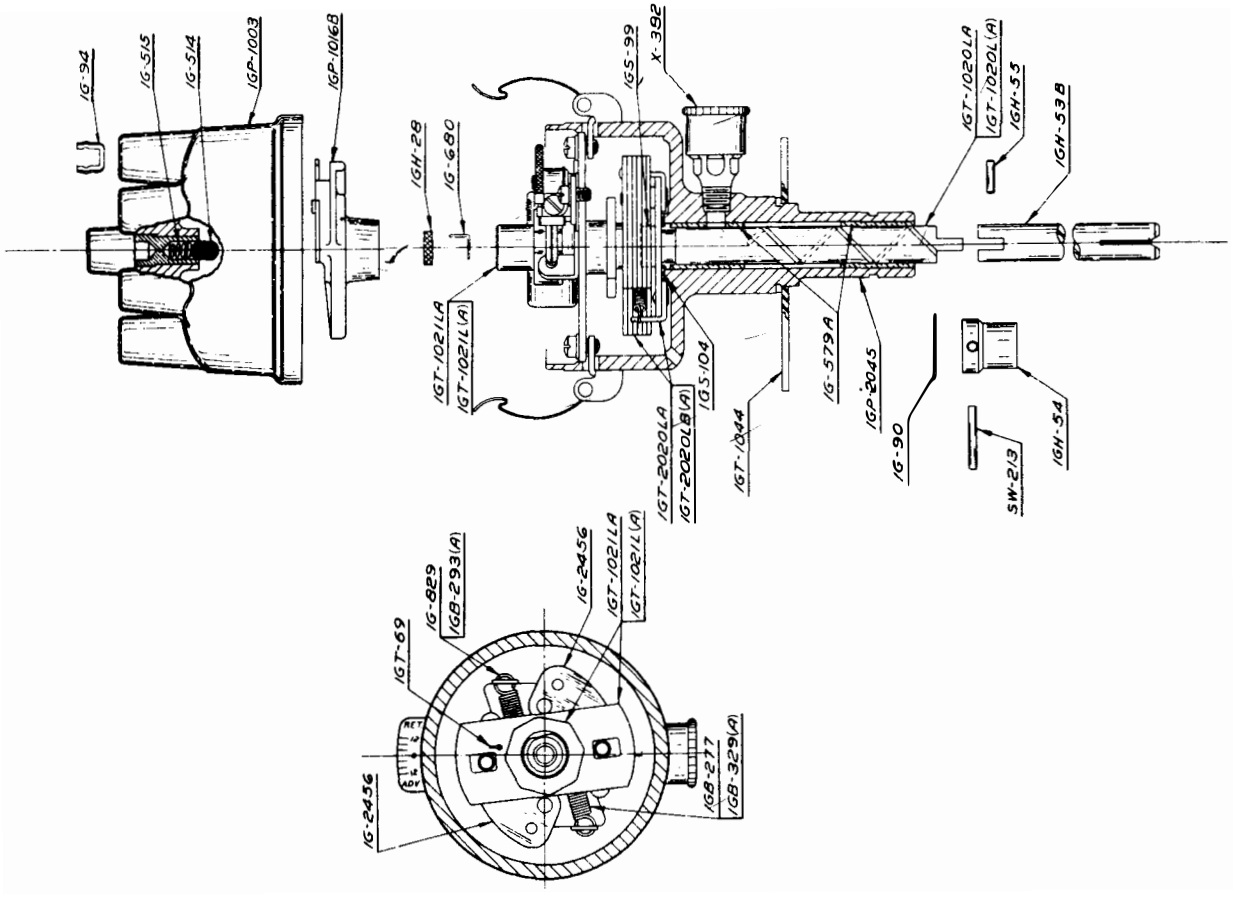

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
DG-107	1	Lead Assembly
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	9	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-2456	2	Weight, Governor
**	1	Spring Set, Gov. Weight
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-53B	1	Extension, Drive Shaft
IGH-54	1	Collar, Drive Shaft
IGH-55	1	Pin, Drive Shaft
IGP-41	1	Cover, Terminal Slot
IGP-1003	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGP-1016B	1	ROTOR
IGP-2046	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IG-2671K	1	CONDENSER
IGP-1046	1	Plate, Breaker
IGP-3028KS	1	CONTACT SET, BREAKER
8X-59	1	Screw, Contact Lock, Rd. Hd. #8-32x3/16
X-194	2	Lockwasher, Contact Spring & Cond. Mtg. Sc., #6
8X-302	1	Screw, Contact Spring, Rd. Hd. #6-32x1/4
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IGP-2054A	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGP-57	1	Bracket, Vacuum Control
X-196	2	Lockwasher, Bracket Mtg. Sc., #10
X-382	1	Grease Cup, 1/8 Pipe
8X-870	2	Screw, Bracket Mtg., Fill. Hd. #10-32x5/16
X-1448	2	Pin, Hinge, Cap Spring
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGT-69	1	Spring, Anti-Rattle
**	1	Shaft, Drive
**	1	Cam & Stop Plate, 8 Cyl. L.H.
IGW-118	1	Link Clip
IGW-122	1	Clamp, Plunger Link Screw
SW-213	1	Rivet, Collar
**	1	Gasket
**	1	Plug
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-94	1	Plunger Screw
VC-95	1	Plunger Stop
VC-105	1	Vacuum Chamber Bracket
VC-106	1	Clamp
**	1	Spring
**	1	VACUUM CHAMBER
8X-173	2	Nut, Vacuum Chamber Mtg., Hex. #10-32
12X-195	1	Lockwasher, Vac. Linkage, #8
12X-196	3	Lockwasher, Vac. Chamber & Brkt. Mtg. Screw, #10
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
8X-872	1	Screw, Terminal, Fill. Hd. #10-32x1/4
8X-884	1	Screw, Vac. Linkage, Fill. Hd. #8-32x3/16
8X-902	1	Screw Vac. Brkt. Mtg., Fill, Hd. #10-32x3/8
X-1270	3	Washer, Skpf., Term. Sc. & Breaker Plate Mtg. Sc., #10
X-1274	1	Washer, Skpf., Link Screw, #10

* Use as required.

** See table following parts list for part number applying to assembly wanted.

(See Reverse Side)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGP-4502, A, B, C, D, E DISTRIBUTOR PARTS (Cont.)

Assembly No.	Spring Set, Gov. Weight	Shaft, Drive	Cam & Stop Plate
IGP-4502	IGB-329SS	IGT-1020L	IGT-1021L
IGP-4502A	IGB-329SS	IGT-1020L	IGT-1021LB
IGP-4502B	IGB-265BS	IGT-1020LA	IGT-1021LA
IGP-4502C	IGB-265BS	IGT-1020LA	IGT-1021LA
IGP-4502D	IGB-316AS	IGT-1020LA	IGT-1021LA
IGP-4502E	IGB-308BS	IGT-1020LA	IGT-1021LA

Assembly No.	Gasket	Plug	Spring	Vacuum Chamber
IGP-4502	VC-14	VC-15	VC-104	VC-2060G
IGP-4502A	VC-14	VC-15	VC-104	VC-2060G
IGP-4502B	VC-14	VC-15	VC-144	VC-2060N
IGP-4502C	IAT-30	IAT-29	VC-90	VC-2060P
IGP-4502D	IAT-30	IAT-29	VC-90	VC-2060Q
IGP-4502E	IAT-30	IAT-29	VC-169	VC-2060R

UNIT	APPLICATION
IGP-4502, A, B, C, D, E	Packard

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
*	1	Washer, Thrust, Advance Arm.
IGB-199	1	Collar, Shaft Distributor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-41	1	Cover, Terminal Slot
IGP-1003	1	CAP ASSY., DIST
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGP-1016B	1	ROTOR
IGP-2046B	1	Plate Assy., Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clip, Spring, Contact Arm
IGP-1046A	1	Plate, Breaker
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Contact Lock, Rd. Hd. #8-32x 3/16
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
*	1	Pointer, Advance Arm.
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
*	1	Arm, Advance 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
IGT-70	1	Spring, Anti-Rattle
IGT-1021R-1	1	Cam, & Stop Plate, 8 Cyl. R.H.
IGT-2001B	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694A	2	Spring, Clamp, Cap
X-382A	1	Grease Cup, 1/8
8X-2893	2	Pin, Hinge, Cap Spring
IGT-2072RA	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGT-1072RA	1	Shaft, Drive
SW-213	1	Rivet, Collar, Drive Shaft
X-1270	2	Washer, Breaker Plate Mtg., Skpf. #10
8X-2896	2	Screw, Breaker Plate Mtg., Fil. Hd. #10-32x5/16 1 2 3 4 5

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Advance Arm	Washer	Pointer
IGP-4504M	None	None	None
IGP-4504-1M	IGS-1020-2	IG-816	IGS-21

UNIT	APPLICATION
IGP-4504M,-1M	Chrysler (Marine)

(Issued 1-19-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
	1 2 3 4 5	
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-816	1	Washer, Thrust, Advance Arm
IGB-199	1	Collar, Shaft, Dist.
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-30	1	COVER, CAP, DIST.
IGH-36	1	Nut, Cover, Dist. Cap, #10-32
IGH-1029A	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGH-1041	1	ROTOR
IGP-41	1	Cover, Terminal Slot
IGP-2046B	1	Plate Assy., Breaker
IG-3927E	1	CONDENSER
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16
IGP-60	1	Clip, Spring, Contact Arm
IGP-1046A	1	Plate, Breaker
IGP-3028WS	1	CONTACT SET, BREAKER
19X-59	1	Screw, Contact Lock, Rd. Hd. #8-32x3/16
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IGS-21	1	Pointer, Advance Arm
IGS-99	1	Spacer, Cam
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1020-2	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
IGT-1021R-1	1	Cam, & Stop Plate, 8 Cyl. R.H.
IGT-2072RA	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGT-1072RA	1	Shaft, Drive
IGT-2079	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IG-694A	2	Spring, Cap Clamp
X-382A	1	Grease Cup, 1/8
8X-2893	2	Pin, Hinge Cap Spring
SW-213	1	Rivet, Collar, Drive Shaft
X-183A	1	Washer, Cover Nut, Plain #10
12X-196	1	Lockwasher, Cover Nut, #10
X-1270	2	Washer, Breaker Plate Mtg., Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
	1 2 3 4 5	

UNIT	APPLICATION
IGP-4506-1M	Chrysler (Marine)

(Issued 1-19-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-816C	1	Washer, Thrust, Adv. Arm
IGB-199	1	Collar, Shaft, Dist.
IGH-28	1	Wick, Felt, Cam Sleeve
IGH-30	1	Cover, Cap, Dist.
IGH-36	1	Nut, Cover, Dist. Cap, #10-32
IGH-1029B	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGH-1041	1	Rotor
IGP-41	1	Cover, Terminal Slot
IGP-2046B	1	Plate Assy., Breaker
IG-3927E	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16
IGP-60	1	Clip, Spring, Contact Arm
IGP-1046A	1	Plate, Breaker
IGP-3028WS	1	Contact Set, Breaker
19X-59	1	Screw, Contact Lock, Rd. Hd. #8-32x3/16
19X-350	1	Washer, Plain, Contact Lock Sc., #8
19X-353	1	Washer, Plain, Clamp Sc., #6
12X-1012	2	Lockwasher, Condenser & Clamp Sc., #6
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-21	1	Pointer, Advance Arm
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1020-2	1	Arm, Advance
IGT-70	1	Spring, Anti-Rattle
IGT-1021R-1	1	Cam, & Stop Plate, 8 Cyl., R.H
IGT-2072RB	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGT-1072RB	1	Shaft, Drive
IGT-2094	1	Base Assy., Dist.
IG-579A	1	Bearing, Abs. Bronze
IG-694A	2	Spring, Cap Clamp
X-382A	1	Grease Cup
8X-2893	2	Pin, Cap Spring Hinge
SW-213	1	Rivet, Collar, Drive Shaft
X-183B	1	Washer, Plain, Cover Sc.,#10
12X-196	1	Lockwasher, Cover Screw, #10
X-1270	2	Washer, Breaker Plate Mtg., Skpf. #10
X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
		1 2 3 4 5

UNIT	APPLICATION
IGP-4507-1M	Chrysler Marine

(Issued 1-27-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Insulating Bushing
IGB-162	1	Thrust Washer
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-21†	1	Advance Pointer
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	ROTOR
IGS-1022R	1	Cam & Stop Plate - 6 Cyl. R.H.
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
IGS-1027S†	1	Advance Control Arm Assy.
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
*	1	Weight Spring Set
IGS-1002R	1	Drive Shaft Assembly
IGS-2004A	1	Breaker Plate Assembly
		± Identified by 8
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004A	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGS-73S	1	Lead Assembly
IGS-56	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-2028	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
SW-213	1	Distributor Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 7-30-40)

† Used with assemblies having the suffix "-1".

* See table following parts list for part number applying to assembly wanted.

\+ Use as required.

± See Manual Bulletin IG-11.

‡ SERVICE BREAKER POINT SET IGP-3028A.

Assembly No.	Dr. Shaft & Gov.	Spring Set	Vacuum Chamber	Spring
IGS-4001	IGS-2002R	IGB-208S	IGS-1023S	VC-49 (Blue)
IGS-4001A	IGS-2002RB	IGB-284CS	IGS-1023AS	VC-45 (Red)


UNIT	APPLICATION
IGS-4001, A,-1	Chrysler

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4001,A,-1 DISTRIBUTOR ILLUSTRATION

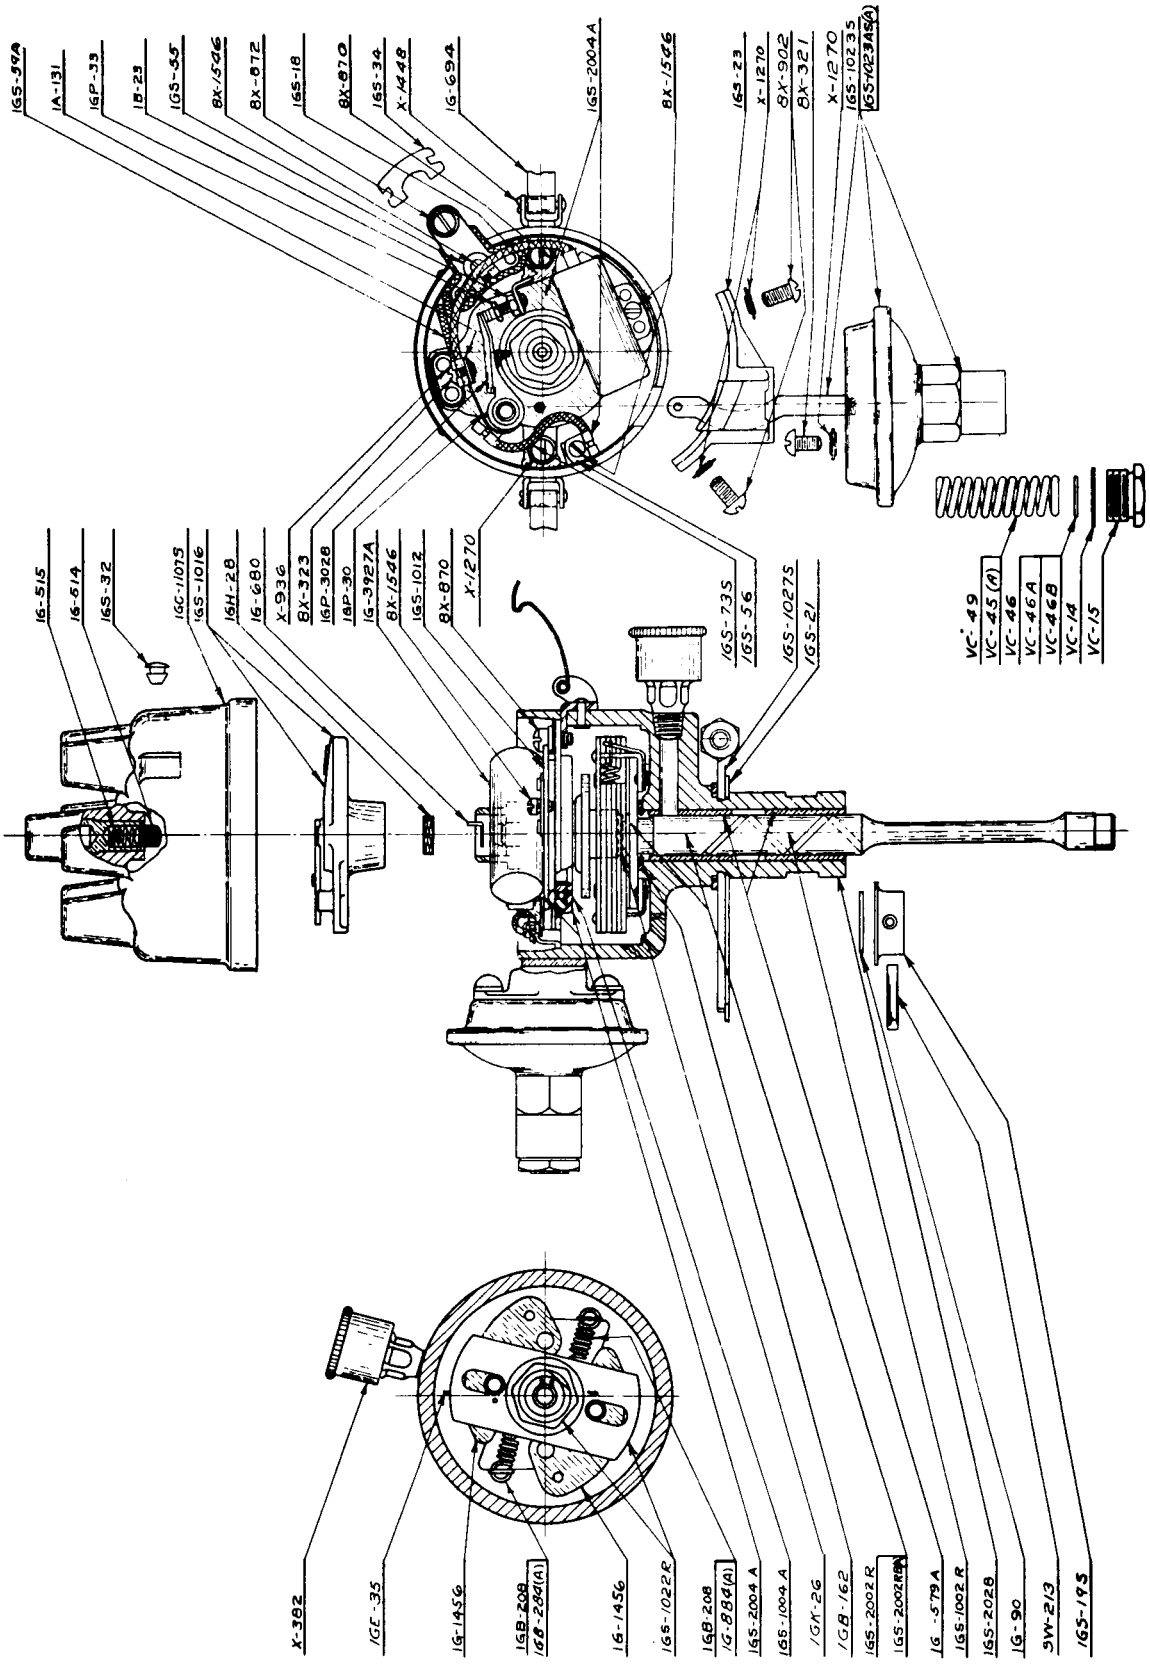

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
*	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
*	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-1023S	1	Vacuum Chamber
IGS-1027S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Sc.
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGS-2001	1	Dist. Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGS-2004A	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	Condenser Assy.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004A	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGS-56	1	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
*	2	Weight Spring
*	1	Drive Shaft Assy.
SM-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 10-7-37)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Cam Assembly	Weight Spring	Weight Sp. Set	Control Spring
IGS-4002	IGS-2024R	IGS-1024R	IGS-1022R	IGB-284 (2)	IGB-284S	IGE-35
IGS-4002A	IGS-2024RD	IGS-1024RA	IGS-1022RH	IG-636 IGB-292 1 ea.	IGB-292SS	None

* See table following parts list for part number applying to assembly wanted.

† Used with assemblies having a suffix "-1".


‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4002,A & -1 DISTRIBUTOR ILLUSTRATION

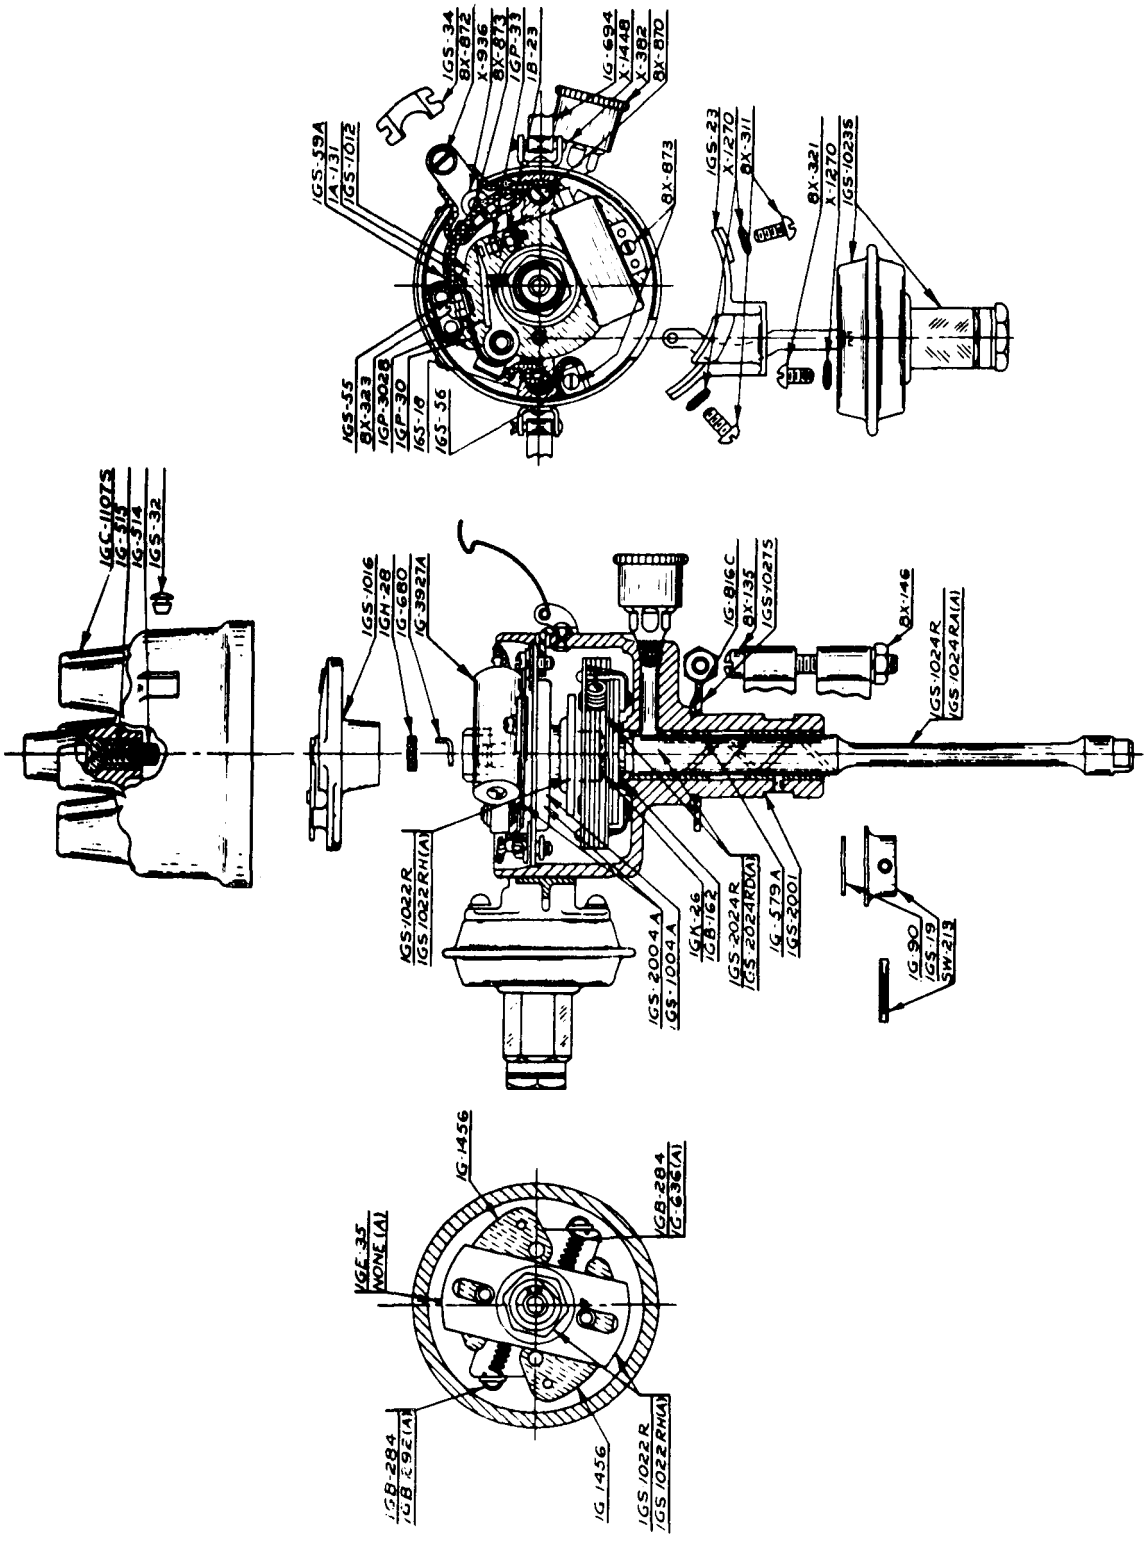

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
*	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
*	1	Cam & Stop Plate - 6 cyl. R.H.
*	1	Vacuum Chamber
IGS-1027S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Sc.
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGS-2001	1	Dist. Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGS-2004	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	Condenser Assy.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGS-56	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IG-1456	2	Weight Assembly
*	1	Drive Shaft Assembly
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 10-8-37)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Cam Assembly	Weight Spring		Weight Sp. Set	Control Spring	Vacuum Chamber
IGS-4003	IGS-2025R	IGS-1025R	IGS-1022RA	IGB-265	(2)	IGB-265S	IGE-35	IGS-1023CS
IGS-4003A	IGS-2025RC	IGS-1025RB	IGS-1022RG	IG-636 IGB-292	1 ea.	IGB-292SS	None	IGS-1023CS
IGS-4003B	IGS-2025RD	IGS-1025RB	IGS-1022RG	IG-636 IGB-278	1 ea.	IG-636SS	None	IGS-1023CS
IGS-4003C	IGS-2025RE	IGS-1025R	IGS-1022R	IGB-208	(2)	IGB-208S	IGE-35	IGS-1023DS

* See table following parts list for part number applying to assembly wanted.

† Used with assemblies having a suffix "-1".


‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4003,A,B,C & -1 DISTRIBUTOR ILLUSTRATION

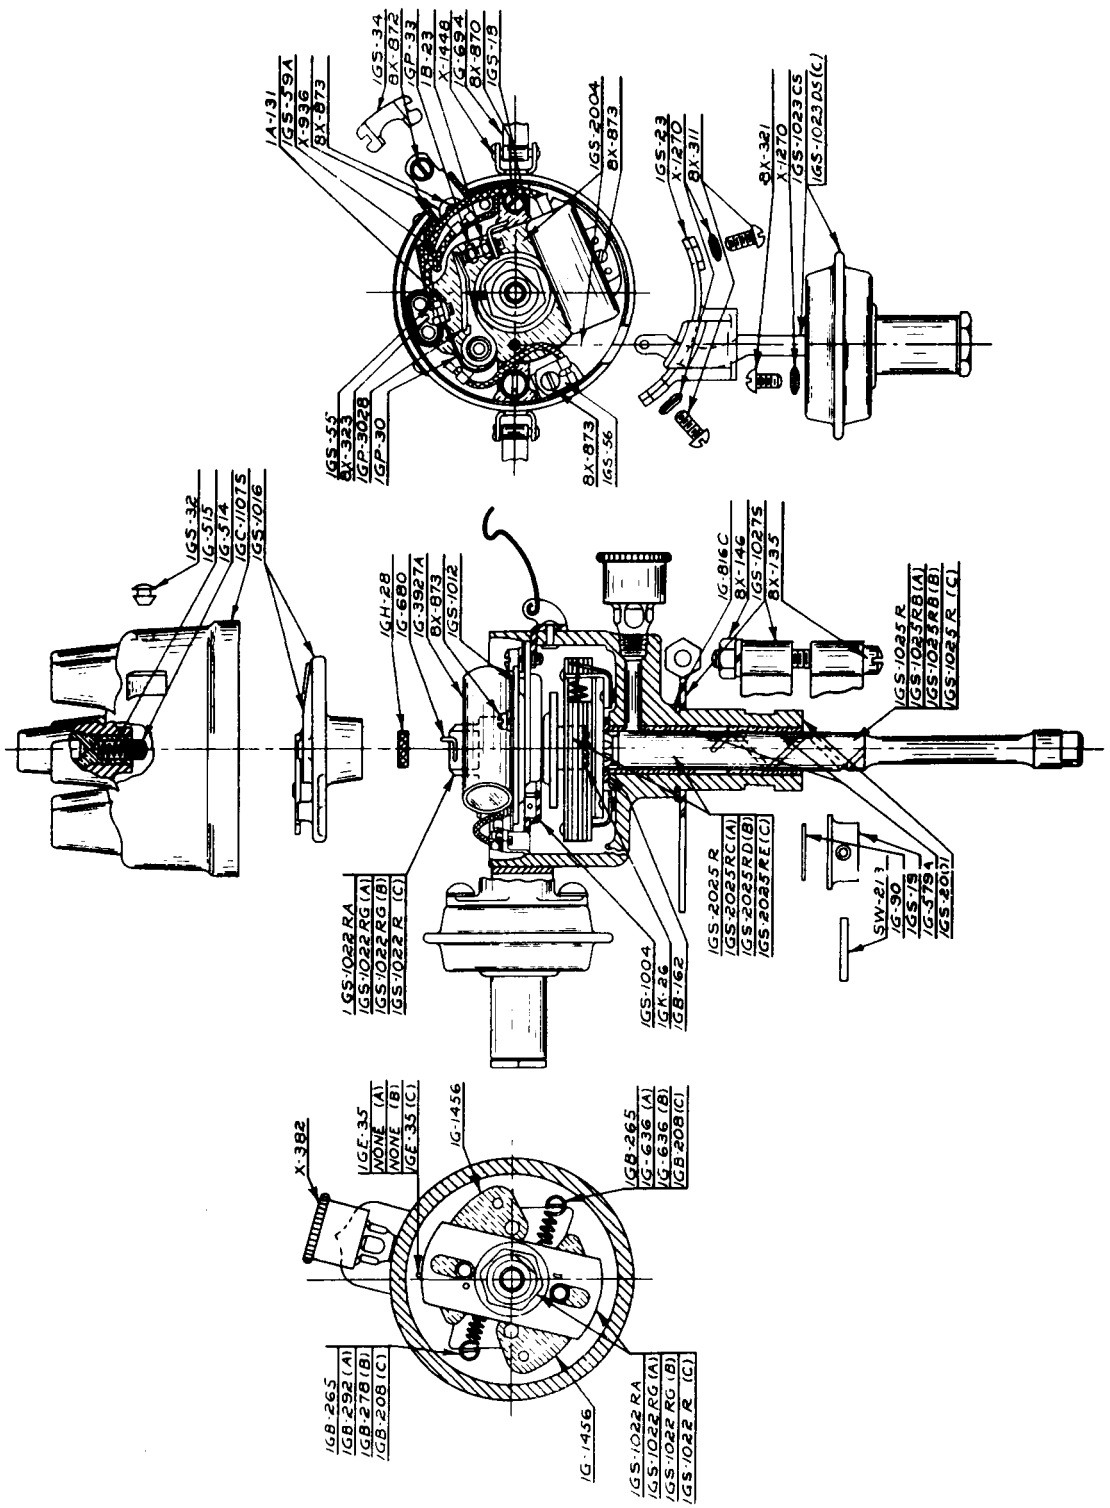

IGS-4006, A & -1 DISTRIBUTOR PARTS LIST

IGS-4006, A & -1

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
*	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-21†	1	Advance Pointer
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
IGS-1020S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
*	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-1023AS	1	Vacuum Chamber
IGS-2004A	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	Condenser Assembly
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assy.
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004A	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-2028	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
*	1	Drive Shaft & Gov. Assy.
*	2	Weight Spring
IG-1456	2	Weight Assembly
*	1	Drive Shaft Assembly
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 9-1-37)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Cam Assembly	Weight Spring	Weight Sp. Set	Control Spring
IGS-4006	IGS-2042R	IGS-1042R	IGS-1022R	IGB-284 (2)	IGB-284S	IGE-35
IGS-4006A	IGS-2042RB	IGS-1042RA	IGS-1022RH	IG-636 IGB-292 1 ea.	IGB-292SS	None

NOTE:- See table following parts list for part number applying to assembly wanted.


† Used with assemblies having a suffix "-1". ‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4006,A & -1 DISTRIBUTOR ILLUSTRATION

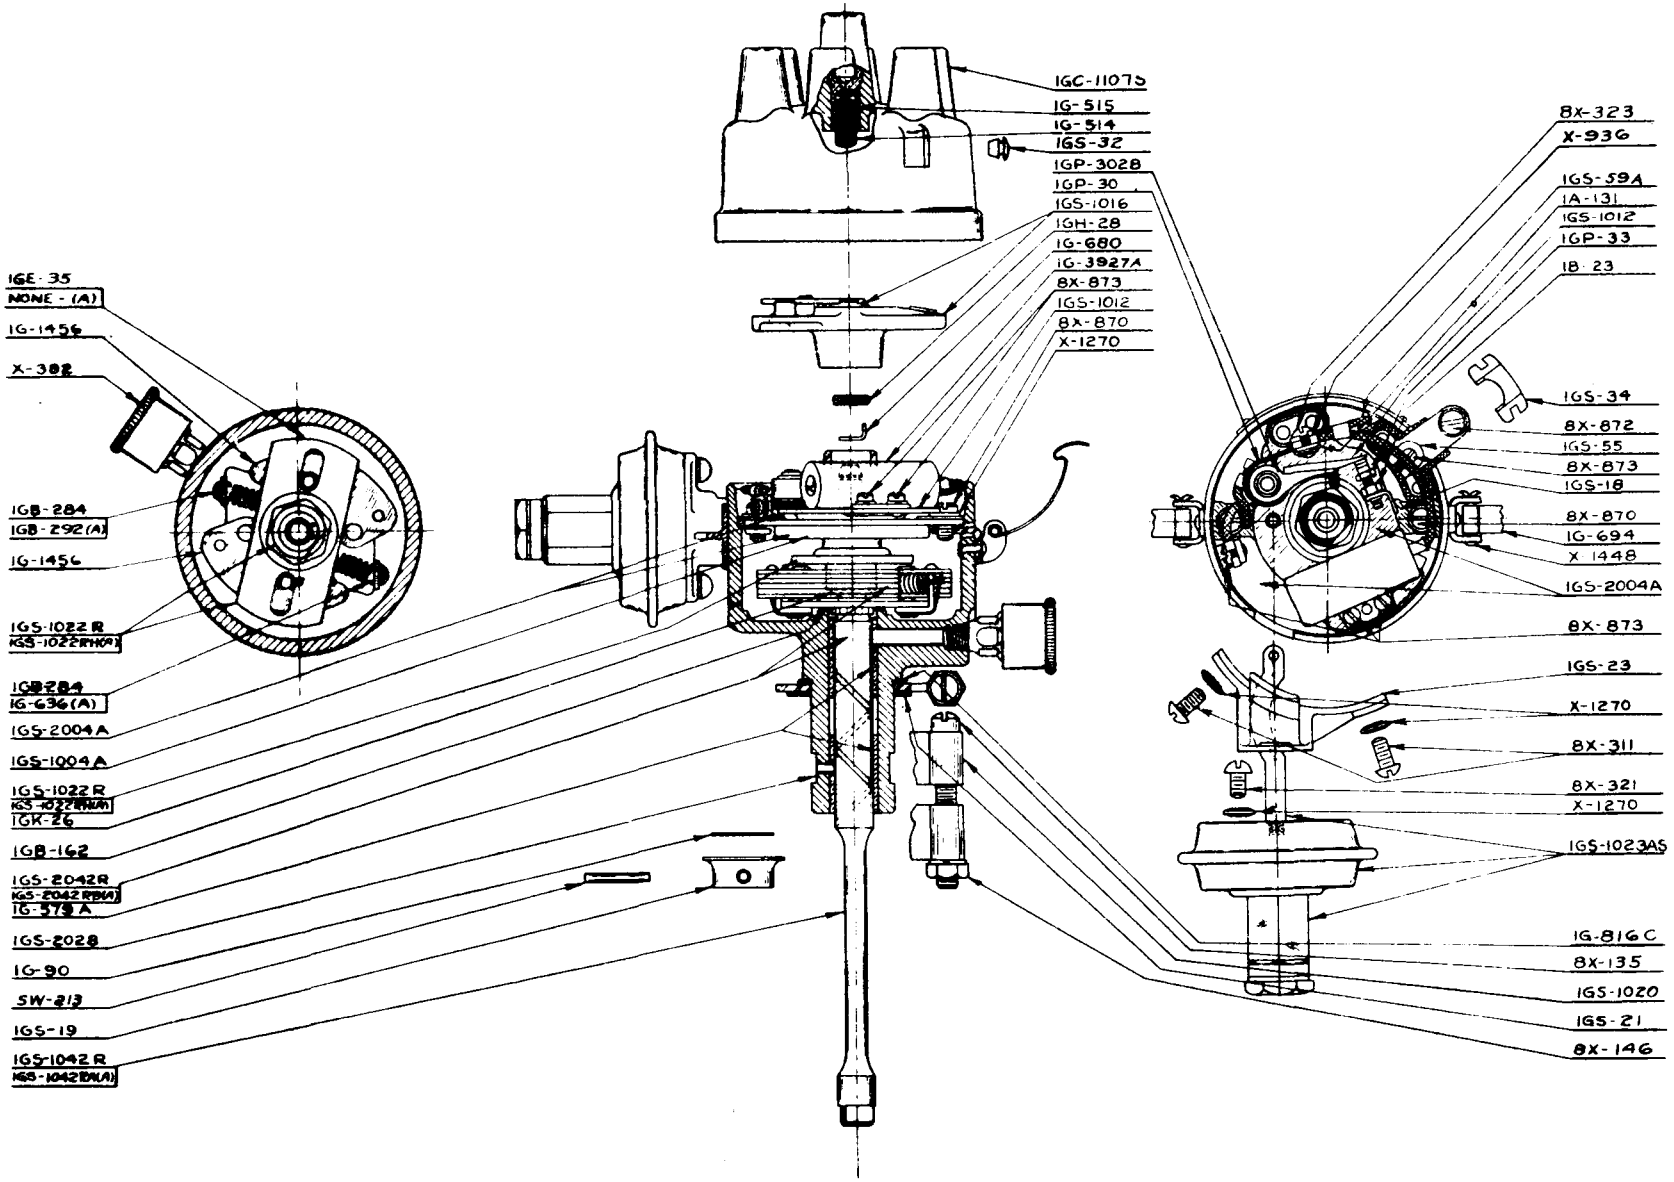

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	5	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IG-1324	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IG-1657	1	Rotor
IGB-162	1	Thrust Washer
IGB-199	1	Dist. Shaft Collar
*	1	Cam & Stop Plate - 4 Cyl.L.H.
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-34	1	Terminal Slot Cover
IGS-50	1	Vacuum Chamber Bracket
IGS-1080	1	Advance Control Arm Assy.
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-829	1	1/4-20x1 3/4 Hex. Hd. Sc.
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-2671K	1	Condenser Assy.
IGP-3028L‡	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-78	1	Lead Assy.
IGS-77	1	Terminal
X-1484	1	Terminal
*	1	Breaker Plate Part Assy.
IGS-1046	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGS-76S	1	Lead Assy.
IGS-74	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
*	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assy.
*	2	Weight Spring
*	1	Drive Shaft Assy.
IGS-2047	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
*	1	Spring
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-309	2	#10-32x1/2 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer 1 2 3 4 5

(Issued 11-17-38)

Assy. No.	Cam Assy.	Breaker Plate Assy.	Brkr. Plate Part Assy.	Drive Shaft & Gov. Assy.	Weight Spring
IGS-4007	IGC-1132L	IGS-2044	IGS-1044	IGS-2045L	IGB-284 (2)
IGS-4007A	IGC-1132L	IGS-2044	IGS-1044	IGS-2045LA	IGB-293 (1 ea.) IG-636
IGS-4007B	IGC-1132LA	IGS-2044D	IGS-1044D	IGS-2045LB	IG-884 (2)

Assy. No.	Weight Spring Set	Drive Shaft Assy.	Vacuum Chamber Assy.	Spring
IGS-4007	IGB-284S	IGS-1045L	IGT-1028AS	VC-45 (Red)
IGS-4007A	IG-636GS	IGS-1045LA	IGT-1028AS	VC-45 (Red)
IGS-4007B	IG-884S	IGS-1045LA	IGT-1028ES	VC-73 (Maroon)


‡ Service Breaker Point Set IGP-3028LS.

+ Use as required.

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4007,A,B DISTRIBUTOR ILLUSTRATION

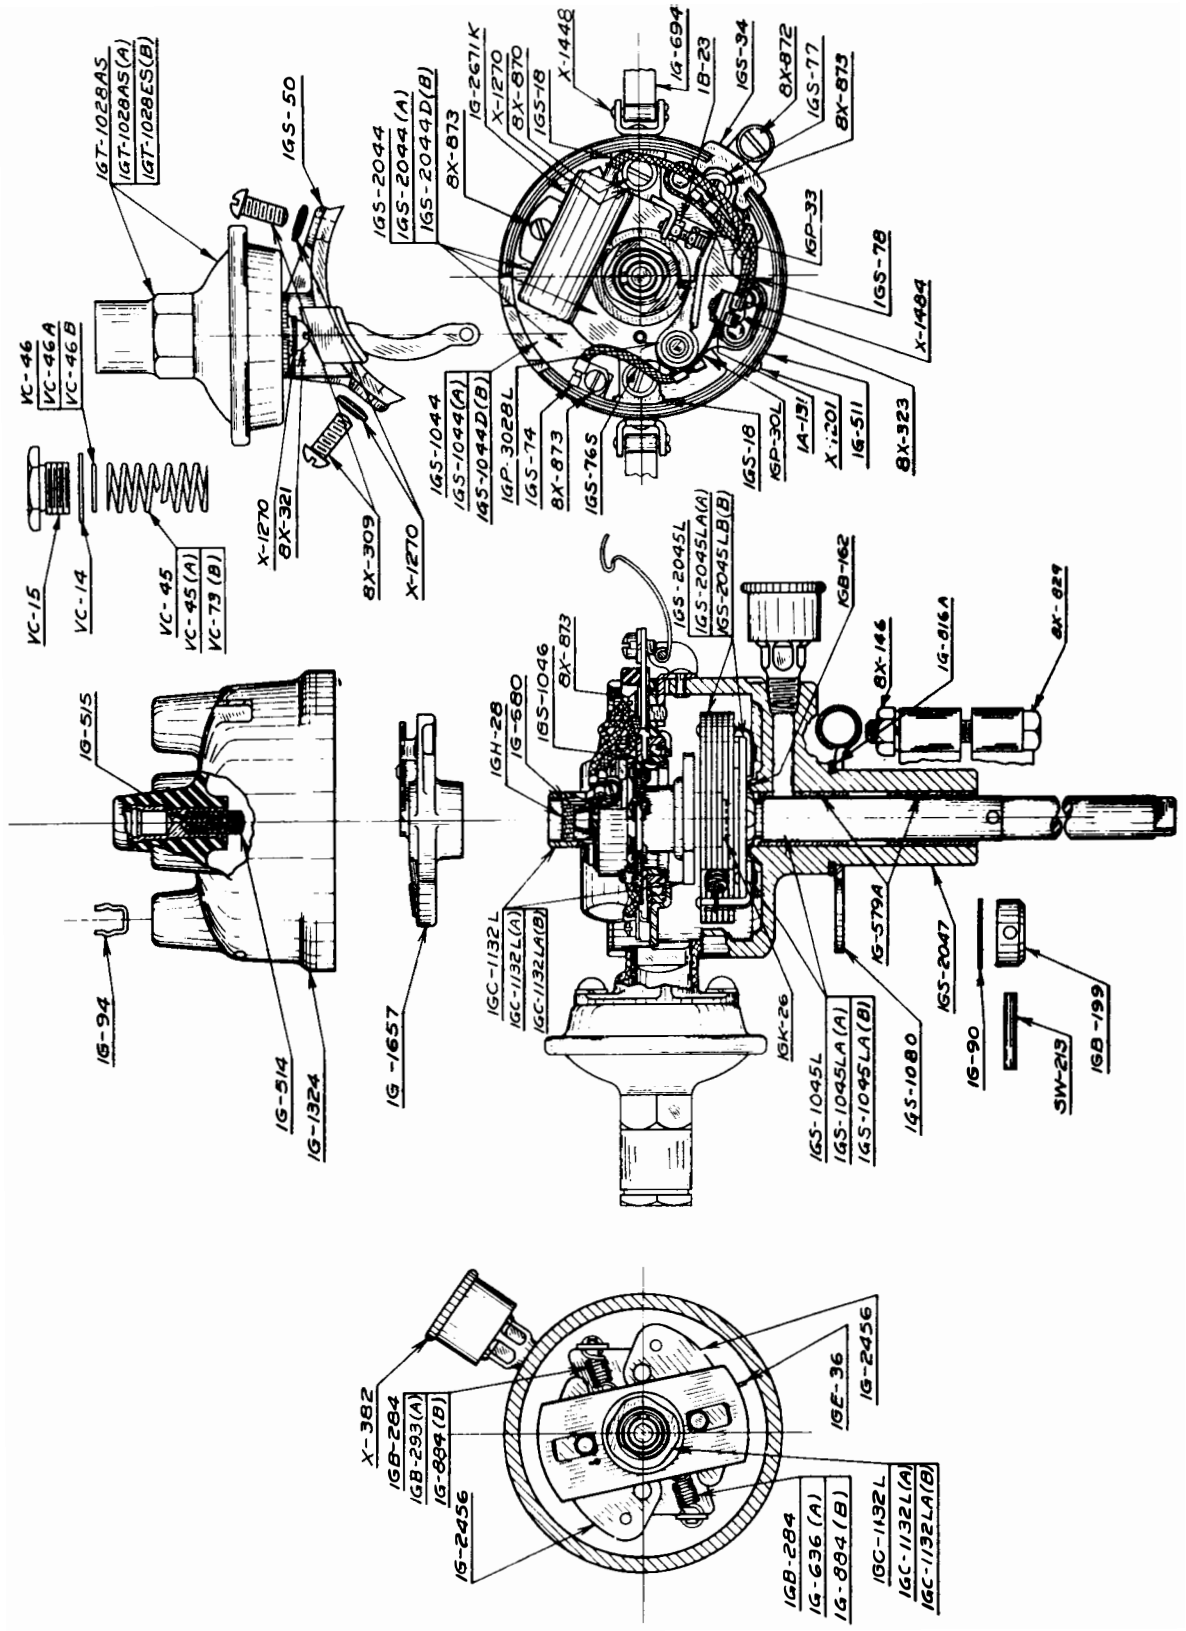

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part 1 2 3 4 5
GE-47	1	Tachometer Gear - Driver
GE-48	1	TACHOMETER GEAR - FOLLOWER
IG-90	2	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-247	1	Dist. Drive Rivet
IGC-1107S	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
*	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-37	1	Tachometer Drive Shaft
IGS-38	1	Housing Cover
IGS-39	1	Thrust Washer
IGS-1016	1	ROTOR
*	1	Cam & Stop Plate - 6 Cyl.R.H.
IGS-1023AS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
VC-45	1	Spring (Red)
IGS-2004A	1	Breaker Plate Assy. ± Identified by 8.
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004A	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGS-73S	1	Lead Assembly
IGS-56	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	4	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc. 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
IGS-2035	1	Dist. Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
*	2	Weight Spring
*	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
X-294	1	Ball Brg. - S.A.E. #202
X-311	2	#10-32x3/8 Rd. Hd. Sc.
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer 1 2 3 4 5

(Issued 2-1-40)

+ Use as required.

* See table following parts list for part number applying to assembly wanted.

± See Manual Bulletin IG-11.

‡ SERVICE BREAKER POINT SET IGP-3028A.

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Control Spring	Cam Assembly	Weight Spring	Weight Sp. Set
IGS-4008	IGS-2051R	IGS-1051R	IGE-35	IGS-1022R	IGB-284 (2)	IGB-284S
IGS-4008A	IGS-2051RA	IGS-1051RA	None	IGS-1022RH	IG-636 1 ea. IGB-292	IGB-292SS


UNIT	APPLICATION
IGS-4008,A	DeSoto

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4008,A DISTRIBUTOR ILLUSTRATION

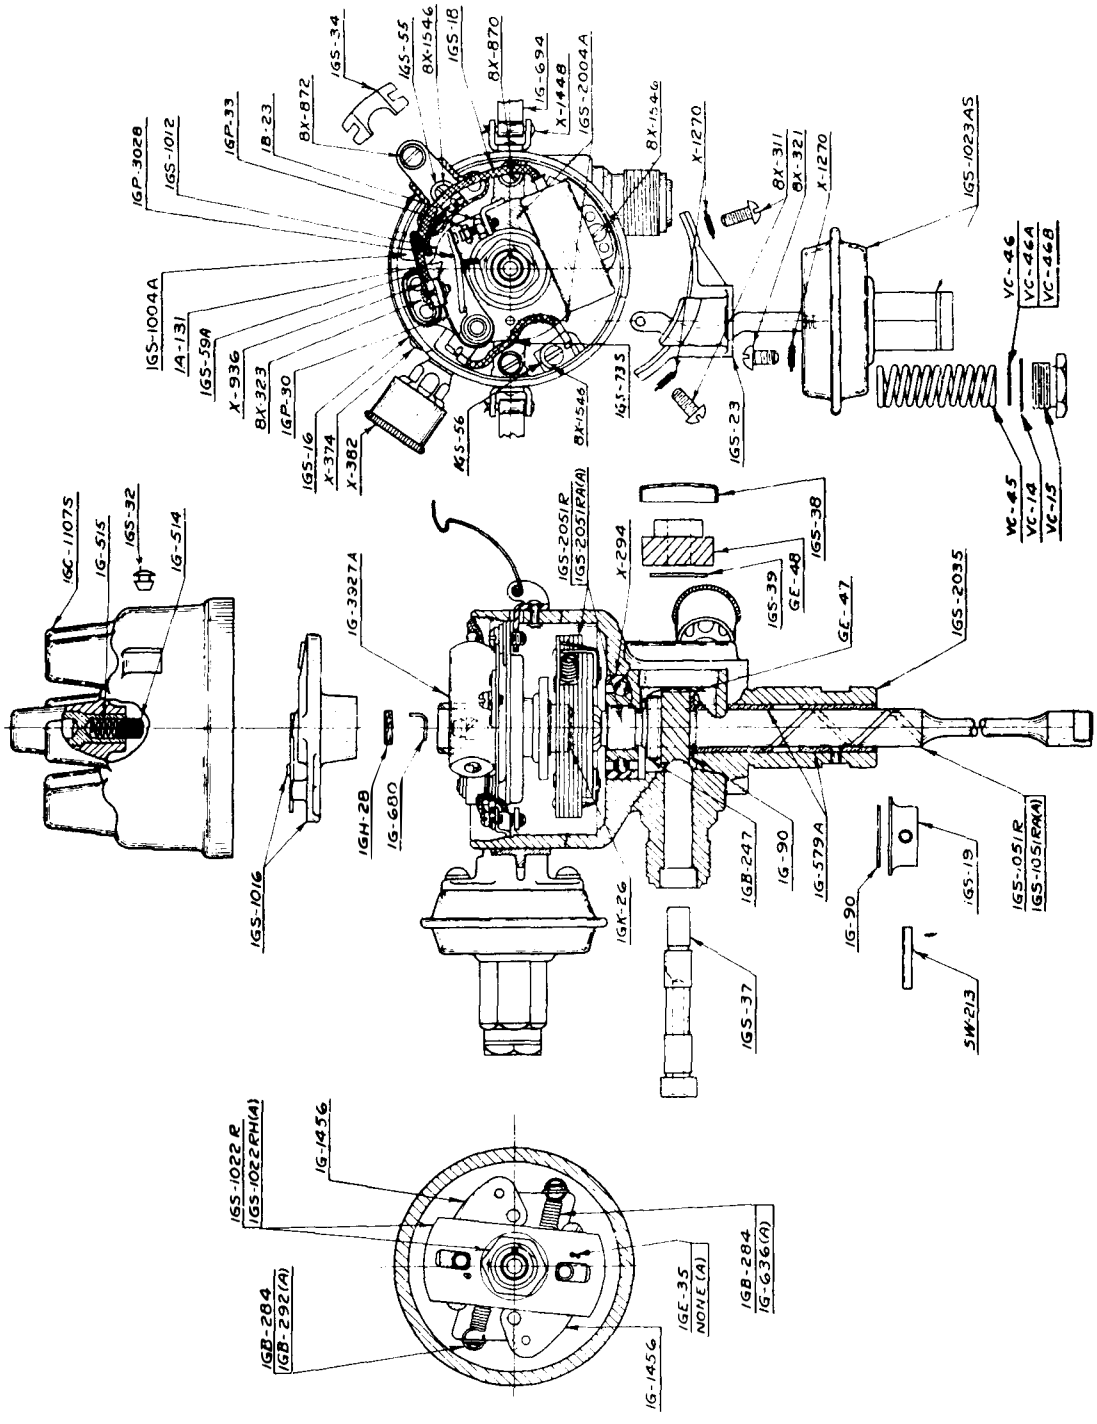

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGS-4010,-1, A,B,-2,C,-1 DISTRIBUTOR PARTS LIST IGS-4010,-1, A,B,-2,C,-1

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
*	1	Advance Pointer
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	ROTOR
*	1	Cam & Stop Plate - 6 Cyl.R.H.
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
*	1	Advance Control Arm Assy.
IG-816C	1	Thrust Washer
8X-135	1	1/4-20x2 Fill. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
12X-199	1	1/4 Lock Washer
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-5927A	1	CONDENSER ASSEMBLY
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
		1 2 3 4 5
IGS-55	1	Terminal
X-936	1	Terminal
*	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGS-73S	1	Lead Assembly
IGS-56	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Screw
IGS-2028	1	Dist. Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
*	1	Drive Shaft & Gov. Assy.
*	1	Weight Spring Set
IG-1456	2	Weight Assembly
IGS-1081RB	1	Drive Shaft Assembly
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 2-1-40)

* See table following parts list for part number applying to assembly wanted.

\+ Use as required.

‡ SERVICE BREAKER POINT SET IGP-3028A.

Assembly No.	Cam Assembly	Vacuum Chamber	Spring	Advance Arm	Advance Pointer
IGS-4010	IGS-1022RH	IGS-1023DS	VC-55 (Black)	None	None
IGS-4010-1	IGS-1022RH	IGS-1023DS	VC-55 (Black)	IGS-1020S	IGS-21
IGS-4010A	IGS-1022RG	IGS-1023DS	VC-55 (Black)	None	None
IGS-4010A-2	IGS-1022RG	IGS-1023DS	VC-55 (Black)	IGS-1027S	None
IGS-4010B	IGS-1022RH	IGS-1023DS	VC-55 (Black)	None	None
IGS-4010B-2	IGS-1022RH	IGS-1023DS	VC-55 (Black)	IGS-1027S	None
IGS-4010C	IGS-1022RH	IGT-1023ES	VC-45 (Red)	None	None
IGS-4010C-1	IGS-1022RH	IGT-1023ES	VC-45 (Red)	IGS-1020S	IGS-21

Assembly No.	Breaker Plate Assy.	Brkr. Plate Part Assy.	Dr. Shaft & Gov.	Weight Spr. Set
IGS-4010,-1	IGS-2004B	IGS-1004	IGS-2081RB	IGB-292SS
IGS-4010A,-2	IGS-2004B	IGS-1004	IGS-2081RD	IG-636SS
IGS-4010B,-2	IGS-2004	IGS-1004	IGS-2081RC	IG-636HS
IGS-4010C,-1	IGS-2004E	IGS-1004E	IGS-2081RB	IGB-292SS


UNIT	APPLICATION
IGS-4010	Chrysler, DeSoto, Dodge Truck, Fargo Truck
IGS-4010B	Dodge Truck, Fargo Truck
IGS-4010C	Chrysler

Printed in U.S.A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4010,-1,A,B,-2,C,-1 DISTRIBUTOR ILLUSTRATION

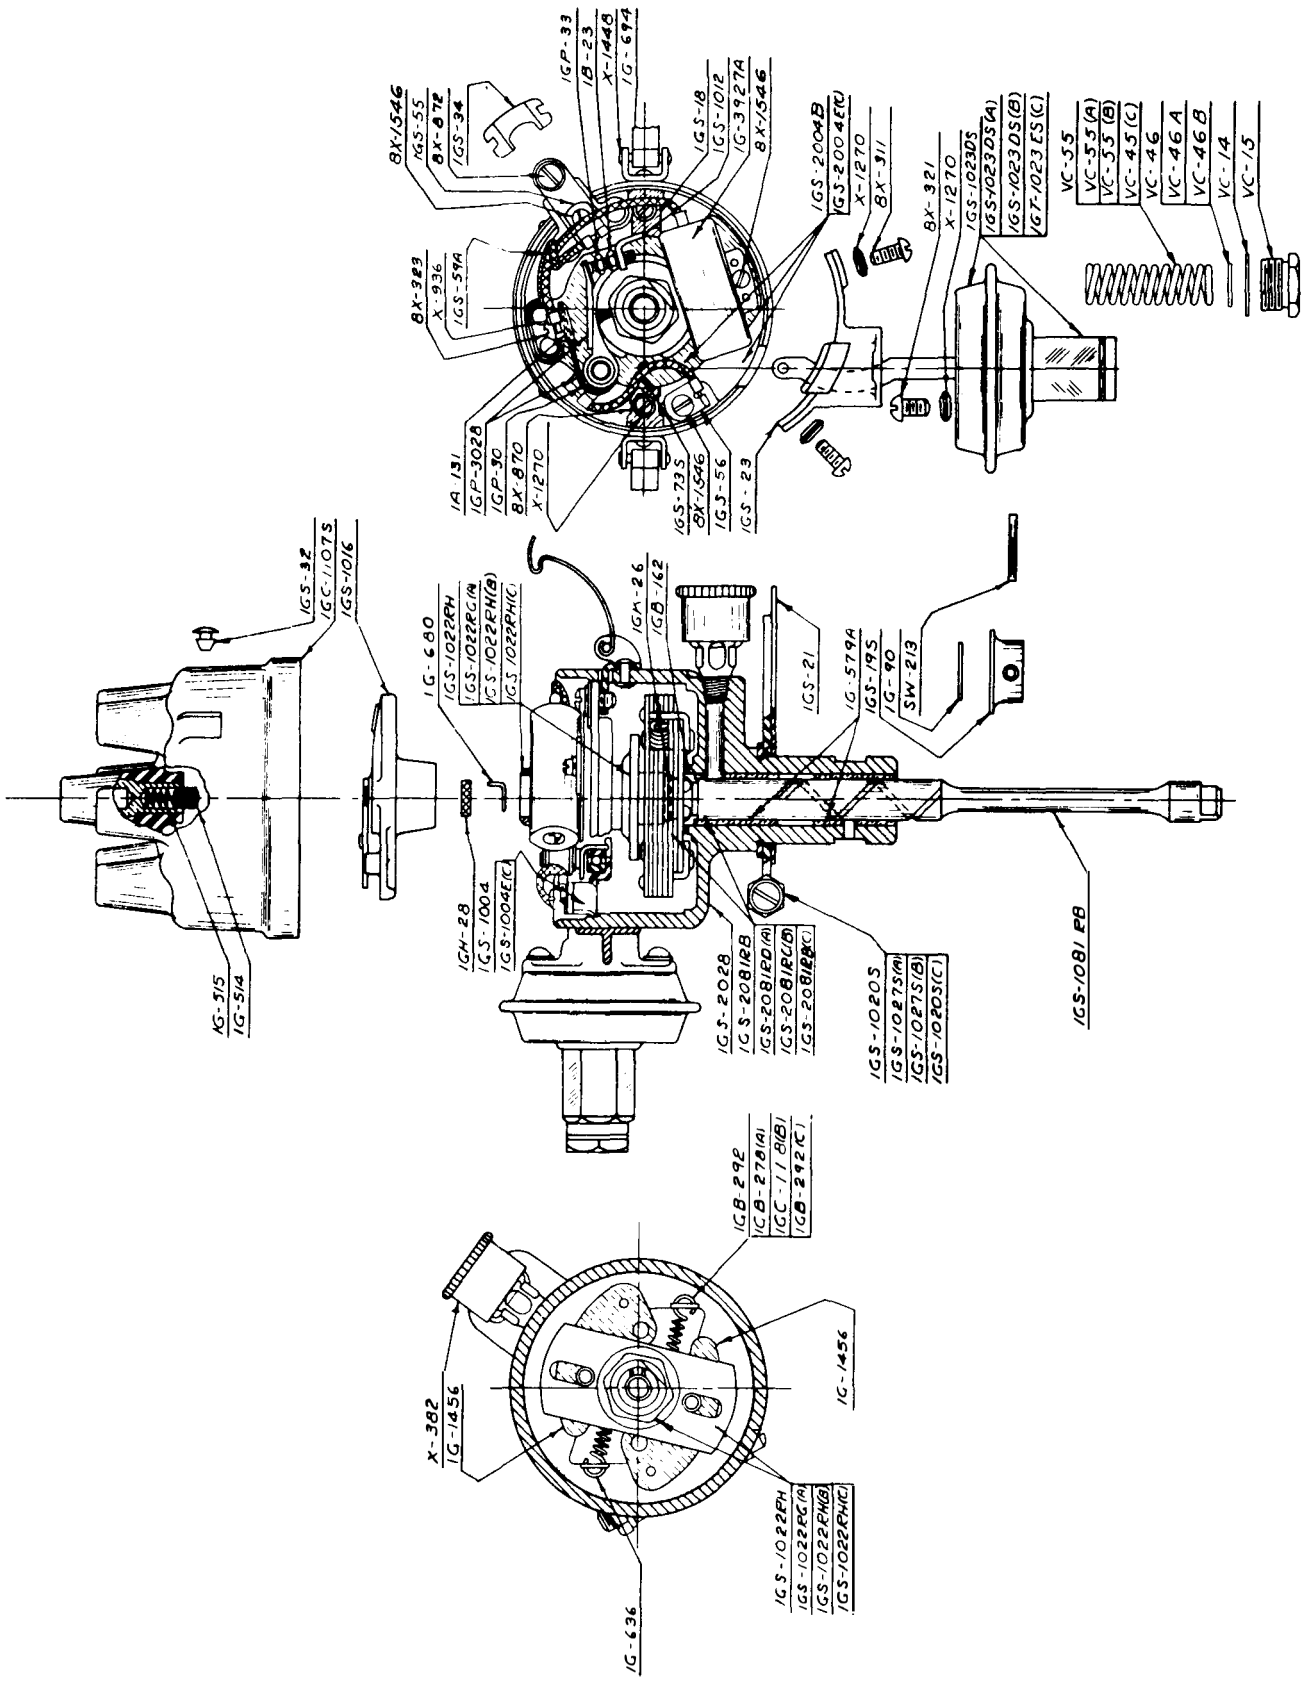

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53	1	Drive Shaft Extension
IGH-54	1	Distributor Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGH-1060	1	Advance Control Arm
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-34	1	Terminal Slot Cover
IGS-50	1	Vacuum Chamber Bracket
IGS-1016	1	Rotor
IGS-1022LB	1	Cam & Stop Plate - 6 Cyl. - L.H.
IGS-2044B	1	Breaker Plate Assembly † Identified by 7.5.
IA-131	1	Breaker Arm Spring Clip
IG-2671K	1	CONDENSER ASSY.
IGP-3028L*	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-78	1	Lead Assembly
IGS-77	1	Terminal
X-1484	1	Terminal
IGS-1044B	1	Brkr. Plate Part Assy.
IGS-1046	1	Brkr. Sub Plate Assy.
IB-23	1	Brkr. Point Lock Nut
IGP-33*	1	Breaker Point Screw
IGS-76S	1	Lead Assembly
IGS-74	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-2067	1	Distributor Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGT-1028BS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	**	Washer - .032" Thick
VC-46A	**	Washer - .010" Thick
VC-46B	**	Washer - .065" Thick
VC-50	1	Spring (Orange)
IGT-2034LA	1	Drive Shaft & Gov. Assy.
IG-727*	1	Weight Spring
IG-2456	2	Weight Assembly
IGB-222*	1	Weight Spring
IGT-1034LA	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-309	2	#10-32x1/2 Rd. Hd. Sc.
8X-321	2	#10-32x5/16 Rd. Hd. Sc.
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 5-22-39)

† See Manual Bulletin IG-11.


* Service BREAKER POINT SET IGP-3028LS, & Service Weight Spring Set IG-727SS.

** Use as required.

UNIT	APPLICATION
IGS-4011	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4011 DISTRIBUTOR ILLUSTRATION

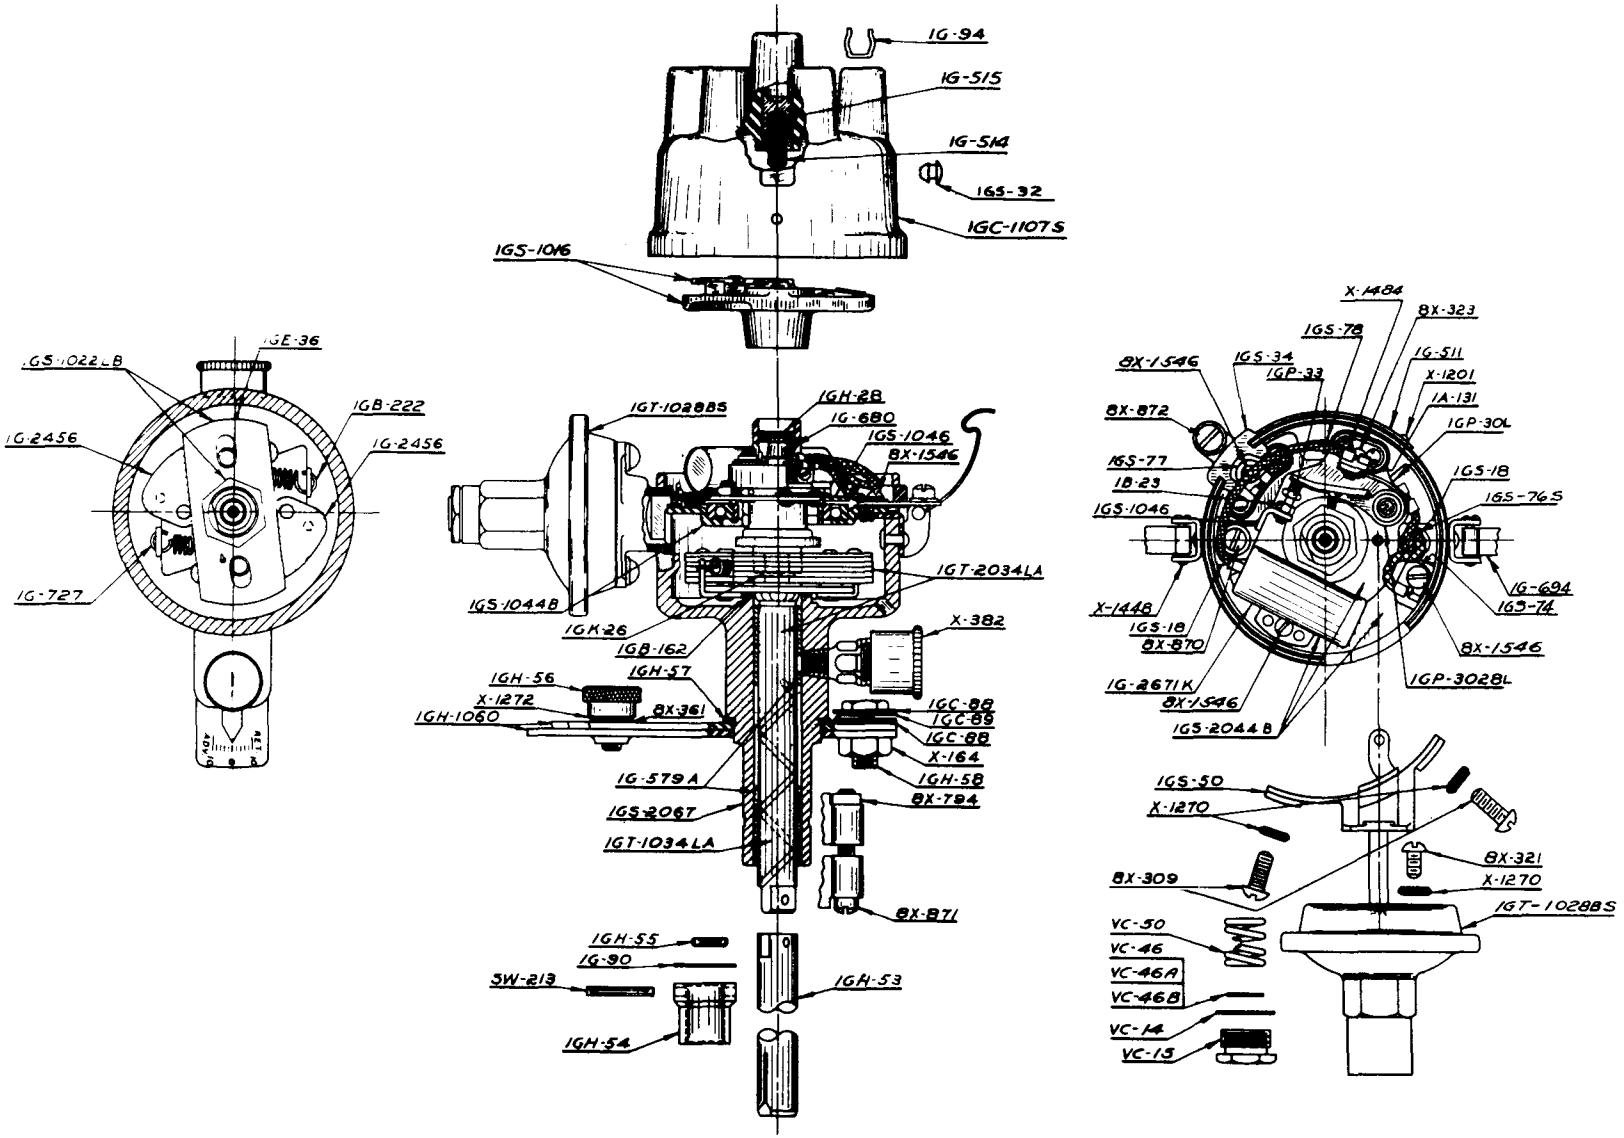

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-136	1	Drive Shaft Collar
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer
IGS-18	2	Bearing Clamp
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
IGS-1022RO	1	Cam and Stop Plate 6 cyl. R.H.
IGS-1023ES	1	Vacuum Chamber
IGS-2004D	1	Breaker Plate Assy. * Identified by 7.5
IA-131	1	Breaker Arm Spring Clip
IG-2671F	1	Condenser Assembly
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004D	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
IGS-2053R	1	Drive Shaft & Gov. Assy.
IG-884‡	2	Weight Spring
IG-1456	2	Weight Assembly
IGS-1053R	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-2069	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5


(Issued 5-21-37)


* See Manual Bulletin IG-11.

‡ Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-884S.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4012 DISTRIBUTOR ILLUSTRATION

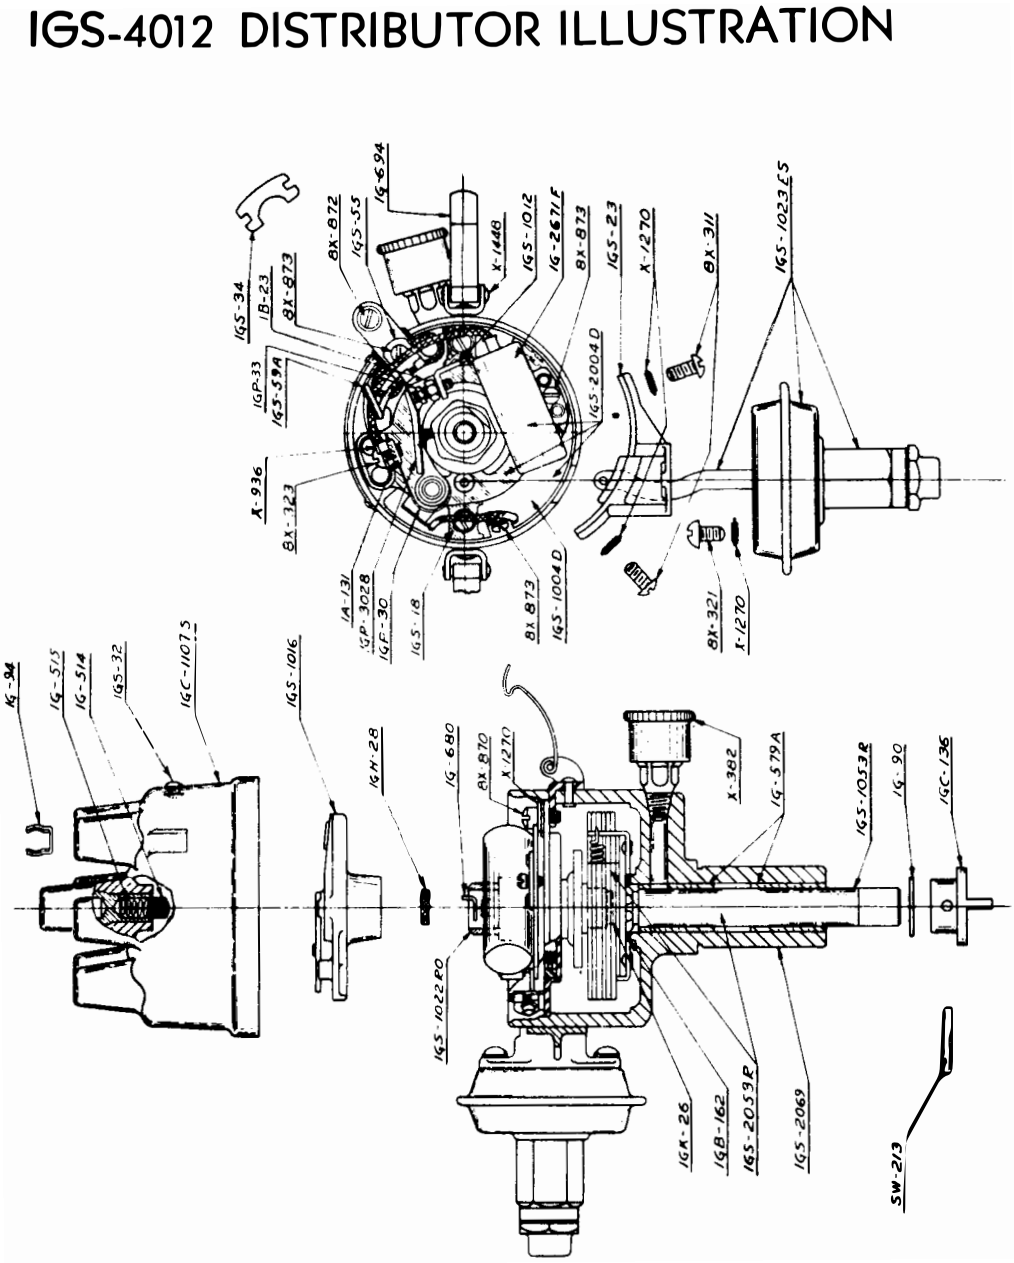

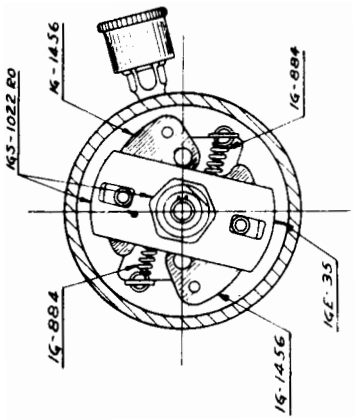

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H.T. Wire Terminal
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-34	1	Terminal Slot Cover
IGS-50	1	Vacuum Chamber Bracket
IGS-1016	1	Rotor
IGS-1022LC	1	Cam & Stop Plate - 6 Cyl. L.H.
IGS-2044B	1	Breaker Plate Assy.
		‡ Identified by 7.5
IA-131	1	Breaker Arm Spring Clip
IG-2671K	1	Condenser Assy.
IGP-3028L‡	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-78	1	Lead Assy.
IGS-77	1	Terminal
X-1484	1	Terminal
IGS-1044B	1	Breaker Plate Part Assy.
IGS-1046	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Point Screw
IGS-76S	1	Lead Assy.
IGS-74	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Screw
X-1012	4	#6 Lock Washer
IGS-2067	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10 1/4 Tubular Rivet
X-1448	2	Hinge Pin
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-2028AS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
IGT-2034LC	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assy.
IGB-210‡	1	Weight Spring
IGB-222‡	1	Weight Spring
IGT-1034LA	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-309	2	#10-32x1/2 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 9-26-38)


‡ Service Weight Spring Set IGB-210AS & Service Breaker Point Set IGP-3028LS

* Use as required.

‡ See Manual Bulletin IG-11.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4013 DISTRIBUTOR ILLUSTRATION

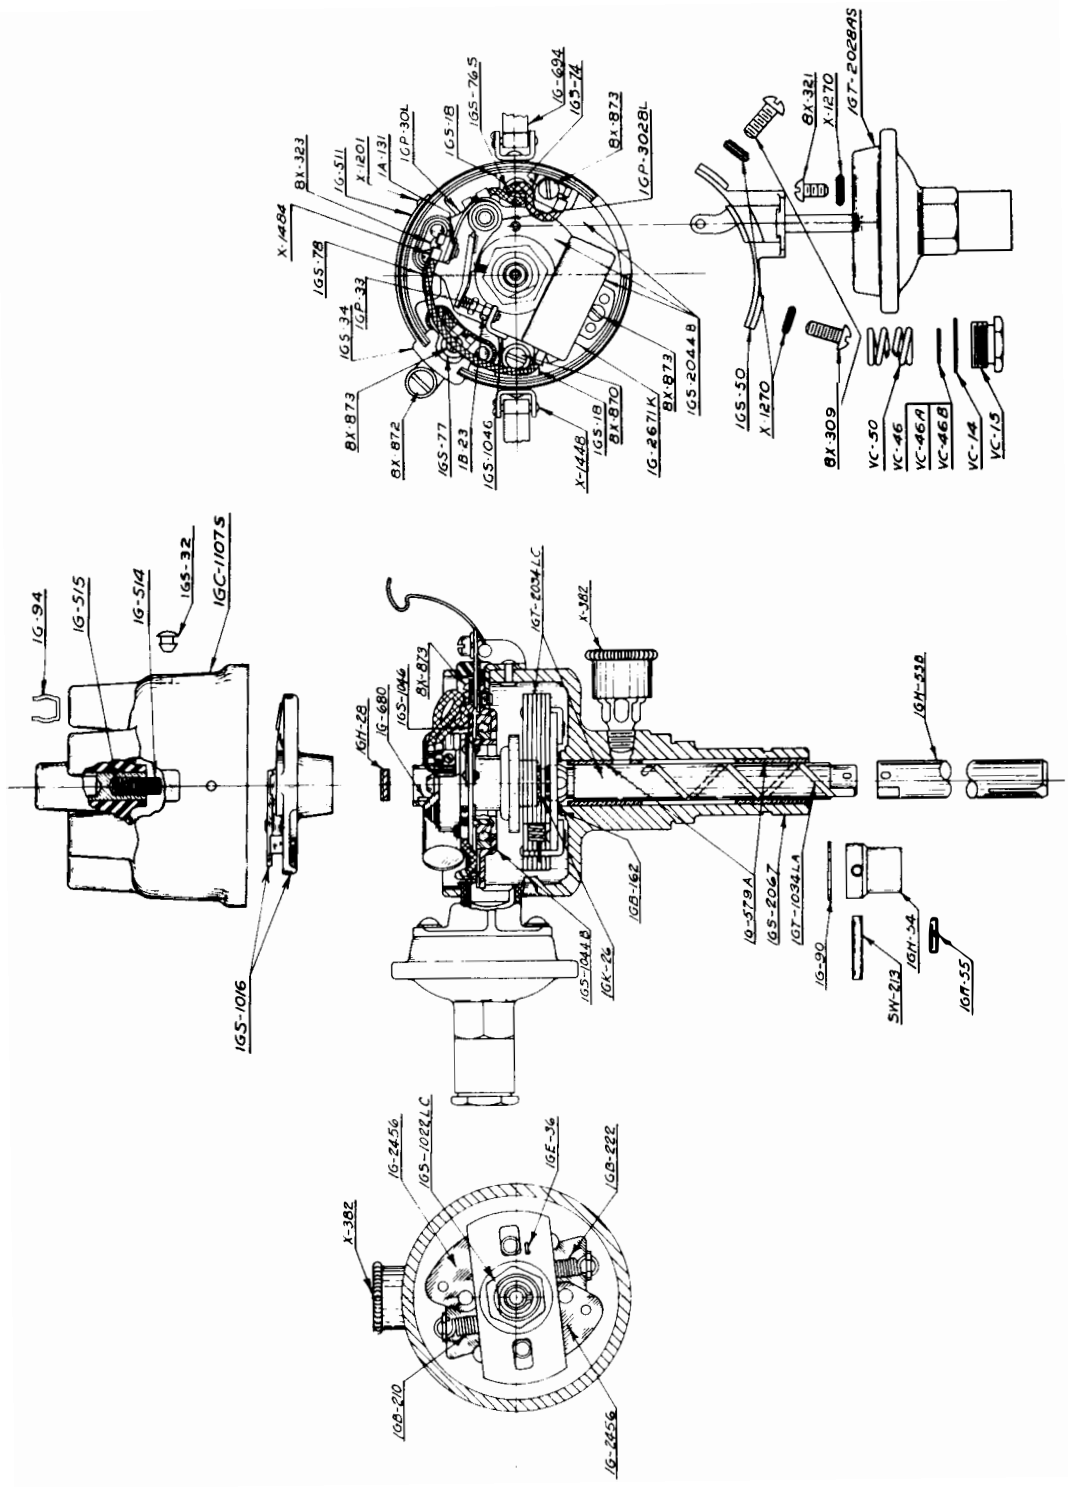

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
IGS-1022RH	1	Cam & Stop Plate - 6 Cyl.- R. H.
IGS-1023DS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-55	1	Spring (Black)
IGS-1027S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGS-2001	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGS-2004	1	Breaker Plate Assy. ± Identified by 10
IA-131	1	Brkr. Arm Spring Clip
IG-3927A	1	Condenser Assy.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assy.
IGS-55	1	Terminal
X-936	1	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-1004	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGS-73S	1	Lead Assy.
IGS-56	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32 x3/16 Fill. Hd. Screw
X-1012	4	#6 Lock Washer
IGS-2081R	1	Drive Shaft & Gov. Assy.
IG-636‡	1	Weight Spring
IG-1456	2	Weight Assy.
IGB-292‡	1	Weight Spring
IGS-1081R	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 8/12/38)

* Use as required.


† Used with assemblies having a suffix "-1".

‡ Service Breaker Point Set IGP-3028A, and Service Weight Spring Set IGB-292SS.

± See Manual Bulletin IG-11.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4014,-1 DISTRIBUTOR ILLUSTRATION

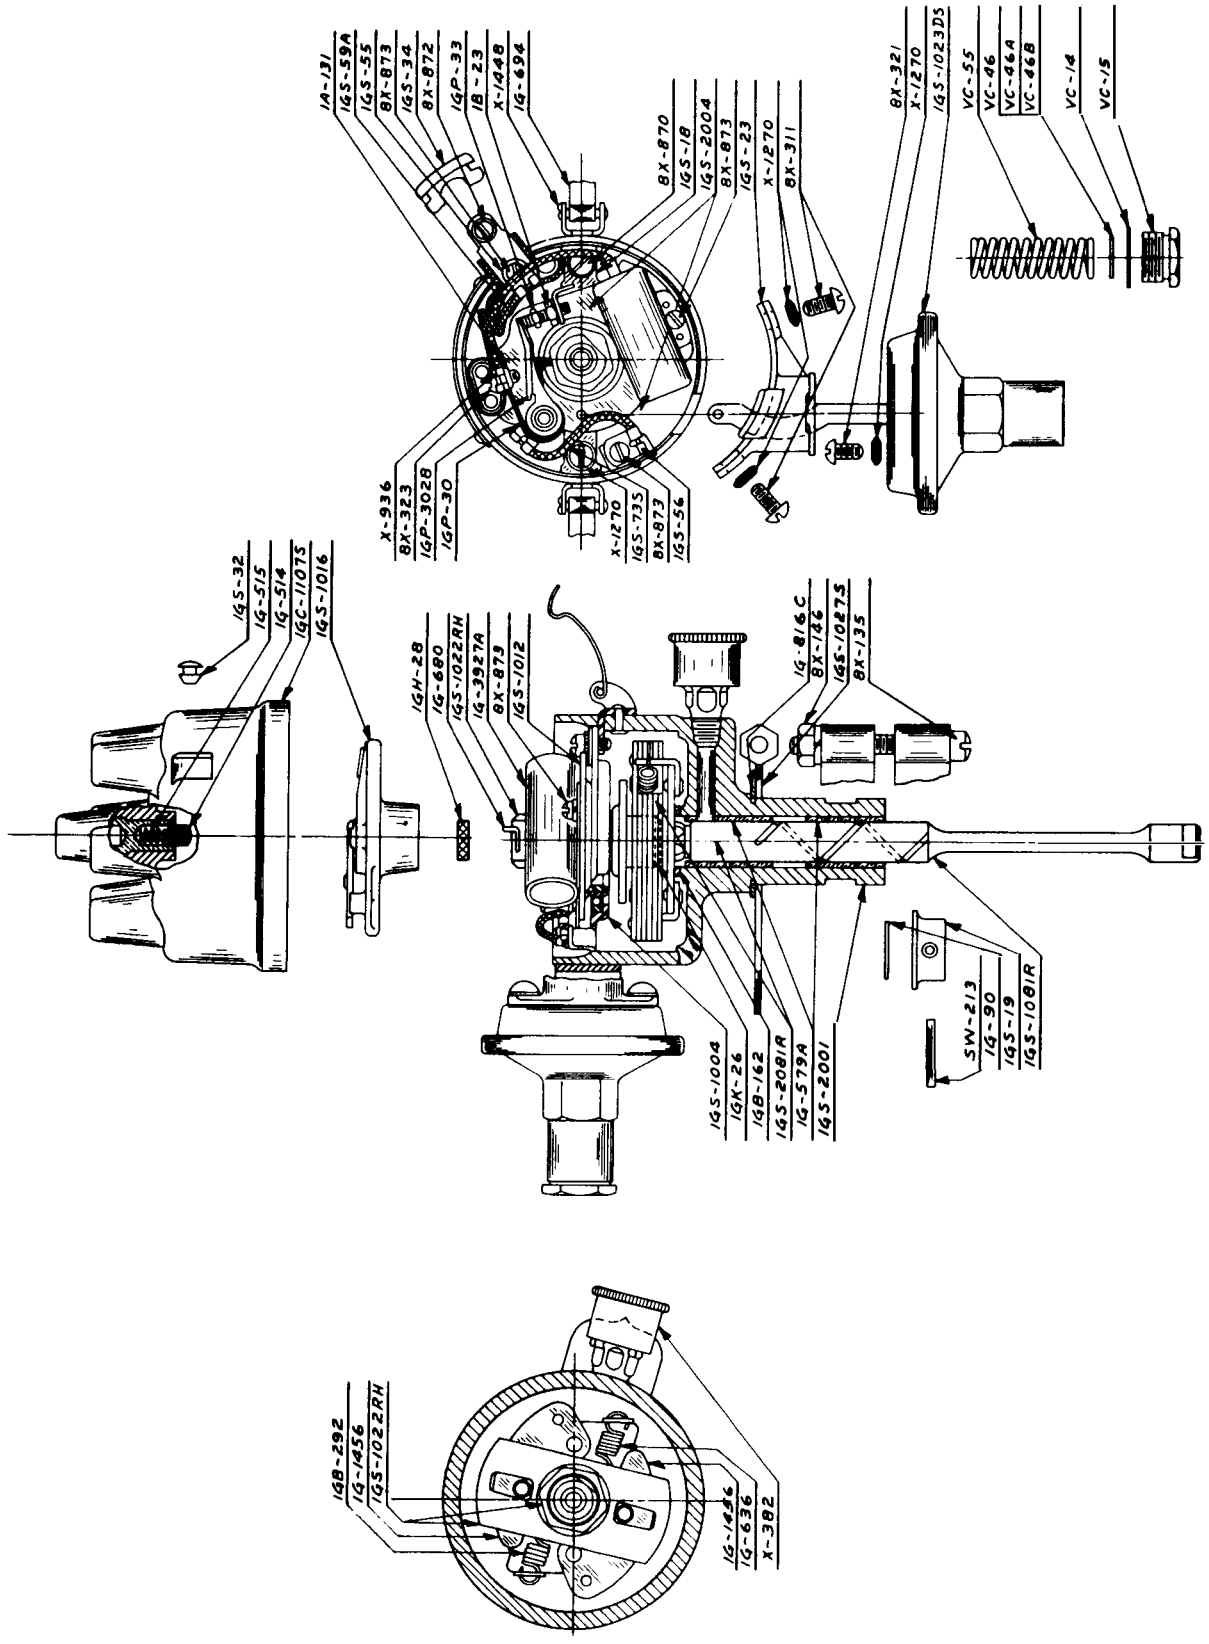

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Sleeve Retaining Spring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
IGS-1022RJ	1	Cam & Stop Plate - 6 Cyl. R. H.
IGS-1023DS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-55	1	Spring (Black)
IGS-1027S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGS-2001	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGS-2004	1	Breaker Plate Assy. ‡ Identified by 10
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	Condenser Assy.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
	1	2 3 4 5
IGS-59A	1	Lead Assy.
IGS-55	1	Terminal
X-936	1	Terminal
IGS-1004	1	Breaker Plate Part Assy.
IGS-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGS-73S	1	Lead Assy.
IGS-56	1	Terminal
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Screw
X-1012	4	#6 Lock Washer
IGS-2081RA	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
IGB-208‡	2	Weight Spring
IGS-1081RA	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 8/4/38)

* Use as required.


† Used with assemblies having a suffix "-1".

‡ Service Breaker Point Set IGP-3028A, and Service Weight Spring Set IGB-208S.

‡ See Manual Bulletin IG-11.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4015,-1 DISTRIBUTOR ILLUSTRATION

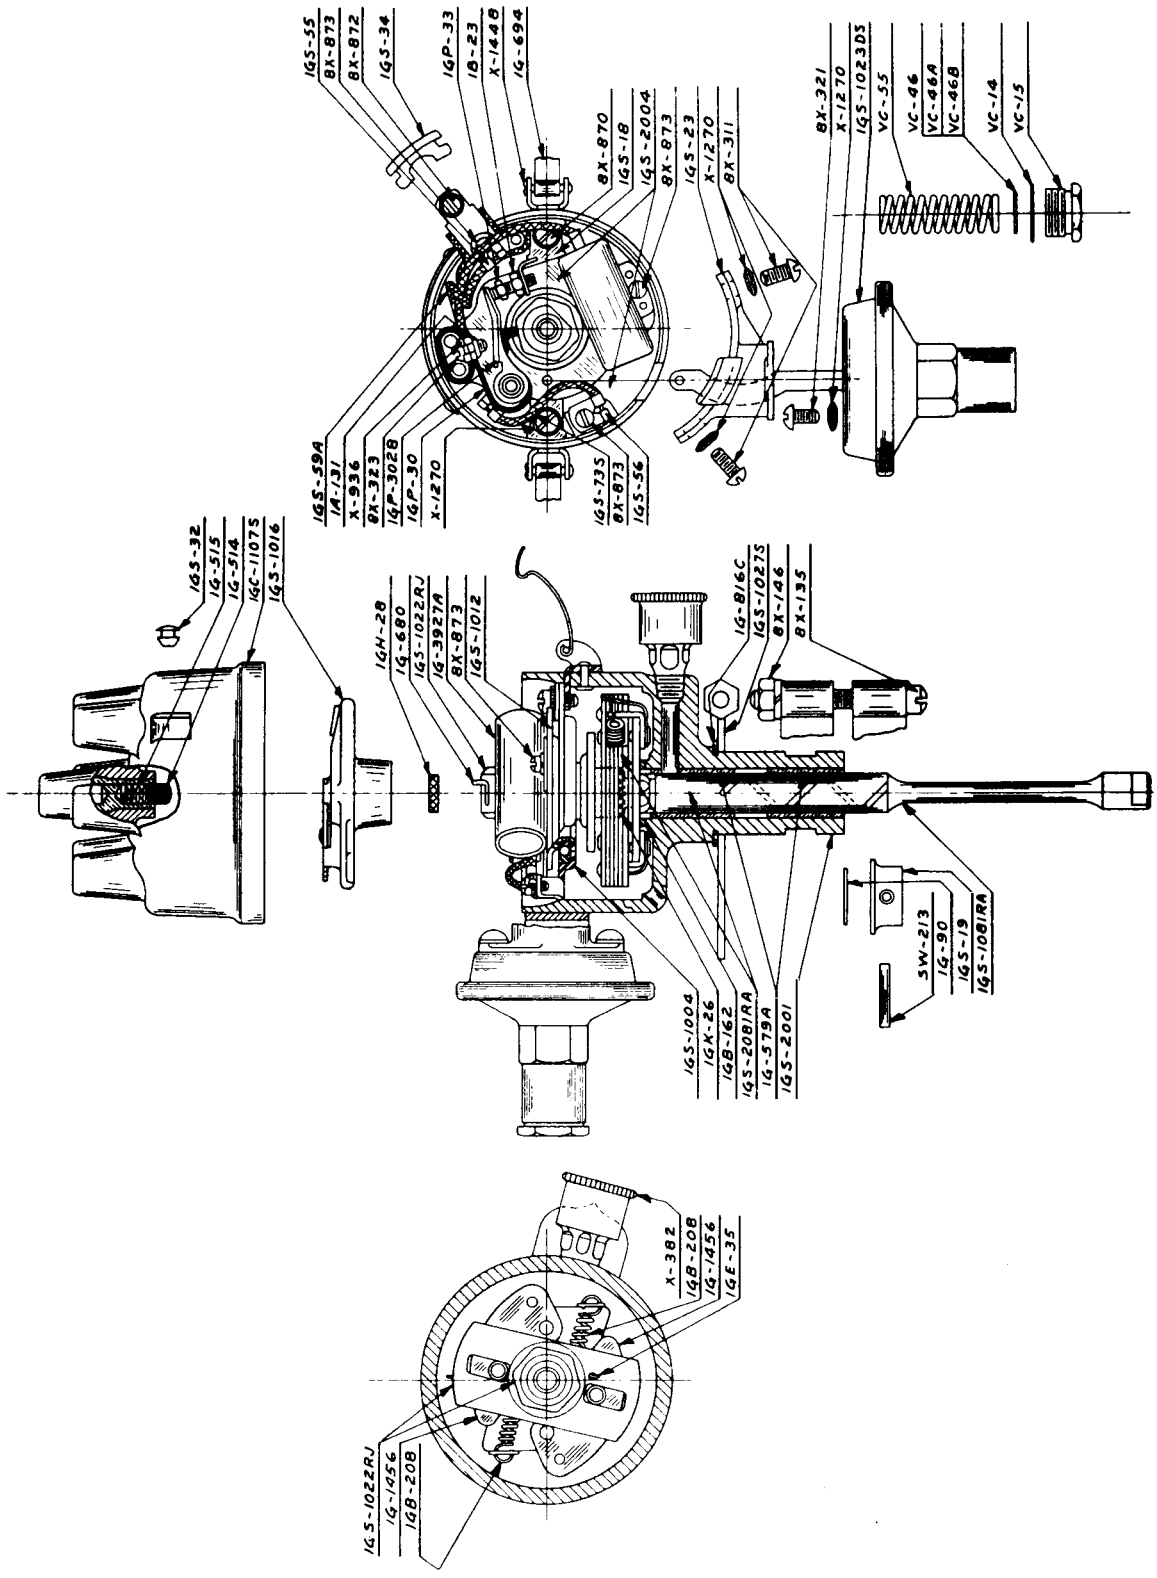

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	Rotor
IGS-1020S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGS-1022RH	1	Cam & Stop Plate - 6 Cyl.R.H.
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
IGS-2024RG	1	Drive Shaft & Gov. Assy.
IG-636‡	1	Weight Spring
IG-1456	2	Weight Assy.
IGB-292‡	1	Weight Spring
IGS-1024RC	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-2028	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	Condenser Assy.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assy.
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assy.
IGS-88	2	Terminal
*	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
12X-1275	1	#8 Lock Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	5	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Screw
SW-213	1	Distributor Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 10-18-38)

Assy. No.	Breaker Plate Assy.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring
IGS-4101A	IGS-3004B	IGS-1004A	IGS-1023S	VC-49 (Blue)
IGS-4101A-1	IGS-3004B	IGS-1004A	IGS-1023S	VC-49 (Blue)
IGS-4101B	IGS-3004C	IGS-1004	IGS-1023DS	VC-55 (Black)
IGS-4101B-1	IGS-3004C	IGS-1004	IGS-1023DS	VC-55 (Black)
IGS-4101C	IGS-3004B	IGS-1004A	IGT-1023GS	VC-73 (Maroon)
IGS-4101C-1	IGS-3004B	IGS-1004A	IGT-1023GS	VC-73 (Maroon)


† Used with assemblies having the suffix "-1".

‡ Service Breaker Point Set IGP-3028ES, & Service Weight Spring Set IGB-292SS.

+ Use as required.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGS-4101A,B,C,-1 DISTRIBUTOR ILLUSTRATION

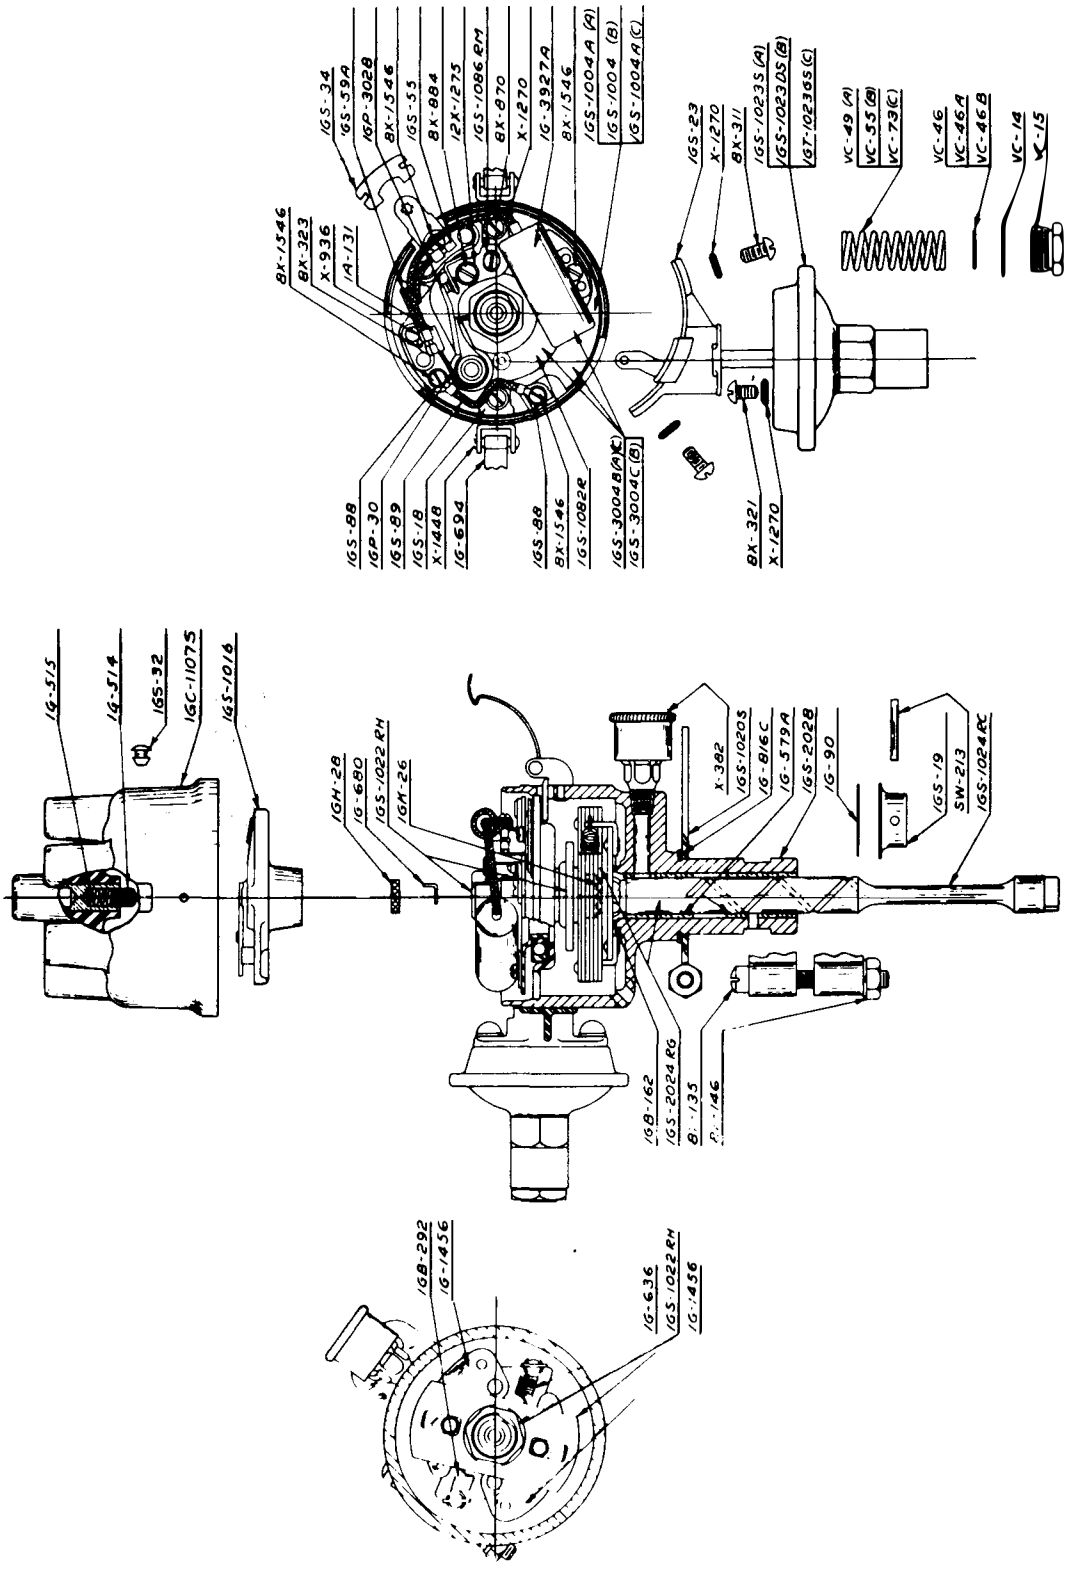

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
*	1	Thrust Washer
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
*	1	Washer
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-21†	1	Advance Pointer
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	ROTOR
IGS-1020S††	1	Advance Control Arm Assy.
*	1	Cam & Stop Plate - 6 Cyl. R.H.
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
IGS-2028	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
*	1	Weight Spring Set
*	1	Drive Shaft Assembly
*	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
‡IGP-3028	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
*	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
‡ IGS-1086RM	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd- Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Screw
SW-213	1	Distributor Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 7-31-40)

Assembly No.	Thrust Washer	Washer	Cam Assembly	Vacuum Chamber	Plunger Spring	Dr. Shaft & Gov.
IGS-4102,-1	IGB-162	IGK-26	IGS-1022RH	IGT-1023ES	VC-45 (Red)	IGS-2081RB
IGS-4102A,-2	IGB-162	IGK-26	IGS-1022RU	IGS-1023DS	VC-55 (Black)	IGS-2081RC-1
IGS-4102B,-2	IGB-162	IGK-26	IGS-1022RH	IGS-1023DS	VC-55 (Black)	IGS-2081RB
IGS-4102C,-1	IGB-162	IGK-26	IGS-1022RH	IGS-1023HS	VC-73 (Maroon)	IGS-2081RB
IGS-4102D,-1	IGB-162	IGK-26	IGS-1022RH	IGS-1023JS	VC-45 (Red)	IGS-2081RB
IGS-4102E,-2	IGS-104	IGS-99	IGS-1100R	IGS-1023DS	VC-55 (Black)	IGS-2081RD

Assembly No.	Spring Set	Dr. Shaft Assembly	Brkr. Plate Assembly	Brkr. Plate Part Assy.
IGS-4102,-1	IGB-292SS	IGS-1081RB	IGS-3004A	IGS-1004E
IGS-4102A,-2	IG-636HS	IGS-1081RB	IGS-3004	IGS-1004
IGS-4102B,-2	IGB-292SS	IGS-1081RB	IGS-3004	IGS-1004
IGS-4102C,-1	IGB-292SS	IGS-1081RB	IGS-3004A	IGS-1004E
IGS-4102D,-1	IGB-292SS	IGS-1081RB	IGS-3004D	IGS-1004G
IGS-4102E,-2	IG-636SS	IGS-1081RB	IGS-3004	IGS-1004


\+ Use as required.
* See table following parts list for part number applying to assembly wanted.
‡ SERVICE BREAKER POINT SET IGP-3028ES.
† Used with assemblies having the suffix "-1".
†† Used with assemblies having the suffix "-1" or "-2".

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4102A,B,C,D,E, -1 & -2 DISTRIBUTOR ILLUSTRATION

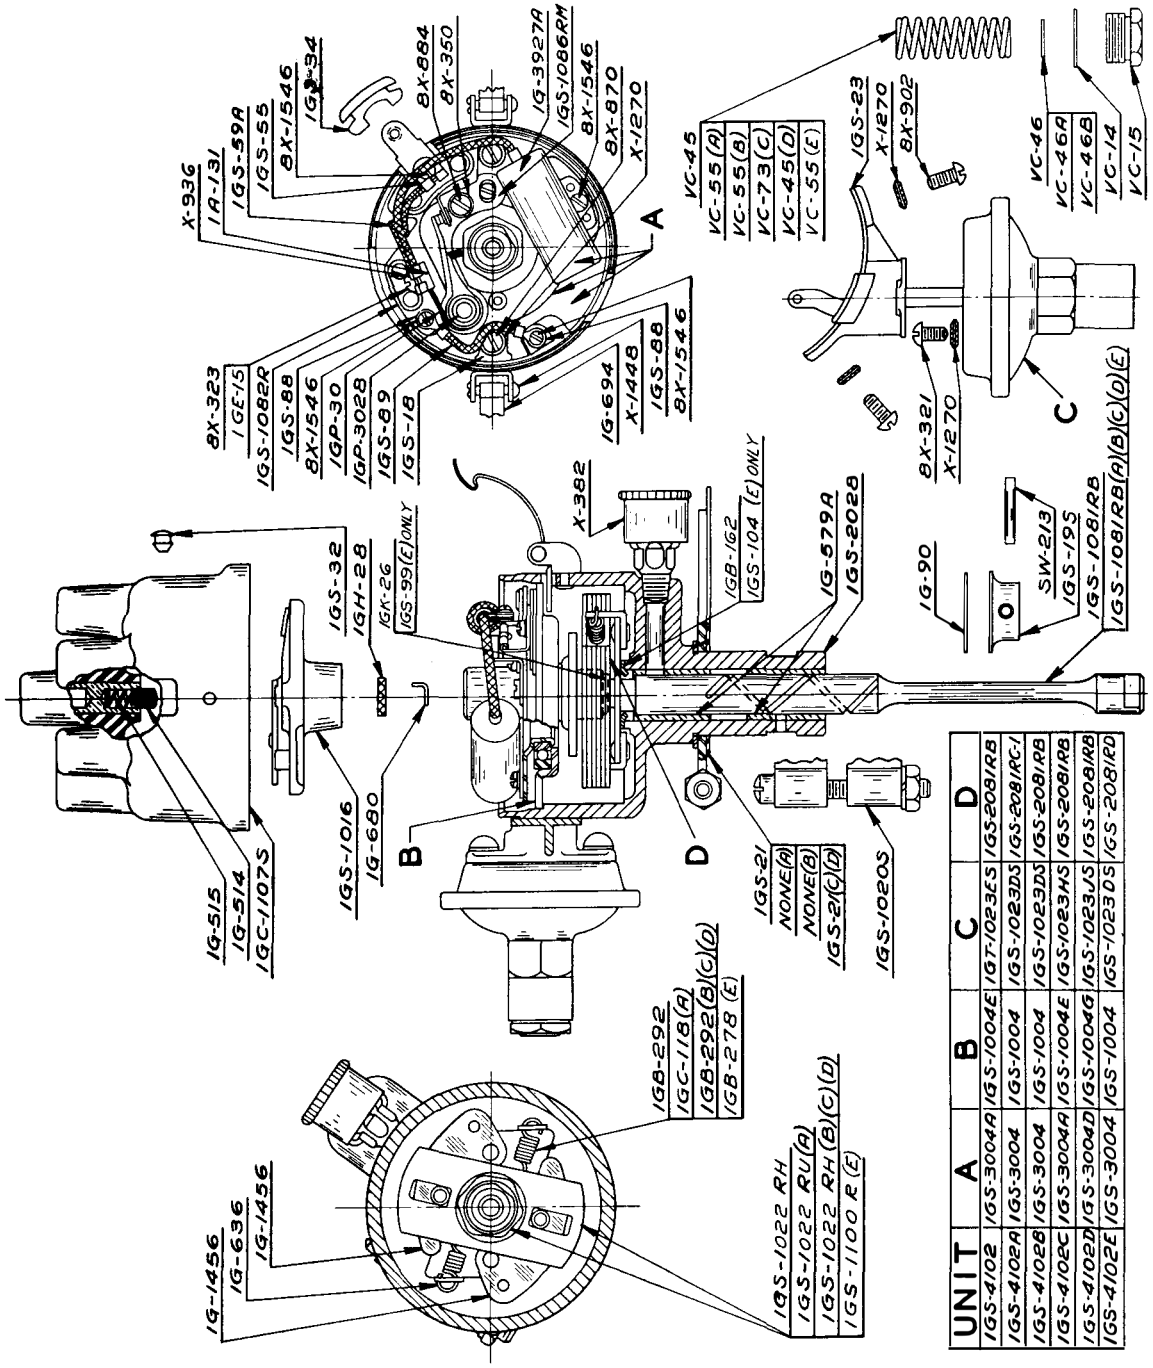

UNIT	A	B	C	D
IGS-4102	IGS-3004A	IGS-1004E	IGT-1023ES	IGS-208/RB
IGS-4102A	IGS-3004	IGS-1004	IGS-1023DS	IGS-208/RC-1
IGS-4102B	IGS-3004	IGS-1004	IGS-1023DS	IGS-208/RB
IGS-4102C	IGS-3004A	IGS-1004E	IGS-1023HS	IGS-208/RB
IGS-4102D	IGS-3004D	IGS-1004G	IGS-1023JS	IGS-208/RB
IGS-4102E	IGS-3004	IGS-1004	IGS-1023DS	IGS-208/RD

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016	1	ROTOR
IGS-1020S‡	1	Advance Control Arm Assy.
IG-816C‡	1	Thrust Washer
8X-135‡	1	1/4-20x2 Fill. Hd. Screw
8X-146‡	1	1/4-20 Hex. Nut
12X-199‡	1	1/4 Lock Washer
*	1	Cam & Stop Plate - 6 Cyl. - R.H.
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	**	Washer - .032" Thick
VC-46A	**	Washer - .010" Thick
VC-46B	**	Washer - .065" Thick
*	1	Spring
*	1	Drive Shaft & Gov. Assy.
IG-636	1	Weight Spring
IG-1456	2	Weight Assy.
*	1	Weight Spring
IGS-1025RC	1	Drive Shaft Assy.
IGS-2028	1	Distributor Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Distributor Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-3004	1	Breaker Plate Assy. ± Identified by 10.
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSY.
IGP-3028†	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004	1	Brkr. Plate Part Assy.
IGS-1082R	1	Brkr. Sub Plate Assy.
IGS-1086RM†	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	5	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 5-22-39)

‡ Used on assemblies having the suffix "-1".

** Use as required.

* See table following parts list for part number applying to assembly wanted.

† Service BREAKER POINT SET IGP-3028ES.

± See Manual Bulletin IG-11.

Assembly No.	Shaft & Gov. Assy.	Weight Spring	Weight Spr. Set	Cam & Stop Plate	Vacuum Chamber	Spring
IGS-4103	IGS-2025RF	IGB-278	IG-636SS	IGS-1022RG	IGS-1023CS	VC-49 (Blue)
IGS-4103-1	IGS-2025RF	IGB-278	IG-636SS	IGS-1022RG	IGS-1023CS	VC-49 (Blue)
IGS-4103A	IGS-2025RF	IGB-278	IG-636SS	IGS-1022RG	IGS-1023GS	VC-50 (Orange)
IGS-4103A-1	IGS-2025RF	IGB-278	IG-636SS	IGS-1022RG	IGS-1023GS	VC-50 (Orange)
IGS-4103B	IGS-2025RG	IGC-118	IG-636HS	IGS-1022RH	IGS-1023DS	VC-55 (Black)
IGS-4103B-1	IGS-2025RG	IGC-118	IG-636HS	IGS-1022RH	IGS-1023DS	VC-55 (Black)


UNIT	APPLICATION
IGS-4103,-1	Dodge, Plymouth
IGS-4103A,-1	Dodge, Dodge Truck, Plymouth, Fargo Truck
IGS-4103B,-1	Dodge Truck, Fargo Truck

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4103,A,B,-I DISTRIBUTOR ILLUSTRATION

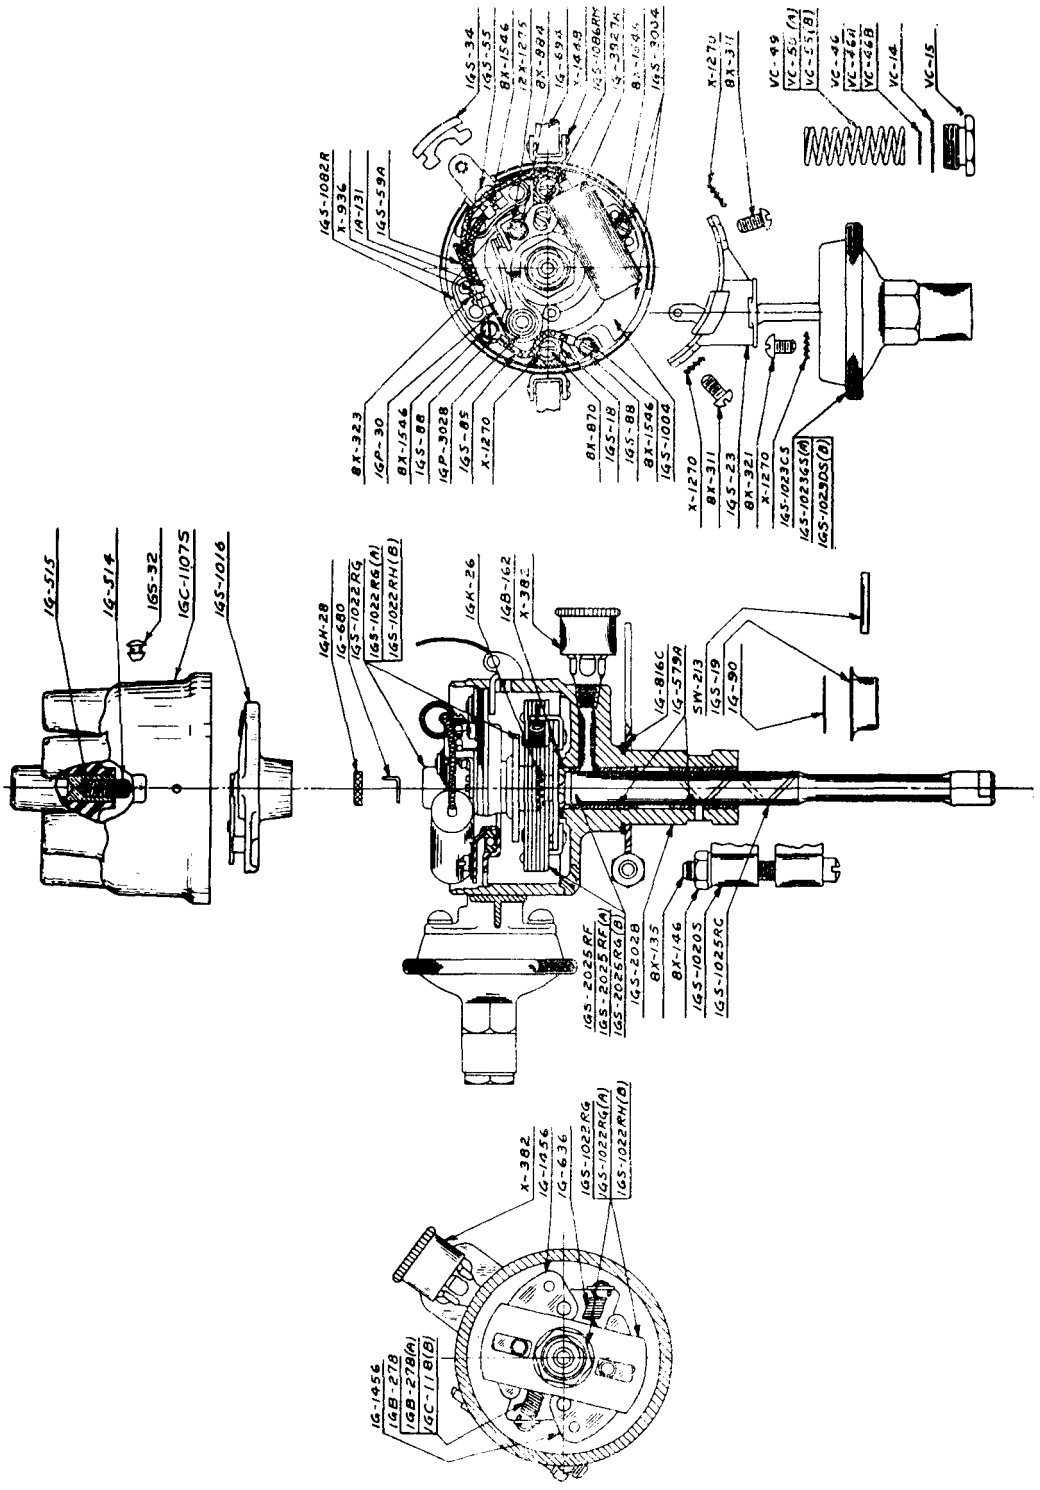

IGS-4104 DISTRIBUTOR PARTS LIST IGS-4104

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-447	1	Dist. Drive Sleeve
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGB-1271-1	1	Advance Control Arm Assy.
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-17	1	Lock Spring Ring
IGS-18	2	Bearing Clamp
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-1016	1	ROTOR
IGS-1023FS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-73	1	Spring (Maroon)
IGS-1100RG	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-2070RA	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292‡	2	Weight Spring
IGS-1070R	1	Drive Shaft Assembly
IGS-2091	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-490	1	Press in - Sleeve Oiler
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGS-3092R	1	Breaker Plate Assembly ± Identified by 5.5
IA-131	1	Breaker Arm Spring Clip
IG-2671F	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004F	1	Breaker Plate Part Assy.
IGS-1092R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IGT-70	1	Governor Control Spring
SW-213	1	Distributor Drive Rivet
X-196	1	#10 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 8-16-40)

‡ Service BREAKER POINT SET IGP-3028ES & Service Weight Spring Set IGB-292S.


± See Manual Bulletin No. IG-11.


* Use as required.


UNIT	APPLICATION
IGS-4104	Nash

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4104 DISTRIBUTOR ILLUSTRATION

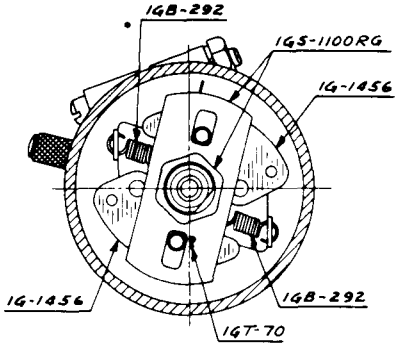

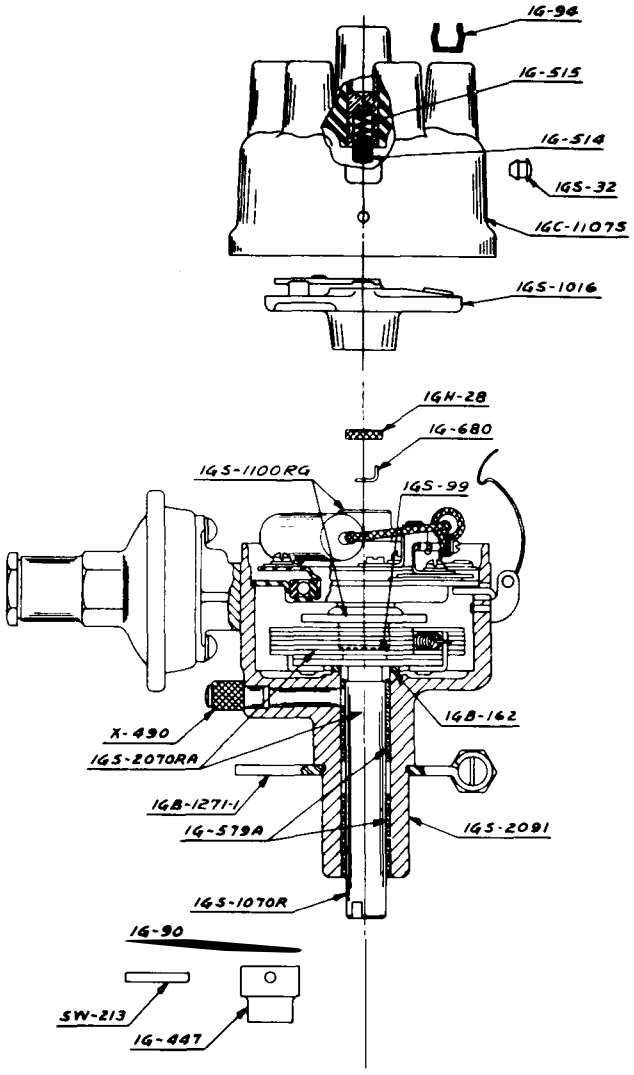

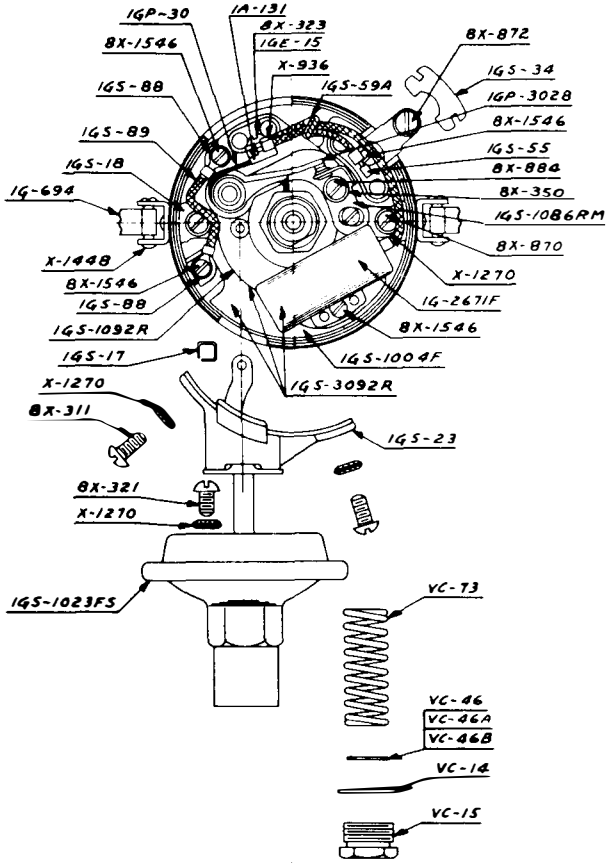

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-447	1	Dist. Drive Sleeve
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGB-1271	1	Hold Down Arm Assy.
8X-146	1	1/4-20 Hex. Nut
X-199	1	1/4 Lock Washer
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGC-1123	1	DIST. CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGC-1124	1	DIST. CAP COVER ASSY.
IGB-230	3	Gasket
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGS-17	1	Lock Spring Ring
IGS-18	2	Bearing Clamp
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-1016X	1	ROTOR
IGS-1022RR	1	Cam & Stop Plate - 6 Cyl. R.H.
IGS-1023FS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-73	1	Spring (Maroon)
IGS-2070RA	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
IGB-292‡	2	Weight Spring
IGS-1070R	1	Drive Shaft Assy.
IGS-2091	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-490	1	Press In Sleeve Oiler
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGS-3092R	1	Breaker Plate Assy.
		± Identified by 5.5
IA-131	1	Breaker Arm Spring Clip
IG-2671F	1	CONDENSER ASSEMBLY
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004F	1	Breaker Plate Part Assy.
IGS-1092R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	5	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer
8X-1340	3	#8-32x3/4 Ctsk. Hd. Screw
		1 2 3 4 5

(Issued 3-16-39)

* Use as required.


± See Manual Bulletin IG-11.

‡ SERVICE BREAKER POINT SET IGP-3028ES & Service Weight Spring Set IGB-292S.

UNIT	APPLICATION
IGS-4104X	Nash

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4104X DISTRIBUTOR ILLUSTRATION

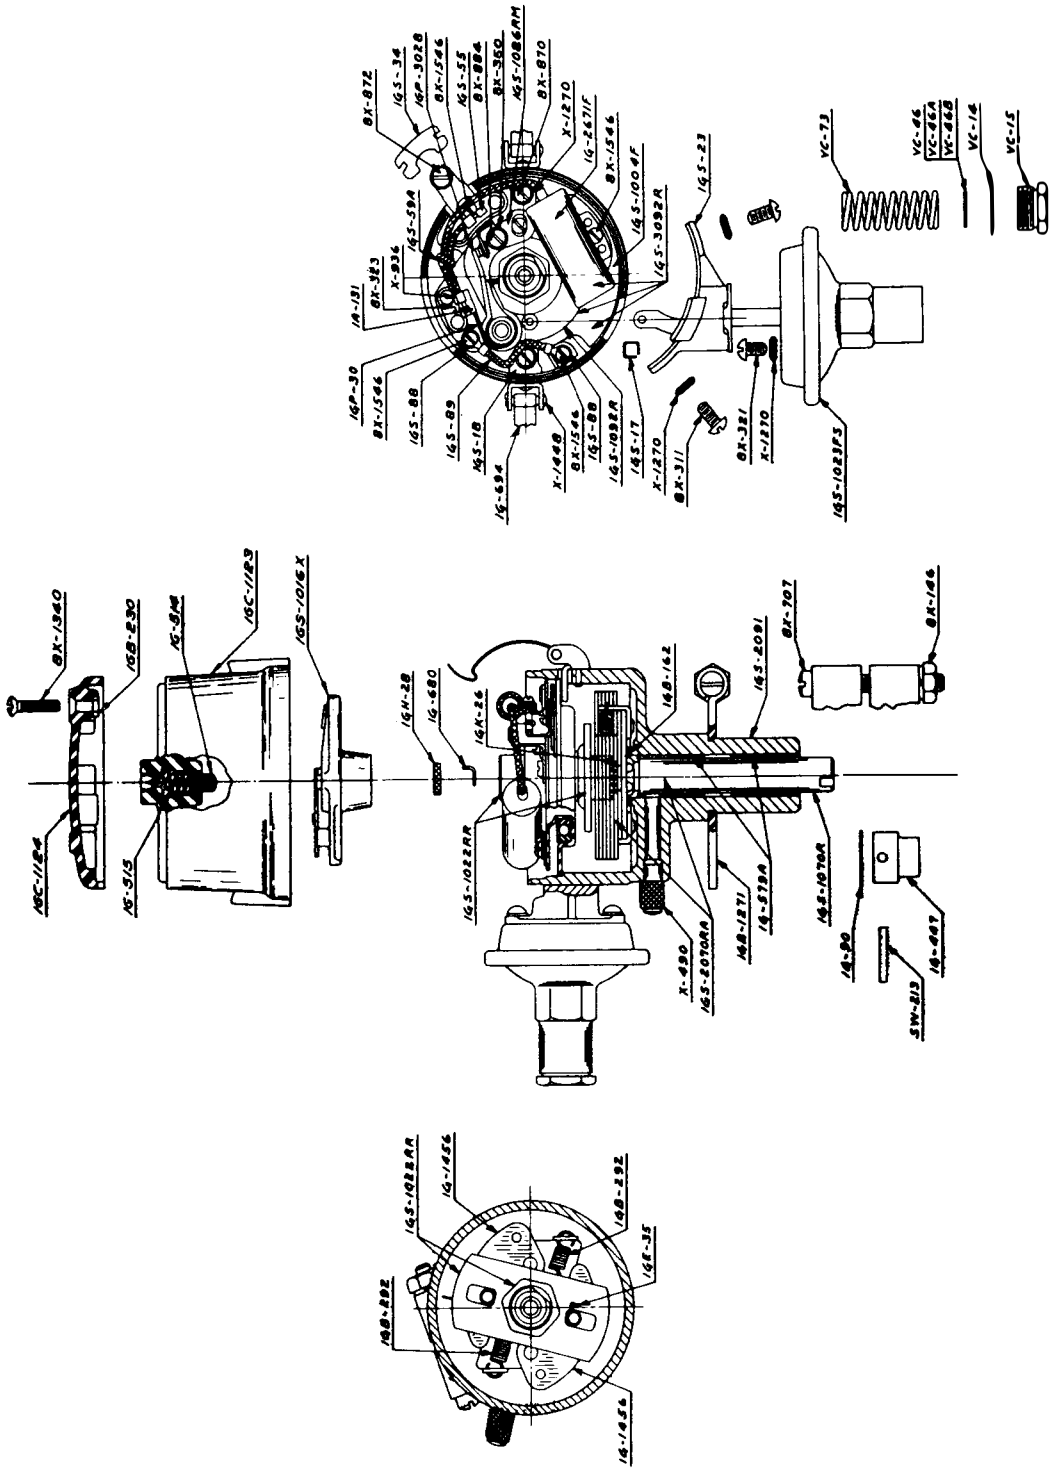

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGC-1107S	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-23	1	Bracket, Vacuum Chamber
IGS-34	1	Cover, Terminal, Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1016B	1	Rotor
IGS-1020S†	1	Arm, Advance
*	1	Cam, & Stop Plate, 6 Cyl., R.H.
*	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
*	1	Spring Set, Gov. Weight
IGS-1024RD	1	Shaft, Drive
IGS-2096	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
X-382	1	Grease Cup, 1/8
X-1448	2	Pin, Hinge, Cap Spring
IGS-3004B	1	Plate Assy., Breaker Identified by 8
IA-131	1	Clip, Spring, Contact Arm
IG-3927A	1	Condenser
IGE-15	1	Washer, Plain, Clamp Screw, #6
IGP-3028‡	1	Arm Assy., Breaker
IGP-30	1	Spring
IGS-59A	1	Lead Assy.
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assy.
IGS-88	2	Terminal
IGS-1004A	1	Plate, Breaker
IGS-1082R	1	Plate Assy., Sub
IGS-1086RM‡	1	Contact, Breaker
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Breaker Contact, Fil. hd., #8-32x 3/16
8X-323	1	Screw, Spring Clamp, Rd. hd., #6-32x5/16
X-1012	4	Washer, Lock, #6
8X-1546	4	Screw, Fil. hd., #6-32x5/32
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-1023GS	1	Chamber Assy., Vacuum Advance
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
VC-46	**	Washer, Tension Adj., .032" thick
VC-46A	**	Washer, Tension Adj., .010" thick
VC-46B	**	Washer, Tension Adj., .065" thick
VC-73	1	Spring, Maroon
SW-213	1	Rivet, Collar, Drive Shaft
8X-321	2	Screw, Rd. hd., #10-32x5/16
8X-870	2	Screw, Attaching, Breaker Plate, Fil. hd., #10-32x5/16
8X-902	2	Screw, Fil. hd., #10-32x3/8
X-1270	6	Washer, Skpf., #10
		1 2 3 4 5

(Issued 3-3-44)

Assembly No.	Cam, & Stop Plate, 6 Cyl., R.H.	Shaft & Gov. Assy.	Spring Set Gov. Weight
IGS-4107	IGS-1100RA	IGS-2024RH	IGB-292SS
IGS-4107A	IGS-1100RB	IGS-2024RJ	IG-636HS

* See table following parts list for part number applying to assembly wanted.

** Use as required.


† Used with assemblies having a suffix "-1".

‡ Contact Set, Service, IGP-3028ES.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

File in Equipment & Parts List Binder

IGS-4107 A & -1 DISTRIBUTOR ILLUSTRATION

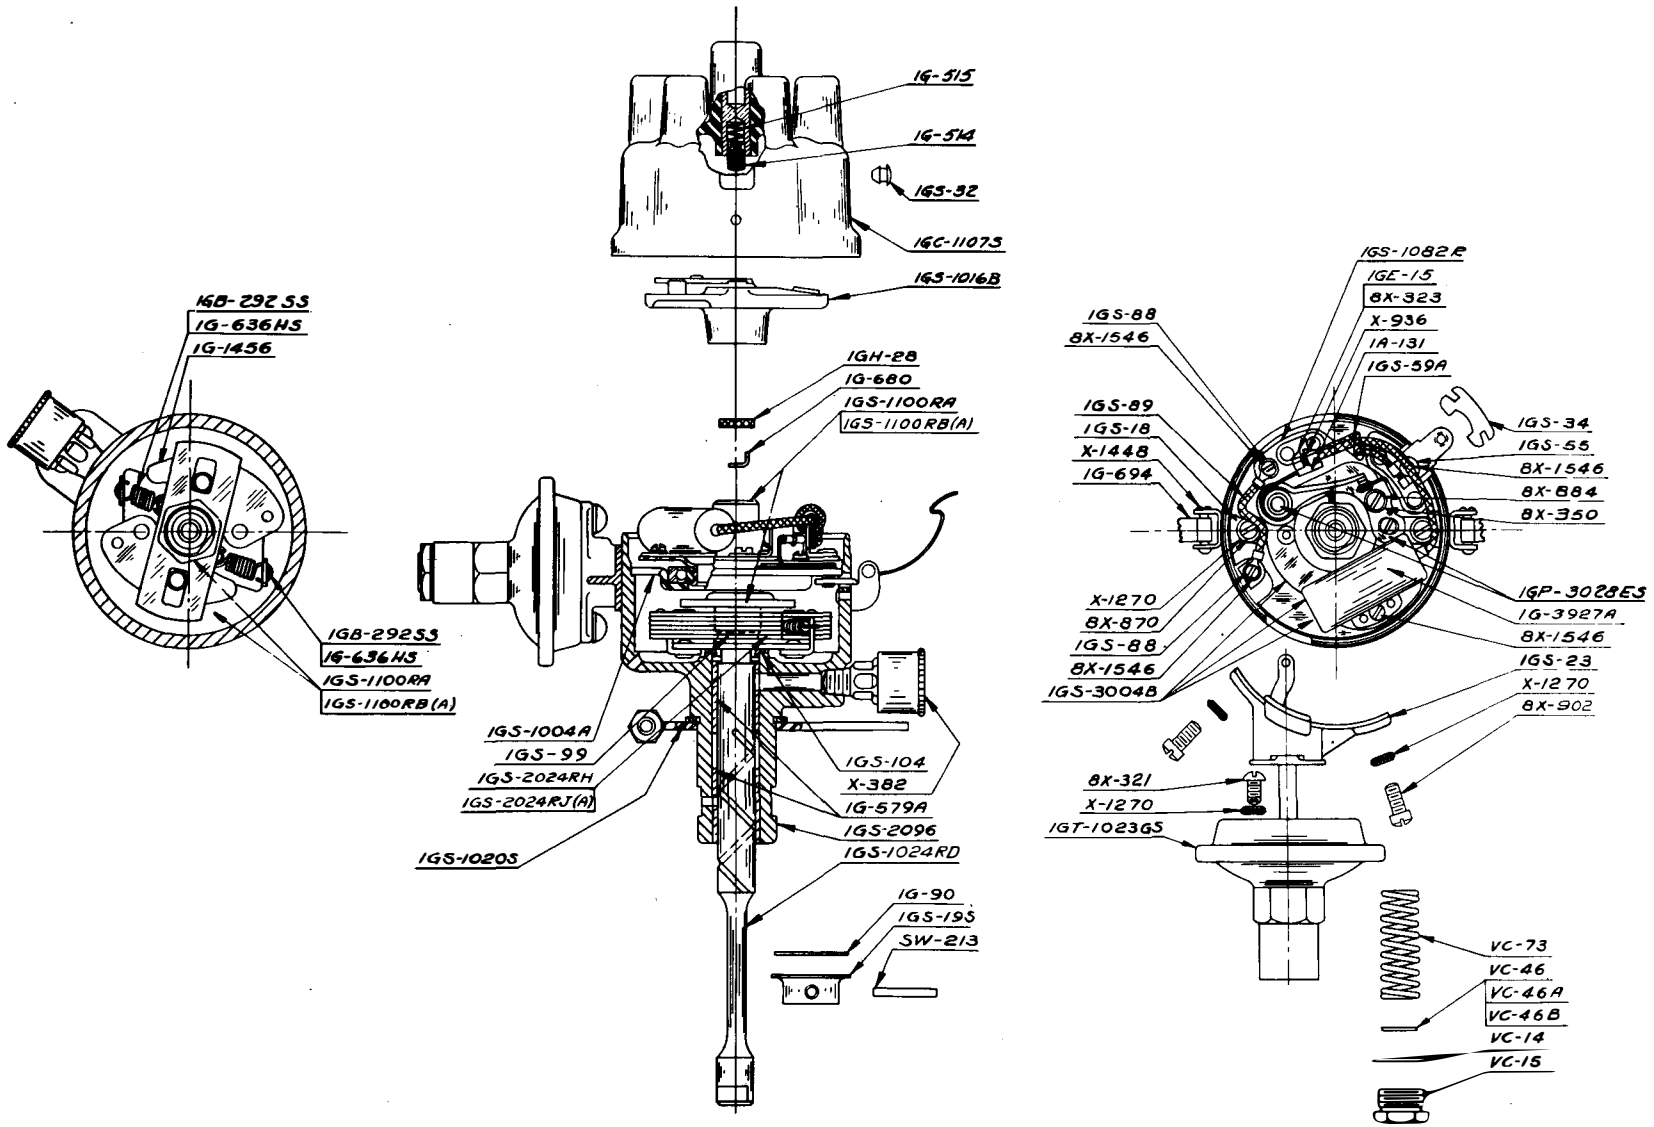

IGS-4108,A,B, C,D,-1 DISTRIBUTOR PARTS LIST

IGS-4108,A,B, C,D,-1

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
*	1	Advance Pointer
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-1016	1	ROTOR
IGS-1020S†	1	Advance Control Arm Assy.
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
*	1	Cam & Stop Plate - 6 cyl. R. H.
IGS-2096	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGS-16	1	Name Plate
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Drive Shaft & Gov. Assy.
IG-636	1	Weight Spring
IG-1456	2	Weight Assembly
*	1	Weight Spring
IGS-1102R	1	Drive Shaft Assembly
*	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
*	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Distributor Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 5-27-40)

Assembly No.	Vacuum Chamber	Spring
IGS-4108,-1	IGS-1023HS	VC-73 (Maroon)
IGS-4108A,-1	IGS-1023JS	VC-45 (Red)
IGS-4108B,-1	IGS-1023DS	VC-55 (Black)
IGS-4108C,-1	IGS-1023DS	VC-55 (Black)
IGS-4108D,-1	IGT-1023GS	VC-73 (Maroon)

Assembly No.	Breaker Plate Assy.
IGS-4108	IGS-3004A
IGS-4108-1	IGS-3004A
IGS-4108A	IGS-3004D
IGS-4108A-1	IGS-3004D
IGS-4108B	IGS-3004
IGS-4108B-1	IGS-3004
IGS-4108C	IGS-3004
IGS-4108C-1	IGS-3004
IGS-4108D	IGS-3004B
IGS-4108D-1	IGS-3004B

Cam & Stop Plate	Dr. Shaft & Gov. Assy.	Weight Spring	Spring Set
IGS-1100RA	IGS-2102R	IGB-292	IGB-292SS
IGS-1100RA	IGS-2102R	IGB-292	IGB-292SS
IGS-1100RA	IGS-2102R	IGB-292	IGB-292SS
IGS-1100R	IGS-2102RB	IGB-278	IG-636SS
IGS-1100RB	IGS-2102RC	IGC-118	IG-636HS

Identified By ±	Brkr. Plate Part Assembly	Advance Pointer
7	IGS-1004E	None
7	IGS-1004E	IGS-21
11	IGS-1004G	None
11	IGS-1004G	None
10	IGS-1004	None
10	IGS-1004	None
10	IGS-1004	None
10	IGS-1004	None
8	IGS-1004A	None
8	IGS-1004A	None

\+ Use as required.
† Used with assemblies having suffix "-1".
‡ Service BREAKER POINT SET IGP-3028ES.
± See Manual Bulletin IG-11.
* See table following parts list for part number applying to assembly wanted.


UNIT	APPLICATION
IGS-4108,A, -1	Chrysler, DeSoto, Dodge Truck, Fargo Truck
IGS-4108B,-1	Dodge Truck, Fargo Truck
IGS-4108C,-1	Dodge Truck, Fargo Truck
IGS-4108D,-1	Dodge Truck, Fargo Truck

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4108,A,B,C,D,-1 DISTRIBUTOR ILLUSTRATION

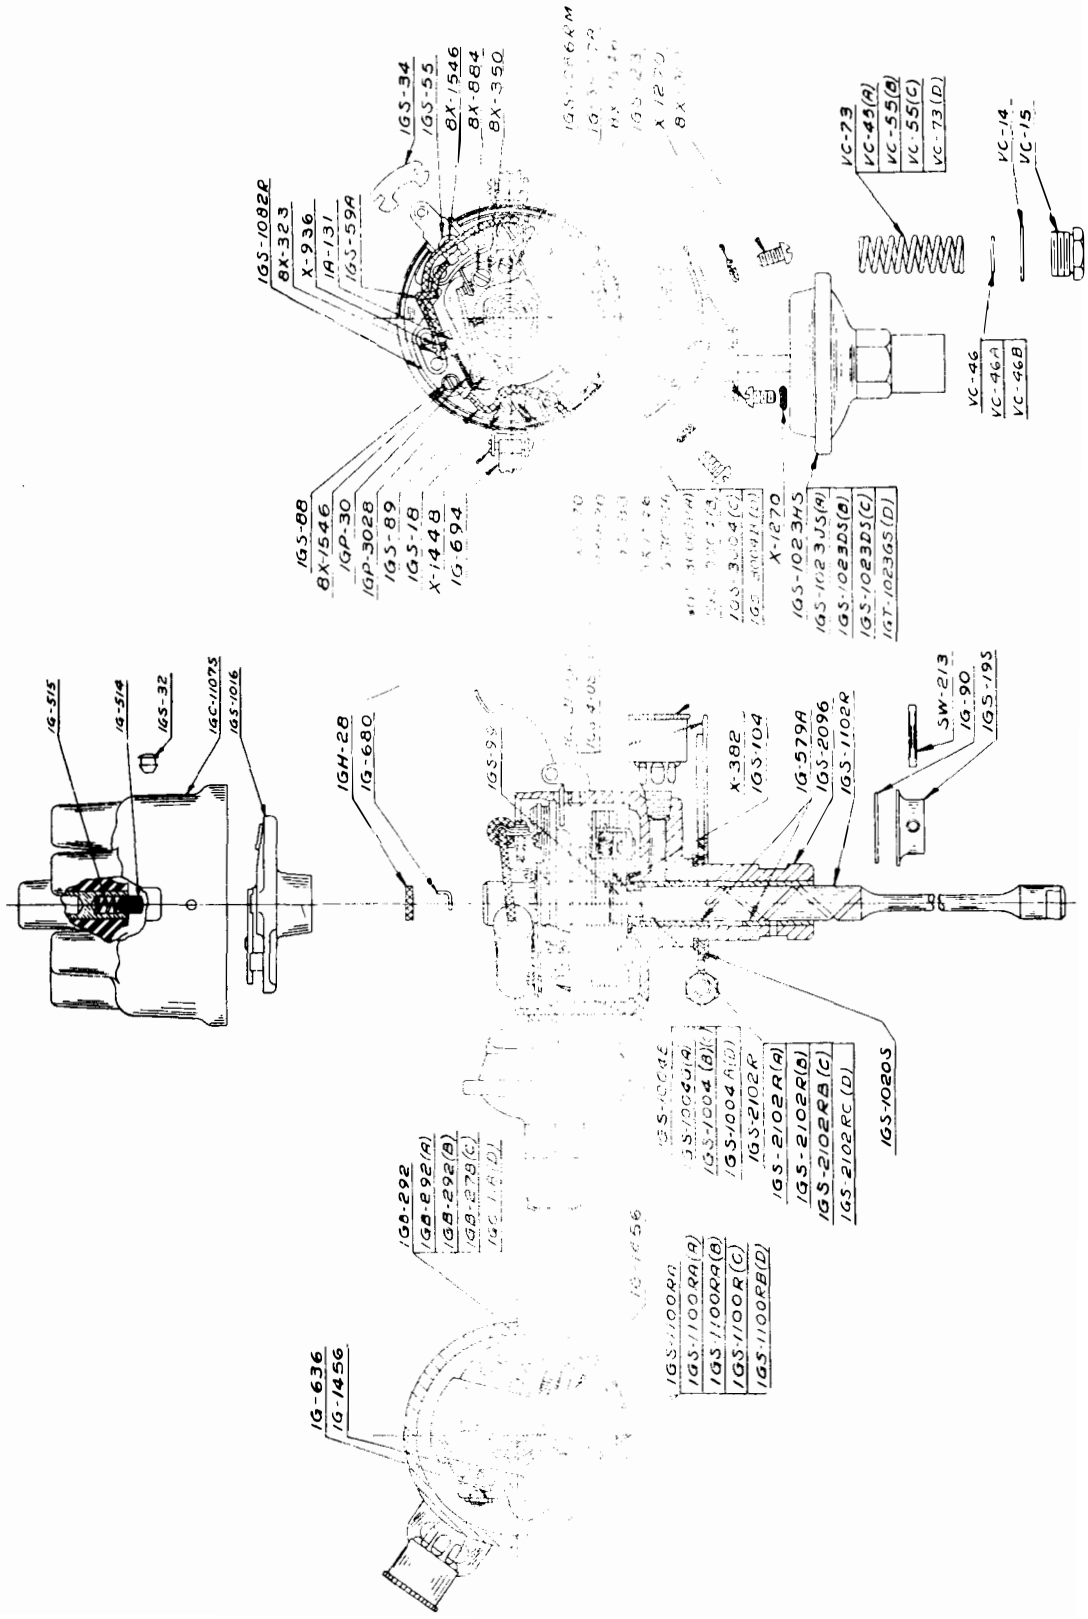

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-1016	1	ROTOR
IGS-1020S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Sc.
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGS-1023GS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
IGS-1100R	1	Cam & Stop Plate - 6 Cyl. R. H.
IGS-2096	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
IGS-16	1	Name Plate
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGS-2097R	1	Drive Shaft & Gov. Assy.
IG-636‡	1	Weight Spring
IG-1456	2	Weight Assembly
IGB-278‡	1	Weight Spring
IGS-1097R	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-3004	1	Breaker Plate Assy. ± Identified by 10
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	5	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Distributor Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 8-3-39)

‡ Service BREAKER POINT SET IGP-3028ES & Service Weight Spring Set IG-636SS.

* Use as required.


± See Manual Bulletin No. IG-11.

† Used with assemblies having the suffix "-1".

UNIT	APPLICATION
IGS-4109,-1	Dodge, Plymouth, Dodge Truck, Fargo Truck, Plymouth Truck

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4109,-1 DISTRIBUTOR ILLUSTRATION

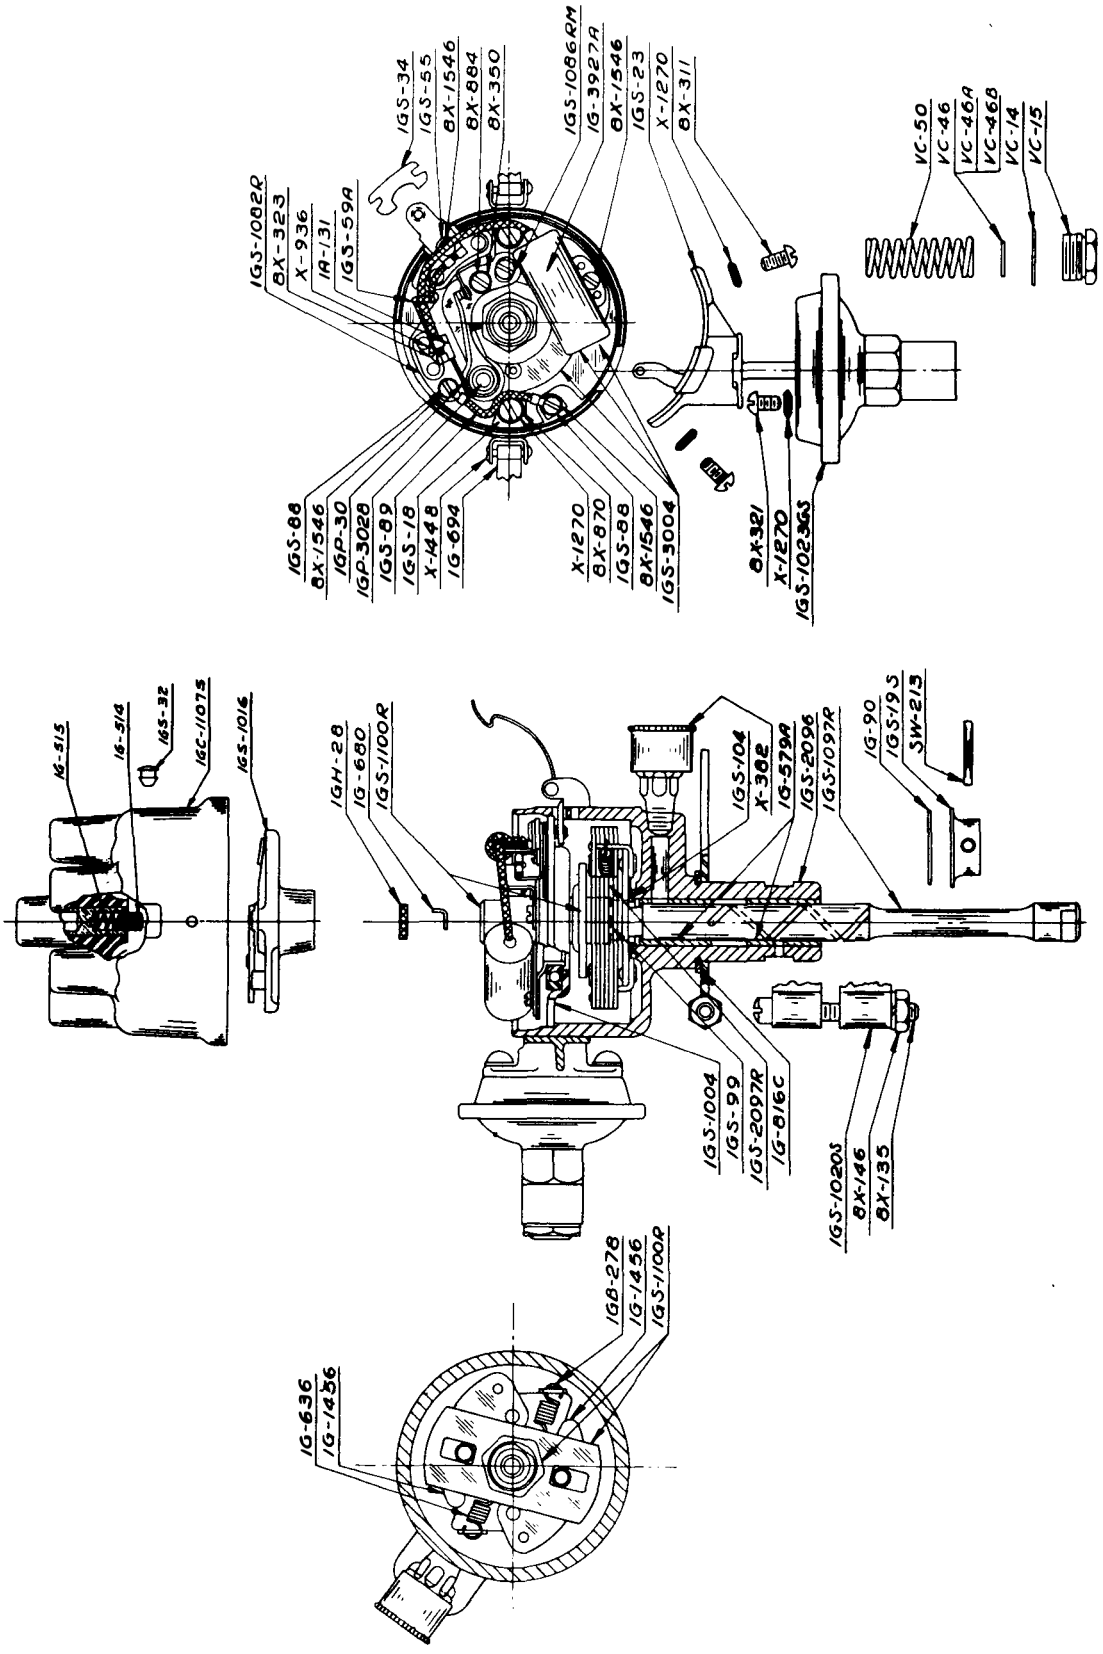

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DIST. CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-107	1	Vacuum Chamber Bracket
IGS-1016B	1	ROTOR
IGS-1020S‡	1	Advance Control Arm Assy.
IGS-1100R	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-1106	1	Dist. Base Shield
IGS-108	2	#8-32 Stud
12X-1024	2	#8 Lock Washer
X-1577	2	#8-32 Wing Nut
IGS-1107S	1	Vacuum Chamber Assy.
VC-14	1	Gasket-1/32" Thick
VC-15	1	Plug
VC-46	*	Washer-.032" Thick
VC-46A	*	Washer-.010" Thick
VC-46B	*	Washer-.065" Thick
VC-50	1	Spring (Orange)
IGS-2097R	1	Drive Shaft & Gov. Assy.
IG-636SS	1	Weight Spring Set
IG-1456	2	Weight Assembly
IGS-1097R	1	Drive Shaft Assy.
IGS-2105	1	Dist. Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-1448	2	Hinge Pin
IGS-3004	1	Breaker Plate Assy. Identified by 10
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM†	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
8X-56	4	#8-32x7/16 Rd. Hd. Screw
12X-195	4	#8 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
X-382	1	1/8 Grease Cup
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 3-3-41)

‡ Used with assemblies having the suffix -1.

* Use as required.

† Service BREAKER POINT SET IGP-3028ES.

UNIT	APPLICATION
IGS-4110,-1	Dodge Truck

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGS-4111,-1 DISTRIBUTOR PARTS LIST IGS-4111,-1

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGC-1107S	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-23	1	Bracket, Vacuum Chamber
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-114‡	1	Arm, Advance
IGS-1016B	1	Rotor
IGS-1023GS	1	Chamber Assy., Vacuum Advance
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
VC-46	*	Washer, Tension Adj., .032'' Thick
VC-46A	*	Washer, Tension Adj., .010'' Thick
VC-46B	*	Washer, Tension Adj., .065'' Thick
VC-50	1	Spring, Orange
IGS-1100R	1	Cam, & Stop Plate, 6 Cyl., R.H.
IGS-2111	1	Base Assy., Dist.
IG-579A	1	Bearing, Lower, Absorbent Bronze
IG-579D	1	Bearing, Upper, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGS-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler, Press in Elbow, 1/4
IGS-2116R	1	Shaft & Gov. Assy.
IG-636SS	1	Spring Set, Gov. Weight
IG-1455	2	Weight, Governor
IGS-1116R	1	Shaft, Drive
IGS-3004	1	Plate Assy., Breaker Identified by 10
IA-131	1	Clip, Spring, Contact Arm
IG-3927A	1	Condenser
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028†	1	Arm Assy. Breaker
IGP-30	1	Spring
IGS-59A	1	Lead Assy.
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assy.
IGS-88	2	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-1004	1	Plate, Breaker
IGS-1082R	1	Plate Assy., Sub.
IGS-1086RM†	1	Contact, Breaker
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fil. hd., #8-32x3/16
8X-323	1	Screw, Spring Clamp, Rd. hd., #6-32x5/16
X-1012	4	Washer, Lock, #6
8X-1546	4	Screw, Fil. hd., #6-32x5/32
SW-213	1	Rivet, Collar, Drive Shaft
SW-634‡	1	Washer, Plain, Advance Arm Mtg. Screw
8X-86‡	1	Screw, Attaching, Advance Arm, Hex. hd., 1/4-20x5/8
12X-199‡	1	Washer, Lock, Advance Arm Mtg. Screw, 1/4
8X-321	2	Screw, Attaching, Vacuum Chamber Rd. hd., #10-32x5/16
8X-870	2	Screw, Attaching, Breaker Plate, Fil. hd., #10-32x5/16
8X-902	2	Screw, Attaching, Vacuum Chamber Bracket, Fil. hd., #10-32x3/8
X-1270	6	Washer, Skpf., #10
		1 2 3 4 5

(Issued 5-26-44)

‡ Used with assemblies having a suffix "-1"


† Contact Set, Service, IGP-3028ES.

* Use as required.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

File in Equipment & Parts List Binder

IGS-4111,-1 DISTRIBUTOR ILLUSTRATION

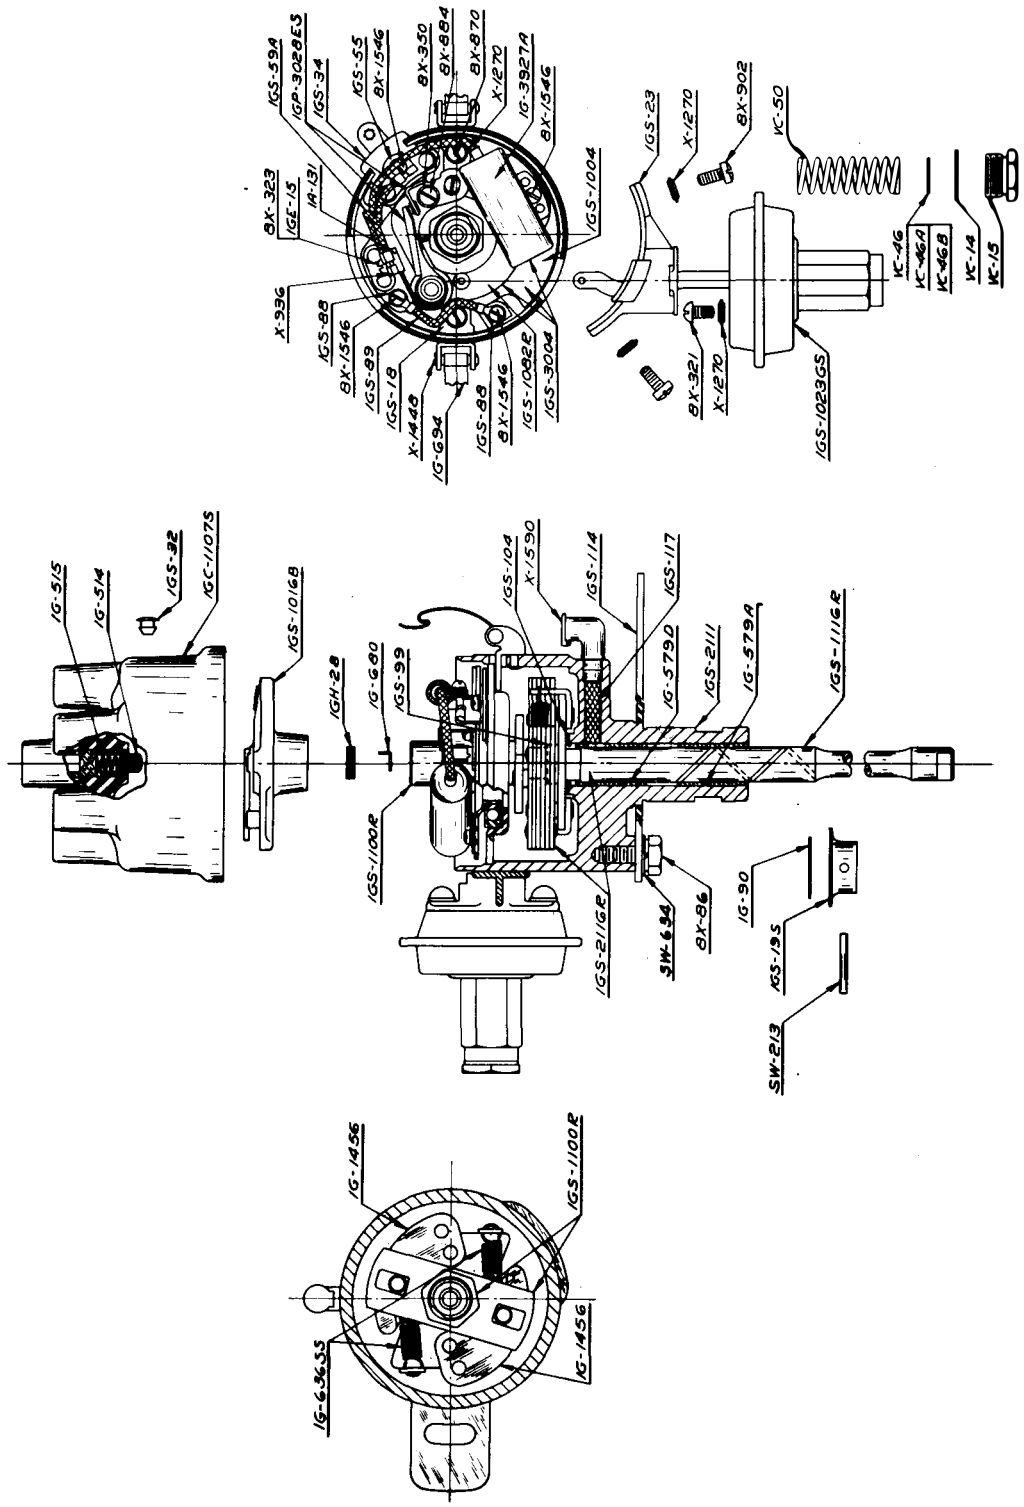

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114†	1	Advance Control Arm
IGS-115†	1	Advance Pointer
IGS-1016B	1	ROTOR
IGS-1100RA	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-2111	1	Dist. Base Assy.
IG-579A	1	Absorbent Bronze Brg. - Lower
IG-579D	1	Absorbent Bronze Brg. - Upper
IG-694	2	Dist. Cap Spring
IGS-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler-Press in Elbow
IGS-2113R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292SS	1	Weight Spring Set
IGS-1113R	1	Drive Shaft Assy.
IGS-3004B	1	Breaker Plate Assembly ± Identified by 8
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-1004A	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Screw
IGT-1023GS	1	Vacuum Chamber Assy.
VC-14	1	Gasket-1/32" Thick
VC-15	1	Plug
VC-46	*	Washer-.032" Thick
VC-46A	*	Washer-.010" Thick
VC-46B	*	Washer-.065" Thick
VC-73	1	Spring (Maroon)
SW-213	1	Distributor Drive Rivet
8X-85†	1	1/4-20x1/2 Hex. Hd. Screw
12X-199†	1	1/4 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-357†	1	#14 Plain Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 7-29-40)

‡ Service BREAKER POINT SET IGP-3028ES.

* Use as required.


± See Manual Bulletin IG-11.

† Used with assemblies having the suffix "-1".

UNIT	APPLICATION
IGS-4112,-1	Dodge

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4112,-1 DISTRIBUTOR ILLUSTRATION

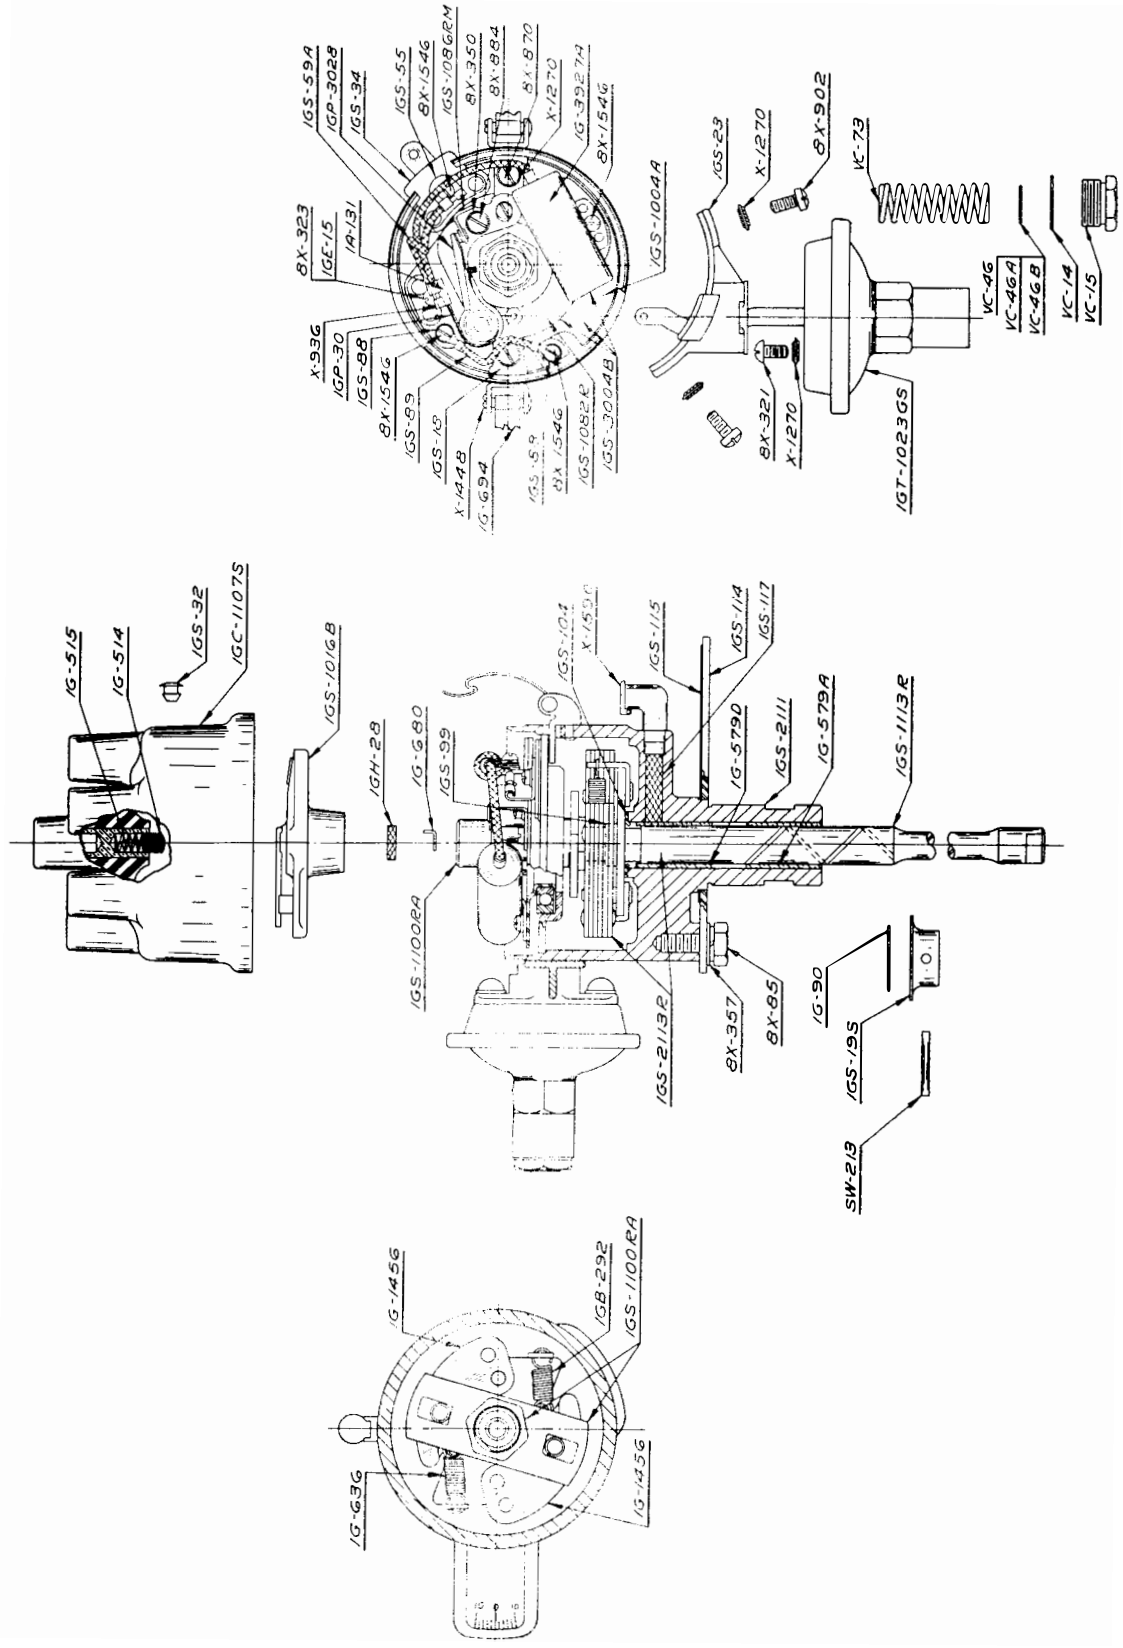

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114†	1	Advance Control Arm
IGS-115†	1	Advance Pointer
IGS-1016B	1	ROTOR
IGS-1023HS	1	Vacuum Chamber Assy.
VC-14	1	Gasket-1/32" Thick
VC-15	1	Plug
VC-46	*	Washer-.032" Thick
VC-46A	*	Washer-.010" Thick
VC-46B	*	Washer-.065" Thick
VC-73	1	Spring (Maroon)
IGS-1100RA	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-2111	1	Dist. Base Assy.
IG-579A	1	Absorbent Bronze Brg. - Lower
IG-579D	1	Absorbent Bronze Brg. - Upper
IG-694	2	Dist. Cap Spring
IGS-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler-Press in Elbow
IGS-2112R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292SS	1	Weight Spring Set
IGS-1112R	1	Drive Shaft Assy.
IGS-3004A	1	Breaker Plate Assy. ± Identified by 7
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004E	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Screw
SW-213	1	Distributor Drive Rivet
8X-85†	1	1/4-20x1/2 Hex. Hd. Screw
12X-199†	1	1/4 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-357†	1	#14 Plain Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 7-29-40)

‡ Service BREAKER POINT SET IGP-3028ES.

* Use as required.


± See Manual Bulletin IG-11.

† Used with assemblies having the suffix "-1".

UNIT	APPLICATION
IGS-4113,-1	Chrysler, De Soto

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4113,-1 DISTRIBUTOR ILLUSTRATION

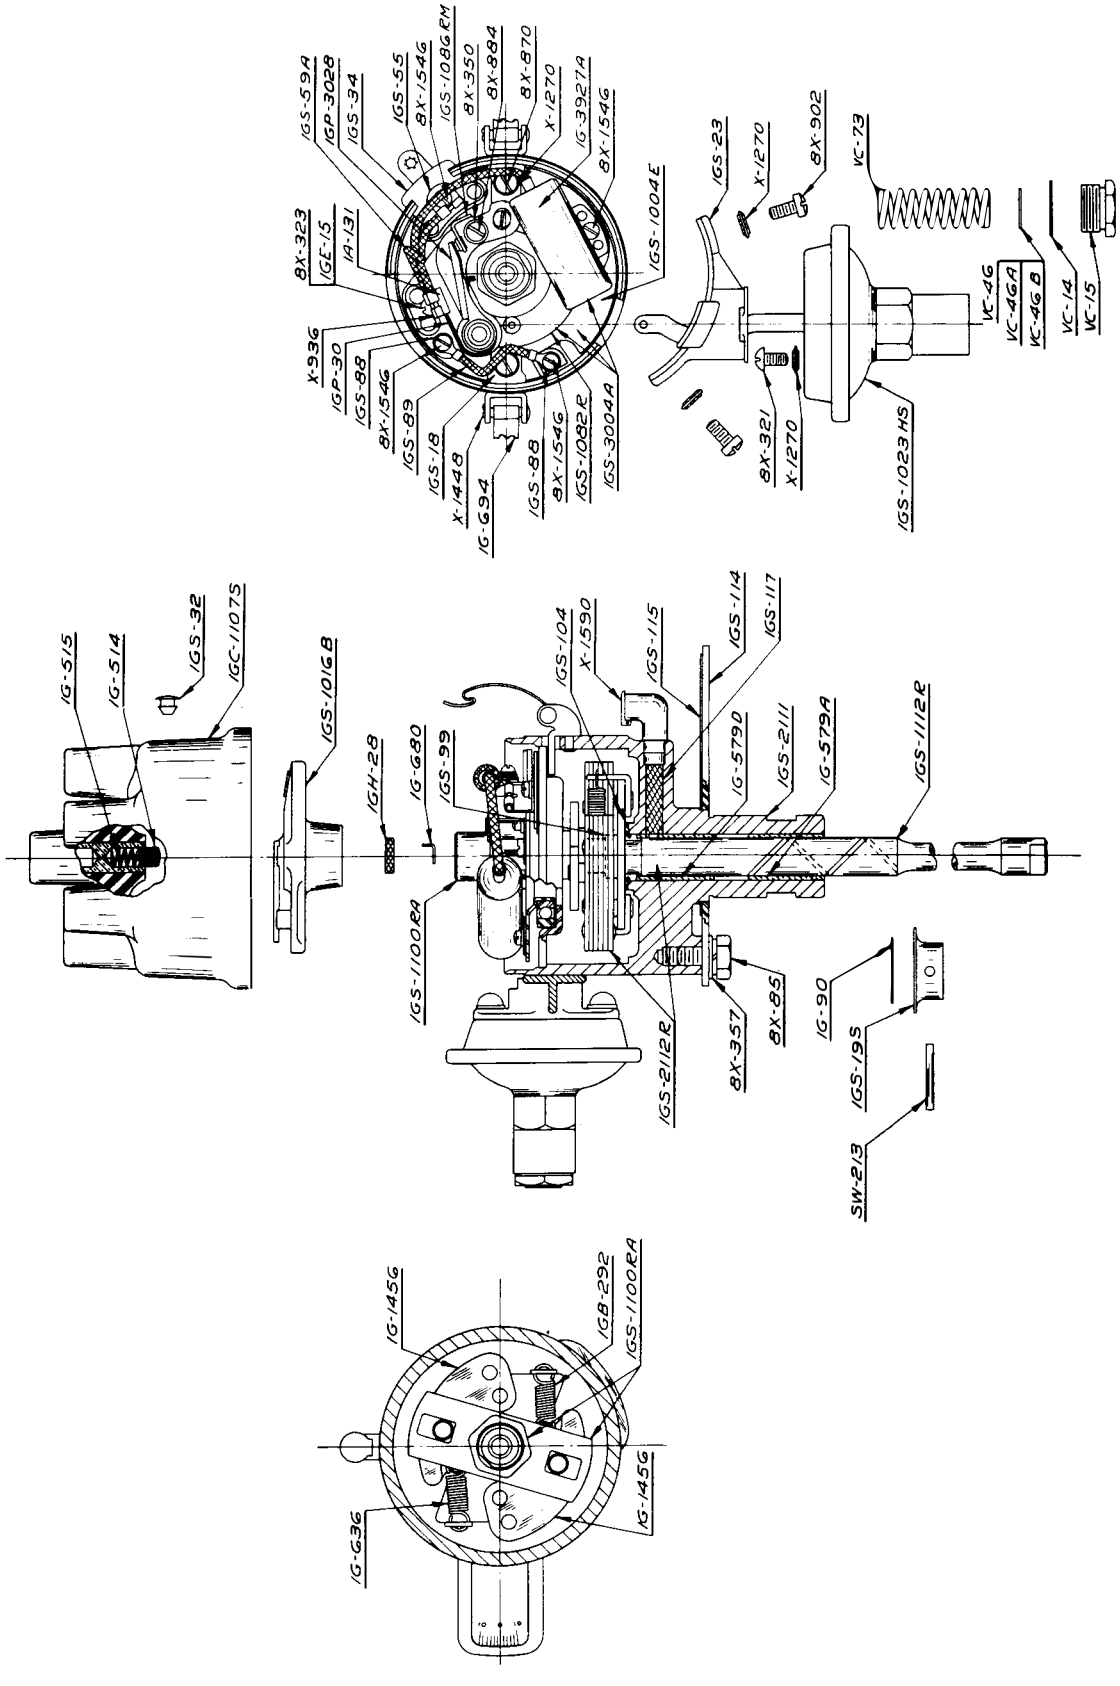

Part No.	No. Used	Name of Part
		1 2 3 4 5
IA-78	1	Felt Wick
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DIST. CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-107	1	Vacuum Chamber Bracket
IGS-114‡	1	Advance Control Arm
IGS-1016B	1	ROTOR
IGS-1100RA	1	Cam & Stop Plate - 6 cyl. R.H.
IGS-1106	1	Dist. Base Shield
IGS-108	2	#8-32 Stud
12X-1024	2	#8 Lock Washer
X-1577	2	#8-32 Wing Nut
IGS-1107AS	1	Vacuum Chamber Assy.
VC-14	1	Gasket-1/32" Thick
VC-15	1	Plug
VC-46	*	Washer-.032" Thick
VC-46A	*	Washer-.010" Thick
VC-46B	*	Washer-.065" Thick
VC-73	1	Spring (Maroon)
IGS-2113R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292SS	1	Weight Spring Set
IGS-1113R	1	Drive Shaft Assy.
IGS-2118	1	Dist. Base Assembly
IG-579A	1	Absorbent Bronze Brg.-Lower
IG-579D	1	Absorbent Bronze Brg.-Upper
IG-694	2	Dist. Cap Spring
X-1448	2	Hinge Pin
IGS-3004B	1	Breaker Plate Assy. Identified by 8
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004A	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM†	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Screw
SW-213	1	Dist. Drive Rivet
SW-634‡	1	Plain Washer
8X-56	4	#8-32x7/16 Rd. Hd. Screw
8X-86‡	1	1/4-20x5/8 Hex. Hd. Screw
12X-195	4	#8 Lock Washer
12X-199‡	1	1/4 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
X-1596	1	Oiler
		1 2 3 4 5

(Issued 3-3-41)

‡ Used with assemblies having the suffix "-1".

* Use as required.

† Service BREAKER POINT SET IGP-3028ES.

UNIT	APPLICATION
IGS-4114,-1	Dodge Truck

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4115 DISTRIBUTOR PARTS LIST IGS-4115

PRELIMINARY

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-644	1	Dist. Drive - Coupling
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-23	1	Vacuum Chamber Bracket
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-1016B	1	ROTOR
IGS-1023NS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-49	1	Spring (Blue)
IGS-1100RV	1	Cam & Stop Plate - 6 Cyl. R.H.
IGS-2095RA	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-208S	1	Weight Spring Set
IGS-1095RA	1	Drive Shaft Assembly
IGS-2121	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGS-3004G	1	Breaker Plate Assembly ± Identified by 6.5
IA-131	1	Breaker Arm Spring Clip
IG-2671F	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-1004K	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM†	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IGT-70	1	Anti-Rattle Spring
SW-213	1	Distributor Drive Rivet
X-196	1	#10 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 5-21-41)

† SERVICE CONTACT SET IGP-3028ES.

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4115	Connecticut Rwy.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-34	1	Terminal Slot Cover
IGS-50	1	Vacuum Chamber Bracket
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-1016B	1	ROTOR
IGS-1100LD	1	Cam & Stop Plate - 6 Cyl. L.H.
IGS-2095L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGB-208S	1	Weight Spring Set
IGS-1095L	1	Drive Shaft Assy.
IGS-2122	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGS-3004LA	1	Breaker Plate Assembly ± Identified by 6.5L
IA-131	1	Breaker Arm Spring Clip
IG-2671K	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028L†	1	Breaker Arm Assembly
IGP-30L	1	Breaker Arm Spring
IGS-78	1	Lead Assembly
IGS-77	1	Terminal
X-1484	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1044E	1	Breaker Plate Part Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-1082L	1	Breaker Sub Plate Assy.
IGS-1086LM†	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
IGT-69	1	Anti-Rattle Spring
IGT-1028FS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-49	1	Spring (Blue)
SW-213	1	Distributor Drive Rivet
X-196	1	#10 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 5-21-41)

† SERVICE CONTACT SET IGP-3028JS.

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4116	Connecticut Rwy.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
GE-47	1	Gear, Tachometer, Driver
GE-48	1	Gear, Tachometer, Follower
IG-90	2	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IGC-1107S	1	Cap Assembly, Dist.
IG-514	1	Contact, Plunger
IG-515	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-21‡	1	Pointer, Advance Arm
IGS-23	1	Bracket, Vacuum Chamber
IGS-34	1	Cover, Terminal Slot
IGS-37	1	Shaft, Drive, Tachometer
IGS-38	1	Cover, Housing, Tach. Shaft
IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IGS-99	1	Spacer, Cam
IGS-1016B	1	Rotor
IGS-1020S‡	1	Arm, Advance
IGS-1023HS	1	Chamber Assy., Vacuum Advance
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
VC-46	*	Washer, Tension Adjusting, .032" Thick
VC-46A	*	Washer, Tension Adjusting, .010" Thick
VC-46B	*	Washer, Tension Adjusting, .065" Thick
VC-73	1	Spring, Maroon
IGS-1100RA	1	Cam, & Stop Plate, 6 cyl., R.H.
IGS-2123	1	Base Assembly, Dist.
IG-579A	1	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
X-382	1	Grease Cup, 1/8
X-1448	2	Pin, Hinge, Cap Spring
IGS-2124R	1	Shaft & Gov. Assy.
IG-1456	2	Weight, Governor
IGB-292SS	1	Spring Set, Gov. Weight
IGS-1124R	1	Shaft, Drive
IGS-3004A	1	Plate Assy., Breaker Identified by 7
IA-131	1	Clip, Spring, Contact Arm
IG-3927A	1	Condenser
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028†	1	Arm Assy., Breaker Spring
IGP-30	1	
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-59A	1	Lead Assy., Primary
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assy., Ground
IGS-88	2	Terminal
IGS-1004E	1	Plate, Breaker
IGS-1082R	1	Plate Assy., Sub
IGS-1086RM†	1	Contact, Breaker
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
8X-323	1	Screw, Spring Clamp, Rd. Hd., #6-32x5/16
X-1012	4	Washer, Lock, Condenser & Lead Screw, #6
8X-1546	4	Screw, Condenser Mtg. & Lead, Fil. Hd., #6-32x5/32
SW-213	2	Rivet, Gear & Collar
X-294	1	Bearing, Ball, SAE #202
8X-321	2	Screw, Attaching, Vacuum Chamber Rd. Hd., #10-32x5/16
8X-902	2	Screw, Attaching, Vacuum Chamber Bracket, Fil. Hd., #10-32x3/8
8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
X-1270	6	Washer, Skpf., Breaker Plate Mtg. & Vacuum Chamber Attaching Screws, #10
		1 2 3 4 5

(Issued 5-15-45)


‡ Used with assemblies having suffix "-1".

* Use as required.

† Contact Set, Service IGP-3028ES.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4117,-1 DISTRIBUTOR ILLUSTRATION

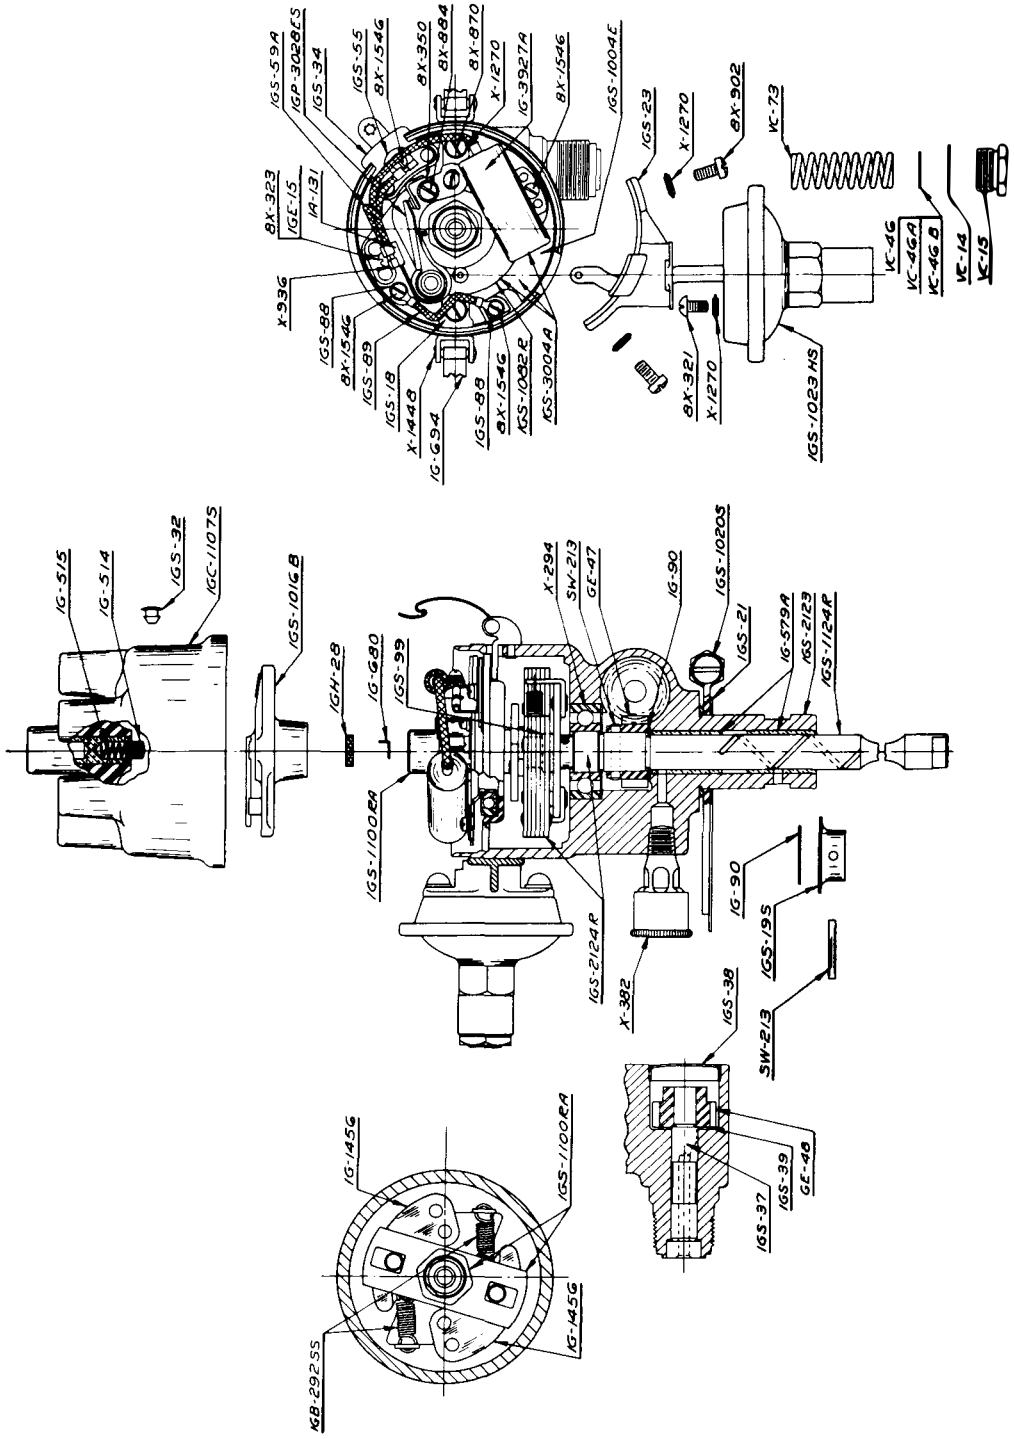

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	7	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGC-1107S	1	DIST. CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGK-26	1	Washer - .020" Thick
IGS-18	2	Bearing Clamp
IGS-34	1	Terminal Slot Cover
IGS-1016	1	ROTOR
IGS-1022LC	1	Cam & Stop Plate - 6 cyl. L.H.
IGS-2093	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGS-3004L	1	Breaker Plate Assy. + Identified by 7.5L
IA-131	1	Breaker Arm Spring Clip
IG-2671K	1	CONDENSER ASSY.
IGP-3028L†	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-78	1	Lead Assembly
IGS-77	1	Terminal
X-1484	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1044B	1	Breaker Plate Part Assy.
IGS-1082L	1	Breaker Sub Plate Assy.
IGS-1086LM†	1	Breaker Point
8X-884	1	#8-32x3/16 Fill. Hd. Screw
12X-1275	1	#8 Lock Washer
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	5	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-2034LC	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGB-210†	1	Weight Spring
IGB-222†	1	Weight Spring
IGT-1034LA	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
VC-3082	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
X-196	1	#10 Lock Washer
8X-312	2	#10-32x1/4 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
X-1270	4	#10 Skpf. Washer
		1 2 3 4 5

(Issued 3-2-39)

* Use as required.


\+ See Manual Bulletin IG-11.

† SERVICE BREAKER POINT SET IGP-3028JS & Service Weight Spring Set IGB-210AS.

UNIT	APPLICATION
IGS-4201	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4201 DISTRIBUTOR ILLUSTRATION

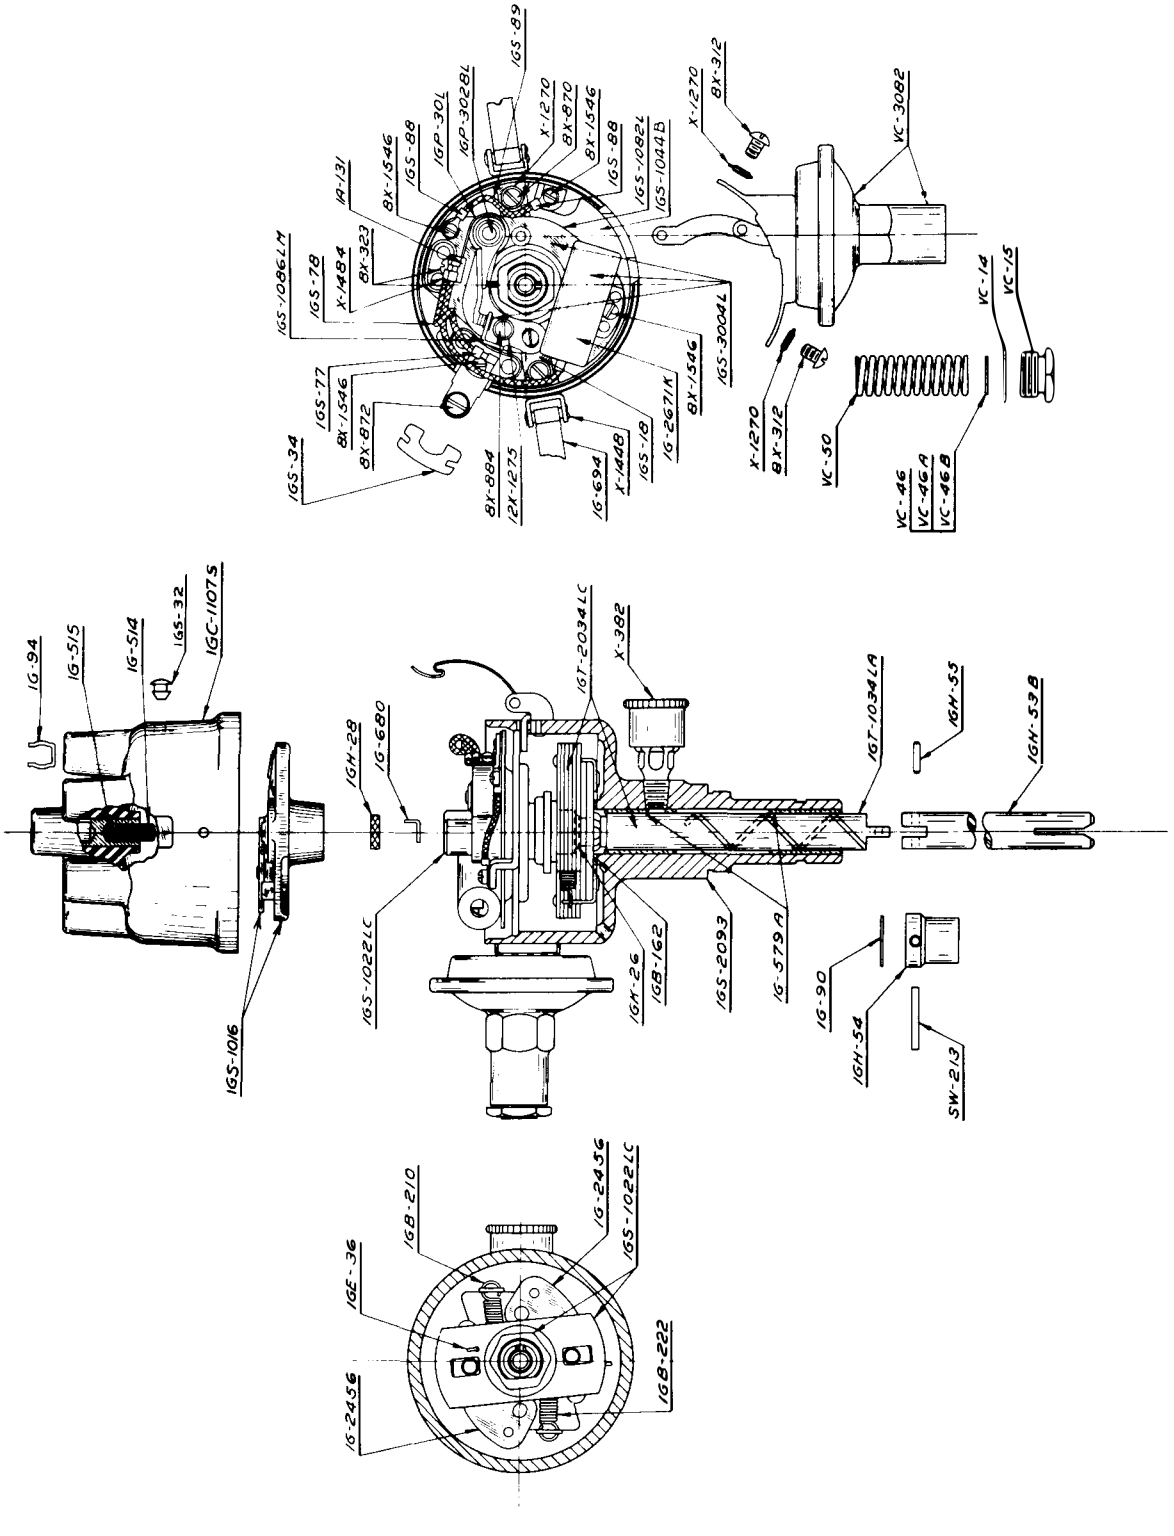

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

PRELIMINARY

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114†	1	Advance Control Arm
IGS-115†	1	Advance Pointer
IGS-1016B	1	ROTOR
*	1	Cam & Stop Plate - 6 Cyl. R.H.
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
*	1	Weight Spring Set
IGS-1112R	1	Drive Shaft Assembly
IGS-2126	1	Distributor Base Assembly
IG-579A	1	Absorbent Bronze Brg.- Lower
IG-579D	1	Absorbent Bronze Brg.- Upper
IG-694	2	Dist. Cap Spring
IGS-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler - Press in Elbow
*	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring 1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
*	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Distributor Drive Rivet
SW-634†	1	Plain Washer
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
8X-86†	1	1/4-20x5/8 Hex. Hd. Screw
12X-199†	1	1/4 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
X-1270	4	#10 Skpf. Washer 1 2 3 4 5

(Issued 10-6-41)

‡ SERVICE CONTACT SET IGP-3028ES.

† Used with assemblies having suffix "-1"

+ Use as required.

* See table following parts list for part number applying to assembly wanted.

± See Manual Bulletin IG-11.

Assembly No.	Cam & Stop Plate	Dr. Shaft & Gov.	Weight Spr. Set	Breaker Plate Assy.	Identified By ±
IGS-4202	IGS-1100RA	IGS-2112R	IGB-292SS	IGS-3004A	7
IGS-4202A	IGS-1100R	IGS-2112RA	IG-636NS	IGS-3004M	6
IGS-4202B	IGS-1100RA	IGS-2112RB	IG-636JS	IGS-3004K	9
IGS-4202C	IGS-1100R	IGS-2112RA	IG-636NS	IGS-3004K	9

Assembly No.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring
IGS-4202	IGS-1004E	VC-3082RBS	VC-73 (Cadmium Plate & Green)
IGS-4202A	IGS-1004J	VC-3082RES	VC-50 (Orange)
IGS-4202B	IGS-1004M	VC-3082RFS	VC-45 (Red)
IGS-4202C	IGS-1004M	VC-3082RHS	VC-119 (Cadmium Plate)

UNIT	APPLICATION
IGS-4202,-1	DeSoto, Chrysler
IGS-4202A,-1	DeSoto
IGS-4202B,-1	Chrysler
IGS-4202C.-1	DeSoto

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

PRELIMINARY

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114†	1	Advance Control Arm
IGS-1016B	1	ROTOR
*	1	Cam & Stop Plate - 6 Cyl. R.H.
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
*	1	Weight Spring Set
IGS-1113R	1	Drive Shaft Assembly
IGS-2126	1	Distributor Base Assembly
IG-579A	1	Absorbent Bronze Brg.- Lower
IG-579D	1	Absorbent Bronze Brg.- Upper
IG-694	2	Dist. Cap Spring
IGS-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler-Press in Elbow
*	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring 1 2 3 4 5
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
*	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM‡	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Distributor Drive Rivet
SW-634†	1	Plain Washer
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
8X-86†	1	1/4-20x5/8 Hex. Hd. Screw
12X-199†	1	1/4 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
X-1270	4	#10 Skpf. Washer 1 2 3 4 5

(Issued 10-6-41)

‡ SERVICE CONTACT SET IGP-3028ES.

† Used with assemblies having suffix "-1".

+ Use as required.

* See table following parts list for part number applying to assembly wanted.

± See Manual Bulletin IG-11.

Assembly No.	Cam & Stop Plate	Dr. Shaft & Gov.	Weight Spr. Set	Breaker Plate Assy.	Identified By ±
IGS-4203	IGS-1100RA	IGS-2113R	IGB-292SS	IGS-3004B	8
IGS-4203A	IGS-1100RW	IGS-2113R-1	IGB-292SS	IGS-3004K	9
IGS-4203B	IGS-1100RX	IGS-2113RA	IG-636HS	IGS-3004J	8.5
IGS-4203C	IGS-1100RX	IGS-2113RA	IG-636HS	IGS-3004N	7.5

Assembly No.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring
IGS-4203	IGS-1004A	VC-3082RAS	VC-73 (Cadmium Plate & Green)
IGS-4203A	IGS-1004M	VC-3082RDS	VC-45 (Red)
IGS-4203B	IGS-1004L	VC-3082RCS	VC-50 (Orange)
IGS-4203C	IGS-1004D	VC-3082RJS	VC-50 (Orange)

UNIT	APPLICATION
IGS-4203,-1	Dodge
IGS-4203A,-1	Dodge, Plymouth
IGS-4203B.-1	Dodge
IGS-4203C,-1	Dodge, Plymouth

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGC-1107S	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-32	1	Rubber Plug
IGH-28	1	Cam Sleeve Felt Wick
IGS-18	2	Bearing Clamp
IGS-19S	1	Drive Shaft Collar
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114‡	1	Advance Control Arm
IGS-1016B	1	ROTOR
IGS-1100R	1	Cam & Stop Plate - 6 Cyl. R.H.
IGS-2116R	1	Drive Shaft & Gov. Assy.
IG-636SS	1	Weight Spring Set
IG-1456	2	Weight Assembly
IGS-1116R	1	Drive Shaft Assembly
IGS-2126	1	Distributor Base Assembly
IG-579A	1	Absorbent Bronze Brg. - Lower
IG-579D	1	Absorbent Bronze Brg. - Upper
IG-694	2	Dist. Cap Spring
IGS-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler - Press in Elbow
IGS-3004	1	Breaker Plate Assembly ± Identified by 10
IA-131	1	Breaker Arm Spring Clip
IG-3927A	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-59A	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGS-89	1	Lead Assembly
IGS-88	2	Terminal
IGS-1004	1	Breaker Plate Part Assy.
IGS-1082R	1	Breaker Sub Plate Assy.
IGS-1086RM†	1	Breaker Point
8X-350	1	#8 Plain Washer
8X-884	1	#8-32x3/16 Fill. Hd.Sc.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	4	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Distributor Drive Rivet
SW-6341	1	Plain Washer
VC-3082RS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
8X-83‡	1	1/4-20x5/8 Hex. Hd. Screw
12X-199‡	1	1/4 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
X-1270	4	#10 Skpf. Washer
		1 2 3 4 5

(Issued 7-3-41)

† SERVICE CONTACT SET IGP-3028ES.

‡ Used with assemblies having the suffix "-1".

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4204,-1	Plymouth

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft Lower
IG-680	1	Snap Ring., Cam Retaining
IG-816C	1	Washer, Thrust, Advance Arm.
IG-853	1	Collar, Shaft, Dist.
IGC-1107S	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole Rubber
IGE-1048A	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft Upper
IGS-1016B	1	Rotor
*	1	Cam & Stop Plate, 6 Cyl. R.H.
*	1	Shaft & Gov. Assy.
*	1	Spring, Set, Gov. Weight
IG-1456	2	Weight, Governor
IGS-1131R	1	Shaft, Drive
IGS-2132	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp Cap
IGS-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler, Press in Elbow, 1/4
IGS-3092RA	1	Plate Assy., Breaker ‡ Indentified by 6
IA-131	1	Clip, Spring, Contact Arm
IG-2671F	1	Condenser
IGE-15	1	Washer, Plain, Clamp Sc.,#6
IGP-3028ES	1	Contact Set, Breaker
IGS-89	1	Lead Assy.
IGS-88	2	Terminal
IGS-181	1	Lead Assy.
IGS-88	2	Terminal
IGS-1004J	1	Plate Breaker
IGS-1092RS	1	Plate Assy., Sub
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-323	1	Screw, Spring Clamp Rd. Hd., #6-32x5/16
12X-1012	4	Lockwasher, #6
8X-1546	4	Screw, Fil. Hd., #6-32x5/32
*	1	Spring, Anti-Rattle
SW-213	1	Rivet, Collar, Drive Shaft
VC-14	1	Gasket 1/32" Thick
VC-15	1	Plug
VC-46	**	Washer, .032" Thick
VC-46A	**	Washer, .010" Thick
VC-46B	**	Washer, .055" Thick
VC-77	1	Spring
VC-2082R	1	Vacuum Chamber
X-196	1	Lockwasher, Term. Screw #10
8X-870	2	Screw, Breaker, Plate, Mtg. Fil. Hd., #10-32x5/16
8X-872	3	Screw, Term. & Vac. Chamber Mtg., Fil. Hd. #10-32x1/4
X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10
		1 2 3 4 5

** Used As Required

‡ See Manual Bulletin No. IG-11

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Shaft & Gov. Assy.	Spring Set Gov. Weight	Spring Anti-Rattle
IGS-4205	IGS-1100RW	IGS-2131R	IG-636HS	None
IGS-4205A	IGS-1100RA	IGS-2131R-1	IG-636HS	None
IGS-4205B	IGS-1100RH	IGS-2131RA	IGB-208AS	IGT-70

UNIT	APPLICATION
IGS-4205,A,B	Nash

(Issued 10-8-47)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGS-4207-1,A-1,B-1 DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
*	1	Spring Set, Gov. Weight
IGC-1107S	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-114	1	Arm, Advance
IGS-1016B	1	Rotor
*	1	Cam, & Stop Plate, 6 Cyl., R.H.
IGS-1113R	1	Shaft, Drive
IGS-2158	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze, Lower
IG-694	2	Spring, Clamp, Cap
IGS-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler
*	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IG-3927G	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028ES	1	Contact Set, Breaker
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
*	1	Plate, Breaker
IGS-1082RS	1	Plate Assy., Sub, Breaker
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd., #8-32x3/16
X-194	4	Lockwasher, #6
8X-1546	4	Screw, Fil. Hd., #6-32x5/32
SW-213	1	Rivet, Collar, Drive Shaft
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
*	1	Spring
VC-46	**	Washer, .032" Thick
VC-46A	**	Washer, .010" Thick
VC-46B	**	Washer, .065" Thick
VC-2082R	1	Vacuum Chamber
8X-86	1	Screw, Advance Arm, Hex. Hd., 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm., 1/4
8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
8X-872	2	Screw, Vacuum Chamber, Mtg., Fil. Hd., #10-32x1/4
X-1270	4	Washer, Breaker Plate Mtg. & Vacuum Chamber Mtg. Sc., Skpf., #10

* See table following parts list for part number applying to assembly wanted.

** Use as required.

± See Manual Bulletin IG-11.

Assembly No.	Cam & Stop Plate	Spring Set Gov. Weight	Plate Assy., Breaker	Identified By ±	Plate Breaker	Spring
IGS-4207-1	IGS-1100RW	IGB-292SS	IGS-3004	10	IGS-1004	VC-49 (Blue
IGS-4207A-1	IGS-1100RX	IG-636HS	IGS-3004J	8.5	IGS-1004L	VC-45 (Red)
IGS-4207B-1	IGS-1100RX	IGB-353BS	IGS-3004B	8	IGS-1004A	VC-119

(Issued 6-15-49)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
*	1	Spring Set, Gov. Weight
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGC-1107S	1	Cap Assy., Dist.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	Rotor
*	1	Cam, & Stop Plate, 6 Cyl., R.H.
IGS-1112R	1	Shaft, Drive
IGS-2158	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze, Lower
IG-694	2	Spring, Clamp, Cap
IGS-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler
*	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IG-3927G	1	Condenser
IGC-175	1	Screw, Spring Clamp, Hex. Hd., #6-32x5/16
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028ES	1	Contact, Set, Breaker
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
*	1	Plate, Breaker
IGS-1082RS	1	Plate Assy., Sub Breaker
8X-350	1	Washer, Plain, Contact Lock Screw, #8
8X-884	1	Screw, Lock, Breaker Contact, Fil. Hd. #8-32x3/16
X-194	4	Lockwasher, #6
8X-1546	4	Screw, Fil. Hd., #6-32x5/32
SW-213	1	Rivet, Collar, Drive Shaft
SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
VC-46	**	Washer, .032" Thick
VC-46A	**	Washer, .010" Thick
VC-46B	**	Washer, .065" Thick
*	1	Spring
VC-2082R	1	Chamber Assy., Vacuum Advance
8X-86	1	Screw, Attaching, Advance Arm, Hex. Hd., 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm Sc., 1/4
8X-870	2	Screw, Mtg., Breaker Plate, Fil. Hd., #10-32x5/16
8X-872	2	Screw, Attaching, Vacuum Chamber, Fil. Hd., #10-32x1/4
X-1270	4	Washer, Breaker Plate Mtg. & Vacuum Chamber Mtg. Sc., Skpf. #10

* See table following parts list for part number applying to assembly wanted.

** Use as required.

± See Manual Bulletin IG-11.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Plate Assy., Breaker	Identified By ±	Plate Breaker	Spring
IGS-4208-1	IGS-1100R	IG-636NS	IGS-3004M	6	IGS-1004J	VC-50 (Orange)
IGS-4208A-1	IGS-1100RA	IG-636QS	IGS-3004K	9	IGS-1004M	VC-45 (Red)
IGS-4208B-1	IGS-1100RA	IGB-292SS	IGS-3004A	7	IGS-1004E	VC-73 (Green)

(Issued 6-15-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
**	1	Spring Set, Gov. Weight
IG-1456	2	Weight, Governor
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-17	1	Ring, Lock
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-19S	1	Collar, Shaft
IGS-34	1	Cover, Terminal Stud
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-114	1	Arm, Advance
IGS-115	1	Pointer, Advance Arm
IGS-1016B	1	ROTOR
**	1	Cam & Stop Plate, R.H. 6 Cyl.
IGS-1183R	1	Shaft, Drive
IGS-2184	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGS-117	1	Wick, Felt
X-1448	2	Pin, Hinge Cap Spring
X-1590	1	Oiler, Elbow, Press In, 1/4
IGS-3092RB	1	Plate Assy., Breaker († Identified by 3.5)
IA-131	1	Clip, Spring, Contact Arm
IG-3927G	1	CONDENSER
IGE-15	1	Washer, Plain, Clamp Sc.,#6
IGP-3028ES	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1004N	1	Plate, Breaker
IGS-1092RS	1	Plate Assy., Sub, Breaker
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
12X-194	4	Lockwasher, #6
8X-323	1	Screw, Spring Clamp, Rd. Hd. #6-32x5/16
8X-1546	4	Screw, Fill. Hd. #6-32x5/32
SW-213	1	Rivet, Collar, Drive Shaft
SW-634	1	Washer, Plain, Adv. Arm
VC-14	1	Gasket - 1/32" Thick
**	1	Plug
**	*	Washer
**	1	Spring
VC-2082R	1	VACUUM CHAMBER
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x5/16
X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10

* Use as Required

** See table following parts list for part number applying to assembly wanted.

† See Manual Bulletin IG-11.

UNIT	APPLICATION
IGS-4213-1,A-1	Hudson

Unit	Cam & Stop Plate	Gov. Weight Spring Set	Plug	Washer	Spring
IGS-4213-1	IGS-1100RA	IG-863S	VC-15	VC-46 - .032" Thick VC-46A - .010" Thick VC-46B - .065" Thick	VC-150 (Yellow)
IGS-4213A-1	IGS-1100RW	IGB-339S	VC-98	VC-154 - .032" Thick	VC-155 (Cadmium Plate)

Printed in U. S. A. (Issued 1-31-49) File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-644A	1	Coupling, Drive, Dist.
IG-680	1	Snap Ring, Cam Retaining
IGB-222S	1	Spring Set, Gov. Weight
IGC-1107S	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGS-32	1	Plug, Vent. Hole, Rubber
IGC-2168L	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGS-18	2	Clamp, Bearing, Sub Plate
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-169	1	Arm, Advance
IGS-1016B	1	ROTOR
IGS-1100LQ	1	Cam & Stop Plate, 6 Cyl., L.H.
IGS-1180L	1	Shaft, Drive
IGS-2170	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGS-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler, Elbow, Press in, 1/4
IGS-3004LC	1	Plate Assy., Breaker
		Identified by 5L
IA-131	1	Clip, Spring, Contact Arm
IG-2671K	1	Condenser
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028JS	1	CONTACT SET, BREAKER
IGS-89	1	Lead Assy.
IGS-181	1	Lead Assy.
IGS-1044C	1	Plate, Breaker
IGS-1082LS	1	Plate Assy., Sub, Breaker
8X-350	1	Washer, Plain, Contact Lock Sc., #8
8X-884	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
8X-323	1	Screw, Spring Clamp, Rd. Hd., #6-32x5/16
12X-1012	4	Lockwasher, Cond. & Lead Sc., #6
8X-1546	4	Screw, Condenser & Lead, Fill. Hd. #6-32x5/32
IGT-69	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling, Drive Shaft

Part No.	No. Used	Name of Part
SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
VC-14	*	Gasket 1/32" Thick
VC-14A	*	Gasket
VC-15	1	Plug
VC-46	*	Washer, .032" Thick
VC-46A	*	Washer, .010" Thick
VC-46B	*	Washer, .065" Thick
VC-55	1	Spring
VC-2082A	1	VACUUM CHAMBER
8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
12X-196	1	Lockwasher, Terminal Screw, #10
12X-199	1	Lockwasher, Advance Arm, 1/4
8X-870	2	Screw, Breaker Plate Mtg. Fill. Hd. #10-32x5/16
8X-872	3	Screw, Terminal & Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg. Sc., Skpf. #10

* Use as Required.

UNIT	APPLICATION
IGS-4214	Kaiser, Frazer

(Issued 9-27-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGT-4001,A, B,C,D,E,F, G,J,K & -1 — DISTRIBUTOR PARTS LIST — IGT-4001,A, B,C,D,E,F, G,J,K & -1

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-199	1	Dist. Shaft Collar
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGP-1003	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	ROTOR
IGS-21†	1	Advance Pointer
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-1020S†	1	Advance Control Arm Assy.
IG-816C†	1	Thrust Washer
8X-135†	1	1/4-20x2 Fill. Hd. Screw
8X-146†	1	1/4-20 Hex. Nut
12X-199†	1	1/4 Lock Washer
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
*	1	Cam & Stop Plate - 8 Cyl.R.H.
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
IGT-2001	1	Distributor Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
*	1	Weight Spring Set
*	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927	1	CONDENSER ASSEMBLY
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
*	1	Breaker Plate Part Assy.
IGT-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGT-14A	1	Lead Assembly
X-936	2	Terminal
X-1012	1	#6 Lock Washer
8X-1546	1	#6-32x5/32 Fill. Hd. Sc.
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	4	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
X-1270	8	#10 Skpf. Washer
		1 2 3 4 5

(Issued 2-1-40)

\+ Use as required.

† Used with assemblies having a suffix "-1".

* See table following parts list for part number applying to assembly wanted.

‡ SERVICE BREAKER POINT SET IGP-3028A.

Assembly No.	Cam Assembly	Vacuum Chamber	Spring	Dr. Shaft & Gov.	Dr. Shaft Assy.
IGT-4001	IGT-1021RC	IGT-1023AS	VC-45 (Red)	IGT-2002R	IGT-1002R
IGT-4001A	IGT-1021RD	IGT-1023BS	VC-45 (Red)	IGT-2002RA	IGT-1002R
IGT-4001B	IGT-1021RE	IGT-1023AS	VC-45 (Red)	IGT-2002RB	IGT-1002R
IGT-4001C	IGT-1021RD	IGT-1023CS	VC-52 (Green)	IGT-2002RD	IGT-1002R
IGT-4001D	IGT-1021RC	IGT-1023AS	VC-45 (Red)	IGT-2002RE	IGT-1002R
IGT-4001E	IGT-1021RD	IGT-1023AS	VC-45 (Red)	IGT-2002RF	IGT-1002R
IGT-4001F	IGT-1021RA	IGT-1023AS	VC-45 (Red)	IGT-2002RH	IGT-1002RB
IGT-4001G	IGT-1021RB	IGT-1023DS	VC-50 (Orange)	IGT-2002RE-1	IGT-1002R
IGT-4001J	IGT-1021RD	IGT-1023ES	VC-45 (Red)	IGT-2002RD	IGT-1002R
IGT-4001K	IGT-1021R	IGT-1023GS	VC-73 (Maroon)	IGT-2002RH-1	IGT-1002RD

Assembly No.	Weight Sp. Set	Bkr. Plate Assy.	Bkr. Plate Part Assy.
IGT-4001	IGB-284S	IGT-2004	IGT-1004
IGT-4001A	IGC-78S	IGT-2004A	IGT-1004A
IGT-4001B	IGE-29S	IGT-2004	IGT-1004
IGT-4001C	IGB-265S	IGT-2004B	IGT-1004B
IGT-4001D	IGB-292S	IGT-2004	IGT-1004
IGT-4001E	IGB-293S	IGT-2004	IGT-1004
IGT-4001F	IG-636BS	IGT-2004	IGT-1004
IGT-4001G	IGB-292S	IGT-2004	IGT-1004
IGT-4001J	IGB-265S	IGT-2004C	IGT-1004C
IGT-4001K	IG-636BS	IGT-2004A	IGT-1004A


UNIT	APPLICATION
IGT-4001,A,B, C,D,E	Chrysler
IGT-4001F	Chrysler, Chrysler Industrial
IGT-4001G,J,K	Chrysler

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGT-4001,A,B,C,D,E,F,G,J,K &-1 DISTRIBUTOR ILLUSTRATION

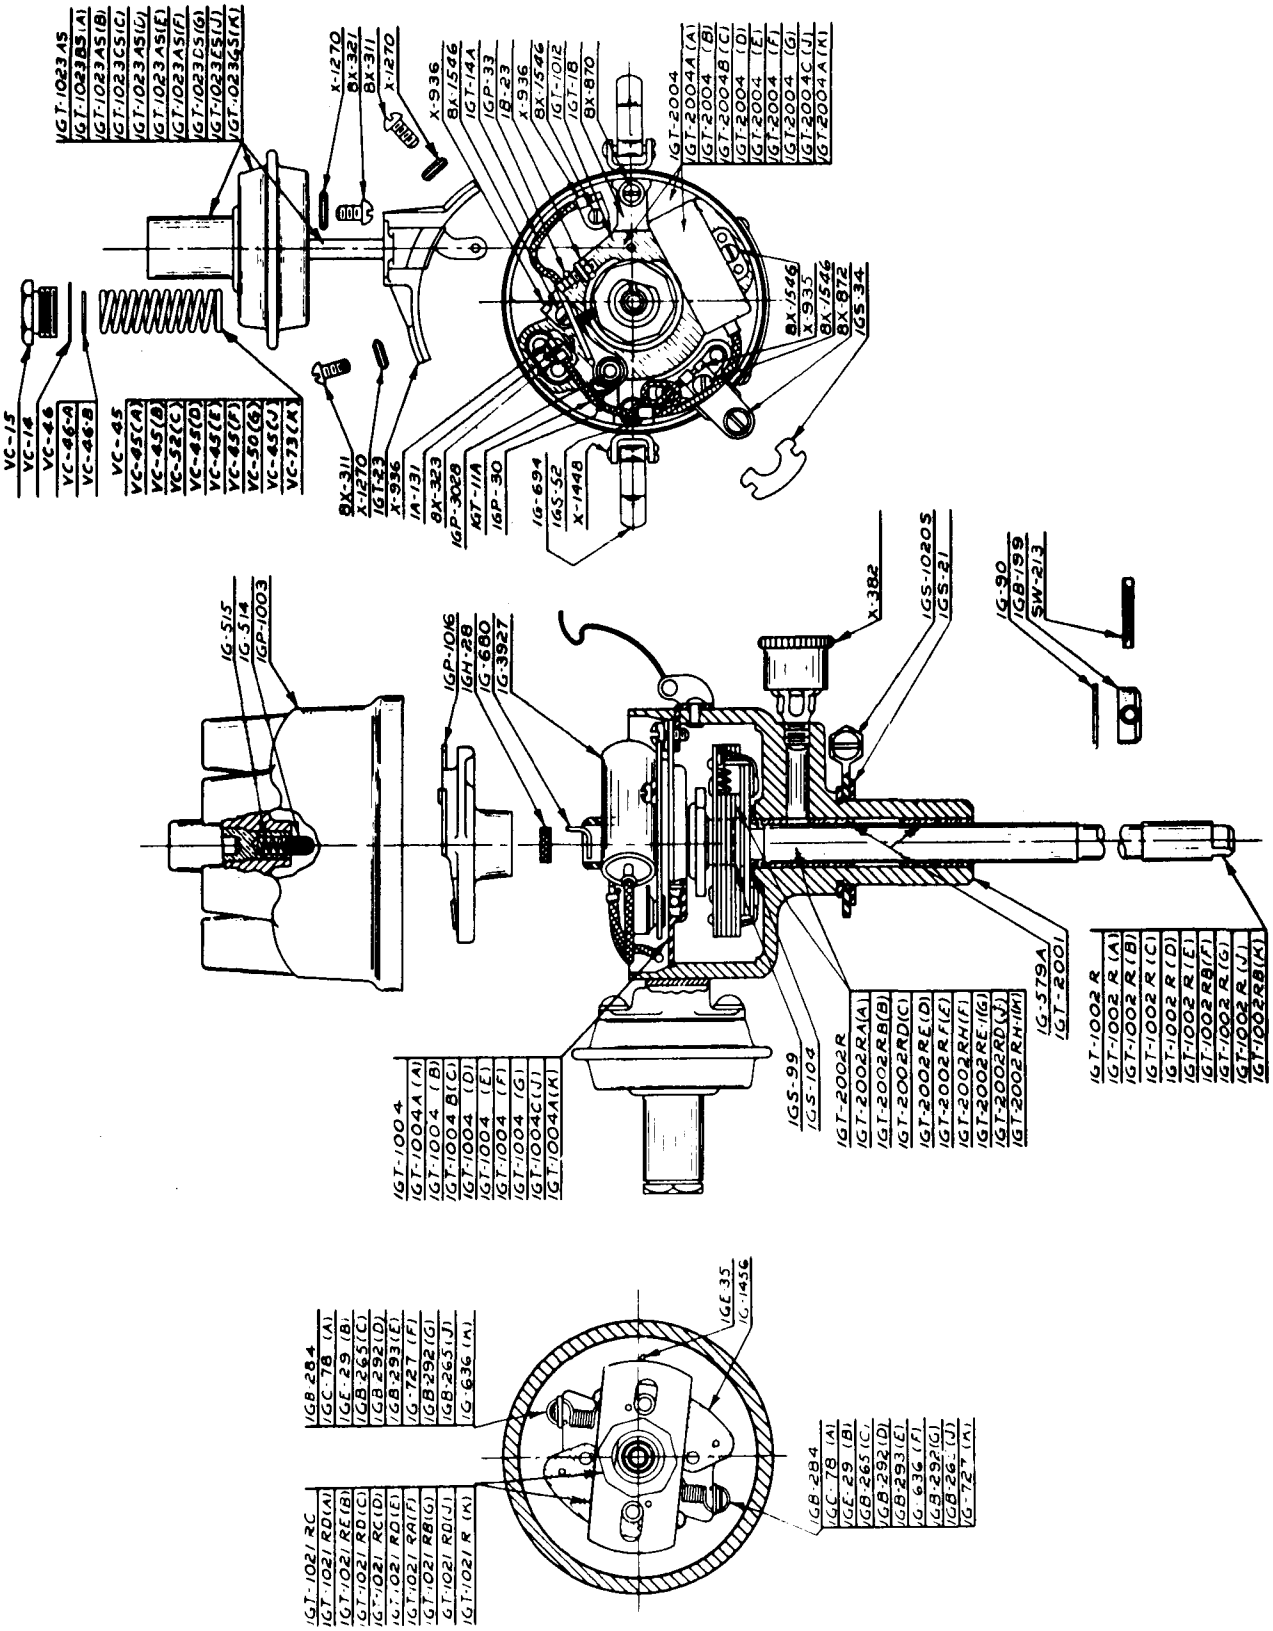

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H.T. Wire Terminal
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IG-816A	1	Thrust Washer
IGB-162	1	Thrust Washer
IGC-24N	1	Advance Control Arm
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGK-26	1	Washer - .020" Thick
IGP-1003B	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	Rotor
IGS-34	1	Terminal Slot Cover
IGT-18	2	Bearing Clamp
IGT-28	1	Vacuum Chamber Bracket
IGT-1022L	1	Cam & Stop Plate - 8 Cyl. - L.H.
IGT-1028S	1	Vacuum Chamber
*	1	Drive Shaft & Gov. Assy.
*	1	Dist. Shaft Assy. L.H.
IG-2456	2	Weight Assy.
*	2	Weight Spring
IGT-2027	1	Dist. Base Assy.
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGT-2030	1	Breaker Plate Assy. ▽ Identified by 10
IA-131	1	Breaker Arm Spring Clip
IG-2671J	1	Condenser Assy.
IGP-3028L‡	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assy.
X-935	1	Terminal
X-936	1	Terminal
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-1030	1	Breaker Plate Part Assy.
IGT-1031	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGT-35	1	Lead Assy.
X-1484	2	Terminal
8X-317	1	#6-32x1/8 Rd. Hd. Sc.
X-1012	1	#6 Lock Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
SW-213	1	Dist. Drive Rivet
8X-86	1	1/4-20x5/8 Hex. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-163	1	1/4-20 Hex. Nut
X-196	1	#10 Lock Washer
X-199	2	1/4 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 11-1-37)

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assembly	Weight Spring	Weight Sp. Set
IGT-4003	IGT-2024L	IGT-1024L	IGB-234 IGB-284	IGB-284SS
IGT-4003A	IGT-2024LA	IGT-1024LA	IG-636 IGB-284	IG-636AS

▽ See Manual Bulletin IG-11.

* See table following parts list for part number applying to assembly wanted.


‡ Service Breaker Point Set IGP-3028LS.

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4003,A DISTRIBUTOR ILLUSTRATION

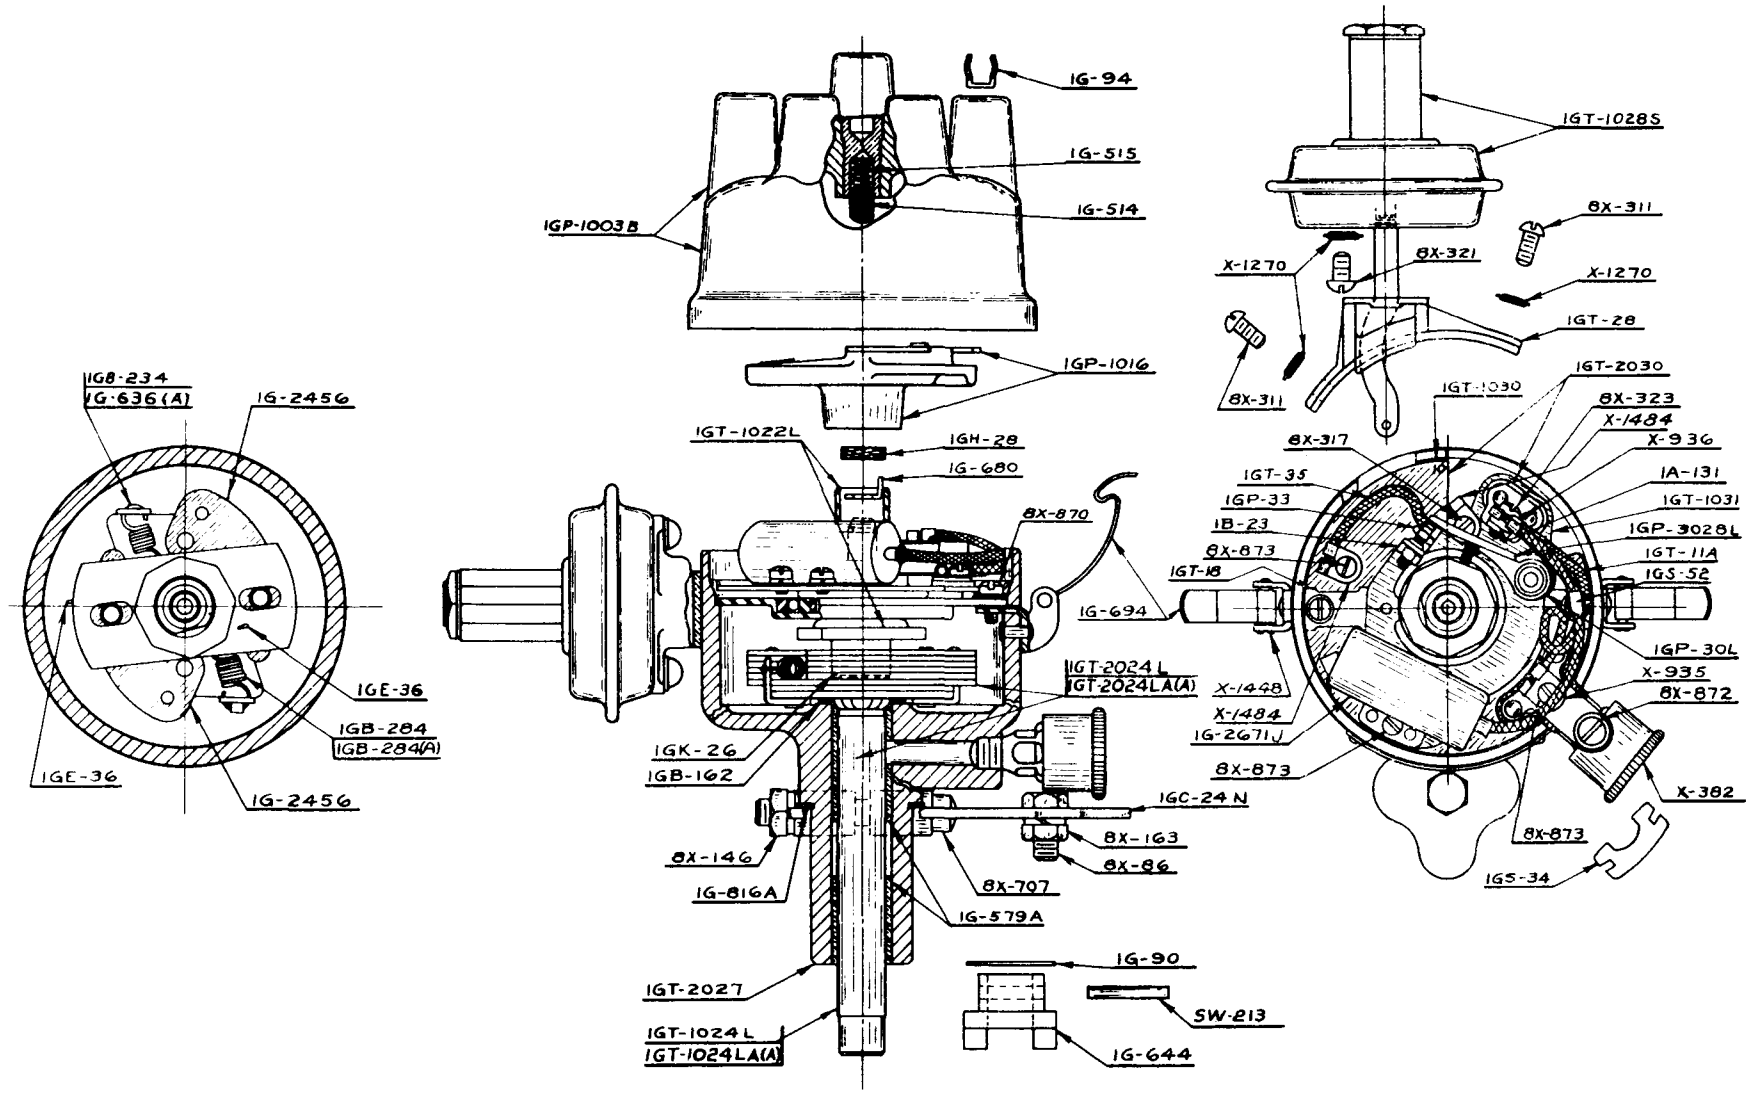

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGH-1060	1	Advance Control Arm
IGK-26	1	Washer - .020" Thick
IGP-1003	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	Rotor
IGS-34	1	Terminal Slot Cover
IGT-18	2	Bearing Clamp
IGT-28	1	Vacuum Chamber Bracket
IGT-1022LA	1	Cam & Stop Plate - 8 Cyl. L. H.
IGT-1028BS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
IGT-2030A	1	Breaker Plate Assy. ‡ Identified by 7.5
IA-131	1	Breaker Arm Spring Clip
IG-2671J	1	Condenser Assy.
IGP-3028L‡	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assy.
X-935	1	Terminal
X-936	1	Terminal
IGT-1030A	1	Breaker Plate Part Assy.
IGT-1031A	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGT-35	1	Lead Assy.
X-1484	2	Terminal
8X-317	1	#6-32x1/8 Rd. Hd. Sc.
X-1012	1	#6 Lock Washer
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-2032	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGT-2034L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assy.
IGB-277‡	2	Weight Spring
IGT-1034L	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 11-21-38)


‡ Service Breaker Point Set IGP-3028LS, & Service Weight Spring Set IGB-277S.

* Use as required.

± See Manual Bulletin IG-11.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."

IGT-4004 DISTRIBUTOR ILLUSTRATION

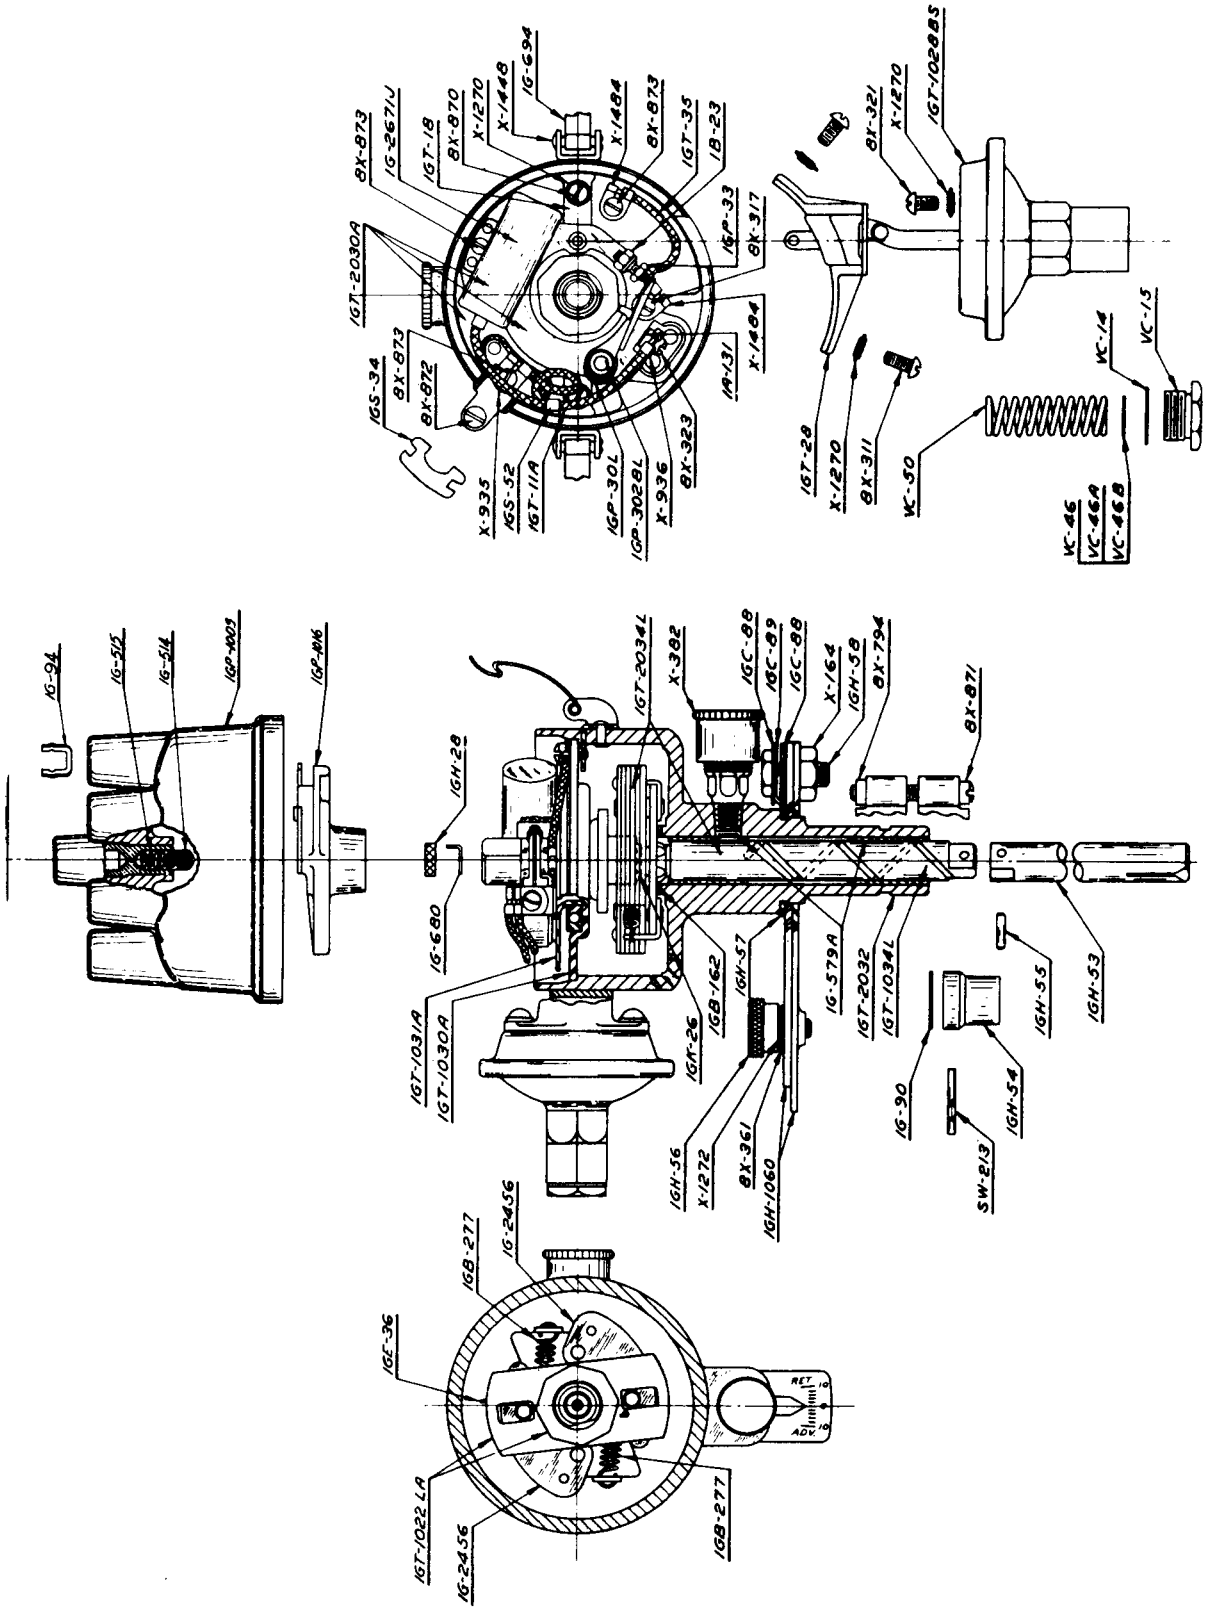

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	Dist. Cap Cover
IGH-36	1	Dist. Cap Nut
IGH-1029	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGH-1041	1	Rotor
IGH-1060A	1	Advance Control Arm
IGK-26	1	Washer - .020" Thick
IGL-44	1	Dist. Drive Coupling
IGS-34	1	Terminal Slot Cover
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
IGT-38	1	Lead Assy.
X-590	1	Terminal
X-1053	1	Terminal
IGT-1022RC	1	Cam & Stop Plate - 8 Cyl.R.H
IGT-1023FS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-146B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
IGT-2004D	1	Breaker Plate Assy.
		‡ Identified by 5.5
IA-131	1	Breaker Arm Spring Clip
IG-2671G	1	Condenser Assy.
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assy.
X-935	1	Terminal
X-936	1	Terminal
IGT-1004D	1	Breaker Plate Part Assy.
IGT-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-14A	1	Lead Assy.
X-936	2	Terminal
8X-317	1	#6-32x1/8 Rd. Hd. Sc.
X-1012	1	#6 Lock Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
8X-873	3	#6-32x3/16 Fill. Hd. Sc.
X-1012	4	#6 Lock Washer
IGT-2036R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
IGB-293‡	2	Weight Spring
IGT-1036R	1	Drive Shaft Assy.
IGT-2037	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
SW-213	1	Dist. Drive Rivet
8X-183	1	#10 Brass Washer
X-196	2	#10 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 11-21-38)


‡ Service Breaker Point Set IGP-3028A, & Service Weight Spring Set IGB-293S.

* Use as required.

± See Manual Bulletin IG-11.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4005 DISTRIBUTOR ILLUSTRATION

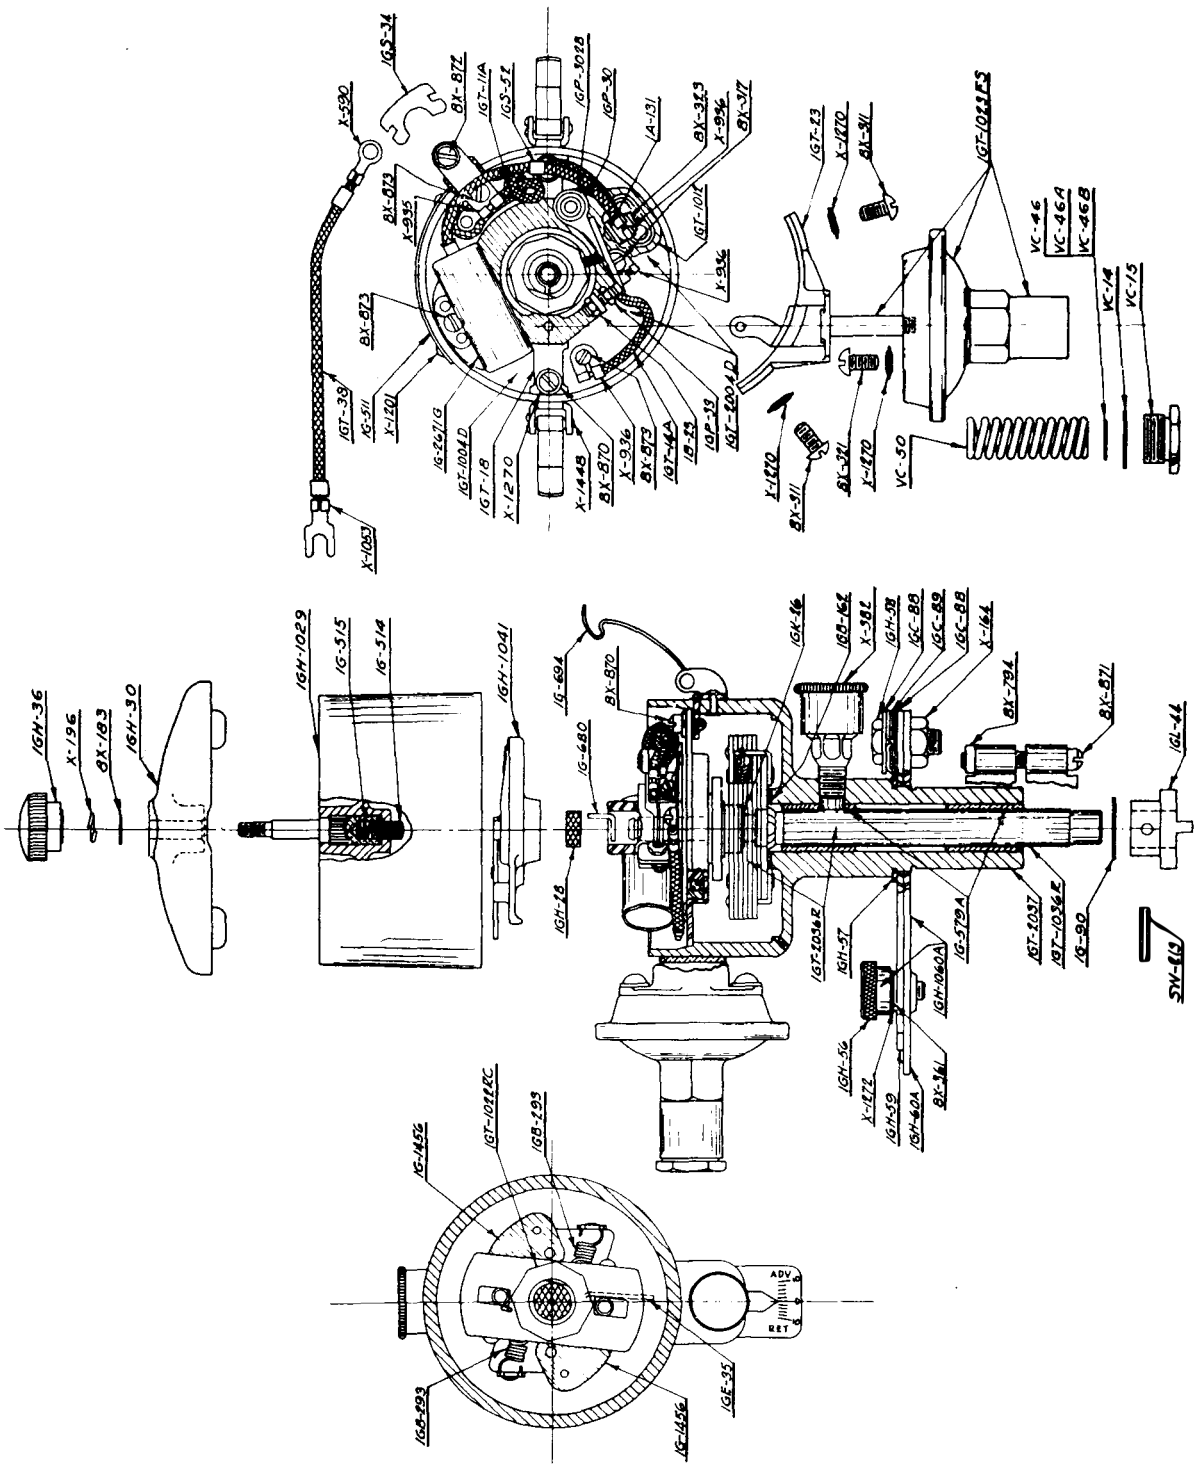

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-1060A	1	Advance Control Arm
IGK-26	1	Washer - .020" Thick
IGL-44	1	Distributor drive coupling
IGP-1016	1	Rotor
IGS-34	1	Terminal Slot Cover
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
IGT-42	1	Washer
*	1	Lead Assy.
X-590	1	Terminal
X-1053	1	Terminal
*	1	Cam & Stop Plate - 8 Cyl.R.H.
IGT-1039	1	Dist. Cap Assy.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGT-1040	1	Dist. Cap Cover Assy.
IGB-230	2	Gasket
IGT-1043	1	Secondary Screw Terminal
IGT-2004D	1	Breaker Plate Assy. ± Identified by 5.5
IA-131	1	Breaker Arm Spring Clip
IG-2671G	1	Condenser Assembly
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assy.
X-935	1	Terminal
X-936	1	Terminal
IGT-1004D	1	Breaker Plate Part Assy.
IGT-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33‡	1	Breaker Screw Point
IGT-14A	1	Lead Assy.
X-936	2	Terminal
X-1012	1	#6 Lock Washer
8X-1546	1	#6-32x5/32 Fill. Hd. Sc. 1 2 3 4 5
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
IGT-2023S	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
VC-50	1	Spring (Orange)
*	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assy.
*	2	Weight Spring
IGT-1036R	1	Drive Shaft Assy.
IGT-2037	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
SW-213	1	Dist. Drive Rivet
X-196	2	#10 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	1	#10-32x1/4 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
8X-1340	2	#8-32x3/4 Ctsk. Hd. Screw 1 2 3 4 5

(Issued 9-26-38)

± See Manual Bulletin IG-11.

‡ Service Breaker Point Set IGP-3028A.


+ Use as required.

* See table following parts list for part number applying to assembly wanted.

Assy. No.	Lead Assy.	Shaft & Gov. Assy.	Cam Assy.	Weight Spring	Weight Spring Set
IGT-4006	IGT-45	IGT-2036R	IGT-1022RC	IGB-293 (2)	IGB-293S
IGT-4006A	IGT-60	IGT-2036RA	IGT-1022RE	IGB-292 (1) IG-913 (1)	IGB-292AS

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4006,A DISTRIBUTOR ILLUSTRATION

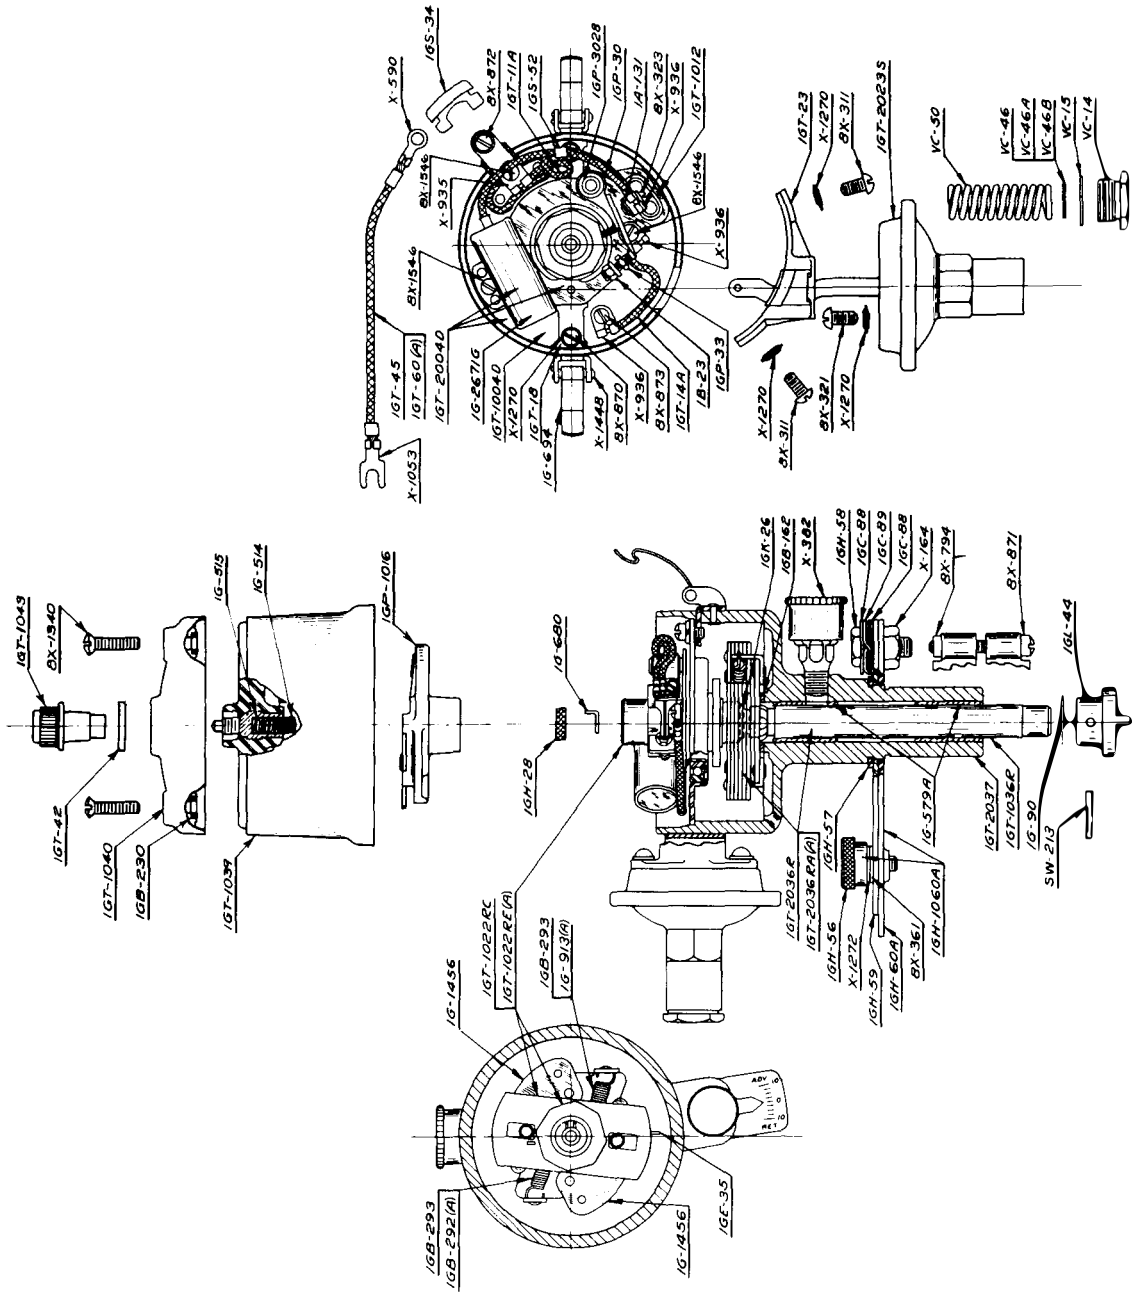

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGB-162	1	Thrust Washer
IGE-36	1	Anti-Rattle Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGK-26	1	Washer - .020" Thick
IGP-1003	1	DIST. CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGT-18	2	Bearing Clamp
IGT-28	1	Vacuum Chamber Bracket
IGT-1022LB	1	Cam & Stop Plate - 8 Cyl. L.H.
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket 1/32" Thick
VC-15	1	Plug
*	1	Spring
VC-46	‡	Washer - .032" Thick
VC-46A	‡	Washer - .010" Thick
VC-46B	‡	Washer - .065" Thick
IGT-1044	1	Advance Control Arm Assy.
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-2671J	1	CONDENSER ASSY.
IGE-15	1	#6 Plain Washer
IGP-3028L†	1	Breaker Arm Assy.
IGP-30L	1	Breaker Arm Spring
IGS-52	1	Lead Clip
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
*	1	Breaker Plate Part Assy.
IGT-1031	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IGT-35	1	Lead Assembly
X-1484	2	Terminal
8X-317	1	#6-32x1/8 Rd. Hd. Sc.
X-1012	1	#6 Lock Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
IGT-2032	1	Dist. Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
IGT-2034LB	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGB-210SS	1	Weight Spring Set
IGT-1034L	1	Drive Shaft Assy.
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 4-25-41)

Assembly No.	Vacuum Chamber	Spring	Bkr. Plate Assy.	Identified By ±	Bkr. Plate Part Assy.
IGT-4007	IGT-1028BS	VC-50 (Orange)	IGT-2030A	7.5	IGT-1030A
IGT-4007A	IGT-2028S	VC-45 (Red)	IGT-2030B	6	IGT-1030B

* See table following parts list for part number applying to assembly wanted.

‡ Use as required.


† Service CONTACT SET IGP-3028LS.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4007,A	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4007,A DISTRIBUTOR ILLUSTRATION

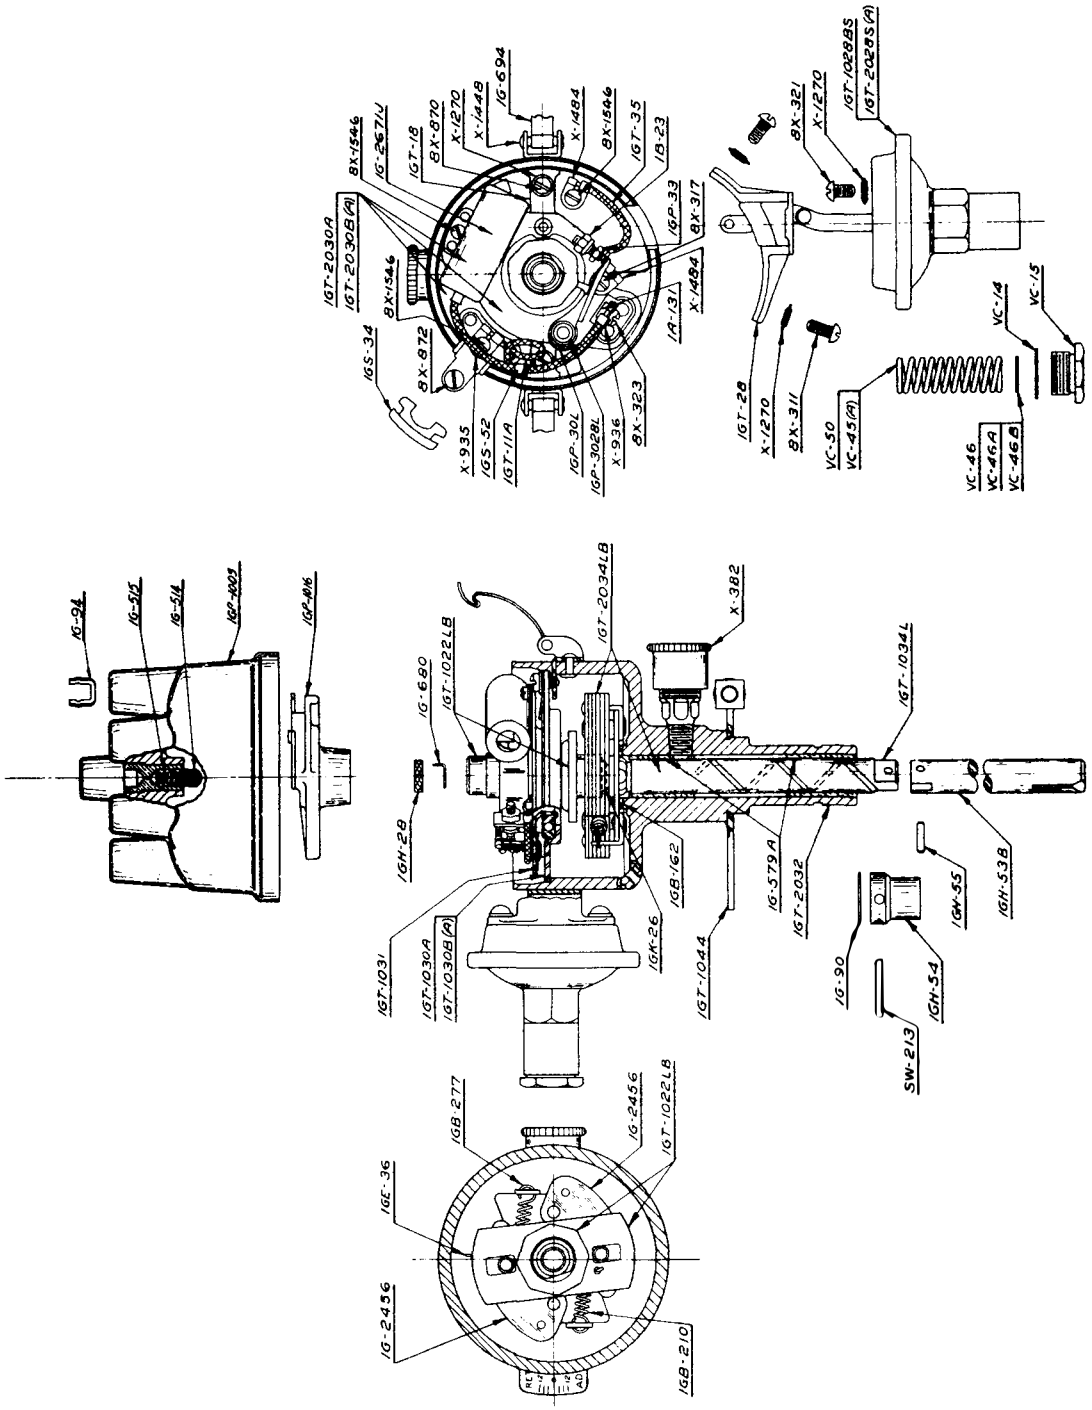

IGT-4008 DISTRIBUTOR PARTS LIST IGT-4008

PRELIMINARY

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-644	1	Dist. Drive Coupling
IG-680	1	Lock Spring Ring
IGB-1154A	1	Advance Control Arm Assy.
IGC-104	1	Advance Arm Pointer
IGH-28	1	Cam Sleeve Felt Wick
IGH-30	1	DIST. CAP COVER
IGH-36	1	Dist. Cap Nut
IGH-1041	1	ROTOR
IGH-1045	1	DIST. CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
IGT-1021RJ	1	Cam & Stop Plate - 8 Cyl. R.H.
IGT-1023BS	1	Vacuum Chamber Assy.
VC-14	1	Gasket 1/32" Thick
VC-15	1	Plug
VC-45	1	Spring (Red)
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
IGT-2004A	1	Breaker Plate Assy. ±Identified by 8
IA-131	1	Breaker Arm Spring Clip
IG-3927	1	CONDENSER ASSY.
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
IGT-1004A	1	Breaker Plate Part Assy.
IGT-1012	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IGP-33†	1	Breaker Screw Point
IGT-14A	1	Lead Assembly
X-936	2	Terminal
X-1012	1	#6 Lock Washer
8X-1546	1	#6-32x5/32 Fill. Hd. Screw
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
IGT-2024RB	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-265S	1	Weight Spring Set
IGT-1024R	1	Drive Shaft Assy.
IGT-2046	1	Dist. Base Assy.
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
SW-213	1	Dist. Drive Rivet
8X-183A	1	#10 Plain Washer
X-196	2	#10 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screv
8X-872	1	#10-32x1/4 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 4-25-41)

† Service CONTACT SET IGP-3028A.

* Use as required.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4008	Hupmobile

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
*	1	Thrust Washer
IGB-199	1	Dist. Shaft Collar
IGE-35	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGP-1003	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	ROTOR
*	1	Advance Pointer
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
IGT-1021R	1	Cam & Stop Plate
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
IGT-2001	1	Dist. Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGT-2002RJ	1	Drive Shaft & Gov. Assy.
IG-636‡	1	Weight Spring
IG-1456	2	Weight Assy.
IGB-292‡	1	Weight Spring
IGT-1002RB	1	Drive Shaft Assy.
*	1	Advance Control Arm Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927	1	CONDENSER ASSEMBLY
IGP-3028‡	1	Breaker Arm Assy.
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
*	1	Breaker Plate Part Assy.
IGT-1048R	1	Breaker Sub Plate Assy.
IGT-52	1	Lead Assembly
X-936	1	Terminal
X-1052	1	Terminal
IGT-1049RM‡	1	Breaker Point
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	4	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 2-1-40)

‡ Service BREAKER POINT SET IGP-3028S & Service Weight Spring Set IGB-292SS.

* See table following parts list for part number applying to assembly wanted.

\+ Use as required.


Assembly No.	Breaker Plate Assy.	Brkr. Plate Part Assy.	Vacuum Chamber	Spring Plunger
IGT-4101	IGT-3004A	IGT-1004A	IGT-1023BS	VC-45 (Red)
IGT-4101-1	IGT-3004A	IGT-1004A	IGT-1023BS	VC-45 (Red)
IGT-4101A	IGT-3004A	IGT-1004A	IGT-1023HS	VC-77 (11 Coils)
IGT-4101A-1	IGT-3004A	IGT-1004A	IGT-1023HS	VC-77 (11 Coils)
IGT-4101A-2	IGT-3004A	IGT-1004A	IGT-1023HS	VC-77 (11 Coils)
IGT-4101B	IGT-3004	IGT-1004	IGT-1023JS	VC-78 (Silver)
IGT-4101B-1	IGT-3004	IGT-1004	IGT-1023JS	VC-78 (Silver)
IGT-4101B-2	IGT-3004	IGT-1004	IGT-1023JS	VC-78 (Silver)

Assembly No.	Adv. Arm Assembly	Thrust Washer	Advance Pointer
IGT-4101	None	None	None
IGT-4101-1	IGT-2066	IG-816C	None
IGT-4101A	None	None	None
IGT-4101A-1	IGT-2066	IG-816C	None
IGT-4101A-2	IGS-1020S	None	IGS-21
IGT-4101B	None	None	None
IGT-4101B-1	IGT-2066	IG-816C	None
IGT-4101B-2	IGS-1020S	None	IGS-21

UNIT	APPLICATION
IGT-4101	Chrysler, Dodge Export
IGT-4101A	Chrysler, Dodge Export
IGT-4101A-2	Chrysler
IGT-4101B	Chrysler

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the comp ete part can be assembled as needed."

IGT-4101,A,B,-1,-2 DISTRIBUTOR ILLUSTRATION

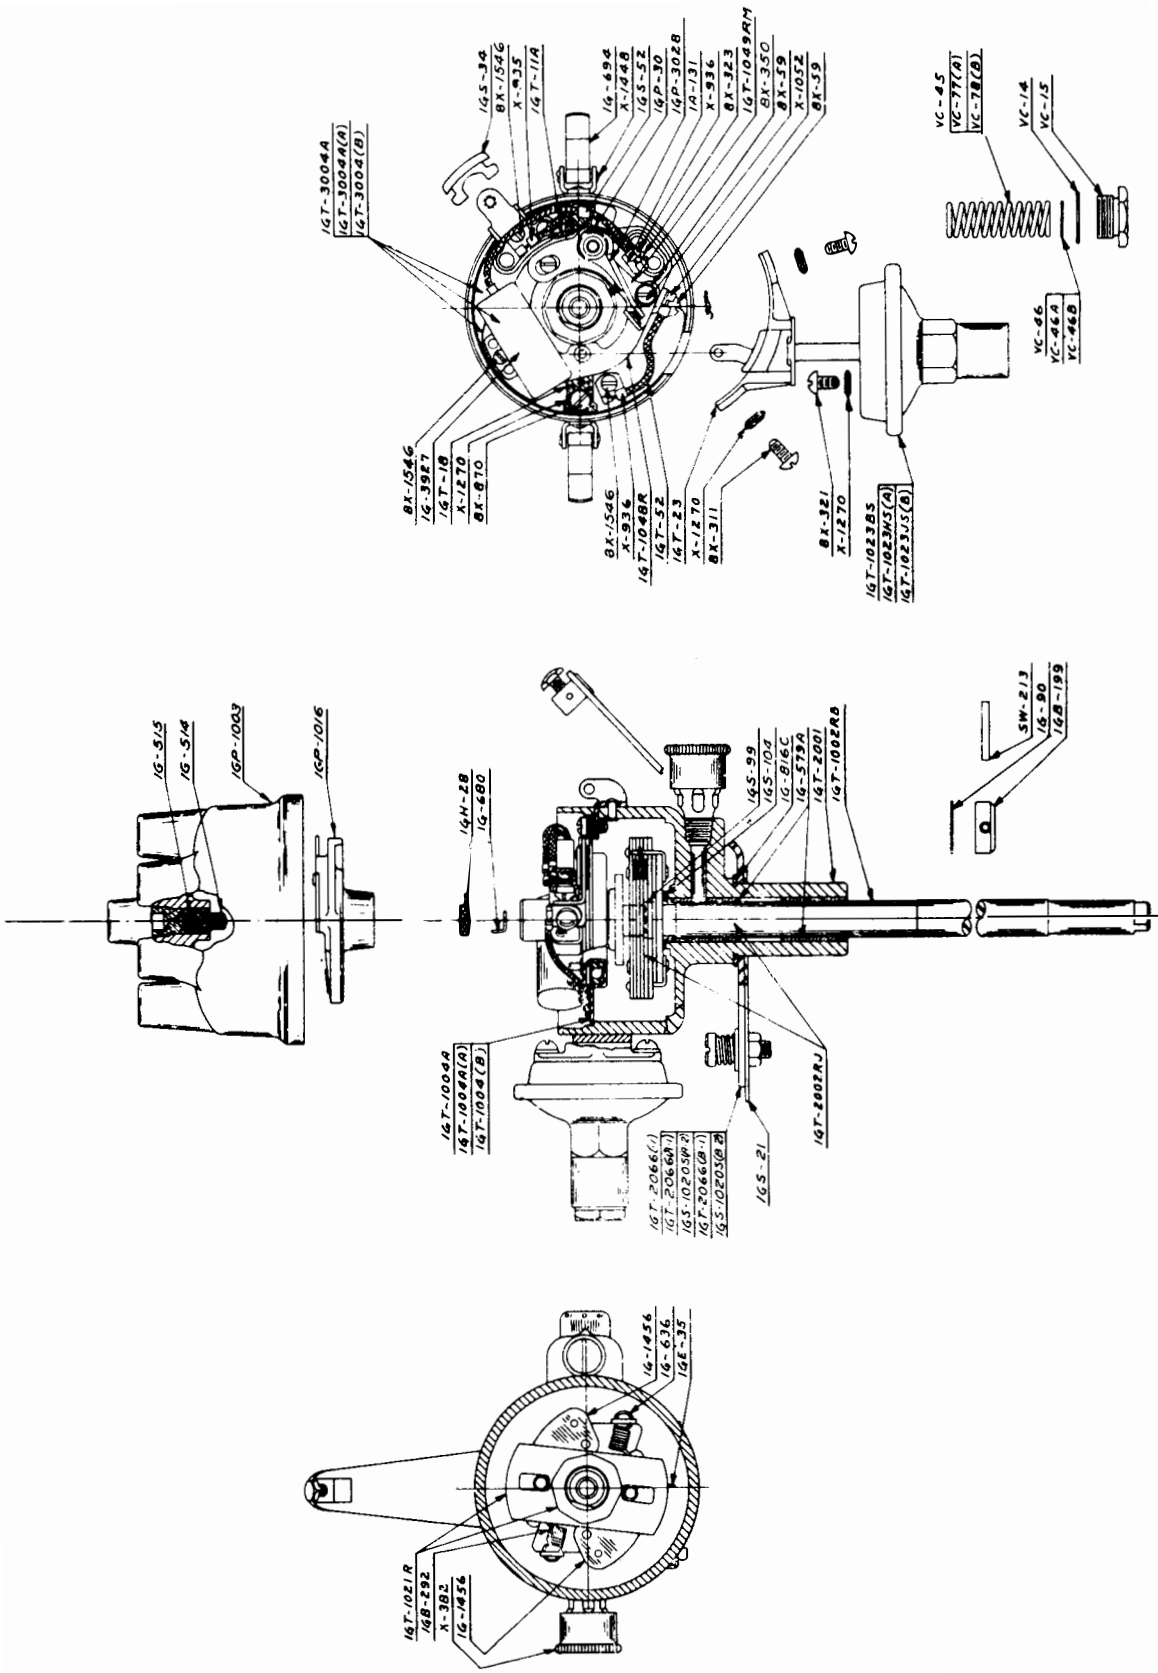


Part No.	No. Used	Name of Part
		1 2 3 4 5
GK-36	1	Dist. Gear - Follower
IG-90	1	Thrust Washer
IG-94	10	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IG-816	1	Thrust Washer
IG-860A	1	Hold Down Arm
IGB-162	1	Thrust Washer
IGB-247	1	Dist. Drive Rivet
IGB-1025C	1	Condenser Assembly
IGB-1025E	1	Condenser Assembly
IGH-28	1	Cam Sleeve Felt Wick
IGH-2026RB	1	Drive Shaft & Gov. Assy.
IG-776	2	Weight Spring
IG-1322	2	Weight Assy.
IGH-1026R	1	Drive Shaft Assembly
IGJ-1003	1	Distributor Cap Assy.
IA-213	1	Contact Spring
IG-514	1	Contact Spring Plunger
IGJ-1022RA	1	Cam & Stop Plate - 4 cyl. R.H.
IGJ-2023	1	Distributor Base Assy.
IG-352	2	Hinge Pin
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-374	2	3/32x1/4 Split Rivet
X-490	1	Press in - Sleeve Oiler
IGK-26	1	Washer - .020" Thick
IGR-1016	1	Rotor Assembly
IA-213	1	Contact Spring
IA-218	1	Contact Spring Plunger
IGR-2004	1	Breaker Plate Assy.
GK-151	1	Plain Steel Washer
IA-131	2	Breaker Arm Spring Clip
IG-1839	1	Breaker Point
IGE-14	1	Primary Connector Assy.
IGB-132	2	Terminal
IGH-3664	2	Breaker Arm Assembly
IGB-209	2	Breaker Arm Spring
		1 2 3 4 5
IGR-1004	1	Breaker Plate Part Assy.
IGR-1017	1	Breaker Sub Plate Assy.
IB-23	1	Breaker Point Lock Nut
IB-24	1	Breaker Point Screw
X-195	2	#8 Lock Washer
8X-302	1	#6-32x1/4 Rd. Hd. Screw
8X-305	2	#8-32x1/4 Rd. Hd. Screw
8X-312	1	#10-32x1/4 Rd. Hd. Screw
8X-350	2	#8 Plain Washer
X-537	1	#10 Lock Washer
8X-873	1	#6-32x3/16 Fill. Hd. Sc.
8X-908	2	#6-32x1/4 Fill. Hd. Screw
X-1012	4	#6 Lock Washer
6X-86	1	1/4-20x5/8 Hex. Hd. Screw
6X-163	1	1/4-20 Hex. Nut
X-196	6	#10 Lock Washer
X-199	1	1/4 Lock Washer
6X-794	1	#10-32 Square Nut
6X-870	2	#10-32x5/16 Fill. Hd. Screw
6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
6X-872	4	#10-32x1/4 Fill. Hd. Screw
6X-888	2	#8-32x5/16 Fill. Hd. Screw
X-1276	4	#8 Skpf. Washer
		1 2 3 4 5

(Issued 1-16-34)
(R-7-15-36)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGR-4001A DISTRIBUTOR ILLUSTRATION

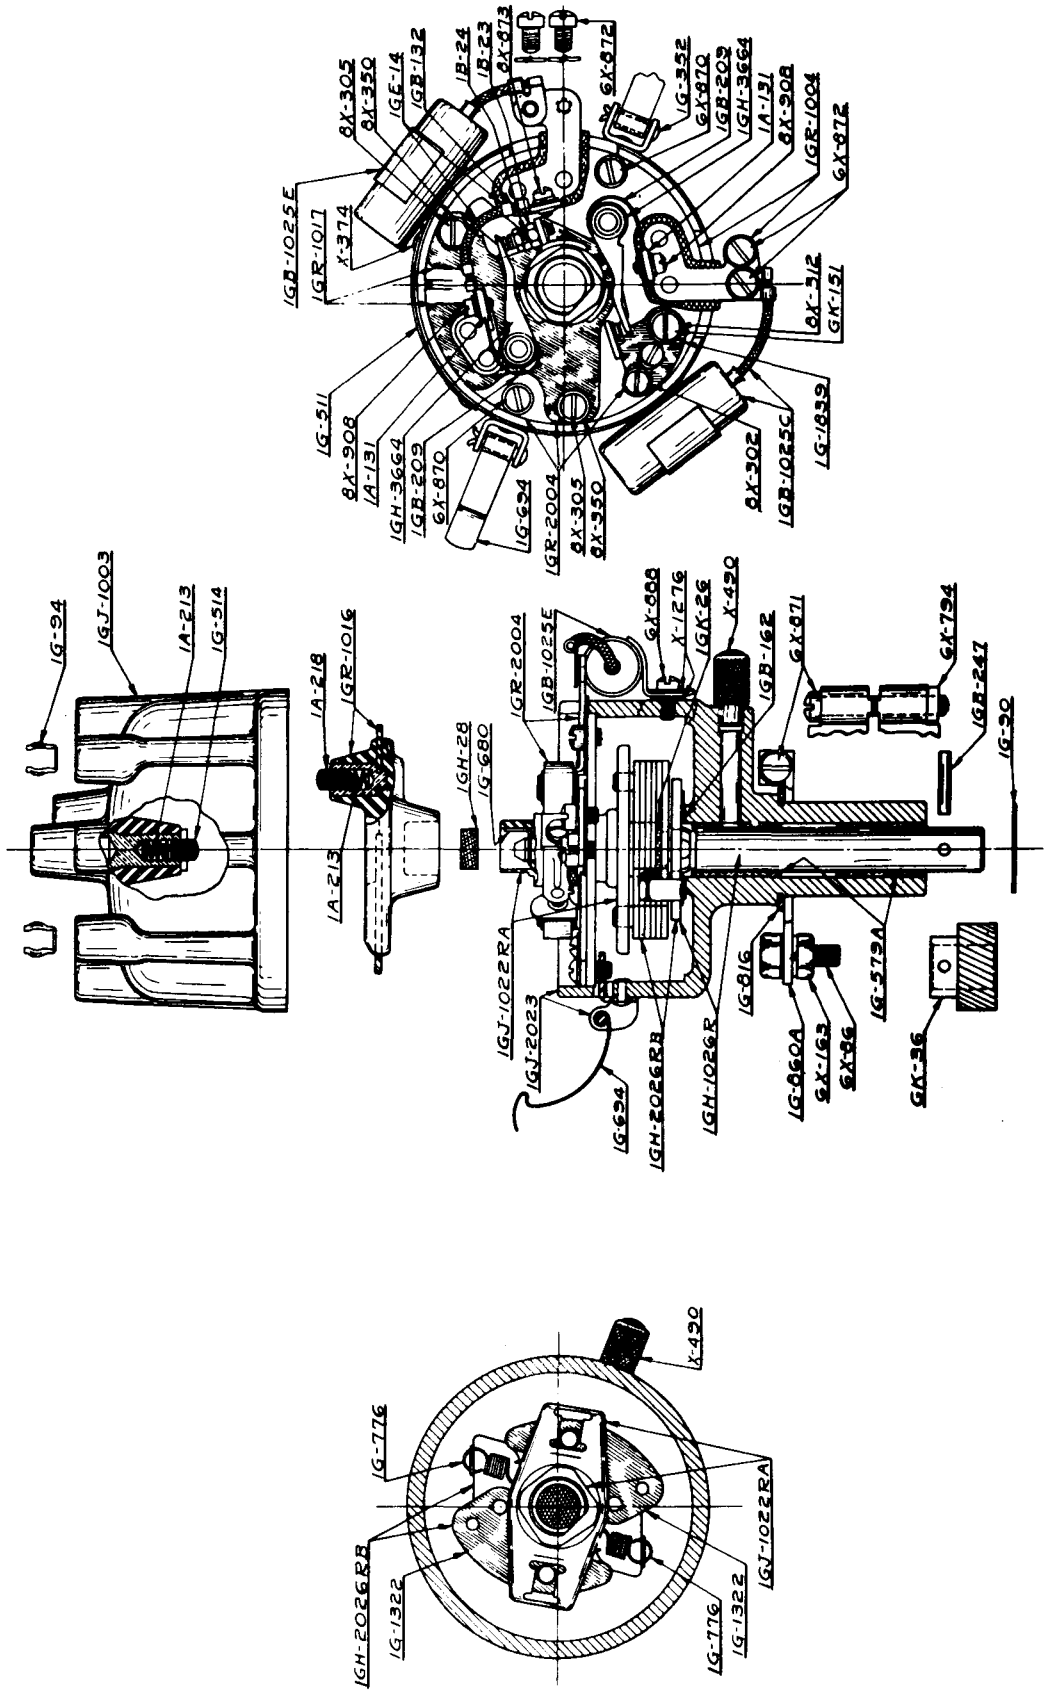

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	2	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGE-36	1	Governor Control Spring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGT-18	2	Bearing Clamp
IGT-28	1	Vacuum Chamber Bracket
IGT-1021L	1	Cam & Stop Plate - 8 Cyl. L.H.
IGT-1044	1	Advance Control Arm Assy.
8X-136	1	1/4-20x1 1/4 Fill. Hd. Sc.
12X-199	1	1/4 Lock Washer
8X-791	1	1/4-20 Square Nut
IGT-2020L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGB-284‡	1	Weight Spring
IGB-308‡	1	Weight Spring
IGT-1020L	1	Drive Shaft Assy.
IGT-2028BS	1	Vacuum Chamber Assy.
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer .065" Thick
VC-50	1	Spring (Orange)
IGT-2032	1	Distributor Base Assembly
IG-511	1	Name Plate
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1201	2	.10x1/4 Tubular Rivet
X-1448	2	Hinge Pin
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGT-3030	1	Breaker Plate Assembly ± Identified by 5.5
IA-131	1	Brkr. Arm Spring Clip
IG-2671J	1	CONDENSER ASSEMBLY
IGP-3028L‡	1	Breaker Arm Assy.
IGP-30L	1	Brkr. Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
IGT-1030C	1	Brkr. Plate Part Assy.
IGT-1048L	1	Brkr. Sub Plate Assy.
IGT-68	1	Lead Assembly
X-1052	1	Terminal
X-1484	1	Terminal
IGT-1049LM‡	1	Breaker Point
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	4	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Dist. Drive Rivet
X-196	1	#10 Lock Washer
8X-311	2	#10-32x3/8 Rd. Hd. Screw
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	1	#10-32x1/4 Fill. Hd. Sc.
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 6-27-39)

* Use as required.


± See Manual Bulletin IG-11.

‡ Service BREAKER POINT SET IGP-3028MS
Service Weight Spring Set IGB-284DS.

UNIT	APPLICATION
IGT-4102	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4102 DISTRIBUTOR ILLUSTRATION

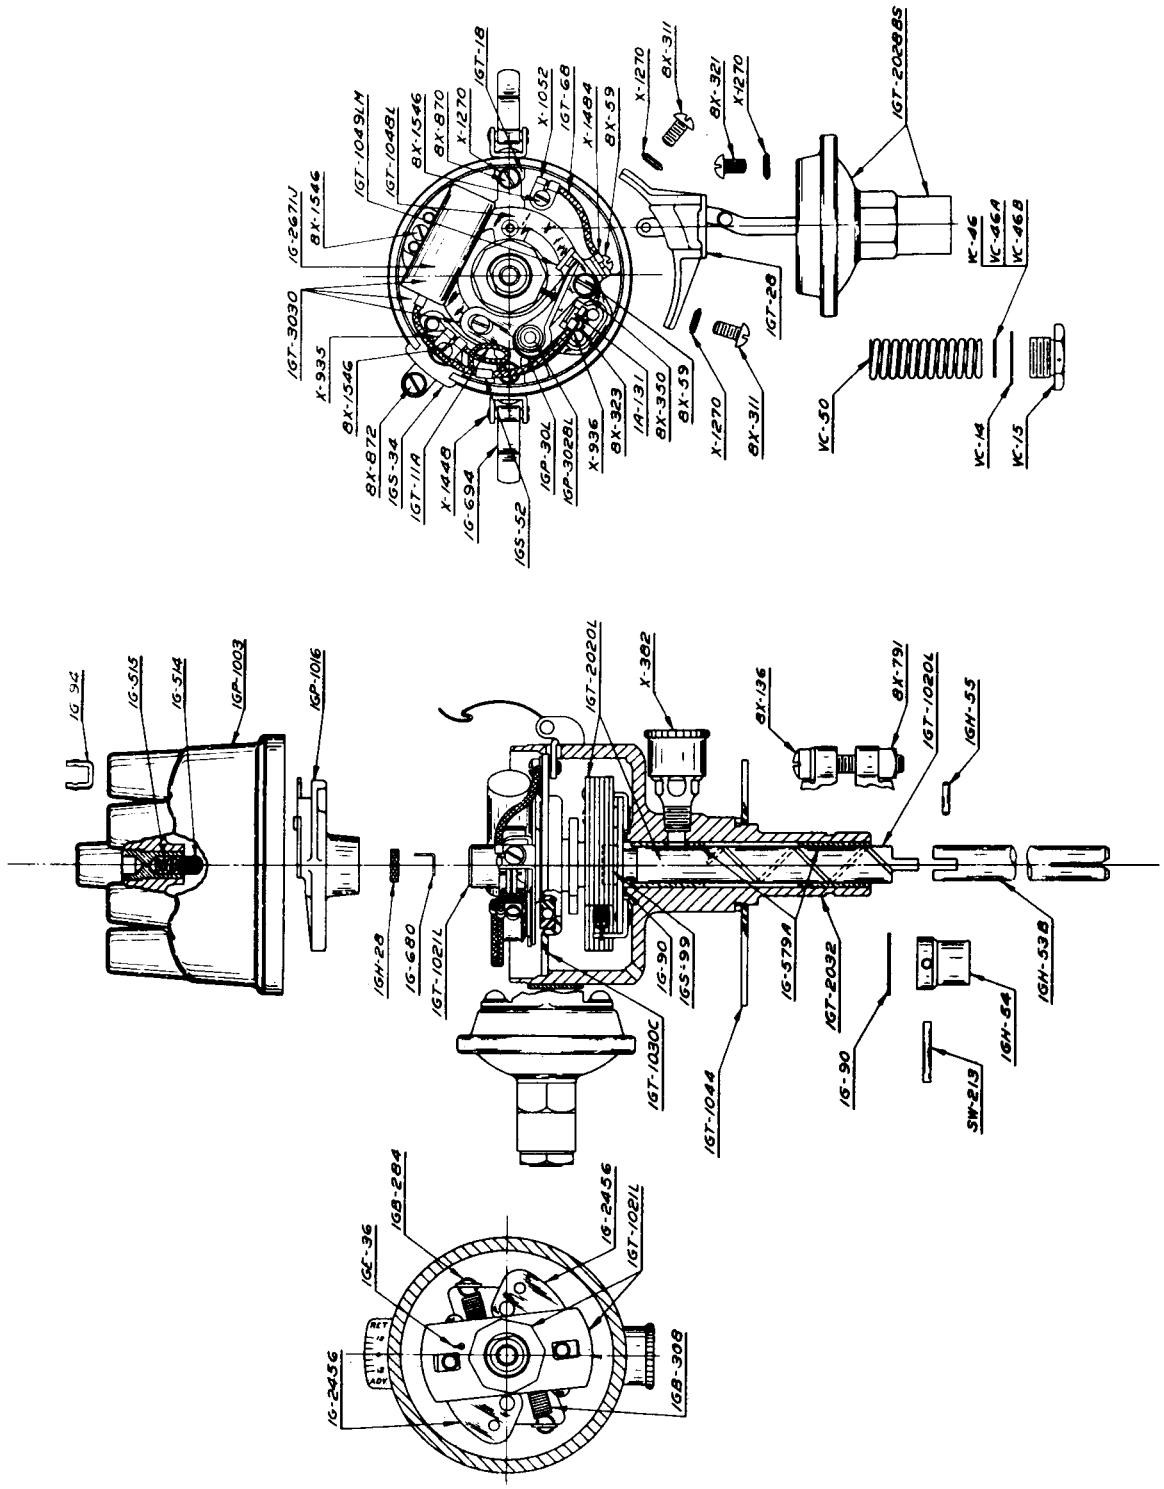

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-199	1	Dist. Shaft Collar
IGH-28	1	Cam Sleeve Felt Wick
IGP-1003	1	DISTRIBUTOR CAP ASSY.
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114†	1	Advance Control Arm
IGS-115†	1	Advance Pointer
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
IGT-70	1	Governor Control Spring
IGT-1021R	1	Cam & Stop Plate - 8 cyl. R.H.
*	1	Vacuum Chamber Assy.
VC-14	1	Gasket-1/32" Thick
VC-15	1	Plug
VC-46	**	Washer-.032" Thick
VC-46A	**	Washer-.010" Thick
VC-46B	**	Washer-.065" Thick
*	1	Spring
IGT-2071	1	Distributor Base Assy.
IG-579A	1	Absorbent Bronze Brg. - Lower
IG-579D	1	Absorbent Bronze Brg. - Upper
IG-694	2	Dist. Cap Spring
IGT-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler-Press in Elbow
IGT-2072R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292SS	1	Weight Spring Set
IGT-1072R	1	Drive Shaft Assy.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
*	1	Breaker Plate Assy.
IA-131	1	Breaker Arm Spring Clip
IG-3927	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
*	1	Breaker Plate Part Assy.
IGT-1048R	1	Breaker Sub Plate Assy.
IGT-52	1	Lead Assembly
X-936	1	Terminal
X-1052	1	Terminal
IGT-1049RM‡	1	Breaker Point
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Screw
SW-213	1	Distributor Drive Rivet
8X-85†	1	1/4-20x1/2 Hex. Hd. Screw
12X-199†	1	1/4 Lock Washer
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-357†	1	#14 Plain Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer
		1 2 3 4 5

(Issued 7-29-40)

Assembly No.	Vacuum Chamber	Spring	Breaker Plate Assy.	Identified By ±	Brkr. Plate Part Assy.
IGT-4103	IGT-1023HS	VC-77 (11 Coils)	IGT-3004A	8	IGT-1004A
IGT-4103A	IGT-1023JS	VC-78 (Silver)	IGT-3004	6	IGT-1004

‡ Service BREAKER POINT SET IGP-3028GS.

† Used with assemblies having the suffix "-1".

** Use as required.

* See table following parts list for part number applying to assembly wanted.

± See Manual Bulletin IG-11.


UNIT	APPLICATION
IGT-4103,A,-1	Chrysler

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGT-4103,A,-1 DISTRIBUTOR ILLUSTRATION

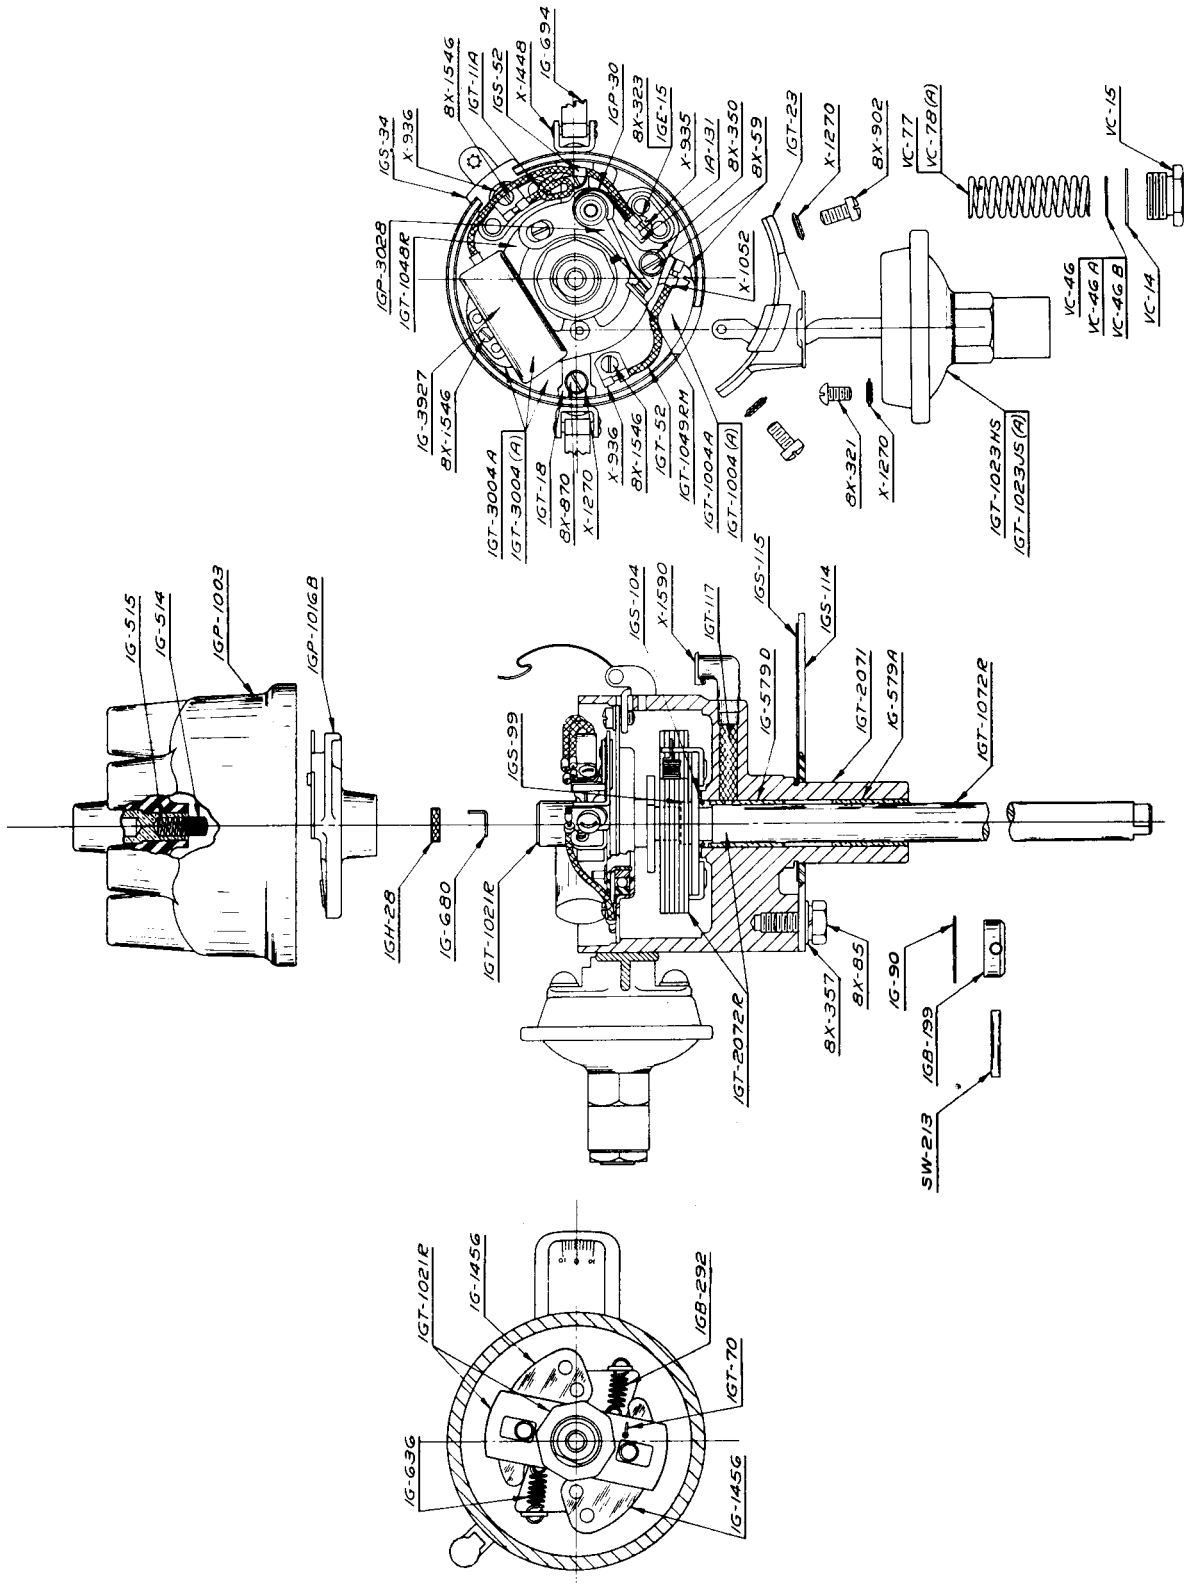

Part No.	No. Used	Name of Part 1 2 3 4 5
GE-47	1	TACHOMETER GEAR - Driver
GE-48	1	TACHOMETER GEAR - Follower
IG-90	2	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-199	1	Distributor Shaft Collar
IGH-28	1	Cam Sleeve Felt Wick
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGS-17	1	Lock Spring Ring
IGS-34	1	Terminal Slot Cover
IGS-37	1	Tachometer Drive Shaft
IGS-38	1	Housing Cover
IGS-39	1	Thrust Washer
IGS-99	1	Washer
IGT-18	2	Bearing Clamp
IGT-23	1	Vacuum Chamber Bracket
IGT-70	1	Anti-Rattle Spring
IGT-1021R	1	Cam & Stop Plate - 8 Cyl. R.H.
IGT-1023JS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-78	1	Spring (Silver)
IGT-2025RC	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292SS	1	Weight Spring Set
IGT-1025RA	1	Drive Shaft Assembly
IGT-2073	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Distributor Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGT-3004	1	Breaker Plate Assembly ± Identified by 6
IA-131	1	Breaker Arm Spring Clip
IG-3927	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip 1 2 3 4 5
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
IGT-1004	1	Breaker Plate Part Assy.
IGT-1048R	1	Breaker Sub Plate Assy.
IGT-52	1	Lead Assembly
X-936	1	Terminal
X-1052	1	Terminal
IGT-1049RM†	1	Breaker Point
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
SW-213	2	Distributor Drive Rivet
X-294	1	Ball Bearing - S.A.E. #202
8X-321	2	#10-32x5/16 Rd. Hd. Screw
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-902	2	#10-32x3/8 Fill. Hd. Screw
X-1270	6	#10 Skpf. Washer 1 2 3 4 5

(Issued 5-1-41)

* Use as required.

± See Manual Bulletin IG-11.

† SERVICE CONTACT SET IGP-3028GS.

UNIT	APPLICATION
IGT-4104	Chrysler

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IGB-199	1	Dist. Shaft Collar
IGH-28	1	Cam Sleeve Felt Wick
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGS-114†	1	Advance Control Arm
IGS-115†	1	Advance Pointer
IGT-18	2	Bearing Clamp
IGT-70	1	Anti-Rattle Spring
IGT-1021R	1	Cam & Stop Plate - 8 Cyl. R.H.
IGT-2072R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-292SS	1	Weight Spring Set
IGT-1072R	1	Drive Shaft Assembly
IGT-2074	1	Distributor Base Assembly
IG-579A	1	Absorbent Bronze Brg.- Lower
IG-579D	1	Absorbent Bronze Brg.- Upper
IG-694	2	Dist. Cap Spring
IGT-117	1	Felt Wick
X-1448	2	Hinge Pin
X-1590	1	1/4 Oiler - Press in Elbow
*	1	Breaker Plate Assembly
IA-131	1	Breaker Arm Spring Clip
IG-3927	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028‡	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
*	1	Breaker Plate Part Assy.
IGT-1048R	1	Breaker Sub Plate Assy.
IGT-52	1	Lead Assembly
X-936	1	Terminal
X-1052	1	Terminal
IGT-1049RM‡	1	Breaker Point
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
8X-323	1	#6-32x5/16 Rd. Hd. Screw
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Screw
SW-213	1	Distributor Drive Rivet
SW-634†	1	Plain Washer
*	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	+	Washer - .032" Thick
VC-46A	+	Washer - .010" Thick
VC-46B	+	Washer - .065" Thick
*	1	Spring
8X-86†	1	1/4-20x5/8 Hex. Hd. Screw
12X-199†	1	1/4 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	2	#10-32x1/4 Fill. Hd. Screw
X-1270	4	#10 Skpf. Washer
		1 2 3 4 5

(Issued 10-6-41)

‡ SERVICE CONTACT SET IGP-3028GS.

\+ Use as required.

† Used with assemblies having suffix "-1".

± See Manual Bulletin IG-11.

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Breaker Plate Assembly	Idf. By ±	Brkr. Pl. Part Assy.	Vacuum Chamber	Spring
IGT-4201	IGT-3004A	8	IGT-1004A	VC-3117RS	VC-77 (Copper Plate & Green)
IGT-4201A	IGT-3004	6	IGT-1004	VC-3117RAS	VC-78 (Silver)
IGT-4201B	IGT-3004C	10	IGT-1004E	VC-3117RCS	VC-119 (Cadmium Plate)

UNIT	APPLICATION
IGT-4201,A, B,-1	Chrysler

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part 1 2 3 4 5
IG-90	1	Thrust Washer
IG-680	1	Lock Spring Ring
IG-816C	1	Thrust Washer
IG-853	1	Dist. Drive Sleeve
IGE-1048A	1	Hold Down Arm Assembly
IGH-28	1	Cam Sleeve Felt Wick
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGT-18	2	Bearing Clamp
IGT-70	1	Anti-Rattle Spring
IGT-1021RC	1	Cam & Stop Plate- 8 Cyl. R.H.
IGT-2075	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-488	1	1/4 Oiler-Press in Elbow
X-1448	2	Hinge Pin
IGT-2076R	1	Drive Shaft & Gov. Assy.
IG-1456	2	Weight Assembly
IGB-308SS	1	Weight Spring Set
IGT-1076R	1	Drive Shaft Assembly
IGT-3004B	1	Breaker Plate Assembly ± Identified by 6
IA-131	1	Breaker Arm Spring Clip
IG-2671G	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028†	1	Breaker Arm Assembly
IGP-30	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
IGT-1004	1	Breaker Plate Part Assy. 1 2 3 4 5
IGT-1048R	1	Breaker Sub Plate Assy.
IGT-52	1	Lead Assembly
X-936	1	Terminal
X-1052	1	Terminal
IGT-1049RM†	1	Breaker Point
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
SW-213	1	Distributor Drive Rivet
VC-3117RBS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-98	1	Plug
VC-118	1	Spring (Copper Plate)
8X-870	2	#10-32x5/16 Fill. Hd. Sc.
8X-872	2	#10-32x1/4 Fill. Hd. Sc.
X-1270	4	#10 Skpf. Washer 1 2 3 4 5

(Issued 7-31-41)

† SERVICE CONTACT SET IGP-3028GS.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4202	Nash

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Thrust Washer
IG-94	9	H. T. Wire Terminal
IG-680	1	Lock Spring Ring
IGH-28	1	Cam Sleeve Felt Wick
IGH-53B	1	Drive Shaft Extension
IGH-54	1	Dist. Drive Sleeve
IGH-55	1	Drive Shaft Pin
IGP-1003	1	DISTRIBUTOR CAP ASSEMBLY
IG-514	1	Contact Spring Plunger
IG-515	1	Contact Spring
IGP-1016B	1	ROTOR
IGS-34	1	Terminal Slot Cover
IGS-99	1	Washer
IGS-104	1	Thrust Washer
IGT-18	2	Bearing Clamp
IGT-69	1	Anti-Rattle Spring
IGT-1021L	1	Cam & Stop Plate-8 Cyl. L.H.
IGT-1044	1	Advance Arm Assembly
IGT-2020L	1	Drive Shaft & Gov. Assy.
IG-2456	2	Weight Assembly
IGB-284DS	1	Weight Spring Set
IGT-1020L	1	Drive Shaft Assembly
IGT-2078	1	Distributor Base Assembly
IG-579A	2	Absorbent Bronze Brg.
IG-694	2	Dist. Cap Spring
X-382	1	1/8 Grease Cup
X-1448	2	Hinge Pin
IGT-3030	1	Breaker Plate Assembly ± Identified by 5.5
IA-131	1	Breaker Arm Spring Clip
IG-2671J	1	CONDENSER ASSEMBLY
IGE-15	1	#6 Plain Washer
IGP-3028L‡	1	Breaker Arm Assembly
IGP-30L	1	Breaker Arm Spring
IGS-52	1	Lead Clip
IGT-11A	1	Lead Assembly
X-935	1	Terminal
X-936	1	Terminal
IGT-1030C	1	Breaker Plate Part Assy.
IGT-1048L	1	Breaker Sub Plate Assy.
IGT-68	1	Lead Assembly
X-1052	1	Terminal
X-1484	1	Terminal
IGT-1049LM‡	1	Breaker Contact
8X-59	2	#8-32x3/16 Rd. Hd. Sc.
12X-195	1	#8 Lock Washer
8X-350	1	#8 Plain Washer
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-323	1	#6-32x5/16 Rd. Hd. Sc.
X-1012	3	#6 Lock Washer
8X-1546	3	#6-32x5/32 Fill. Hd. Sc.
VC-3117LS	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-50	1	Spring (Orange)
SW-213	1	Distributor Drive Rivet
X-196	1	#10 Lock Washer
8X-870	2	#10-32x5/16 Fill. Hd. Screw
8X-872	3	#10-32x1/4 Fill. Hd. Screw
X-1270	4	#10 Skpf. Washer
		1 2 3 4 5

(Issued 1-26-42)

* Use as required.

‡ SERVICE CONTACT SET IGP-3028MS.

± See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4203	Packard

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
GE-40	1	GEAR, FOLLOWER
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	9	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IG-1456	2	Weight, Governor
IGB-328KS	1	Spring, Set, Gov. Weight
IGB-1216	1	Arm, Advance
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1003F	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-34	1	Cover, Terminal Stud
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1185R	1	Shaft, Drive
IGT-18	2	Clamp, Bearing, Sub, Plate
IGT-70	1	Spring, Anti-Rattle
IGT-1021RM	1	Cam & Stop Plate, 8 Cyl. R.H.
IGT-2095	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGT-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler, Elbow, Press In, 1/4
**	1	Plate Assy., Breaker
IA-131	1	Clip, Spring, Contact Arm
IG-2671G	1	CONDENSER
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028GS	1	CONTACT SET, BREAKER
IGS-52	1	Clip, Lead
IGT-11A	1	Lead Assy.
X-935	1	Terminal
X-936	1	Terminal
**	1	Plate, Breaker
IGT-1048RS	1	Plate Assy., Sub, Breaker
IGT-52	1	Lead Assy.
X-936	1	Terminal
X-1052	1	Terminal
8X-59	2	Screw, Rd. Hd., #8-32x3/16
12X-195	1	Lockwasher, #8
X-350	1	Washer, Plain, #8
8X-323	1	Screw, Spring Clamp, Rd. Hd., #6-32x5/16
X-194	3	Lockwasher, Cond. & Lead Sc., #6
8X-1546	3	Screw, Cond. Mtg., & Lead, Fill. Hd., #6-32x5/32
SW-213	1	Rivet, Gear
VC-14	1	Gasket - 1/32" Thick
**	1	Plug
**	*	Washer
**	1	Spring (White)
VC-2117R	1	Vacuum Chamber
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd., #10-32x1/4
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	4	Washer, Breaker Plate, & Vac. Chamber Mtg., Skpf. #10

* Use As Required.

** See table following parts list for part number applying to assembly wanted.

† See Manual Bulletin IG-11.

UNIT	APPLICATION
IGT-4204A-1,B-1	Hudson

Unit	† Breaker Plate Assy.	Breaker Plate Plug		Spring	Washer
IGT-4204A-1	IGT-3004D (Mrkd. 8.5)	IGT-1004F	VC-15	VC-150 (White)	VC-46 (.032" Thick) VC-46A (.010" Thick) VC-46B (.065" Thick)
IGT-4204B-1	IGT-3004E (Mrkd. 3.5)	IGT-1004G	VC-98	VC-155 (Cadmium Plate)	VC-154 (.032" Thick)

Printed in U. S. A. (Issued 2-1-49) File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	9	Terminal, H.T. Wire
IG-680	1	Snap Ring, Cam Retaining
IGB-199	1	Collar, Shaft, Dist.
IGB-339BS	1	Spring Set, Gov. Weight
IGC-2168R	2	Weight, Governor
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-1003E	1	CAP ASSY., DIST.
IG-514	1	Contact, Plunger
IG-515A	1	Spring, Contact
IGP-1016B	1	ROTOR
IGS-17	1	Ring, Lock
IGS-34	1	Cover, Terminal Slot
IGS-99	1	Spacer, Cam
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1186R	1	Shaft, Drive
IGT-18	2	Clamp, Bearing, Sub Plate
IGT-70	1	Spring, Anti-Rattle
IGT-1021R	1	Cam & Stop Plate, 8 Cyl., R.H.
IGT-1096	1	Arm, Advance
IGT-2097	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IG-694	2	Spring, Clamp, Cap
IGT-117	1	Wick, Felt
X-1448	2	Pin, Hinge, Cap Spring
X-1590	1	Oiler, Elbow, Press in, 1/4
IGT-3084RA	1	Plate Assy., Breaker
†		Indentified by 7
IA-131	1	Clip, Spring, Contact Arm
IG-2671G	1	CONDENSER
IGE-15	1	Washer, Plain, Clamp Sc., #6
IGP-3028GS	1	CONTACT SET, BREAKER
IGT-88	1	Lead Assembly
IGS-55	1	Terminal
X-936	1	Terminal
IGT-1084RA	1	Plate, Breaker
IGT-1087RS	1	Plate Assy., Sub, Breaker
IGS-89	1	Lead Assy.
8X-59	1	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16
8X-350	1	Washer, Plain, Contact Lock Sc., #8
12X-1012	1	Lockwasher, Lead Sc., #6
8X-1546	1	Screw, Lead, Fill. Hd. #6-32x5/16
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-323	1	Screw, Spring Clamp, Rd. Hd. #6-32x5/16
12X-1012	3	Lockwasher, Cond., & Lead Sc., #6
8X-1546	3	Screw, Cond. Mtg., & Lead FL. Hd., #6-32x5/32
SW-213	1	Rivet, Collar, Drive Shaft
VC-14	1	Gasket 1/32'' Thick
VC-46	*	Washer, .032'' Thick
VC-46A	*	Washer, .010'' Thick
VC-46B	*	Washer, .065'' Thick
VC-138	1	Plug
VC-149	1	Spring
VC-2141R	1	VACUUM CHAMBER
8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd., #10-32x5/16
8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1270	4	Washer, Breaker Plate & Vac. Chamber Mtg., Skpf. #10
		1 2 3 4 5

* Used as Required.

† See Manual Bulletin IG-11


UNIT	APPLICATION
IGT-4302-1	Lincoln

(Issued 4-29-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4000 SERIES DISTRIBUTOR PARTS LIST


Model No.	No. Cyl.	CUSTOMER
IGW-4001	6	Studebaker
IGW-4005	6	White
IGW-4005A	6	Diamond T, Gramm, White
IGW-4006B	6	Diamond T
IGW-4006C	6	Gramm, Hercules
IGW-4007	6	Brockway, Continental
IGW-4008	6	Brockway, Reo
IGW-4009A	6	Brockway
IGW-4010	6	Nash
IGW-4011	6	Reo
IGW-4012A	6	Hudson
IGW-4013A	6	Hudson
IGW-4014	6	Gray Marine
IGW-4015	6	Kermath
IGW-4015A	6	Autocar
IGW-4016	4	Duplex, Towmotor, Waukesha
IGW-4017	6	Brockway
IGW-4018	6	Chris Craft, Palmer, Regal, Reo
IGW-4019A	4	Indian, Palmer
IGW-4020	4	Reo
IGW-4022	4	Buchanan, Gray, Hercules, Kermath, Lathrop, U. S. Motors
IGW-4023	6	Chris Craft
IGW-4023A	6	Chris Craft
IGW-4024	6	Kermath, Star Marine, Worthington
IGW-4025	4	Kermath
IGW-4025B	4	Fairmont, Hercules
IGW-4026	6	Studebaker
IGW-4028	4	Chris Craft
IGW-4029	4	Gray Marine
IGW-4030	2	Kohler
IGW-4031A	6	Insley
IGW-4032A	6	Lycoming
IGW-4032B	6	Lycoming
IGW-4033	6	Galion, Hercules, Lathrop, Palmer, Ross Carrier, U. S. Motors
IGW-4034A	4	Gray Marine
IGW-4034B	4	Universal Motors
IGW-4034C	4	Universal Motors
IGW-4035	4	Lathrop, LeRoi
IGW-4036	6	Lathrop, Regal
IGW-4037	6	Kermath
IGW-4038	6	Kermath
IGW-4038A	6	Cullen, Hercules, Hough, Jaeger Mach., Ross Carrier
IGW-4040A	6	Gray Marine, Towmotor
IGW-4040B	6	Universal Motors
IGW-4043A	4	Lycoming
IGW-4044	4	Continental
IGW-4044A	4	Hill Diesel, Towmotor
IGW-4044B	4	Towmotor, White Mtr.
IGW-4045A	6	Autocar
IGW-4046	2	Indian Motocycle
IGW-4047A	4	Indian Motocycle
IGW-4047B	4	Indian Motocycle
IGW-4048A	2	Indian Motocycle
IGW-4049	2	Indian Motocycle
IGW-4050	4	Easthope
IGW-4051	2	Crocker Motorcycle
IGW-4052	3	Easthope
IGW-4053	2	Indian Motocycle
IGW-4054A	4	Palmer
IGW-4055	2	Indian Motocycle

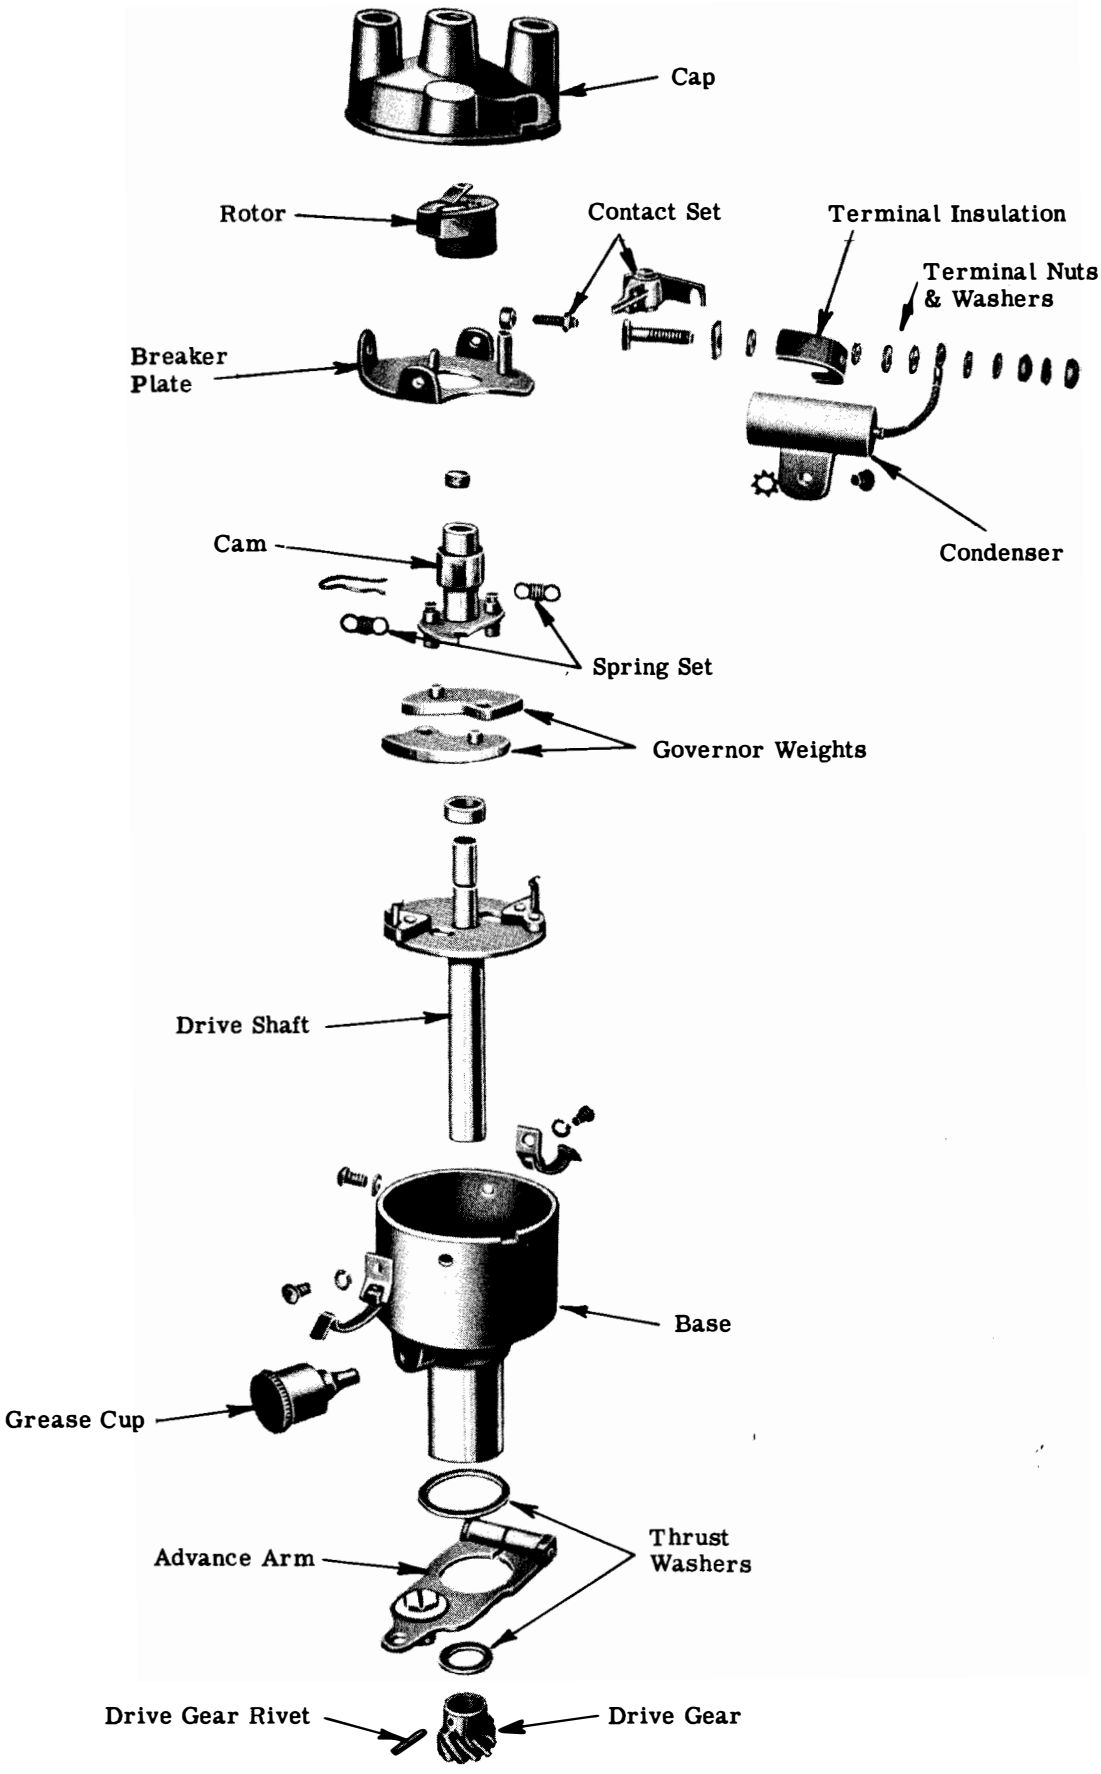
Cap
Rotor
Contact Set
Terminal Insulation
Terminal Nuts & Washers
Breaker Plate
Condenser
Cam
Spring Set
Governor Weights
Drive Shaft
Base
Grease Cup
Advance Arm
Thrust Washers
Drive Gear Rivet
Drive Gear





Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGW-4001	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2285A	IG-579A	IGW-2094L	IGB-291S	IGW-2100L	- - -
IGW-4005	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4005A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4006B	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RB	IGB-291S	IGW-2032R	GE-56
IGW-4006C	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RB	IGB-291S	IGW-2032R	GE-56
IGW-4007	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048RA	IG-897S	IGW-2032R	IG-644
IGW-4008	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048L	IGB-298S	IGW-2032L	IG-644
IGW-4009A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018R	IGB-301S	IGW-2032R	IG-517
IGW-4010	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2270A	IG-579A	IGW-2019R	IGB-165AS	IGW-2032R	- - -
IGW-4011	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048R	IGB-299S	IGW-2032R	IG-644
IGW-4012A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025J	IGB-1010	IGB-2214	IG-579A	IGW-2018RA	IGB-302BS	IGW-2032R	GE-40
IGW-4013A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025J	IGB-1010	IGB-2214	IG-579A	IGW-2018RA	IGB-302BS	IGW-2032R	GE-40
IGW-4014	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018L	IGB-306S	IGW-2032L	- - -
IGW-4015	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4015A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4016	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2051L	IGB-302ES	IGW-1050L	- - -
IGW-4017	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048RA	IG-897S	IGW-2032R	IG-644
IGW-4018	IGB-1240	IGB-1239	IGP-3028A	IGB-1025B	- - -	IGB-2309	IG-579A	IGB-1310L	- - - -	- - - -	IG-644
IGW-4019A	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1311R	- - - -	- - - -	IG-261
IGW-4020	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2048LA	IGB-291S	IGW-1050L	IG-644
IGW-4022	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RA	IGB-299S	IGW-1050R	- - -
IGW-4023	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2024R	IG-897S	IGW-2032R	- - -
IGW-4023A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2024RC	IGB-312S	IGW-2100RM	- - -
IGW-4024	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2254	IG-579A	IGW-2024RC	IGB-312S	IGW-2100RM	- - -
IGW-4025	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RA	IGB-299S	IGW-1050R	- - -
IGW-4025B	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IGB-298S	IGW-1050R	- - -
IGW-4026	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2285A	IG-579A	IGW-2045L	IGB-291S	IGW-2032L	- - -
IGW-4028	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2254	IG-579A	IGW-2024RA	IGB-301S	IGW-1050R	- - -
IGW-4029	IGB-1225†	IGB-1239	IGW-3028S	IGB-1025E	IGB-1010	IGB-2313	IG-579A	IGW-2025L	IGB-315S	IGW-1050L	- - -
IGW-4030	IGB-1065A	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2314	IG-579A	IGW-2018RB	IGB-306S	IGW-1052R	- - -
IGW-4031A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RC	IGB-312S	IGW-2032R	GE-20
IGW-4032A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176B	IG-579A	IGW-2053R	IGB-297S	IGW-2032R	GK-36
IGW-4032B	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176B	IG-579A	IGW-2053R	IGB-297S	IGW-2032R	IG-261
IGW-4033	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4034A	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGW-2055	IG-579A	IGW-2018RD	IGB-315S	IGW-1050R	GK-36
IGW-4034B	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGW-2055	IG-579A	IGW-2018RH	IG-897S	IGW-1050R	GK-36
IGW-4034C	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGW-2055	IG-579A	IGW-2018RJ	IGB-300S	IGW-1050R	IG-261
IGW-4035	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1310LA	- - -	- - - -	IG-644
IGW-4036	IGB-1240	IGB-1239	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1310R	- - -	- - - -	IG-644
IGW-4037	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047LA	IGB-317S	IGW-2032L	- - -
IGW-4038	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RD	IGB-317S	IGW-2032R	- - -
IGW-4038A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047RA	IGB-300S	IGW-2032R	- - -
IGW-4040A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RE	IGB-318S	IGW-2032R	GK-36
IGW-4040B	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RF	IGB-319S	IGW-2032R	IG-261
IGW-4043A	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2321	IG-579A	IGW-2047RC	IGB-297S	IGW-1050R	GE-36
IGW-4044	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RG	IGB-312S	IGW-1050R	- - -
IGW-4044A	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RG	IGB-312S	IGW-1050R	GK-36
IGW-4044B	IGB-1001	IGB-1002	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2018RE	IGB-165SS	IGW-1050R	GK-36
IGW-4045A	IGB-1240	IGB-1239	IGW-3028S	IGB-1025	IGB-1010	IGB-2176	IG-579A	IGW-2047R	IG-897S	IGW-2032R	- - -
IGW-4046	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGB-2290	IG-579A	IGW-1065R	- - -	- - - -	- - -
IGW-4047A	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGB-1311R	- - -	- - - -	IG-261
IGW-4047B	IGB-1001	IGB-1002	IGP 3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGB-1311R	- - -	- - - -	GK-36
IGW-4048A	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGB-1287R	- - -	- - - -	GE-50
IGW-4049	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGW-2064	IG-579A	IGW-1065R	- - -	- - - -	- - -
IGW-4050	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGW-1311R	- - -	- - - -	- - -
IGW-4051	IGB-1065	IGB-1002D	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGW-1082L	- - -	- - - -	- - -
IGW-4052	IGW-1084	IGB-1239	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1305LB	- - -	- - - -	- - -
IGW-4053	IGB-1065C	IGB-1002J	IGP-3028A	IGB-1025B	- - -	IGW-2158	IG-579A	IGW-1065R	- - -	- - - -	- - -
IGW-4054A	IGB-1001	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGB-2037A	IG-579A	IGB-1311LA	- - -	- - - -	IG-261
IGW-4055	IGB-1065C	IGB-1002	IGP-3028A	IGB-1025B	- - -	IGW-2158	IG-579A	IGW-1065L	- - -	- - - -	- - -

† Requires IGB-224 Cap Cover.



MISCELLANEOUS PARTS

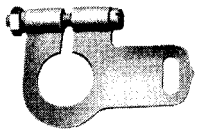Name	Part No.	No. Used	Used on
 ARM, ADVANCE	IG-1860A	1	IGW-4044, A, B
	IG-2806	1	IGW-4019A, IGW-4046, IGW-4050, IGW-4054A
	IG-2806-1	1	IGW-4052
	IG-2806A	1	IGW-4051
	IG-2806A-3	1	IGW-4014
	IG-2806E	1	IGW-4032A, B
	IG-2806J	1	IGW-4035, IGW-4036
	IG-2806K-4	1	IGW-4031A
	IG-2806L-3	1	IGW-4047A, B
	IG-2806M-3	1	IGW-4048A, IGW-4049
	IG-2806M-7	1	IGW-4053, IGW-4055
	IG-2860A	1	IGW-4008
	IG-2860A-2	1	IGW-4034A, B, C, IGW-4040A, B
	IG-2860A-3	1	IGW-4020, IGW-4029
	IGB-1216	1	IGW-4012A, IGW-4013A
	IGB-1271	1	IGW-4010
	IGB-2171-2	1	IGW-4015, A
	IGB-2296	1	IGW-4005, A
	IGB-2320	1	IGW-4043A
	IGC-2024AC-15	1	IGW-4006B
	IGC-2024AE-15	1	IGW-4006C
	IGC-1024AG-3	1	IGW-4023, A
	IGC-2024F-3	1	IGW-4033
	IGC-2024K-3	1	IGW-4022
	IGC-2024N-2	1	IGW-4016, IGW-4038, IGW-4038A
	IGC-2024N-5	1	IGW-4011, IGW-4037
	IGC-2053A-2	1	IGW-4009A
	IGC-3024E-1	1	IGW-4007
	IGH-2062A-1	1	IGW-4017
 BRACKET, CONTACT MOUNTING	IGB-38	1	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
 BUSHING, INSULATING, TERMINAL STUD	CB-140	1	All
 CAP, RUBBER, SECONDARY TERMINAL	IA-278	7	IGW-4012A, IGW-4013A
 COLLAR, DRIVE SHAFT	IG-447	1	IGW-4010
	IGB-199	1	IGW-4001, IGW-4016, IGW-4029, IGW-4046, IGW-4048A, IGW-4049, IGW-4051, IGW-4053, IGW-4055
CONTROL, VACUUM ADVANCE	VC-4004	1	IGW-4026
 COVER TACHOMETER SHAFT HOUSING	IGS-38	1	IGW-4026
 CUP, GREASE	X-382	1	IGW-4001, IGW-4029
	X-382	2	IGW-4026
	X-1512	1	IGW-4047A, IGW-4047B, IGW-4048A, IGW-4049, IGW-4053, IGW-4055
 GASKET, RUBBER, CAP COVER	IGB-230	2	IGW-4029
 GEAR			
Tachometer Drive	GE-51	1	IGW-4026
Tachometer Follower	GE-52	1	IGW-4026
 HOUSING, TACHOMETER, MOUNTING	IGW-44	1	IGW-4026
 INSULATION, TERMINAL STUD, INNER	IGB-21	1	All
 KEY, WOODRUFF, #212	X-1460	1	IGW-4051
 LOCK RING, CAM RETAINING	IGW-37	1	IGW-4001, IGW-4005, IGW-4005A, IGW-4006B, IGW-4006C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, IGW-4015A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4023A, IGW-4024, IGW-4025, IGW-4025B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, IGW-4032B, IGW-4033, IGW-4034A, IGW-4034B, IGW-4034C, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, IGW-4040B, IGW-4043A, IGW-4044, IGW-4044A, IGW-4044B, IGW-4045A
LOCKWASHER			
 (A) Breaker Plate Screw, #8	12X-195	3	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
Cap Spring Screw, #8	12X-195	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
Condenser Mtg. Screw, Skpf., #8	X-1276	1	All
(B) Contact Bracket Screw, #6	12X-194	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, IGW-4047B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055

MISCELLANEOUS PARTS (Cont.)

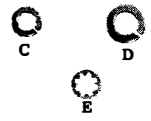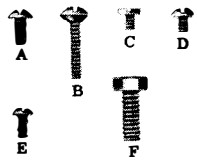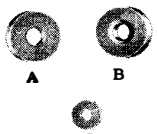	Name	Part No.	No. Used	Used on
	LOCKWASHERS (Cont.)			
	(C) Terminal Stud #10	12X-196	2	All
	(D) Terminal Stud, Skpf. #10	X-1270	1	IGW-4005, A, IGW-4018, IGW-4019A, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(E) Vacuum Control Mounting, 1/4	12X-199	1	IGW-4026
	NUT			
	(A) Lock, Breaker Contact	IB-23	1	All
	(B) Terminal Stud, Hex., #10-32	8X-173	2	All
	OILER			
	(A) Elbow	X-488	1	IGW-4012A, IGW-4013A, IGW-4032A, B
	(B) Sleeve	X-490A	1	IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4014, IGW-4015, IGW-4015A, IGW-4016, IGW-4017, IGW-4018, IGW-4019A, IGW-4020, IGW-4022, IGW-4028, IGW-4030, IGW-4031A, IGW-4033, IGW-4034A, B, IGW-4034C, IGW-4035, IGW-4036, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A, IGW-4046, IGW-4050, IGW-4051, IGW-4052, IGW-4054A
	PLUG, RUBBER, VENT HOLE	IGB-264	1	IGW-4001, IGW-4012A, IGW-4013A, IGW-4016, IGW-4019A, IGW-4026, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4054A
	RESISTANCE UNIT	IG-1205	1	IGW-4010
		SP-4008	1	IGW-4012A
	RIVET			
	Collar	SW-213	1	IGW-4001, IGW-4010, IGW-4016, IGW-4029, IGW-4046, IGW-4048A, IGW-4049, IGW-4051, IGW-4053, IGW-4055
	Coupling	SW-213	1	IGW-4007, IGW-4008, IGW-4011, IGW-4017, IGW-4018, IGW-4020, IGW-4035, IGW-4036
	Gear	GB-31	1	IGW-4045A
	Gear	GJ-236	1	IGW-4005A, IGW-4006B, IGW-4006C, IGW-4015A
	Gear	SW-213	1	IGW-4009A, IGW-4012A, IGW-4013A, IGW-4019A, IGW-4026, IGW-4028, IGW-4031A, IGW-4032A, B, IGW-4034A, B, IGW-4040A, B, IGW-4043A, IGW-4044A, B, IGW-4047A, B, IGW-4048A, IGW-4054A
	SCREW			
	(A) Breaker Plate, Rd. Hd., #8-32x5/16	8X-304	3	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, IGW-4015A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4023A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(B) Cap Cover, Ctsk. Hd., #8-32x3/4	8X-1340	2	IGW-4029
	(C) Cap Spring, Bdg. Hd., #8-32x3/16	8X-722	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(D) Condenser Mtg., Rd. Hd., #8-32x3/16	8X-59	1	All
	(E) Contact Bracket, Rd. Hd., #6-32x1/4	8X-302	2	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	(F) Vacuum Control Mtg., Hex. Hd., 1/4-28x5/8	8X-343	1	IGW-4026
	SHAFT, TACHOMETER DRIVE	IGS-37	1	IGW-4026
	SPACER			
	(A) Cam	IGW-36	1	IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4025, IGW-4025B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
	(B) Cam	IGW-92	1	IGW-4001, IGW-4023A, IGW-4024
	(C) Governor Weight	IGW-107A	2	IGW-4001
	SPRING			
	Cap Clamp & Hinge	IGB-1007	2	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4018, IGW-4019A, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4035, IGW-4036, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044B, IGW-4045A, IGW-4046, IGW-4047A, IGW-4047B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	Cap Clamp Spring & Hinge	IGB-1007A	2	IGW-4044, IGW-4044A
	STUD			
	Stud, Terminal, Primary, #10-32x3/4	IGB-20	1	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
	Stud, Terminal, Primary, #10-32	IGW-39	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, IGW-4023A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, IGW-4032B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, IGW-4038A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A

MISCELLANEOUS PARTS (Cont.)

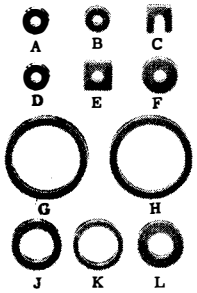Name	Part No.	No. Used	Used on
 TERMINAL	X-999	1	IGW-4012A, IGW-4013A
 VENT	XA-598	1	IGW-4053, IGW-4055
WASHER			
(A) Insulating, Term. Stud, Inner	IGB-22	1	IGW-4018, IGW-4019A, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
 (B) Insulating, Term. Stud, Inner	IGW-38	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
(A) Insulating, Term. Stud, Outer	IGB-22	1	All
(D) Terminal Stud, Plain, #10	8X-183A	1	All
(C) Terminal Stud, Spacing	IGW-187	*	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, IGW-4044B, IGW-4045A
(E) Terminal Stud, Square	IGW-54	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
(G) Thrust, Advance Arm	IG-816	1	IGW-4008, IGW-4009A, IGW-4014, IGW-4017, IGW-4019A, IGW-4020, IGW-4029, IGW-4031A, IGW-4032A, B, IGW-4034A, IGW-4034B, C, IGW-4035, IGW-4036, IGW-4040A, B, IGW-4044A, B, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
(H) Thrust, Advance Arm	IG-816A	1	IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4011, IGW-4015, IGW-4015A, IGW-4016, IGW-4022, IGW-4023, A, IGW-4033, IGW-4037, IGW-4038, A
(J) Thrust, Drive Shaft, Lower	IG-90	1	All
Thrust, Drive Shaft, Upper	IG-90	1	IGW-4018, IGW-4019A, IGW-4026, IGW-4035, IGW-4036, IGW-4046, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4050, IGW-4051, IGW-4052, IGW-4053, IGW-4054A, IGW-4055
(K) Thrust, Drive Shaft, Upper	IGW-46	1	IGW-4001, IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023, A, IGW-4024, IGW-4025, B, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
(L) Thrust, Tach. Drive Shaft, 25/64x3/4x. 032	IGS-39	1	IGW-4026
(F) Vacuum Control Mounting, 1/4	8X-357	1	IGW-4026
WEIGHT			
Governor	IGW-1014L	2	IGW-4008, IGW-4014, IGW-4020, IGW-4026, IGW-4029
Governor	IGW-1014LA	2	IGW-4016, IGW-4037
Governor	IGW-1014LB	2	IGW-4001
 Governor	IGW-1014R	2	IGW-4005, A, IGW-4006B, C, IGW-4007, IGW-4009A, IGW-4011, IGW-4012A, IGW-4013A, IGW-4015, A, IGW-4017, IGW-4022, IGW-4023, IGW-4025, IGW-4030, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4038A, IGW-4040B, IGW-4043A, IGW-4045A
Governor	IGW-1014RA	2	IGW-4010, IGW-4025B, IGW-4028, IGW-4031A, IGW-4038, IGW-4040A, IGW-4044, A, B
Governor	IGW-1014RB	2	IGW-4023A, IGW-4024
WICK			
(A) Felt, Cam Sleeve	IG-495	1	IGW-4001, IGW-4005, A, IGW-4006, B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4020, IGW-4022, IGW-4023A, IGW-4024, IGW-4025, B, IGW-4026, IGW-4028, IGW-4029, IGW-4030, IGW-4031A, IGW-4032A, B, IGW-4033, IGW-4034A, B, C, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4043A, IGW-4044, A, B, IGW-4045A
 (B) Felt, Oiler	IGP-34	1	IGW-4032A, B
(B) Felt, Oiler	IGW-188	1	IGW-4006B, C, IGW-4007, IGW-4008, IGW-4009A, IGW-4010, IGW-4011, IGW-4012A, IGW-4013A, IGW-4014, IGW-4015, A, IGW-4016, IGW-4017, IGW-4018, IGW-4019A, IGW-4020, IGW-4022, IGW-4030, IGW-4031A, IGW-4033, IGW-4034A, IGW-4034B, C, IGW-4035, IGW-4036, IGW-4037, IGW-4038, A, IGW-4040A, B, IGW-4044, A, B, IGW-4045A, IGW-4046, IGW-4050, IGW-4051, IGW-4052, IGW-4054A
(B) Felt, Oiler	IGW-188A	1	IGW-4001, IGW-4047A, B, IGW-4048A, IGW-4049, IGW-4053, IGW-4055

* Used as required.

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
	1 2 3 4 5	
CB-140	1	Bushing, Insulating
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-644	1	Coupling, Drive, Dist.
IG-816	1	Washer, Thrust, Advance Arm
IG-2860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1007	2	Spring & Hinge Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1240	1	CAP, DISTRIBUTOR
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
X-490A	1	Oiler, Sleeve, Press In, 1/4
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	CONTACT SET, BREAKER
**	1	Shaft & Gov. Assy.
**	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, CAm
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
**	2	Washer
**	2	Weight, Governor
IGW-2048LD	1	Shaft, Drive
**	1	Cam, & Stop Plate, 6 Cyl., L.H.
SW-213	1	Rivet, Coupling, Dr. Shaft
8X-59	1	Screw, Condenser, Mtg. Rd. Hd., #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	3	Screw, Breaker Plate, Rd., Hd., #8-32x5/16
X-1270	1	Washer, Term. Stud, Skpf., #10
X-1276	1	Washer, Condenser Mtg., Skpf., #8
	1 2 3 4 5	

** See table following parts list for part number applying to assembly wanted.

* Use as required.

Assembly No.	Shaft & Gov. Assy.	Spring Set	Washer	Weight Governor	Cam
IGW-4108	IGW-3048LD	IGB-324S	None	IGW-1014LB	IGW-2100LB
IGW-4108A	IGW-3048LL	IGB-328AS	IGW-107	IGW-1090L	IGW-2100LY
IGW-4108B	IGW-3048LP	IGB-328ES	IGW-107	IGW-1090L	IGW-2100LY
IGW-4108C	IGW-3048LT	IGB-324S	None	IGW-1014LB	IGW-2100L
IGW-4108D	IGW-3048LU	IGB-328ES	IGW-107	IGW-1090L	IGW-2100LX

UNIT	APPLICATION
IGW-4108,A	Brockway
IGW-4108B	Continental & Checker
IGW-4108C,D	Continental

(Issued 8-15-47)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Term. Stud Ins.
*	1	Gear, Dist., Follower
*	1	Rivet, Drive Shaft
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Post, Inner
IGB-22	1	Washer, Ins., Term. Post
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-1239	1	Rotor
IGB-1240	1	Cap, 6 Cyl.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490	1	Oiler, Sleeve, Press in, 1/4
*	1	Arm, Advance
IGP-33†	1	Contact, Breaker Screw
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-3028†	1	Arm, Breaker, Contact
		1 2 3 4 5
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
*	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
*	1	Cam, & Stop Plate, 6 Cyl., R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
X-195	3	Lockwasher, Breaker Plate, #8
X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate, Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Skpf. #8
		1 2 3 4 5

* See table following parts list for part number applying to assembly wanted.

† Contact Set, Service IGW-3028S

Assembly No.	Gear Dist., Follower	Rivet	Arm Advance	Shaft & Gov. Assy.	Spring Set Gov. Weight	
IGW-4114	None	None	IGC-2024AC-15	IGW-3047RH	IGB-291S	IGW-1014RB
IGW-4114A	GE-56	GJ-236	IGC-2024G-15	IGW-3047RP	IGB-299S	IGW-1063R
IGW-4114B	GE-56	GJ-236	IGC-2024AC-15	IGW-3047RH	IGB-291S	IGW-1014RB
IGW-4114C	GE-56	GJ-236	IGC-2024AC-15	IGW-3047RH	IGB-291S	IGW-1014RB
IGW-4114D	GE-41	GJ-236	IGC-2024G-15	IGW-3047RP	IGB-299S	IGW-1063R
IGW-4114E	GE-56	GJ-236	IGC-2024AM-15	IGW-3047RT	IGB-306S	IGW-1014RB
IGW-4114F	GE-56	GJ-236	IGC-2024AE-15	IGW-3047RZ	IGB-318S	IGW-1014RB

Assembly No.	Cam & Stop Plate
IGW-4114	IGW-2100RE
IGW-4114A	IGW-2100RN
IGW-4114B	IGW-2100RE
IGW-4114C	IGW-2100RE
IGW-4114D	IGW-2100RN
IGW-4114E	IGW-2100RE
IGW-4114F	IGW-2100RT

Unit	Application
IGW-4114	Eagle Tractor
IGW-4114A	Diamond T
IGW-4114B	Toro, U.S. Motor
IGW-4114C, D,E,F	Diamond T

(Issued 11-1-46)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
CB-140	1	Bushing Ins., Term. Stud
**	1	GEAR, FOLLOWER
IG-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-2860A-2	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP ASSY., DIST.
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud, Inner
IGW-188	1	Wick, Felt
IGW-2055	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
**	1	Shaft & Gov. Assy.
**	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
**	2	Weight, Governor
**	1	Washer
**	1	Shaft, Drive
**	1	Cam & Stop Plate, 4 Cyl., R.H.
IGW-3028S	1	Contact Set, Breaker
**	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assy.	Gear	Pin	Spring Set
IGW-4116	IGW-3018RP	None	None	IGB-315S
IGW-4116A	IGW-3018RX	IG-261	SW-213	IGB-328SS
IGW-4116B	IGW-3018RX	GK-36	SW-213	IGB-328SS
IGW-4116C	IGW-3018RV-1	GK-36	SW-213	IGB-301S

Assembly No.	Washer	Gov. Weight	Dr. Shaft	Cam & Stop Plate
IGW-4116	None	IGW-1014RB	IGW-2018RK	IGW-2100RG
IGW-4116A	IGW-107	IGW-1090R	IGW-2018RL	IGW-2100RX
IGW-4116B	IGW-107	IGW-1090R	IGW-2018RL	IGW-2100RX
IGW-4116C	None	IGW-1014RB	IGW-2018RL	IGW-2100RK

UNIT	APPLICATION
IGW-4116 IGW-4116A,B,C	Gray Marine Universal Mtr.

(Issued 4-26-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
*	1	GEAR, DISTRIBUTOR, FOLLOWER
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H. T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A±	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
*	2	Plug, Rubber, Vent. Hole
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP ASSY., DIST.
IGB-2176	1	Base Assembly, Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGC-2024AP±	1	Arm, Advance
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, Primary
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	**	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	Contact Set, Breaker
*	1	Shaft & Gov. Assembly
*	1	SPRING SET, GOV. WEIGHT
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
*	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
*	1	Cam & Stop Plate, 4 Cyl. R.H.
*	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* See table following parts list for part number applying to assembly wanted.
± Used on assemblies having suffix "-2".
** Use as Required.

Assembly No.	Gear, Follower	Rivet, Gear	Plug, Vent. Hole	Shaft & Gov. Assy.	Spring Set, Gov. Weight	Weight, Governor	Cam & Stop Plate 4 Cyl. R.H.
IGW-4120	None	None	None	IGW-3047RJ	IGB-299S	IGW-1014RB	IGW-2100RD
IGW-4120-1	None	None	IGB-264	IGW-3047RJ	IGB-299S	IGW-1014RB	IGW-2100RD
IGW-4120A	GE-36	SW-213	None	IGW-3047RL	IGB-297S	IGW-1014RB	IGW-2100RJ
IGW-4120B	None	None	None	IGW-3047RK	IGB-324S	IGW-1063R	IGW-2100RU
IGW-4120B-2	None	None	None	IGW-3047RK	IGB-324S	IGW-1063R	IGW-2100RU
IGW-4120C	None	None	None	IGW-3047RU	IGB-324S	IGW-1063R	IGW-2100RAA
IGW-4120C-2	None	None	None	IGW-3047RU	IGB-324S	IGW-1063R	IGW-2100RAA

UNIT	APPLICATION
IGW-4120	Hercules
IGW-4120-1	Fate Root Heath, Kalamazoo
IGW-4120A	
IGW-4120B	Ready Power Co.
IGW-4120B-2	Hercules
IGW-4120C	Hercules
IGW-4120C-2	Fairmont Railways, U.S. Motors

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-644	1	Coupling, Drive, Dist.
IG-816	1	Washer, Thrust, Advance Arm
IG-2860A-3	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-224	1	COVER, CAP, DIST.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1225A	1	CAP ASSY., DIST.
IGB-230	2	Rubber Gasket
IGB-1239	1	ROTOR
IGB-2233	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler, Sleeve, Press in, 1/4
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	1	Washer, Term. Stud
IGW-3028S	1	CONTACT SET, BREAKER
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
*	2	Washer
*	2	Weight, Governor
IGW-2048LD	1	Shaft, Drive
*	1	Cam & Stop Plate, 6 Cyl., L.H.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
SW-213	1	Rivet, Collar, Drive Shaft
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4
		1 2 3 4 5

* See table following list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assy.	Spring Set	Washer	Weight Gov.	Cam & Stop Plate
IGW-4139	IGW-3048LF	IGB-297S	None	IGW-1063L	IGW-2100LM
IGW-4139A	IGW-3048LG	IGB-299S	None	IGW-1063L	IGW-2100LP
IGW-4139B	IGW-3048LJ	IGB-300AS	IGW-107	IGW-1090L	IGW-2100LQ
IGW-4139C	IGW-3048LN	IGB-328ES	IGW-107	IGW-1090L	IGW-2100LM
IGW-4139D	IGW-3048LQ	IGB-301S	None	IGW-1014LB	IGW-2100LAA

UNIT	APPLICATION
IGW-4139	Continental
IGW-4139A	Massey Harris
IGW-4139B	Continental
IGW-4139C	Continental, White, Clark Equipment
IGW-4139D	Continental

(Issued 3-25-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Insulating
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	3	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816C	1	Washer, Thrust, Advance Arm
IG-2860A-1	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1002	1	Rotor
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-1065	1	Cap, 2 Cyl.
IGP-2176C	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490	1	Oiler, Sleeve, Press in, 1/4
IGP-33*	1	Contact, Breaker Screw
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-3018LC	1	Shaft & Gov. Assy.
IGB-327S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063L	2	Weight, Governor
IGW-2018LA	1	Shaft, Drive
IGW-2100LR	1	Cam & Stop Plate, 2 Cyl., L.H.
IGW-3028*	1	Arm, Breaker Contact
		1 2 3 4 5
8X-59	1	Screw, Mtg., Condenser, Rd. Hd., #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Ground Screw #10
X-195	3	Washer, Lock, Breaker Plate, #8
X-196	2	Washer, Lock, Terminal Stud, #10
8X-304	3	Screw, Attaching, Breaker Plate, Rd. Hd., #8-32x5/16
X-1270	1	Washer, Skpf., Terminal Stud, #10
X-1276	1	Washer, Skpf., Condenser Mtg., Sc. #8
		1 2 3 4 5

* Contact Set, Service IGW-3028S.

Unit	Application
IGW-4146	Novo Engine

(Issued 1-14-47)

File in
Equipment & Parts List Binder

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
**	1	Rivet, Gear
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP, DISTRIBUTOR
IGB-2254A	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating, Term. Stud
IGW-39	1	Stud, Terminal, Primary
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
**	1	Shaft & Gov. Assembly
**	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
IGW-2024RB	1	Shaft, Drive
**	1	Cam & Stop Plate, 4 Cyl. R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud. #10
12X-195	3	Lockwasher, Breaker Plate Screw, #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1276	1	Washer, Condenser Mtg. Screw, Skpf. #8

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Rivet, Gear	Shaft & Gov. Assy.	Spring Set, Gov. Weight	Cam & Stop Plate
IGW-4152	None	IGW-3024RG	IGB-312S	IGW-2100RW
IGW-4152A	None	IGW-3024RJ	IGB-299S	IGW-2100RD
IGW-4152B	GJ-236	IGW-3024RG	IGB-312S	IGW-2100RW
IGW-4152C	None	IGW-3024RN	IGB-306S	IGW-2100RB

UNIT	APPLICATION
IGW-4152	Chris Craft, Lathrop Marine, Owens Yacht, Palmer Marine
IGW-4152A	Hercules, Michigan Marine
IGW-4152B	Universal Marine
IGW-4152C	Chris Craft

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGW-4156,A,B,C,D DISTRIBUTOR PARTS LIST

IGW-4156,A,B,C,D
(Issued 10-9-50)

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-644	1	Coupling, Drive, Dist.
IG-816	1	Washer, Thrust, Advance Arm
IG-1860A-4	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-264	1	Plug, Rubber, Vent. Hole
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP, DISTRIBUTOR
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-187	**	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
*	2	Washer
*	2	Weight, Governor
IGW-2048LD	1	Shaft, Drive
*	1	Cam & Stop Plate, 4 Cyl. L.H.
SW-213	1	Rivet, Coupling
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

** Use as Required.

* See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assy.	Spring Set, Gov. Weight	Washer	Weight, Governor	Cam & Stop Plate, 6 Cyl. L.H.
IGW-4156	IGW-3048LK	IGB-300S	IGW-107	IGW-1090L	IGW-2100LQ
IGW-4156A	IGW-3048LM	IGB-318S	None	IGW-1014LB	IGW-2100LQ
IGW-4156B	IGW-3048LG	IGB-299S	None	IGW-1063L	IGW-2100LP
IGW-4156C	IGW-3048LQ	IGB-301S	None	IGW-1014LB	IGW-2100LAA
IGW-4156D	IGW-3048LR	IGB-323AS	None	IGW-1014LB	IGW-2100LAA

UNIT	APPLICATION
IGW-4156	American Bantam Car Co.
IGW-4156A	American Bantam Car Co., Continental
IGW-4156B	J.I. Case
IGW-4156C	D.W. Onan, Continental
IGW-4156D	Continental

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve 5/16x3/16
IG-816	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP ASSY., DIST.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGH-1016A-1	1	Arm, Advance
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	**	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
*	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
*	1	Cam, & Stop Plate, 4 Cyl., R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf., #8

** Used as Required.

* See table following parts list for part number applying to assembly wanted.

Unit	Shaft & Gov. Assy.	Cam & Stop Plate	Gov. Weight	Spring Set
IGW-4157	IGW-3047RJ	IGW-2100RD	IGW-1014RB	IGB-299S
IGW-4157A	IGW-3047RAE	IGW-2100RJ	IGW-1090R	IGB-328JS

UNIT	APPLICATION
IGW-4157,A	Hercules

(Issued 4-26-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4159-1,A DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
**	1	GEAR, FOLLOWER
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
**	1	Washer, Thrust, Advance Arm
**	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-224	1	Cover, Cap, Dist., 4 Cyl.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025E	1	CONDENSER
IGB-1225D	1	CAP ASSY., DIST. 4 CYL.
IGB-230	2	Rubber Gasket
IGB-1239	1	ROTOR
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188A	1	Wick, Felt
IGW-2142	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3143L	1	Shaft & Gov. Assy.
IGB-327S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063L	2	Weight, Governor
IGW-2100LF	1	Cam & Stop Plate, 4 Cyl., L.H.
IGW-2143L	1	Shaft, Drive
**	1	Pin, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg., Sc., Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4
X-1601	1	Cup, Grease

* Use as required.
** See table following parts list for part number applying to assembly wanted.

Assembly No.	Follower Gear	Thrust Washer	Advance Arm	Gear Pin
IGW-4159-1	None	IG-816	IG-1806N-1	None
IGW-4159A	GE-50	None	IG-2860A-3	IGB-248

UNIT	APPLICATION
IGW-4159-1	Wisconsin Mtr. Co.
IGW-4159A	Hyster, Wisconsin

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-1860B	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP DISTRIBUTOR
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-187	**	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3047LF	1	Shaft & Gov. Assy.
IGB-297S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063L	2	Weight, Governor
IGW-2047LD	1	Shaft, Drive
IGW-2100LG	1	Cam & Stop Plate, 4 Cyl. L.H.
SW-213	1	Rivet, Coupling
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

** Use as Required.

UNIT	APPLICATION
IGW-4161	Diamond T.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-261	1	GEAR, FOLLOWER
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-2860A-2	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1002	1	ROTOR
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1065	1	CAP ASSY., DIST.
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-2055	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
X-490A	1	Oiler
**	1	Shaft & Gov. Assy.
**	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
**	2	Weight, Governor
IGW-2018RL	1	Shaft, Drive
IGW-2100RAB	1	Cam & Stop Plate, 2 Cyl., R.H.
IGW-3028S	1	CONTACT SET, BREAKER
SW-213	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.
** See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assy.	Spring Set	Governor Weight
IGW-4163A	IGW-3018RZ	IGB-299S	IGW-1090R
IGW-4163B	IGW-3018RAC	IGB-302S	IGW-1014RB

UNIT	APPLICATION
IGW-4163A,B	Universal Motor

(Issued 1-17-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt Cam Sleeve
**	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-224	1	Cover, Cap, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1225	1	CAP ASSY., 4 CYL.
IGB-230	2	Rubber Gasket
IGB-1239	1	ROTOR
IGB-2233	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
**	1	Arm Advance
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3047RU	1	Shaft & Gov. Assy.
IGB-324S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063R	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
IGW-2100RAA	1	Cam & Stop Plate, 4 Cyl., R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc. Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4

* Use As Required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Thrust Washer	Advance Arm
IGW-4164	None	None
IGW-4164-1	IG-816A	IGC-2024AD

UNIT	APPLICATION
IGW-4164	Hercules
IGW-4164-1	Hercules

(Issued 4-26-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4167 DISTRIBUTOR PARTS LIST

IGW-4167
(Issued 3-8-51)

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Field Term.
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IG-1860A-1	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-2176G	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3103RB	1	Shaft & Gov. Assy.
IGB-301S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
IGW-2100RAD	1	Cam & Stop Plate, 1 Cyl. R.H.
IGW-2103R	1	Shaft, Drive
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

UNIT	APPLICATION
IGW-4167	Wisconsin Mtr. Co.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
**	1	GEAR
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-2806N-5	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1002	1	ROTOR
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025E	1	CONDENSER
IGB-1065	1	CAP ASSY., DIST.
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188A	1	Wick, Felt
IGW-2163	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3143LA	1	Shaft & Gov. Assy.
IGB-327S	1	Spring Set, Governor Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063L	2	Weight, Governor
IGW-2100LAB	1	Cam & Stop Plate, 2 Cyl., L.H.
IGW-2143L	1	Shaft, Drive
SW-213	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg. Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8
X-1601	1	Cup, Grease

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Gear
IGW-4168A	GE-50
IGW-4168B	GK-36

UNIT	APPLICATION
IGW-4168A	Wisconsin
IGW-4168B	Wisconsin

(Issued 3-31-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Insulating
GK-36	1	GEAR, DIST. FOLLOWER
IB-23	1	Nut, Lock, Contact Screw, Hex., 3.5 MM.
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Post Inner
IGB-22	1	Washer, Ins., Term. Post
IGB-1007A	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1240	1	Cap., 6 Cyl.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Post, Terminal, #10-32
IGW-54	1	Washer
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3018RAA	1	Shaft & Governor Assy.
IGB-328ES	1	Spring, Set, Governor Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1090R	2	Weight, Governor
IGW-2018RL	1	Shaft
IGW-2100RAE	1	Cam & Stop Plate, 6 Cyl. R.H.
IGW-3028S	1	CONTACT SET, BREAKER
SW-213	1	Rivet
8X-59	1	Screw, Rd. Hd., #8-32x3/16
8X-173	2	Nut, Hex., #10-32
8X-183A	1	Washer, Plain, #10
12X-195	3	Washer, Lock, #8
12X-196	2	Washer, Lock, #10
8X-304	3	Screw, Rd. Hd., #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Skpf., #10
X-1276	1	Washer, Skpf., #8

* Use as required.

UNIT	APPLICATION
IGW-4169A	Towmotor

(Issued 4-1-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Insulating
GK-36	1	GEAR, DIST. FOLLOWER
IB-23	1	Nut, Lock, Contact Screw, Hex., 3.5 MM.
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Post Inner
IGB-22	1	Washer, Ins., Term. Post
IGB-1007A	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1240	1	Cap., 6 Cyl.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Post, Terminal, #10-32
IGW-54	1	Washer
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3018RAA	1	Shaft & Governor Assy.
IGB-328ES	1	Spring, Set, Governor Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1090R	2	Weight, Governor
IGW-2018RL	1	Shaft
IGW-2100RAE	1	Cam & Stop Plate, 6 Cyl. R.H.
IGW-3028S	1	CONTACT SET, BREAKER
SW-213	1	Rivet
8X-59	1	Screw, Rd. Hd., #8-32x3/16
8X-173	2	Nut, Hex., #10-32
8X-183A	1	Washer, Plain, #10
12X-195	3	Washer, Lock, #8
12X-196	2	Washer, Lock, #10
8X-304	3	Screw, Rd. Hd., #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Skpf., #10
X-1276	1	Washer, Skpf., #8

* Use as required.

UNIT	APPLICATION
IGW-4169A	Towmotor

(Issued 4-1-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Insulating
*	1	Gear, Dist., Follower
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816C	1	Washer, Thrust, Advance Arm
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-1239	1	Rotor
IGB-1241	1	Cap, Distributor
IGB-2176	1	Base, Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
X-490	1	Oiler, Sleeve, Press in, 1/4
IGP-33†	1	Contact, Breaker Screw
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-3028†	1	Arm, Breaker Contact
*	1	Shaft & Gov. Assy.
*	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
*	2	Weight, Governor
*	1	Cam. & Stop Plate, 4 Cyl., R.H.
IGW-2103R	1	Shaft, Drive
		1 2 3 4 5
SW-213	1	Rivet, Gear
8X-59	1	Screw, Mtg., Condenser, Rd. Hd., #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
X-195	3	Washer, Lock, Breaker Plate #8
X-196	2	Washer, Lock, Term. Stud, #10
8X-304	3	Screw, Attaching, Breaker Plate, Rd. Hd., #8-32x5/16
X-1270	1	Washer, Skpf., Term. Stud, #10
X-1276	1	Washer, Skpf., Condenser Mtg., Screw, #8
		1 2 3 4 5

* See Table following parts list for part number applying to assembly wanted.

† Contact Set, Service IGW-3028S.

Assembly No.	Gear	Shaft & Gov. Assy.	Spring Set	Weight Governor	Cam & Stop Plate
IGW-4175A	GK-36	IGW-3103RC	IGB-327S	IGW-1063R	IGW-2100RB
IGW-4175B	GE-79	IGW-3103RD	IGB-318S	IGW-1014RB	IGW-2100RD

Unit	Application
IGW-4175A	Aircooled, LeRoi
IGW-4175B	Continental

(Issued 10-16-46)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part 1 2 3 4 5
CB-140	1	Bushing, Term. Stud Ins.
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	3	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IG-816	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Post, Inner
IGB-22	1	Washer, Ins., Term. Post
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1154B-1	1	Arm, Advance
IGB-1239	1	ROTOR
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler, Sleeve, Press in, 1/4
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud Terminal, #10-32
IGW-54	1	Washer
IGW-1080	1	CAP, DIST. 1 2 3 4 5

Part No.	No. Used	Name of Part 1 2 3 4 5
IGW-3028S	1	CONTACT SET, BREAKER
**	1	Shaft & Gov. Assy.
IGB-315S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
**	1	Shaft, Drive
IGW-2100RAF	1	Cam & Stop Plate, 2Cyl. R.H.
8X-59	1	Screw, Mtg., Condenser, Rd. Hd., #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
X-195	3	Lockwasher, Breaker Plate, #8
X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Attaching, Breaker Plate, Rd. Hd., #8-32x5/16
X-1270	1	Washer, Skpf., Terminal Stud #10
X-1276	1	Washer, Skpf., Condenser Mtg. Sc., #8 1 2 3 4 5

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assembly	Shaft Drive
IGW-4176	IGW-3047RV	IGW-2047RE
IGW-4176A	IGW-3047RY	IGW-2047RF

UNIT	APPLICATION
IGW-4176, A	Mobilift

(Issued 8-15-47)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Insulating
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816C	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-199	1	Collar, Shaft, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-1239	1	Rotor
IGB-1241	1	Cap, Distributor
IGP-33†	1	Contact, Breaker Screw
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1080	1	Arm, Advance
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-2056	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
X-490	1	Oiler, Press in Sleeve
IGW-3028†	1	Arm, Breaker Contact
IGW-3087LB	1	Shaft & Gov. Assy.
IGB-318S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2087L	1	Shaft, Drive
IGW-2100LE	1	Cam, & Stop Plate, 4 Cyl., L.H.
		1 2 3 4 5
SW-213	1	Rivet, Collar, Drive Shaft
8X-59	1	Screw, Mtg., Condenser, Rd. Hd., #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
X-195	3	Lockwasher, Breaker Plate, #8
X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Attaching, Breaker Plate Rd. Hd., #8-32x5/16
X-1270	1	Washer, Skpf., Term. Stud, #10
X-1276	1	Washer, Skpf., Condenser Mtg. Screw, #8
		1 2 3 4 5

† Contact Set, Service IGW-3028S.

(Issued 4-16-46)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4178,A DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins. Term Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1001	1	Cap, 4 Cyl.
IGB-1002	1	Rotor
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler, Sleeve, Press in, 1/4
IGC-2024K-3	1	Arm, Advance
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	Contact Set, Breaker
**	1	Shaft & Gov. Assy.
**	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
**	1	Shaft, Drive
IGW-2100RD	1	Cam & Stop Plate, 4 Cyl. R.H.
8X-59	1	Screw, Condenser, Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate, Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov. Assembly	Spring Set Gov. Weight	Shaft Drive
IGW-4178	IGW-3047RW	IGB-301S	IGW-2047RE
IGW-4178A	IGW-3047RJ	IGB-299S	IGW-2047RF

UNIT	APPLICATION
IGW-4178	Hercules
IGW-4178A	Kermath

(Issued 7-13-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IG-1860A-1	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring, & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3103LA	1	Shaft & Gov. Assy.
IGB-301S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2100LAD	1	Cam & Stop Plate, 1 Cyl., L.H.
IGW-2103L	1	Shaft, Drive
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

UNIT	APPLICATION
IGW-4179	Wisconsin

(Issued 10-21-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins, Term. Stud
IAO-10	1	Washer, Thrust, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Drive Shaft, Upper
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-199	1	Collar, Shaft, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
**	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP
IGW-38	1	Washer, Inner Term. Stud, Ins.
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
**	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGW-3028S	1	Contact Set, Breaker
**	1	Shaft & Governor Assy.
**	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
**	1	Cam & Stop Plate, 4 Cyl. L.H.
IGW-2176L	1	Shaft, Drive
SW-213	1	Rivet, Collar
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex., #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	4	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf., #10
X-1276	1	Washer, Condenser Mtg. Screw #8

* Use as Required.

** See table following parts list for part number applying to assembly wanted.

Unit	Condenser	Base Assy.	Shaft & Gov. Assy.	Spring Set	Cam & Stop Plate
IGW-4181	IGB-1025E	IGW-2177	IGW-3176L	IGB-302S	IGW-2100LC
IGW-4181A	IGB-1025	IGW-2177A	IGW-3176L	IGB-302S	IGW-2100LC
IGW-4181B	IGB-1025	IGW-2177A	IGW-3176LA	IGB-312S	IGW-2100LF
IGW-4181C	IGB-1025	IGW-2177A	IGW-3176LB	IGB-315S	IGW-2100LAE

UNIT	APPLICATION
IGW-4181	Crosley
IGW-4181A	Crosley
IGW-4181B	Crosley
IGW-4181C	Crosley

(Issued 9-27-49)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Adv. Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1007	2	Spring, & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-1239	1	Rotor
IGB-1240	1	Cap, 6 Cyl.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
X-490A	1	Oiler, Sleeve, Press in, 1/4
IGC-2024N-2	1	Arm, Advance
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	Contact Set, Breaker
IGW-3047RX	1	Shaft & Gov. Assy.
IGB-327S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063R	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
IGW-2100RAG	1	Cam & Stop Plate, 6 Cyl. R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate, Sc., #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

UNIT	APPLICATION
IGW-4183	Kermath

(Issued 7-13-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Term. Stud Ins.
IB-23	1	Nut, Lock, Contact Screw
IG-94	1	Terminal, H.T. Wire
IG-313	1	Washer, Thrust, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IGB-21	1	Insulation, Term. Post, Inner
IGB-22	1	Washer, Ins., Term. Post
IGB-264	1	Plug, Rubber, Vent Hole
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025J	1	Condenser
IGB-1239	1	Rotor
IGB-1240	1	Cap, 6 Cyl.
IGP-33†	1	Contact, Breaker Screw
IGS-19S	1	Collar, Shaft
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Inner Term. Stud Ins.
IGW-39	1	Stud Terminal, #10-32
IGW-54	1	Washer, Term. Stud Inner
IGW-2178	1	Base Assembly, Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGW-179	1	Retainer, Oil Seal
X-382	1	Grease Cup, 1/8
XA-724	1	Oil Seal
IGW-3028†	1	Arm, Breaker Contact
IGW-3144LB	1	Shaft & Governor Assembly
IGB-328JS	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-182	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2100LY	1	Cam, & Stop Plate, 6 Cyl. L.H.
IGW-2144LA	1	Shaft, Drive
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
SW-213	1	Rivet, Collar, Drive Shaft
8X-59	1	Screw, Mtg., Condenser, Rd. Hd., #8-32x3/16
8X-173	1	Nut, Terminal Stud, Hex., #10-32
X-195	3	Lockwasher, Breaker Plate, #8
12X-196	1	Lockwasher, Terminal Stud, #10
8X-183A	1	Washer, Plain, Term. Stud, #10
8X-304	3	Screw, Attaching, Breaker Plate, Rd. Hd., #8-32x5/16
X-1270	1	Washer, Skpf., Terminal Stud, #10
X-1276	1	Washer, Skpf., Condenser Mtg. Sc., #8
		1 2 3 4 5

† SERVICE CONTACT SET IGW-3028S.

(Issued 2-8-46)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Term. Stud, Ins.
GE-50	1	Gear, Follower
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	2	Washer, Thrust, Advance Arm
IG-816A	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud,
IGB-224	1	Cover, Cap, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025E	1	Condenser
IGB-1225	1	Cap Assy., 4 Cyl.
IGB-230	2	Rubber Gasket
IGB-1239	1	Rotor
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-2142A	1	Base Assy. Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler
IGW-3028S	1	Contact Set, Breaker
IGW-3143L	1	Shaft & Gov. Assy.
IGB-327S	1	Spring Set, Governor Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam.
IGW-1063L	2	Weight, Governor
IGW-2100LF	1	Cam, & Stop Plate, 4 Cyl. L.H.
IGW-2143L	1	Shaft, Drive
SW-213	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4

* Use as required.

UNIT	APPLICATION
IGW-4187A	Wisconsin

(Issued 7-13-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushibg, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-199	1	Collar, Shaft, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241A	1	CAP ASSY., DIST.
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-2056	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGW-3028S	1	CONTACT SET, BREAKER
**	1	Shaft & Governor Assy.
**	1	Spring Set, Governor Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
**	2	Washer
**	2	Weight, Governor
IGW-2087L	1	Shaft, Drive
IGW-2100LE	1	Cam & Stop Plate, 4 Cyl. L.H.
SW-213	1	Rivet, Collar
8X-59	1	Screw, Condenser Mtg. Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg. Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as Required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Shaft & Gov.	Spring Set	Washer	Gov. Weight
IGW-4189	IGW-3087LC	IGB-301S	None	IGW-1014LB
IGW-4189A	IGW-3087LD	IGB-319AS	IGW-107	IGW-1090L

UNIT	APPLICATION
IGW-4189,A	Willys

(Issued 4-20-50)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Term. Stud Ins.
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-644	1	Coupling, Drive, Dist.
IG-816A	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Post, Inner
IGB-22	1	Washer, Ins., Term. Post
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-1239	1	Rotor
IGB-1240	1	Cap, 6 Cyl.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
X-490	1	Oiler, Sleeve, Press in, 1/4
IGP-33†	1	Contact, Breaker Screw
IGS-21	1	Pointer, Advance Arm
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1020-1	1	Arm, Advance
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Terminal Stud, Inner
IGW-3028†	1	Arm, Breaker, Contact
IGW-3048RK	1	Shaft & Gov. Assy.
IGB-297S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063R	2	Weight, Governor
IGW-2048RB	1	Shaft, Drive
IGW-2100RE	1	Cam, & Stop Plate, 6 Cyl. R.H.
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
SW-213	1	Rivet, Collar, Drive Shaft
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate, #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate, Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg., Skpf. #8
		1 2 3 4 5

† Contact Set, Service IGW-3028S.

Unit	Application
IGW-4190	Reo Truck

(Issued 7-24-46)

File in Equipment & Parts List Binder

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
GE-79	1	Gear, Follower
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-816	1	Washer, Thrust, Advance Arm
IG-495	1	Wick, Felt, Cam Sleeve
IG-2860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1001	1	Cap
IGB-1002	1	Rotor
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	Condenser
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler, Sleeve, Press in, 1/4
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Ins., Term. Stud
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	Contact Set, Breaker
IGW-3103RD	1	Shaft & Gov. Assy.
IGB-318S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
IGW-2100RD	1	Cam & Stop Plate, 4 Cyl. R.H.
IGW-2103R	1	Shaft, Drive
SW-213	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate, Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg., Skpf. #8

* Use as required.

UNIT	APPLICATION
IGW-4191A	Towmotor

(Issued 7-13-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4192 DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud
IGB-1007	1	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP ASSY., DIST.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler, Sleeve, Press In, 1/4
IGS-21	1	Pointer, Advance Arm
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1020	1	Arm, Advance
IGW-38	1	Bushing, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3184R	1	Shaft & Governor Assy.
IGB-299S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Gov.
IGW-2100RD	1	Cam & Stop Plate, 4 Cyl. R.H.
IGW-2184R	1	Shaft, Drive
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg. Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc. Skpf. #8

* Use as Required.

UNIT	APPLICATION
IGW-4192	Atlas Diesel

(Issued 6-15-48)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGW-4194 DISTRIBUTOR PARTS LIST IGW-4194

Part No.	No. Used	Name of Part
		1 2 3 4 5
CB-140	1	Bushing, Term. Stud, Ins.
IB-23	1	Nut, Lock, Contact, Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H;T. Wire
IG-495	1	Wick Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm.
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud.
IGB-1007	2	Spring, & Hinge, Clamp Cap
IGB-1010	1	Plate Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1240	1	CAP, 6 CYL.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
X-490A	1	Oiler, Sleeve, Press In, 1/4
IGS-19S	1	Collar, Shaft
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud Terminal, #10-32
IGW-54	1	Washer
IGW-187	*	Washer, Term. Stud
IGW-3028S	1	Contact Set, Breaker
IGW-3186L	1	Shaft & Governor Assy.
IGB-315S	1	Spring Set, Gov. Weight
		1 2 3 4 5
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight Gov.
IGW-2100LA	1	Cam & Stop Plate, 6 Cyl. L.H.
IGW-2186L	1	Shaft, Drive
SW-213	1	Rivet, Collar
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex., #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate #8
12X-196	2	Lockwasher, Terminal Stud., #10
8X-304	3	Screw, Breaker Plate Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud. Skpf. #10
X-1276	1	Washer, Condenser Mtg., Skpf. #8
		1 2 3 4 5

* Used As Required.

UNIT	APPLICATION
IGW-4194	Mobilift

(Issued 8-15-47)

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4195 DISTRIBUTOR PARTS LIST

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-2860A-3	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-199	1	Collar, Shaft, Dist.
IGB-224	1	Cover, Cap, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025E	1	CONDENSER
IGB-1225	1	CAP ASSY., 4 CYL.
IGB-230	2	Rubber Gasket
IGB-1239	1	ROTOR
IGB-2313	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Bushing, Insulating
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188A	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3189L	1	Shaft & Governor Assy.
IGB-315S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2100LC	1	Cam & Stop Plate, 4 Cyl. L.H.
IGW-2189L	1	Shaft, Drive
SW-213	1	Rivet, Collar
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-382	1	Grease Cup
X-1270	1	Washer, Term. Stud, Skpf. #8
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4

* Use as Required.

UNIT	APPLICATION
IGW-4195	Gray Marine

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4196 DISTRIBUTOR PARTS LIST

IGW-4196
(Issued 11-27-50)

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Field Term.
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1240	1	CAP ASSY., DIST.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGS-19S	1	Collar, Shaft
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT, SET, BREAKER
IGW-3186R	1	Shaft & Governor Assy.
IGB-315S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
IGW-2100R	1	Cam & Stop Plate, 6 Cyl. R.H.
IGW-2186R	1	Shaft, Drive
SW-213	1	Rivet, Collar
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

UNIT	APPLICATION
IGW-4196	Mobilift Corp.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4200 TYPE DISTRIBUTORS

Name of Part	IGW-4201A	IGW-4202A	IGW-4203	IGW-4203A	IGW-4204
Illustration	Fig. 1	Fig. 1	Fig. 2	Fig. 2	Fig. 3
Advance Arm Assembly	IGB-1216	IGB-1216			IGW-1115
Base Assembly - Dist.	IGW-2098	IGW-2098	IGW-2120	IGW-2120	IGW-2116
Absorbent Bronze Brg.	IG-579A	IG-579A	IG-579A	IG-579A	IG-579A
Bracket Sc. #10-32x1/4			8X-872	8X-872	
Bracket Sc. #10-32x5/16			8X-870	8X-870	
Bracket Lockwasher #10			X-1270	X-1270	
Grease Cup or Oiler	X-488	X-488	X-382	X-382	X-382
Lead Assembly			DG-107	DG-107	
Link Bracket			IGW-119	IGW-119	
Breaker Contact Lock Nut	IB-23	IB-23	IB-23	IB-23	IB-23
BREAKER CONTACT SET	IGW-3028LS	IGW-3028LS	IGW-3028LS	IGW-3028LS	IGW-3028LS
Breaker Plate	IGW-1010	IGW-1010	IGW-1010	IGW-1010	IGW-1010
Breaker Plate Sc. #8-32x5/16	8X-304	8X-304	8X-304	8X-304	8X-304
Breaker Plate Sc. Lock Washer #8	X-195	X-195	X-195	X-195	X-195
Bushing - Term. Post Ins.	CB-140	CB-140	CB-140	CB-140	CB-140
Cam Sleeve Felt Wick	IG-495	IG-495	IG-495	IG-495	IG-495
CAP ASSEMBLY - Dist.	IGB-1240	IGB-1240	IGB-1240	IGB-1240	IGB-1240
Contact Plunger	IGB-24	IGB-24	IGB-24	IGB-24	IGB-24
Clamp-Vac. Chamber Bracket			IGW-117	IGW-117	
Clamp Screw #10-32x3/8			8X-902	8X-902	
Clamp Sc. Lockwasher #10			X-196	X-196	
Collar - Drive Shaft			IGW-114	IGW-114	IGW-114
CONDENSER ASSEMBLY	IGB-1025J	IGB-1025J	IGW-3075C	IGW-3075C	IGB-1025J
Cond. Sc. #8-32x3/16	8X-59	8X-59	8X-59	8X-59	8X-59
Cond. Sc. Lockwasher #8	X-1276	X-1276	X-1276	X-1276	X-1276
Cond. Lead Sc. #10-32x3/16		8X-1004			
Cond. Lead Lockwasher #10		X-196			
Drive Shaft & Gov. Assy.	IGW-3018RL	IGW-3018RL	IGW-3113L	IGW-3113LA	IGW-3113L
Cam & Stop Plate	IGW-2100R	IGW-2100R	IGW-2100LA	IGW-2100LX	IGW-2100LA
Drive Shaft Assy.	IGW-2018RK	IGW-2018RK	IGW-2113L	IGW-2113L	IGW-2113L
Lock Spring Ring	IGW-37	IGW-37	IGW-37	IGW-37	IGW-37
Washer	IGW-92	IGW-92	IGW-92	IGW-92	IGW-92
Weight Assembly	IGW-1063R	IGW-1063R	IGW-1063L	IGW-1014LB	IGW-1063L
WEIGHT SPRING SET	IGB-302CS	IGB-302CS	IGB-302CS	IGB-291S	IGB-302CS
GEAR - FOLLOWER	GE-40	GE-40			
Insulation - Term. Post	IGB-21	IGB-21	IGB-21	IGB-21	IGB-21
Lock Spring - Breaker Arm	IGB-220	IGB-220	IGB-220	IGB-220	IGB-220
Lockwasher #10 - Term. Post	X-196	X-196	X-196	X-196	X-196
Nut #10-32 - Term. Post	8X-173	8X-173	8X-173	8X-173	8X-173
Plug - Dist. Cap	IGB-264	IGB-264	IGB-264	IGB-264	IGB-264
Plunger Clamp Nut			IGW-122	IGW-122	
Plunger Clamp Nut Lockwasher			X-1274	X-1274	
Plunger Clamp Screw			VC-94	VC-94	
Plunger Clamp Washer			IGW-118	IGW-118	
Plunger Stop			VC-95	VC-95	
Plunger Stop Sc. #8-32x3/16			8X-884	8X-884	
Plunger Stop Sc. Lock Washer #8			X-195	X-195	
Resistance Unit Assy.		SP-4015			
Lockwasher		X-196			
Screw		8X-321			
Rivet - Coupling			IGB-248	IGB-248	IGB-248
Rivet - Gear	SW-213	SW-213			

(CONTINUED ON REVERSE SIDE)

UNIT	USED ON
IGW-4201A	Hudson
IGW-4202A	Hudson
IGW-4203	Hudson
IGW-4203A	Hudson
IGW-4204	Hudson

(Issued 7-23-41)


"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Printed in U.S.A.

IGW-4200 TYPE DISTRIBUTORS


	IGW-4201A	IGW-4202A	Icl-4203	IGW-4203A	IGW-1204
ROTOR	IGB-1239	IGB-1239	IGB-1239	.GB-1239	IGB-1239
Rubber Cap - Sec. Term,	IA-278	IA-278	IA-278	IA-a78	IA-278
Spring Assy. - Dist. Cap	IGB-1007	IGB-1007	IGB-1007	IGB-1007	IGB-1007
Terminal	IG-97		I W-121	IGW-121	IGW-97
Terminal - H. T. Wire	IG-94	IG-94	IG-94	IG-94	IG-94
Terminal Post #10-32	IGW-95	IGW-95	IGW-95	IGW-95	IGW-95
Terminal Screw #10-32x1/4	8X-872		8X-872	8X-872	8X-872
Te r inal So, Lockwasher #10	X-196	X-196	X-196	X-196	X-196
Thrust Washer - Lower	IG-90	IG-90	IG-90	IG-90	IG-90
Thrust Washer - Upper	IGS-104	IGS-104	IGS-104	IGS-104	IGS-10.
Vacu u Chamber Bracket			VC-96	VC-96	
Vac. Chamber Mtg. Lock Washer #10			X-196	.-196	
Vac. Chamber Mtg. Nut #10-32			SX-173	8X-173	
Vac. Control (See separate list for parts)			VC-3060ES	VC-3060ES	
Washer (Inner)-Ter. Post	IGW-38	IGW-38	I G -38	IGW-38	I C 38
Washer (Square)-Ter. Post	I G -54	IG'.1-54	IGV/-54	IGW-54	IG'!-54

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

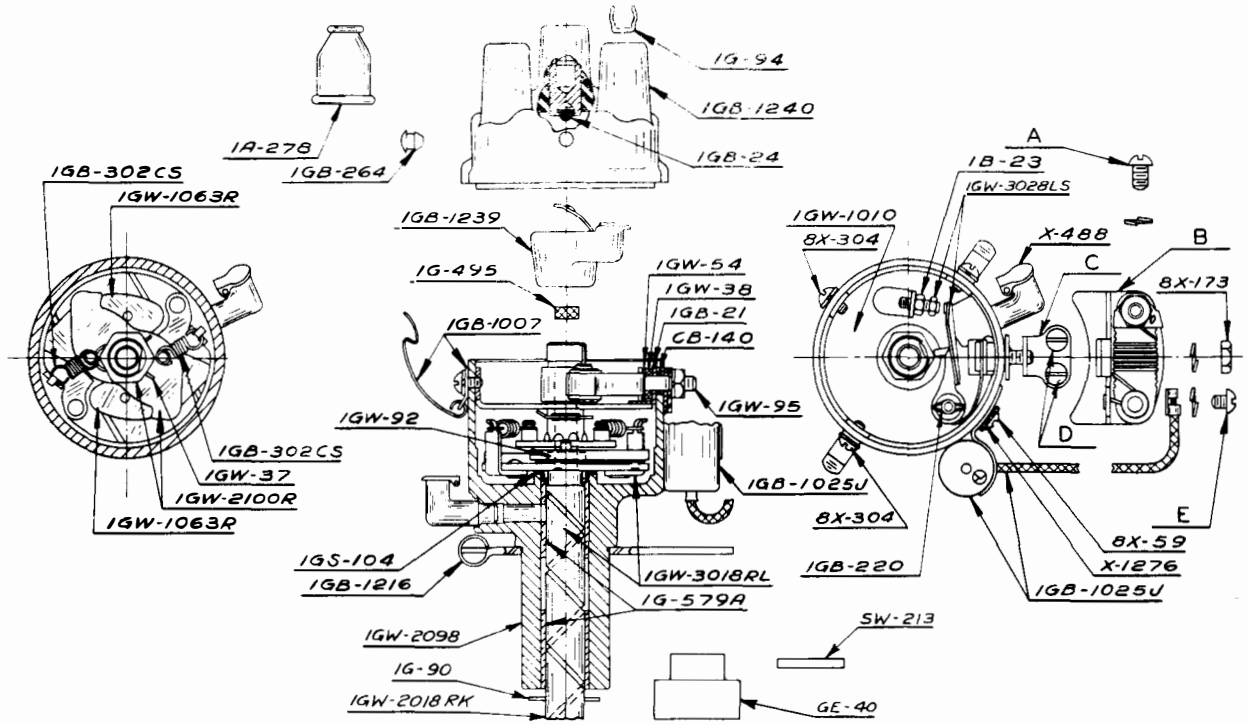

UNIT	A	B	C	D	E
1GW-4201A	NONE	NONE	1GW-97	8X-872	NONE
1GW-4202A	8X-321	SP-4015	NONE	NONE	8X-1004

Figure 1

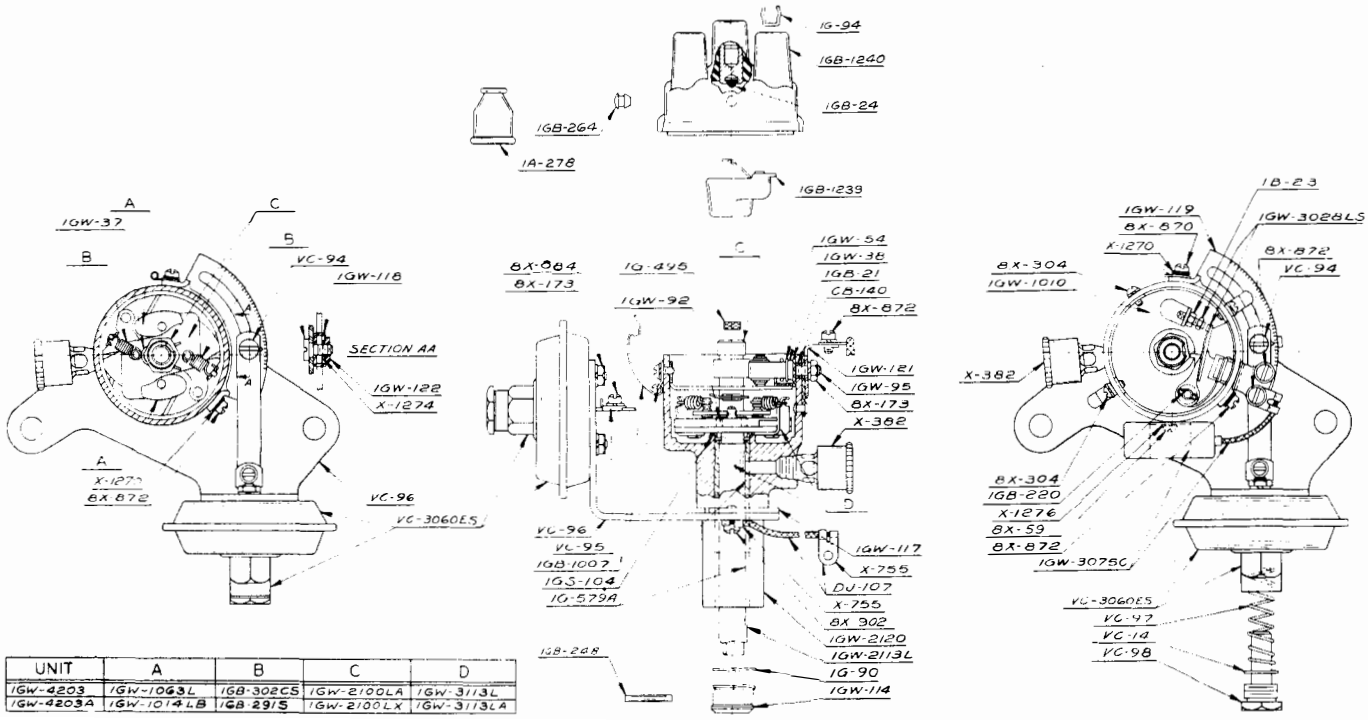

UNIT	A	B	C	D
1GW-4203	1GW-1063L	1GB-302CS	1GW-2100LA	1GW-3113L
1GW-4203A	1GW-1014LB	1GB 2915	1GW-2100LX	1GW-3113LA

Figure 2

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4200 TYPE DISTRIBUTORS

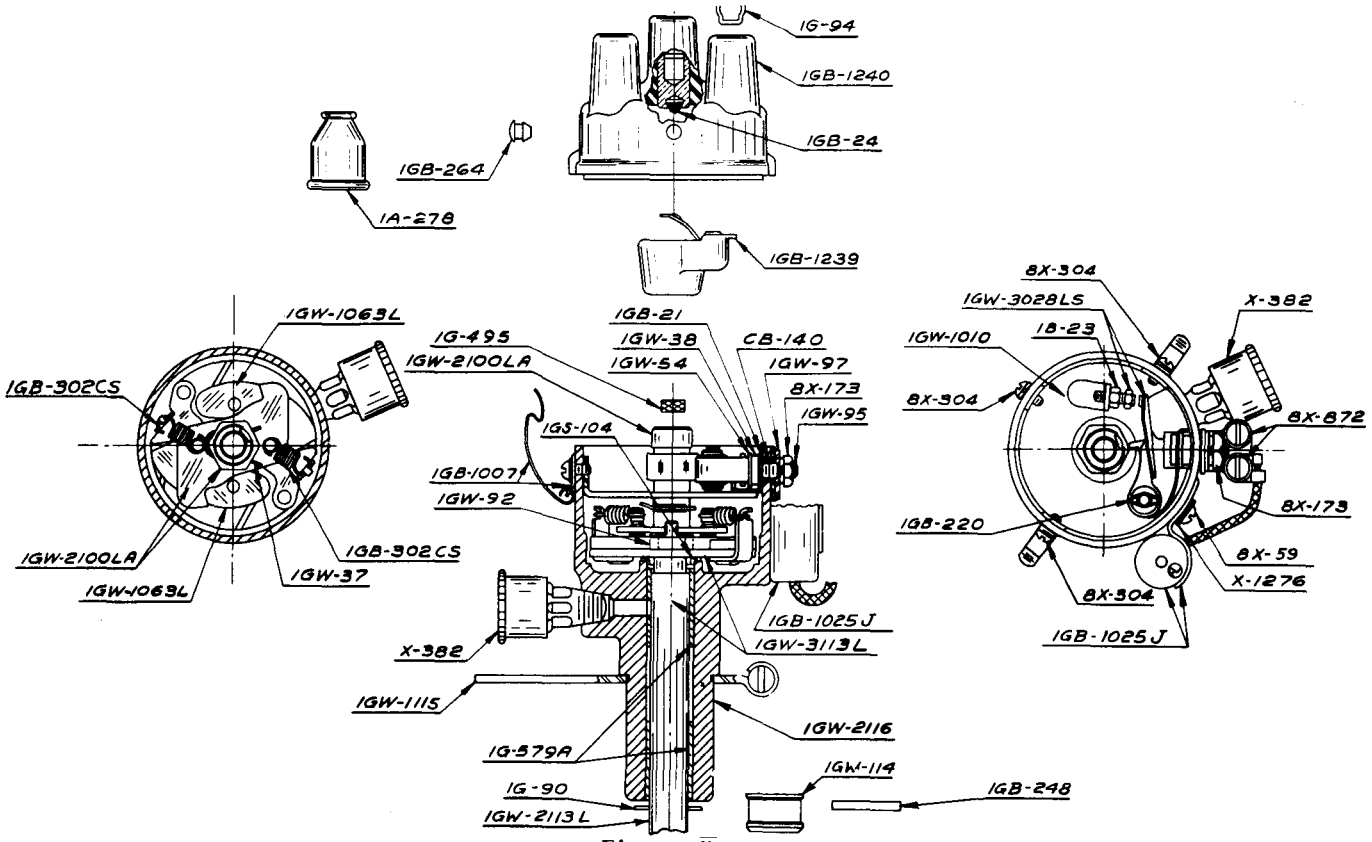


Figure 3

"NOTE: Where part n mbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Printed in U. S. A.

IGW-4198 DISTRIBUTOR PARTS LIST

IGW-4198
(Issued 9-25-56)

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816	1	Washer, Thrust, Advance Arm
IG-1860A	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-199	1	Collar, Shaft, Dist.
IGB-224	1	Cover, Cap, Dist.
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1225	1	CAP ASSY., DIST.
IGB-230	2	Rubber Gasket
IGB-1239	1	ROTOR
IGW-2177B	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, Primary
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3176LB	1	Shaft & Governor Assy.
IGB-315S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2100LAE	1	Cam & Stop Plate, 4 Cyl. L.H.
IGW-2176L	1	Shaft, Drive
SW-213	1	Rivet, Collar
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	4	Lockwasher, Breaker Plate & Condenser Mtg. Sc. #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
8X-305	1	Screw, Condenser Mtg., Rd. Hd. #8-32x1/4
X-490A	1	Oiler
X-1276	2	Washer, Condenser Mtg. Sc., Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4

* Use as required.

UNIT	APPLICATION
IGW-4198	Fageol

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGW-4199A DISTRIBUTOR PARTS LIST

IGW-4199A
(Issued 4-9-57)

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
GK-36	1	GEAR, FOLLOWER
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-2860A-3	1	Arm, Advance
IGB-21	1	Insulation, Term. Stud. Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1002	1	Rotor
IGB-1007	2	Spring, Hinge, Cap Clamp
IGB-1010	1	Plate, Breaker
IGB-1025E	1	CONDENSER
IGB-1065C	1	CAP ASSY., DISTRIBUTOR
IGS-104	1	Washer, Thrust, Drive Shaft Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, Primary
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-188A	1	Wick, Felt
IGW-2163A	1	Base Assy., Dist.
IG-579A	2	BEARING, ABS. BRONZE
VRP-26	1	Felt
XA-880	1	Retainer, Felt
IGW-3028S	1	Contact Set, Breaker
IGW-3143LA		Shaft & Gov. Assy.
IGB-327S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1063L	2	Weight, Governor
IGW-2100LAB	1	Cam & Stop Plate, 2 Cyl. L.H.
IGW-2143L	1	Shaft, Drive
SW-213	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex #10-32
8X-183A	1	Washer, Plain, Term. Stud, #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Term. Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1276	1	Washer, Condenser Mtg. Sc. Skpf. #8
X-1601	1	Cup, Grease

* Use as Required

UNIT	APPLICATION
IGW-4199A	Wisconsin

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
GJ-236	1	Rivet, Collar
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-224	1	COVER, CAP, DIST.
IGB-1007	1	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025K	1	CONDENSER
IGB-1225C	1	CAP ASSY., DIST.
IGB-230	2	Gasket, Rubber
IGW-167	1	Gasket, Dist. Cap
IGB-1239	1	ROTOR
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGS-1027-1	1	Arm, Advance
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer
IGW-166	1	Collar, Shaft, Dist.
IGW-187	*	Washer, Term. Stud
IGW-1169	1	Spring & Hinge, Clamp, Cap
IGW-2170	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGW-168	1	Cover, Breather
IGW-171	1	Spring, Retaining, Breather Cover
X-490A	1	Oiler
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3165L	1	Shaft & Governor Assy.
IGB-327AS	1	Spring Set, Governor Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2100LE	1	Cam & Stop Plate
IGW-2165L	1	Shaft, Drive
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4

* Use as Required.

UNIT	APPLICATION
IGW-4301	Waukesha, Clark Equipment

(Issued 8-25-48)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-495	1	Wick, Felt, Cam Sleeve
IG-816A	1	Washer, Thrust, Advance Arm
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-199	1	Collar, Shaft, Dist.
IGB-224	1	Cover, Cap, Dist.
IGB-1007	1	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025K	1	CONDENSER
IGB-1225C	1	CAP ASSY., DIST.
IGB-230	2	Gasket, Rubber
IGW-167	1	Gasket, Dist. Cap
IGB-1239	1	ROTOR
IGB-2154A	1	Arm, Advance
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud
IGW-1169	1	Spring & Hinge, Clamp, Cap
IGW-2170	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGW-168	1	Cover, Breather
IGW-171	1	Spring, Retaining, Breather Cover
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3185L	1	Shaft & Governor Assy.
IGB-302ES	1	Spring Set, Gov, Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014LB	2	Weight, Governor
IGW-2100LN	1	Cam & Stop Plate 4 Cyl. L.H.
IGW-2185L	1	Shaft, Drive
SW-213	1	Rivet, Gear
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8
8X-1340	2	Screw, Cover, Ctsk. Hd. #8-32x3/4

* Use as required.

UNIT	APPLICATION
IGW-4302	Waukesha

(Issued 4-1-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
GE-56	1	GEAR, DIST., FOLLOWER
GJ-236	1	Rivet, Gear
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft Lower
IG-94	7	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1240	1	CAP, 6 CYL.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Absorbent Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins., Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Was her, Term. Stud, Inner
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3047RAB	1	Shaft & Gov. Assy.
IGB-297S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Washer
IGW-1014RB	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
IGW-2100RT	1	Cam & Stop Plate, 6 Cyl. R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Terminal Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate, Rd. Hd. #8-32x5/16
X-490	1	Oiler
X-1270	1	Washer, Terminal Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg., Skpf. #8

* Use as Required.

UNIT	APPLICATION
IGW-6001-2	Diamond T

(Issued 4-1-49)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
CB-140	1	Bushing, Ins., Term. Stud
GE-41	1	GEAR, FOLLOWER
GJ-236	1	Rivet, Gear
IB-23	1	Nut, Lock, Contact Screw
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-94	5	Terminal, H.T. Wire
IG-495	1	Wick, Felt, Cam Sleeve
IGB-21	1	Insulation, Term. Stud, Inner
IGB-22	1	Washer, Ins., Term. Stud, Outer
IGB-264	1	Plug, Rubber, Vent. Hole
IGB-1007	2	Spring & Hinge, Clamp, Cap
IGB-1010	1	Plate, Breaker
IGB-1025	1	CONDENSER
IGB-1239	1	ROTOR
IGB-1241	1	CAP ASSY., DIST.
IGB-2176	1	Base Assy., Dist.
IG-579A	2	Bearing, Abs. Bronze
IGS-104	1	Washer, Thrust, Drive Shaft, Upper
IGW-38	1	Washer, Ins. Term. Stud, Inner
IGW-39	1	Stud, Terminal, #10-32
IGW-54	1	Washer, Term. Stud, Inner
IGW-187	*	Washer, Term. Stud, Inner
IGW-188	1	Wick, Felt
IGW-3028S	1	CONTACT SET, BREAKER
IGW-3047RAC	1	Shaft & Gov. Assy.
IGB-315S	1	Spring Set, Gov. Weight
IGW-37	1	Spring, Cam Retaining
IGW-92	1	Spacer, Cam
IGW-1014RB	2	Weight, Governor
IGW-2047RF	1	Shaft, Drive
IGW-2100RG	1	Cam & Stop Plate, 4 Cyl. R.H.
8X-59	1	Screw, Condenser Mtg., Rd. Hd. #8-32x3/16
8X-173	2	Nut, Term. Stud, Hex. #10-32
8X-183A	1	Washer, Term. Stud, Plain #10
12X-195	3	Lockwasher, Breaker Plate Sc., #8
12X-196	2	Lockwasher, Terminal Stud, #10
8X-304	3	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
X-490A	1	Oiler
X-1270	1	Washer, Term. Stud, Skpf. #10
X-1276	1	Washer, Condenser Mtg. Sc., Skpf. #8

* Use as required.

UNIT	APPLICATION
IGW-6003-2	Universal Motor

(Issued 6-3-49)

Printed in U. S. A.

File in Equipment & Parts List Binder


"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."


IGZ-4000 SERIES DISTRIBUTOR PARTS LIST

Model No.	No. Cyl.	CUSTOMER
IGZ-4001	6	Massey-Harris
IGZ-4002	6	Massey-Harris
IGZ-4003-1	6	Massey-Harris
IGZ-4004	6	Massey-Harris
IGZ-4004A	6	Massey-Harris
IGZ-4005	4	Massey-Harris
IGZ-4005A	4	Continental
IGZ-4005B	4	Massey-Harris
IGZ-4005B-1	4	Massey-Harris
IGZ-4006	6	Massey-Harris
IGZ-4006A	6	Continental
IGZ-4006B	6	Massey-Harris
IGZ-4006B-1	6	Massey-Harris
IGZ-4006C	6	Massey-Harris
IGZ-4006C-1	6	Massey-Harris
IGZ-4007	6	Chrysler (Industrial), Massey-Harris
IGZ-4007-1	6	Chrysler (Industrial), Massey-Harris
IGZ-4008	6	Chrysler (Industrial), Cockshutt (Canada), Co-Op, Massey-Harris
IGZ-4008-1	6	Chrysler (Industrial), Cockshutt (Canada), Co-Op, Massey-Harris
IGZ-4009A	4	J.I. Case
IGZ-4010	6	Continental
IGZ-4010A	6	Continental
IGZ-4010A-1	6	Buffalo Springfield Roller
IGZ-4010B	6	Continental


Printed in U. S. A.


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

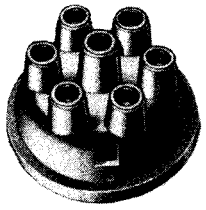

Cap


Rotor



Contact Set


Condenser

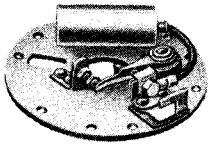

Breaker Plate Assy.

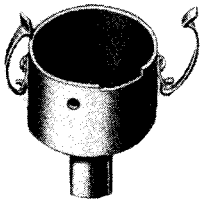
Base Assy.


Bearing

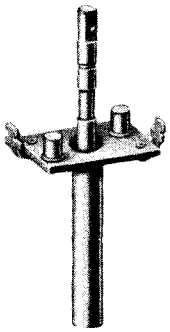
Drive Shaft


Weight Spring Set


Cam & Stop Plate






Gear


Coupling

ILLUSTRATION SHOWS TYPICAL PARTS ONLY

Assembly No.	Cap	Rotor	Contact Set	Condenser	Breaker Plate Assy.	Base Assy.	Bearings (2) Used	Drive Shaft	Weight Spring Set	Cam & Stop Plate	Gear or Coupling
IGZ-4001	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2001	IG-579A	IGZ-1002R	IG-636DS	IGZ-1021R	- - -
IGZ-4002	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2013	IG-579A	IGZ-1025R	IG-636DS	IGZ-1021RE	- - -
IGZ-4003-1	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2013	IG-579A	IGZ-1026R	IG-636HS	IGZ-1021RC	- - -
IGZ-4004	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2027	IG-579A	IGZ-1028R	IGC-81S	IGZ-1021RD	IG-644
IGZ-4004A	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2027	IG-579A	IGZ-1028RC	IGE-30ES	IGZ-1021RK	IG-644
IGZ-4005	IGZ-1022A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LA	IGB-337S	IGZ-1021LA	IG-644
IGZ-4005A	IGZ-1022A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LA	IGB-208S	IGZ-1021LF	IG-644
IGZ-4005B	IGZ-1022A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LC	IGE-30DS	IGZ-1021LG	IG-644
IGZ-4005B-1	IGZ-1022A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LC	IGE-30DS	IGZ-1021LG	IG-644
IGZ-4006	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028L	IGE-29S	IGZ-1021L	IG-644
IGZ-4006A	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028L	IG-636S	IGZ-1021LD	IG-644
IGZ-4006B	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IGE-30GS	IGZ-1021LJ	IG-644
IGZ-4006B-1	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IGE-30GS	IGZ-1021LJ	IG-644
IGZ-4006C	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IGE-30FS	IGZ-1021LK	IG-644
IGZ-4006C-1	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IGE-30FS	IGZ-1021LK	IG-644
IGZ-4007	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2029	IG-579A	IGZ-1030R	IGB-292SS	IGZ-1021RA	- - -
IGZ-4007-1	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2029	IG-579A	IGZ-1030R	IGB-292SS	IGZ-1021RA	- - -
IGZ-4008	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2029	IG-579A	IGZ-1026R	IG-636NS	IGZ-1021RF	- - -
IGZ-4008-1	IGZ-1003A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2029	IG-579A	IGZ-1026R	IG-636NS	IGZ-1021RF	- - -
IGZ-4009A	IGZ-1022A	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028RA	IGB-328CS	IGZ-1021RG	GE-68
IGZ-4010	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IG-636MS	IGZ-1021LB	IG-644
IGZ-4010A	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IG-636PS	IGZ-1021LC	IG-644
IGZ-4010A-1	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IG-636PS	IGZ-1021LC	IG-644
IGZ-4010B	IGZ-1003B	IGZ-1016	IGP-3028A	IG-3927C	IGZ-2004	IGZ-2011	IG-579A	IGZ-1028LB	IGC-42CS	IGZ-1021LE	IG-644

MISCELLANEOUS PARTS

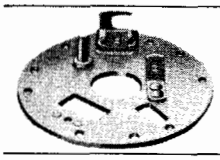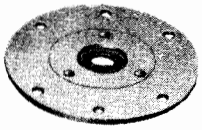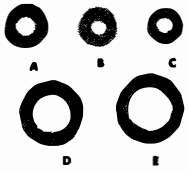Name	Part No.	No. Used	Used On
 ARM, ADVANCE	IG-2860A	1	IGZ-4010, A, B
	IG-2860A-3	1	IGZ-4005, A, B, IGZ-4009A
	IGB-1154B	1	IGZ-4005B-1, IGZ-4006B-1, C-1
	IGC-2024N-1	1	IGZ-4010A-1
	IGC-2024N-2	1	IGZ-4006, A, B, C
	IGS-114	1	IGZ-4007-1, IGZ-4008-1
	IGS-1020	1	IGZ-4003-1
	IGS-1020S	1	IGZ-4002
	IGS-1027S	1	IGZ-4001
	IGS-2020-2	1	IGZ-4004, A
 BRACKET, Cap Spring	IGZ-10	2	All
 BUSHING, Insulation Terminal Stud	IGL-10	1	All
 CLAMP, Terminal Stud	IGZ-18	1	All
 CLIP CONTACT ARM SPRING	IA-131	1	All
 COLLAR, Dist. Shaft	IGS-19S	1	IGZ-4001, IGZ-4002, IGZ-4003-1, IGZ-4007, -1, IGZ-4008, -1
 CONTACT, Dist. Cap Plunger	IG-514	1	All
 CUP, Grease	X-382	1	All
 INSULATION TERMINAL STUD (Inner)	IGZ-15	1	All
 LOCKWASHERS			
(A) Advance Arm Mtg. Sc. 1/4	12X-199	1	IGZ-4007-1, IGZ-4008-1
(C) Breaker Plate Mtg. Sc. #8	12X-195	3	All
(C) Cap Spring Bracket Sc. #8	X-195	2	All
(D) Condenser & Clamp Sc. #6	X-194	2	All
(B) Terminal Stud #10	12X-196	2	All
 NUTS			
(A) Contact Screw, Lock	IB-23	1	All
(B) Terminal Stud Hex. #10-32	8X-173	2	All
 PLATE, Breaker	IGZ-1004	1	All
 PLATE ASSY., Seal	IGZ-1005	1	All
RIVET, Collar, Coupling or Gear	SW-213	1	All
 SCREWS			
(B) Advance Arm Mounting	8X-86	1	IGZ-4007-1, IGZ-4008-1
(D) Breaker Plate Mtg. Fill. Hd. #8-32x1 1/4	IGZ-12	3	All
(C) Cap Spring Bracket, Rd. Hd. #8-32x1/4	8X-305	2	All
(A) Clamp Spring Hex. Hd. #6-32x1/4	IGZ-20	1	All
(D) Condenser Mtg. Fill. Hd. #6-32x5/32	8X-1546	1	All
(D) Seal Plate Mtg. Fill. Hd. #8-32x1 1/16	8X-1623	6	All
 SPACER, Cam	IGS-99	1	All
 SPRINGS			
(A) Anti-Rattle	IGE-35	1	IGZ-4001, IGZ-4002, IGZ-4004, A, IGZ-4009A
(A) Anti-Rattle	IGE-36	1	IGZ-4005A, B, B-1, IGZ-4006, A, B, B-1, C, C-1, IGZ-4010
(B) Cap Clamp	IGZ-9	2	All
(C) Contact, Dist. Cap	IG-515A	1	All
 STUD, Terminal #10-32x15/16	IGL-8A	1	All
 WASHERS			
(A) Advance Arm Mtg. Sc. (Plain)	SW-634	1	IGZ-4007-1, IGZ-4008-1
(B) Insulating, Terminal Stud	IGL-9	1	All
(C) Seal Plate Screw (Plain) #8	8X-350	6	All
(C) Terminal Stud (Plain) #10	8X-183A	1	All
(D) Thrust, Advance Arm	IG-816	1	IGZ-4001, IGZ-4002, IGZ-4003-1, IGZ-4005, A, B, B-1, IGZ-4009A, IGZ-4010, A, B
(D) Thrust, Advance Arm	IG-816A	1	IGZ-4004, A, IGZ-4006, A, B, B-1, C, C-1, IGZ-4010A-1
(E) Thrust, Drive Shaft (Upper)	IGS-104	1	All

MISCELLANEOUS PARTS (Cont.)

	Name	Part No.	No. Used	Used On
	WEIGHTS			
	Governor	IG-1456	2	IGZ-4001, IGZ-4002, IGZ-4003-1, IGZ-4004, A, IGZ-4007, -1, IGZ-4008, -1, IGZ-4009A
	Governor	IG-2456	2	IGZ-4005, A, B, B-1, IGZ-4006, A, B, B-1, C, C-1, IGZ-4010, A, A-1, B
	WICK, Felt Oiler	IGT-117A	1	IGZ-4006, A, B, B-1, C, C-1

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-6	1	Plunger Screw #10-32
VC-85	1	Plunger Stop
VC-124	1	Washer
VC-125	1	Arm, Advance
VC-126	1	Spacer
VC-127	1	Support, Vacuum Control
VC-3060P	1	Vacuum Chamber Assy.
VC-14	1	Gasket
VC-46	*	Washer - .032" thick
VC-46A	*	Washer - .010" thick
VC-46B	*	Washer - .065" thick
VC-103	1	Spring, Plunger
VC-123	1	Plug, Spring Seat
		1 2 3 4 5
8X-173	3	Nut, Vac. Chamber Mtg. & Plunger Sc., Hex. #10-32
12X-196	3	Lockwasher, Terminal, Vac. Chamber & Bracket Sc., #10
8X-794	1	Nut, Lead Clamp Sc., Square #10-32
8X-871	1	Screw, Clamp, Fil. Hd., #10-32x 1 3/8
		1 2 3 4 5

* Use as required.

Unit	Application
VC-4016	White

(Issued 11-1-46)

File in
Equipment & Parts List Binder

Printed in U. S. A.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
DG-107	1	Lead Assembly
X-755	2	Terminal
VC-6	1	Screw, Plunger, #10-32
VC-112	1	Arm, Advance
VC-113	1	Support, Vacuum Control
VC-114	1	Plunger Stop
VC-3060N	1	Vacuum Chamber Assy.
VC-14	1	Gasket
VC-15	1	Plug
VC-46	*	Washer, .032" thick
VC-46A	*	Washer, .010" thick
VC-46B	*	Washer, . 065" thick
VC-122	1	Spring
		1 2 3 4 5
8X-146	1	Nut, Advance Arm Screw, Hex. 1/4-20
8X-173	3	Nut, Vacuum Chamber Mtg. & Plunger Sc. Hex. #10-32
X-196	3	Lockwasher, Terminal, Vacuum Chamber & Brkt. Sc., #10
8X-199	1	Lockwasher, Advance Arm Sc., 1/4
8X-1597	1	Screw, Advance Arm, Fil. Hd., 1/4-20x2 1/8
		1 2 3 4 5

* Use as required.

(Issued 2-13-46)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."


ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-3	1	Advance Control Arm
VC-6	1	Plunger Screw - #10-32
VC-88	1	Plunger Stop
VC-101	1	Vacuum Control Support
VC-3001	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-28	1	Spring (Copper Plate)
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
8X-135	1	1/4-20x2 Fill. Hd. Screw
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-146	1	1/4-20 Hex. Nut
8X-173	3	#10-32 Hex. Nut
X-196	3	#10 Lock Washer
X-199	1	1/4 Lock Washer
		1 2 3 4 5

(Issued 6-25-40)

* Use as required.

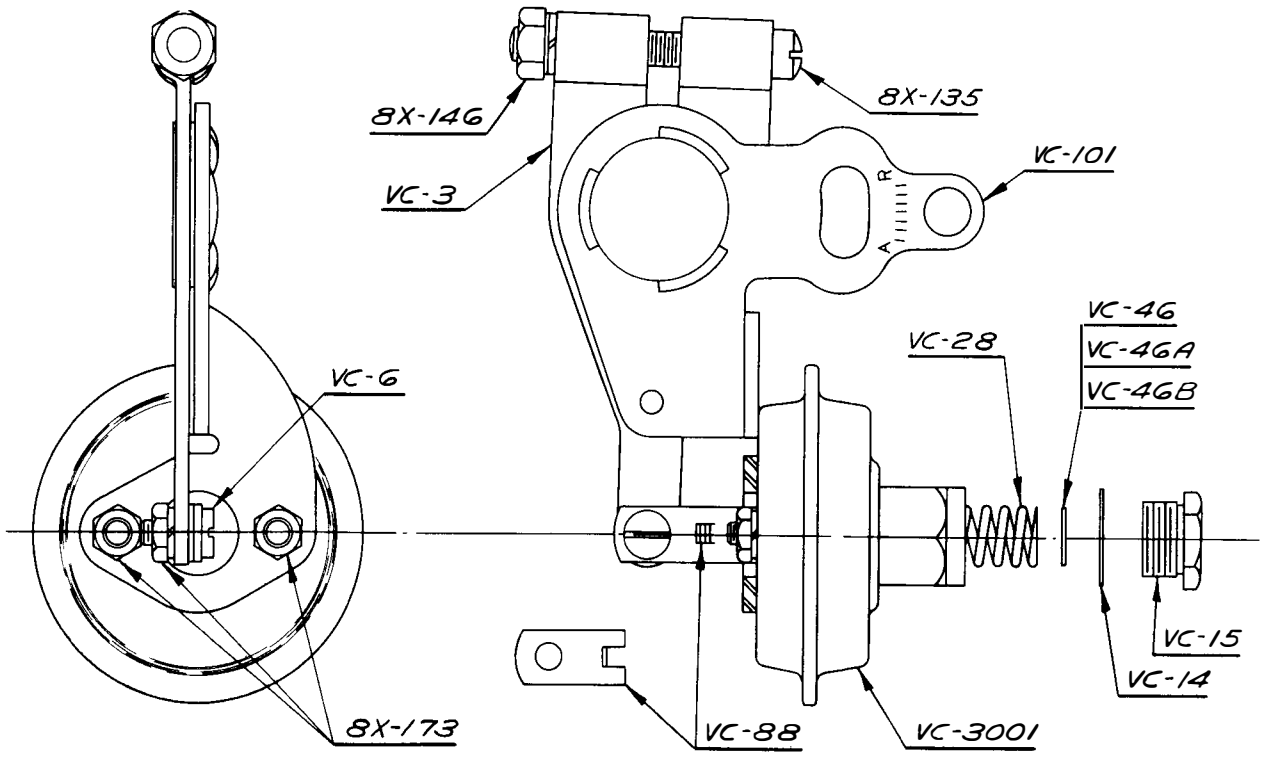

UNIT	APPLICATION
VC-4012	Studebaker

Printed in U. S. A.

File in Equipment & Parts List Binder


"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

VC-4011 IGNITION VACUUM CONTROL PARTS LIST VC-4011

Part No.	No. Used	Name of Part
		1 2 3 4 5
DG-107	1	Lead Assembly
X-755	2	Terminal
VC-2	1	Vacuum Control Support
VC-3	1	Advance Control Arm
VC-6	1	Plunger Screw - #10-32
VC-88	1	Plunger Stop
VC-3060F	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-90	1	Spring (Cadmium Plate)
		1 2 3 4 5
8X-135	1	1/4-20x2 Fill. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-173	3	#10-32 Hex. Nut
X-196	3	#10 Lock Washer
X-199	1	1/4 Lock Washer
		1 2 3 4 5

(Issued 4-4-40)

* Use as required.

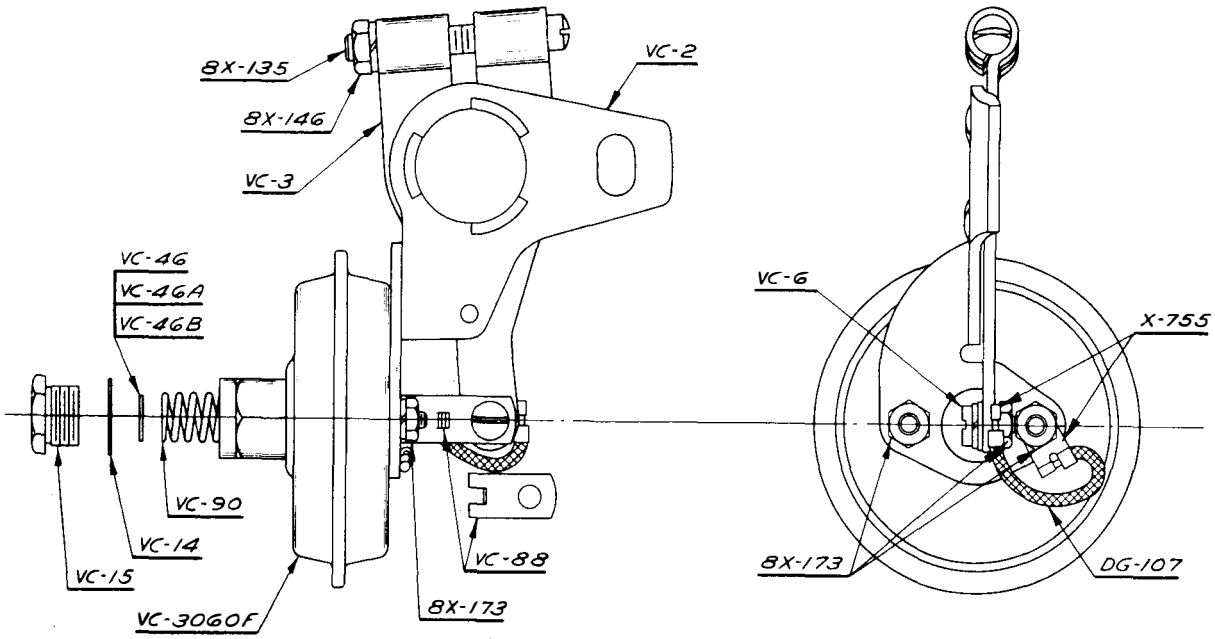

UNIT	APPLICATION
VC-4011	Studebaker

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS


VC-4010 IGNITION VACUUM CONTROL PARTS LIST VC-4010

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-6	1	Plunger Screw - #10-32
VC-68	1	Plunger Stop
VC-69	1	Advance Control Arm
VC-91	1	Ground Lead
X-755	1	Terminal
X-982	1	Terminal
VC-1079	1	Vacuum Control Support
VC-3060D	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-72	1	Spring (Sienna)
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-173	4	#10-32 Hex. Nut
X-196	3	#10 Lock Washer
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
		1 2 3 4 5

(Issued 4-4-40)

* Use as required.

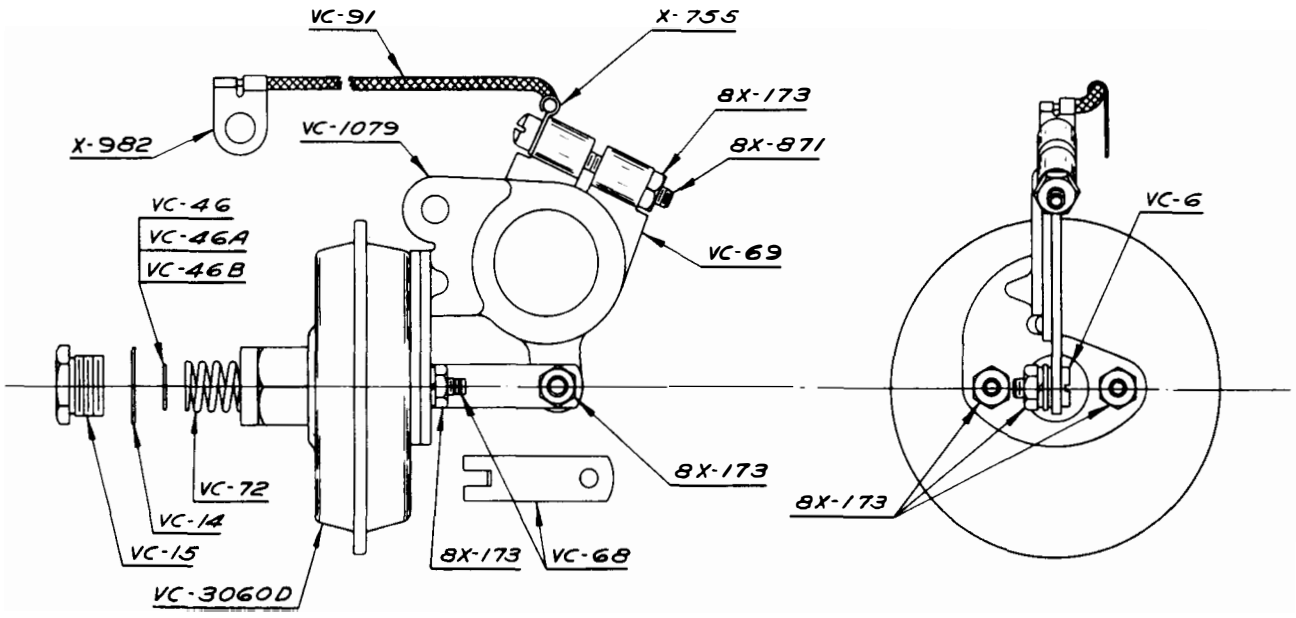

UNIT	APPLICATION
VC-4010	Willys

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS


VC-4009 IGNITION VACUUM CONTROL PARTS LIST VC-4009

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-2	1	Vacuum Control Support
VC-3	1	Advance Control Arm
VC-6	1	Plunger Screw - #10-32
VC-88	1	Plunger Stop
VC-3060C	1	Vacuum Chamber Assembly
VC-14	1	Gasket - 1/32" Thick
VC-15	1	Plug
VC-46	*	Washer - .032" Thick
VC-46A	*	Washer - .010" Thick
VC-46B	*	Washer - .065" Thick
VC-90	1	Spring (Cadmium Plate)
		1 2 3 4 5

* Use as required.

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-135	1	1/4-20x2 Fill. Hd. Screw
8X-146	1	1/4-20 Hex. Nut
8X-173	3	#10-32 Hex. Nut
X-196	3	#10 Lock Washer
X-199	1	1/4 Lock Washer
		1 2 3 4 5

(Issued 8-25-39)

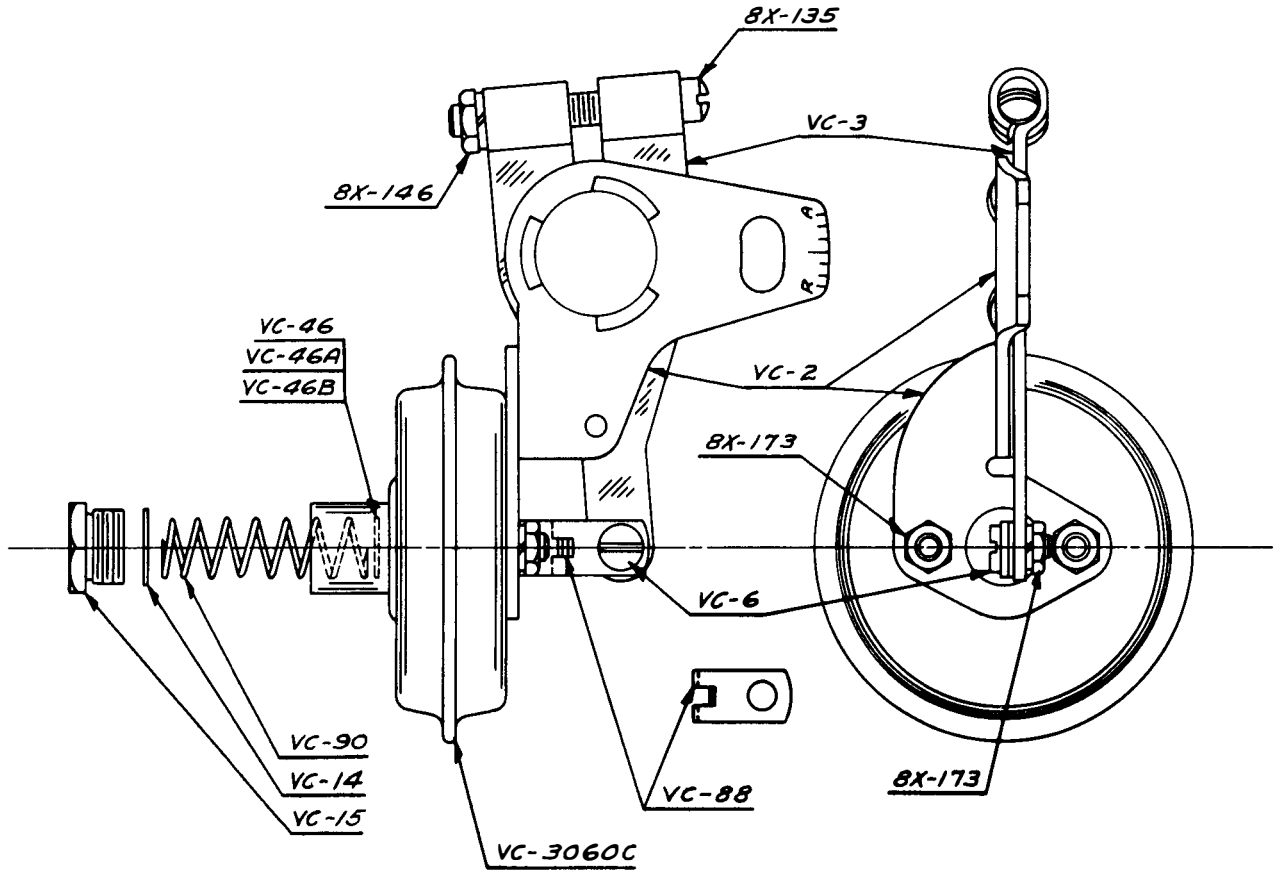

UNIT	APPLICATION
VC-4009	Studebaker

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-6	1	Plunger Screw - #10-32
VC-69	1	Advance Control Arm
VC-85	1	Plunger Stop
VC-1079	1	Vacuum Control Support
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-3060B	1	Vacuum Chamber Assy.
8X-173	3	#10-32 Hex. Nut
X-196	3	#10 Lock Washer
8X-794	1	#10-32 Square Nut
8X-871	1	#10-32x1 3/8 Fill. Hd. Screw
		1 2 3 4 5

(Issued 11-22-38)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."


VC-4004 IGNITION VACUUM CONTROL VC-4004

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-2	1	Support, Vacuum Control
VC-3	1	Arm, Advance
VC-6	1	Screw, Plunger, #10-32
VC-88	1	Plunger Stop
VC-3001	1	Chamber Assy., Vacuum Advance
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
VC-28	1	Spring, Copper Plate
VC-46	*	Washer, Tension Adjusting, .032" Thick
VC-46A	*	Washer, Tension Adjusting, .010" Thick
VC-46B	*	Washer, Tension Adjusting, .065" Thick
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-146	1	Nut, Advance Arm Screw, Hex., 1/4-20
8X-173	3	Nut, Vacuum Chamber & Plunger Screw, Hex., #10-32
X-196	3	Lock Washer, Vacuum Chamber & Plunger Screw, #10
X-199	1	Lock Washer, Advance Arm Screw, 1/4
8X-1597	1	Screw, Advance Arm, Fil. Hd., 1/4-20x2 1/8
		1 2 3 4 5

(Issued 5-17-45)

* Use as required.

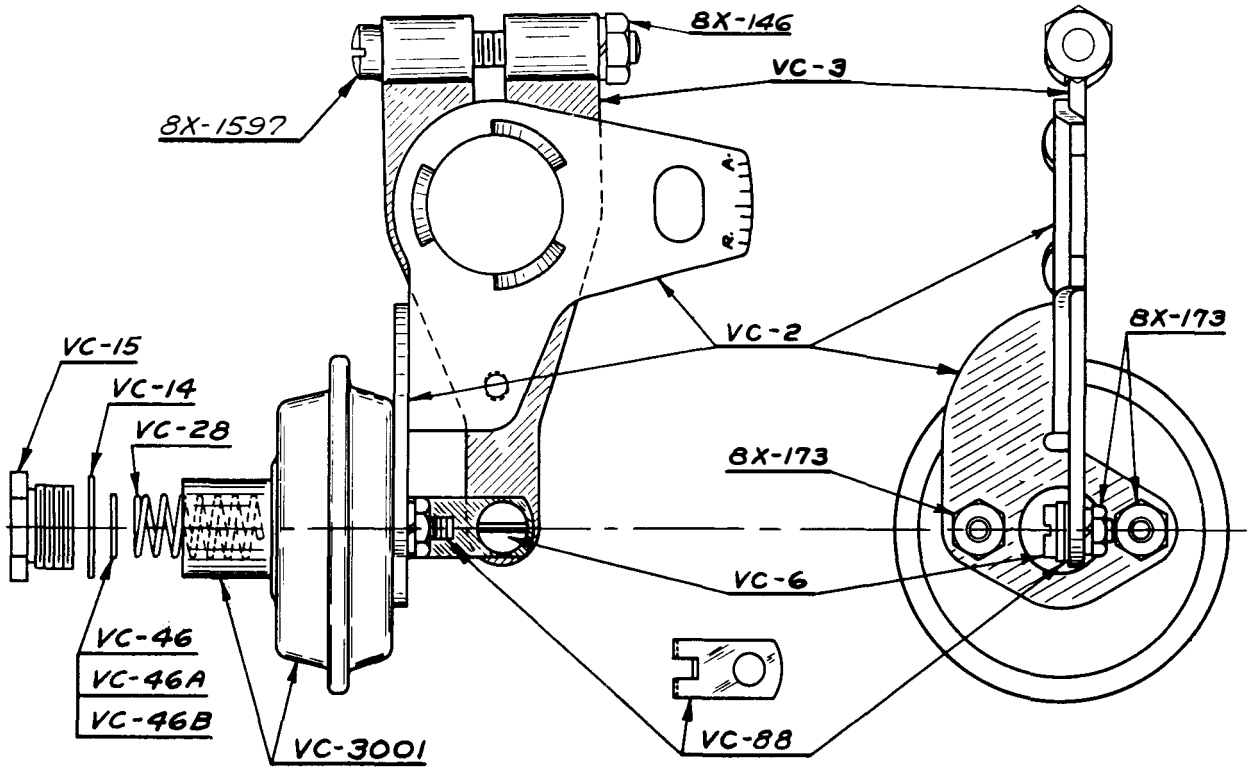

Printed in U. S. A.

File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."


VC-4004 IGNITION VACUUM CONTROL VC-4004

Part No.	No. Used	Name of Part
		1 2 3 4 5
VC-2	1	Support, Vacuum Control
VC-3	1	Arm, Advance
VC-6	1	Screw, Plunger, #10-32
VC-88	1	Plunger Stop
VC-3001	1	Chamber Assy., Vacuum Advance
VC-14	1	Gasket, Spring Seat Plug
VC-15	1	Plug, Spring Seat
VC-28	1	Spring, Copper Plate
VC-46	*	Washer, Tension Adjusting, .032" Thick
VC-46A	*	Washer, Tension Adjusting, .010" Thick
VC-46B	*	Washer, Tension Adjusting, .065" Thick
		1 2 3 4 5

Part No.	No. Used	Name of Part
		1 2 3 4 5
8X-146	1	Nut, Advance Arm Screw, Hex., 1/4-20
8X-173	3	Nut, Vacuum Chamber & Plunger Screw, Hex., #10-32
X-196	3	Lock Washer, Vacuum Chamber & Plunger Screw, #10
X-199	1	Lock Washer, Advance Arm Screw, 1/4
8X-1597	1	Screw, Advance Arm, Fil. Hd., 1/4-20x2 1/8
		1 2 3 4 5

(Issued 5-17-45)

* Use as required.

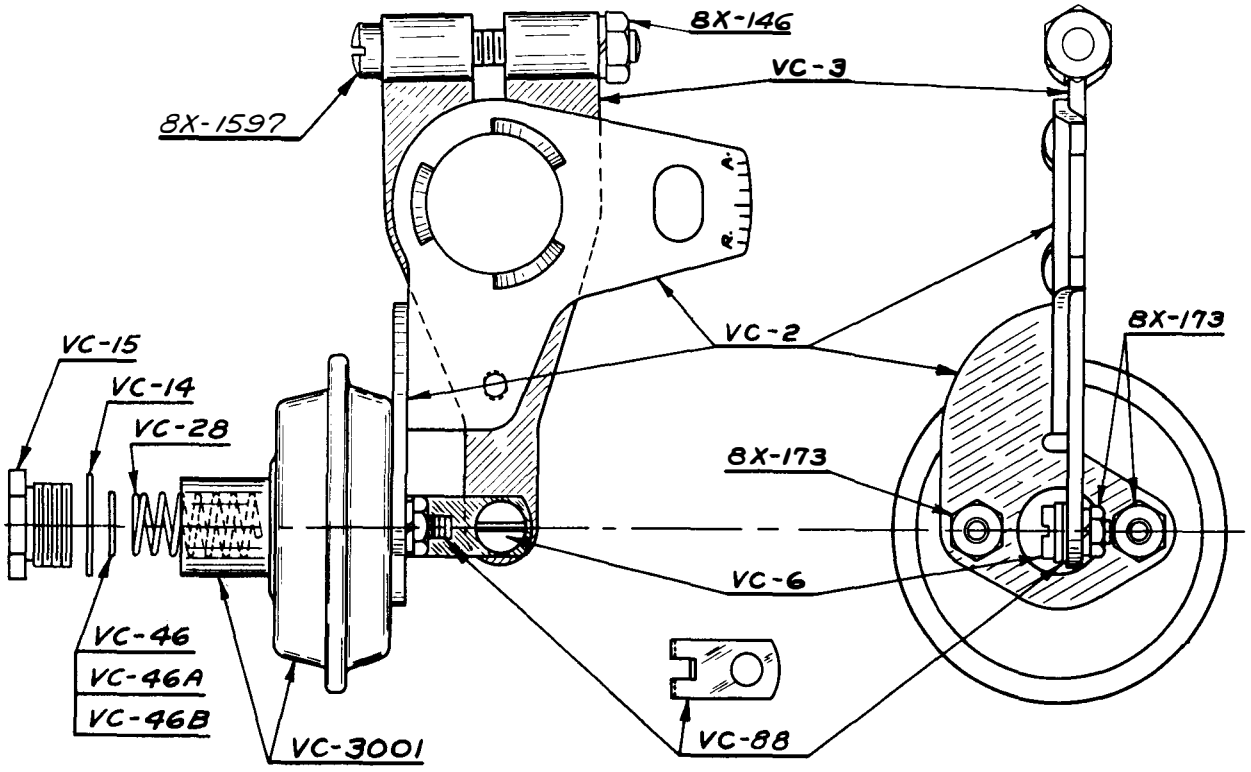

Printed in U. S. A.


File in Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

Part No.	No. Used	Name of Part
	1 2 3 4 5	
VC-2	1	Vacuum Control Support
VC-3	1	Advance Control Arm
VC-5	1	Plunger Stop
VC-6	1	Plunger Screw - #10-32
VC-3001	1	Vacuum Chamber Assy.
3X-135	1	1/4-20x2 Fill. Hd. Screw
	1 2 3 4 5	

Part No.	No. Used	Name of Part
	1 2 3 4 5	
8X-146	1	1/4-20 Hex. Nut
8X-173	3	#10-32 Hex. Nut
X-196	3	#10 Lock Washer
X-199	1	1/4 Lock Washer
	1 2 3 4 5	

(Issued 8-10-33)
(R-9-1-36)

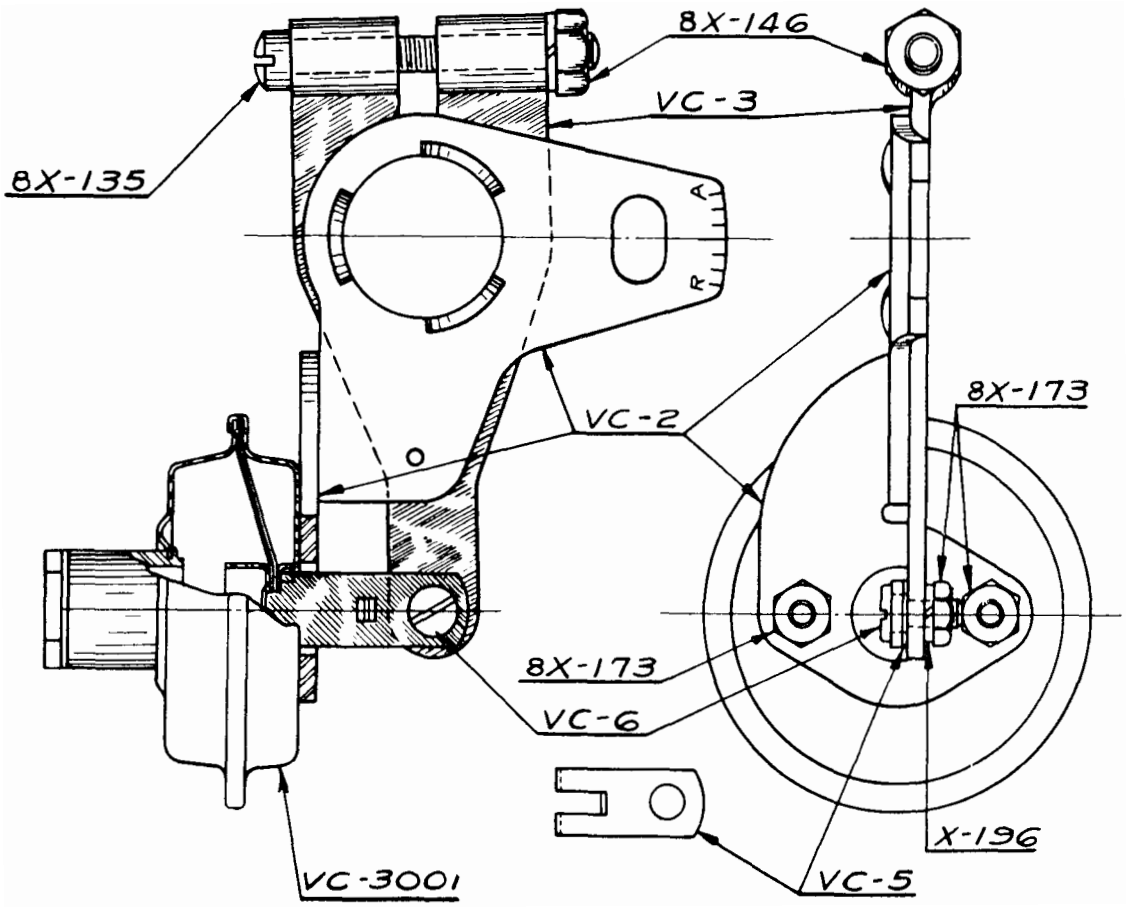

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."