

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAY-4102-1 DISTRIBUTOR PARTS LIST

IAY-4102-1
(Issued 10-10-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGS-114	1	Arm, Advance
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGS-115	1	Pointer, Advance Arm
IAT-1033	1	CAP ASSY., DIST.	IGS-1100RBC1		Cam & Stop Plate, 6 Cyl. R. H.
IAO-7	1	Contact, Plunger	IGS-1113RE	1	Shaft, Drive
IAO-20	1	Spring, Contact	IGT-70	1	Spring, Anti-Rattle
IAU-1016A	1	ROTOR	IGT-117	1	Wick, Felt
IAY-2012B	1	Base Assy., Dist.	SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
IG-579A	2	BEARING, ABS. BRONZE	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IAY-2019B	1	Plate Assy., Breaker	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IAY-1019S	1	Plate, Breaker	12X-199	1	Lockwasher, Advance Arm Mtg. Sc., 1/4
IBB-2042SS*	1	CONDENSER ASSY.	8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
IBB-44*	1	Cond. Bracket(Required)	X-1590	1	Oiler
IBP-17A	1	Lead Assy., Primary	XA-839	1	Pin, Collar
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16			
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			
IGW-3028DS	1	CONTACT SET, BREAKER			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X-350	1	Washer, Plain, Brkr. Contact Lock Sc., #8			
8X-884	1	Screw, Brkr. Contact, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-680	1	Snap Ring, Cam Retaining			
IGB-199	1	Collar, Shaft, Dist.			
IGB-381AS	1	Spring Set, Gov. Weight			
IGB-1007	2	Spring & Hinge, Cap Clamp			
IGC-2168R	2	Weight, Governor			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGS-99	1	Spacer, Cam			

UNIT	APPLICATION
IAY-4102-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAY-4104-1 DISTRIBUTOR PARTS LIST

IAY-4104-1
(Issued 10-11-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGS-114	1	Arm, Advance
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGS-115	1	Pointer, Advance Arm
IAT-1033	1	CAP ASSY., DIST.	IGS-1100RX	1	Cam & Stop Plate, 6 Cyl. R. H.
IAO-7	1	Contact, Plunger	IGS-1112RE	1	Shaft, Drive
IAO-20	1	Spring, Contact	IGT-70	1	Spring, Anti-Rattle
IAU-1016A	1	ROTOR	IGT-117	1	Wick, Felt
IAY-2012B	1	Base Assy., Dist.	SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
IG-579A	2	BEARING, ABS. BRONZE	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IAY-2019B	1	Plate Assy., Breaker	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IAY-1019S	1	Plate, Breaker	12X-199	1	Lockwasher, Advance Arm Mtg. Sc., 1/4
IBB-2042SS*	1	CONDENSER ASSY.	8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
IBB-44*	1	Cond. Bracket (Required)	X-1590	1	Oiler
IBP-17A	1	Lead Assy., Primary	XA-839	1	Pin, Collar
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16			
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			
IGW-3028DS	1	CONTACT SET, BREAKER			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X-350	1	Washer, Plain, Brkr. Contact Lock Sc., #8			
8X-884	1	Screw, Brkr. Contact, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-680	1	Snap Ring, Cam Retaining			
IGB-199	1	Collar, Shaft, Dist.			
IGB-292SS	1	Spring Set, Gov. Weight			
IGB-1007	2	Spring & Hinge, Cap Clamp			
IGC-2168R	2	Weight, Governor			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGS-99	1	Spacer, Cam			

UNIT	APPLICATION
IAY-4104-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4001, A, B, C, D, E, F, G DISTRIBUTOR PARTS LIST

IAZ-4001, A, B, C,
D, E, F, G
(Issued 4-26-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-350	1	Washer, Plain, Contact Lead & Brkt. Screw, #8
IAR-1003	1	CAP ASSY., DISTRIBUTOR	8X-884	2	Screw, Contact Lead & Brkt. Fill. Hd. #8-32x3/16
IAO-7	1	Contact, Plunger	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-20	1	Spring, Contact	**	1	VACUUM CHAMBER
IAZ-17	1	Washer, Felt	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-1002R	1	Shaft, Drive	**	1	SPRING SET, GOV. WEIGHT
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IG-680	1	Snap Ring, Cam Retaining
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGB-199	1	Collar, Shaft, Distributor
**	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC-2168R	2	Weight Governor
IAZ-2001	1	Base Assy., Distributor	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-7	1	Bushing, Insulation	IGP-1016B	1	ROTOR
IAZ-13	1	Insulation, Term. Stud	IGS-17	1	Ring, Lock
IAZ-22	1	Washer, Ins., Term. Stud	IGS-99	1	Spacer, Cam
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER	IGT-70	1	Spring, Anti-Rattle
IAZ-31	1	Wick, Felt	SW-213	1	Rivet, Collar
IAZ-32	1	Retainer, Felt Wick	**	1	Gasket, Vacuum Plug, 1/32" Thick
IAZ-34	1	Clip, Terminal	**	1	Plug, Vacuum Chamber
IG-579A	1	BEARING, ABS. BRONZE	VC-46	*	Washer, .032" Thick
8X-173	2	Nut, Term. Stud, Hex. #10-32	VC-46A	*	Washer, .010" Thick
8X-183A	1	Washer, Plain, Term. Stud, #10	VC-46B	*	Washer, .065" Thick
12X-196	2	Lockwasher, Term. Stud, #10	**	1	Spring
X-1590	1	Oiler	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
X-3218	1	Stud, Terminal, Primary	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
IAZ-2004R	1	Plate Assy., Breaker	12X-195	2	Lockwasher, Bkr. Plate Screw, #8
IAZ-10	1	Lead Assy., Primary	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IAZ-24	1	Lead Assy., Breaker Arm	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
IAZ-1004R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			
IGP-3028ZS	1	CONTACT SET, BREAKER			

	Cam & Stop Plate	Vacuum Chamber	Spring Set, Gov. Weight	Spring Vac. Chamber	Gasket	Plug
IAZ-4001	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-55	VC-14	VC-15
IAZ-4001A	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-115	VC-14	VC-15
IAZ-4001B	IAZ-1021RC	IAZ-2023RA	IGB-208S	VC-115	IAT-30	IAT-29
IAZ-4001C	IAZ-1021RE	IAZ-2023RA	IGB-336CS	VC-115	IAT-30	IAT-29
IAZ-4001D	IAZ-1021RM	IAZ-2023RA	IGB-363AS	VC-115	IAT-30	IAT-29
IAZ-4001E	IAZ-1021RB	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001F	IAZ-1021RE	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001G	IAZ-1021RK	IAZ-2023RB	IGB-346AS	VC-115	IAT-30	IAT-29

* Use as required.
** See table following parts list for part number applying to assembly wanted.

UNT	APPLICATION
IAZ-4001, A, B, C, D, E, F, G	Chrysler (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4001, A, B, C, D, E, F, G DISTRIBUTOR PARTS LIST

IAZ-4001, A, B, C,
D, E, F, G

(Issued 4-26-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-350	1	Washer, Plain, Contact Lead & Brkt. Screw, #8
IAI-1003	1	CAP ASSY., DISTRIBUTOR	8X-884	2	Screw, Contact Lead & Brkt. Fill. Hd. #8-32x3/16
IAO-7	1	Contact, Plunger	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-20	1	Spring, Contact	**	1	VACUUM CHAMBER
IAZ-17	1	Washer, Felt	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-1002R	1	Shaft, Drive	**	1	SPRING SET, GOV. WEIGHT
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IG-680	1	Snap Ring, Cam Retaining
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGB-199	1	Collar, Shaft, Distributor
**	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC-2168R	2	Weight Governor
IAZ-2001	1	Base Assy., Distributor	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-7	1	Bushing, Insulation	IGP-1016B	1	ROTOR
IAZ-13	1	Insulation, Term. Stud	IGS-17	1	Ring, Lock
IAZ-22	1	Washer, Ins., Term. Stud	IGS-99	1	Spacer, Cam
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER	IGT-70	1	Spring, Anti-Rattle
IAZ-31	1	Wick, Felt	SW-213	1	Rivet, Collar
IAZ-32	1	Retainer, Felt Wick	**	1	Gasket, Vacuum Plug, 1/32" Thick
IAZ-34	1	Clip, Terminal	**	1	Plug, Vacuum Chamber
IG-579A	1	BEARING, ABS. BRONZE	VC-46	*	Washer, .032" Thick
8X-173	2	Nut, Term. Stud, Hex. #10-32	VC-46A	*	Washer, .010" Thick
8X-183A	1	Washer, Plain, Term. Stud, #10	VC-46B	*	Washer, .065" Thick
12X-196	2	Lockwasher, Term. Stud, #10	**	1	Spring
X-1590	1	Oiler	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
X-3218	1	Stud, Terminal, Primary	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
IAZ-2004R	1	Plate Assy., Breaker	12X-195	2	Lockwasher, Bkr. Plate Screw, #8
IAZ-10	1	Lead Assy., Primary	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IAZ-24	1	Lead Assy., Breaker Arm	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
IAZ-1004R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			
IGP-3028ZS	1	CONTACT SET, BREAKER			

* Use as required.
** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Vacuum Chamber	Spring Set, Gov. Weight	Spring Vac. Chamber	Gasket	Plug
IAZ-4001	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-55	VC-14	VC-15
IAZ-4001A	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-115	VC-14	VC-15
IAZ-4001B	IAZ-1021RC	IAZ-2023RA	IGB-208S	VC-115	IAT-30	IAT-29
IAZ-4001C	IAZ-1021RE	IAZ-2023RA	IGB-336CS	VC-115	IAT-30	IAT-29
IAZ-4001D	IAZ-1021RM	IAZ-2023RA	IGB-363AS	VC-115	IAT-30	IAT-29
IAZ-4001E	IAZ-1021RB	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001F	IAZ-1021RE	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001G	IAZ-1021RK	IAZ-2023RB	IGB-346AS	VC-115	IAT-30	IAT-29

UNIT	APPLICATION
IAZ-4001, A, B, C, D, E, F, G	Chrysler (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4001, A, B, C, D, E, F, G DISTRIBUTOR PARTS LIST

IAZ-4001, A, B, C,
D, E, F, G
(Issued 4-26-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-350	1	Washer, Plain, Contact Lead & Brkt. Screw, #8
IAZ-1003	1	CAP ASSY., DISTRIBUTOR	8X-884	2	Screw, Contact Lead & Brkt. Fill. Hd. #8-32x3/16
IAO-7	1	Contact, Plunger	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-20	1	Spring, Contact	**	1	VACUUM CHAMBER
IAZ-17	1	Washer, Felt	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-1002R	1	Shaft, Drive	**	1	SPRING SET, GOV. WEIGHT
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IG-680	1	Snap Ring, Cam Retaining
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGB-199	1	Collar, Shaft, Distributor
**	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC-2168R	2	Weight Governor
IAZ-2001	1	Base Assy., Distributor	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-7	1	Bushing, Insulation	IGP-1016B	1	ROTOR
IAZ-13	1	Insulation, Term. Stud	IGS-17	1	Ring, Lock
IAZ-22	1	Washer, Ins., Term. Stud	IGS-99	1	Spacer, Cam
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER	IGT-70	1	Spring, Anti-Rattle
IAZ-31	1	Wick, Felt	SW-213	1	Rivet, Collar
IAZ-32	1	Retainer, Felt Wick	**	1	Gasket, Vacuum Plug, 1/32" Thick
IAZ-34	1	Clip, Terminal	**	1	Plug, Vacuum Chamber
IG-579A	1	BEARING, ABS. BRONZE	VC-46	*	Washer, .032" Thick
8X-173	2	Nut, Term. Stud, Hex. #10-32	VC-46A	*	Washer, .010" Thick
8X-183A	1	Washer, Plain, Term. Stud, #10	VC-46B	*	Washer, .065" Thick
12X-196	2	Lockwasher, Term. Stud, #10	**	1	Spring
X-1590	1	Oiler	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
X-3218	1	Stud, Terminal, Primary	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
IAZ-2004R	1	Plate Assy., Breaker	12X-195	2	Lockwasher, Bkr. Plate Screw, #8
IAZ-10	1	Lead Assy., Primary	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IAZ-24	1	Lead Assy., Breaker Arm	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
IAZ-1004R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			
IGP-3028ZS	1	CONTACT SET, BREAKER			

* Use as required.
** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Vacuum Chamber	Spring Set, Gov. Weight	Spring Vac. Chamber	Gasket	Plug
IAZ-4001	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-55	VC-14	VC-15
IAZ-4001A	IAZ-1021R	IAZ-2023RA	IG-636QS	VC-115	VC-14	VC-15
IAZ-4001B	IAZ-1021RC	IAZ-2023RA	IGB-208S	VC-115	IAT-30	IAT-29
IAZ-4001C	IAZ-1021RE	IAZ-2023RA	IGB-336CS	VC-115	IAT-30	IAT-29
IAZ-4001D	IAZ-1021RM	IAZ-2023RA	IGB-363AS	VC-115	IAT-30	IAT-29
IAZ-4001E	IAZ-1021RB	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001F	IAZ-1021RE	IAZ-2023RA	IGB-348AS	VC-115	IAT-30	IAT-29
IAZ-4001G	IAZ-1021RK	IAZ-2023RB	IGB-346AS	VC-115	IAT-30	IAT-29

UNIT	APPLICATION
IAZ-4001, A, B, C, D, E, F, G	Chrysler (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4002, A, B, C, D DISTRIBUTOR PARTS LIST

IAZ-4002, A, B, C, D
(Issued 10-19-54)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGP-3028ZS	1	CONTACT SET, BREAKER
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper	12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper	8X-350	1	Washer, Plain, Contact Lead & Brkt. Sc., #8
IAR-1003	1	CAP ASSY., DISTRIBUTOR	8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16
IAO-7	1	Contact, Plunger	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-20	1	Spring, Contact	**	1	VACUUM CHAMBER
IAT-29	1	Plug, Vacuum Chamber	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAT-30	1	Gasket, Vacuum Plug, 1/32" Thick	**	1	Spring Set, Gov. Weight
IAZ-17	1	Washer, Felt	IG-680	1	Snap Ring, Cam Retaining
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IGB-199	1	Collar, Shaft, Distributor
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGC-2168R	2	Weight, Governor
**	1	Cam & Stop Plate, 8 Cyl. R.H. Shaft, Drive	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-1025R	1	Shaft, Drive	IGP-1016B	1	ROTOR
IAZ-2001	1	Base Assy., Distributor	IGS-17	1	Ring, Lock
IAZ-7	1	Bushing, Insulation	IGS-99	1	Spacer, Cam
IAZ-13	1	Insulation, Term. Stud	IGT-70	1	Spring, Anti-Rattle
IAZ-22	1	Washer, Ins., Term. Stud	SW-213	1	Rivet, Collar
IAZ-30	1	Bearing, Abs. Bronze, Upper	VC-46	*	Washer - .032" Thick
IAZ-31	1	Wick, Felt	VC-46A	*	Washer - .010" Thick
IAZ-32	1	Retainer, Felt Wick	VC-46B	*	Washer - .065" Thick
IAZ-34	1	Clip, Terminal	VC-115	1	Spring
IG-579A	1	Bearing, Abs. Bronze	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-173	2	Nut, Term. Stud, Hex. #10-32	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
8X-183A	1	Washer, Term. Stud, Plain #10	12X-195	2	Lockwasher, Breaker Plate Screw, #8
12X-196	2	Lockwasher, Term. Stud, #10	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1590	1	Oiler	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-3218	1	Stud, Terminal, Primary			
IAZ-2004R	1	Plate Assy., Breaker			
IAZ-10	1	Lead Assy., Primary			
IAZ-24	1	Lead Assy., Breaker Arm			
IAZ-1004R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			

* Used as required.
** See table following parts lists for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Vacuum Chamber
IAZ-4002	IAZ-1021RB	IG-636NS	IAZ-2023RA
IAZ-4002A	IAZ-1021RC	IG-796S	IAZ-2023RA
IAZ-4002B	IAZ-1021RC	IGB-277BS	IAZ-2023RA
IAZ-4002C	IAZ-1021RK	IGB-346AS	IAZ-2023RB
IAZ-4002D	IAZ-1021RE	IG-636MS	IAZ-2023RA

UNIT	APPLICATION
IAZ-4002, A, B, C, D	DeSoto (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4003, A, B, C, D, E, F, G, H DISTRIBUTOR PARTS LIST

IAZ-4003, A, B,
C, D, E, F, G, H
(Issued 10-14-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGP-3028ZS	1	CONTACT SET, BREAKER
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	12X-194	1	Lockwasher, Condenser Mtg. Screw, #6
IAZ-1003	1	CAP ASSEMBLY, DISTRIBUTOR	8X-350	1	Washer, Plain, Contact Brkt. Screw, #8
IAO-7	1	Contact, Plunger	8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16
IAO-20	1	Spring, Contact	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-29	1	Plug, Vacuum Chamber	**	1	VACUUM CHAMBER
IAT-30	1	Gasket, Vacuum Plug, 1/32" Thick	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-17	1	Washer, Felt	**	1	Spring, Set, Gov. Weight
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IG-680	1	Snap Ring, Cam Retaining
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGB-199	1	Collar, Shaft, Distributor
**	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC-2168R	2	Weight, Governor
IAZ-1026R	1	Shaft, Drive	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-2001	1	Base Assembly, Distributor	IGP-1016B	1	ROTOR
IAZ-7	1	Bushing, Insulation	IGS-17	1	Ring, Lock
IAZ-13	1	Insulation, Term. Stud	IGS-99	1	Spacer, Cam
IAZ-22	1	Washer, Ins., Term. Stud	IGT-70	1	Spring, Anti-Rattle
IAZ-30	1	Bearing, Absorbent Bronze, Upper	VC-46	*	Washer, .032" Thick
IAZ-31	1	Wick, Felt	VC-46A	*	Washer, .010" Thick
IAZ-32	1	Retainer, Felt Wick	VC-46B	*	Washer, .065" Thick
IAZ-34	1	Clip, Terminal	VC-115	1	Spring
IG-579A	1	Bearing, Abs. Bronze	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-173	2	Nut, Term. Stud, Hex. #10-32	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
8X-183A	1	Washer, Term. Stud, Plain #10	12X-195	2	Lockwasher, Breaker Plate Screw, #8
12X-196	2	Lockwasher, Term. Stud, #10	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
X-1590	1	Oiler	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-3218	1	Stud, Terminal, Primary	XA-839	1	Pin, Collar
IAZ-2004R	1	Plate Assembly, Breaker			
IAZ-10	1	Lead Assembly, Primary			
IAZ-24	1	Lead Assembly, Breaker Arm			
IAZ-1004R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			

* Use as required.

** See table following parts list for part number applying to assembly wanted.

(Continued on Reverse Side)

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IAZ-4003, A, B, C, D, E, F, G, H DISTRIBUTOR PARTS LIST (Continued)

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight	Vacuum Chamber
IAZ-4003	IAZ-1021RA	IG-636XS	IAZ-2023RA
IAZ-4003A	IAZ-1021RC	IG-913BS	IAZ-2023RA
IAZ-4003B	IAZ-1021RA	IG-636HS	IAZ-2023RA
IAZ-4003C	IAZ-1021RL	IGB-364AS	IAZ-2023RA
IAZ-4003D	IAZ-1021RE	IG-636KS	IAZ-2023RA
IAZ-4003E	IAZ-1021RL	IGB-364AS	IAZ-2023RB
IAZ-4003F	IAZ-1021RE	IG-636KS	IAZ-2023RB
IAZ-4003G	IAZ-1021RP	IG-636ES	IAZ-2023RC
IAZ-4003H	IAZ-1021RP	IG-636ES	IAZ-2023RA

UNIT	APPLICATION
IAZ-4003, D, F	Dodge (8)
IAZ-4003A, B	Dodge (8), Dodge Truck
IAZ-4003C, E, G, H	Dodge (8), Plymouth (8)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4101A-1, B-1 DISTRIBUTOR PARTS LIST

IBB-4101A-1, B-1
(Issued 11-8-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver	IG-680	1	Snap Ring, Cam Retaining
GE-48	1	Gear, Tachometer, Follower	**	1	SPRING SET, GOV. WEIGHT
IAK-40	1	Cap, Tachometer Shaft	IGC-2168R	2	Weight, Governor
IAO-17	1	Cover, Terminal Slot	IGH-28	1	Wick, Felt, Cam Sleeve
IAR-1003	1	CAP ASSY., DIST.	IGP-1016B	1	ROTOR
IAO-7	1	Contact, Plunger	IGS-38	1	Cover, Housing, Tach. Shaft
IAO-20	1	Spring, Contact	IGS-39	1	Washer, Thrust, Tach. Drive Shaft
**	1	Cam & Stop Plate, 8 Cyl. R. H.	IGS-99	1	Spacer, Cam
IBB-2013	1	Base Assy., Dist.	IGS-114	1	Arm, Advance
IAD-14	1	Bracket, Cap Spring	IGS-148	1	Shaft, Drive, Tachometer
IAO-9	2	Spring, Clamp, Cap	IGS-1145RA	1	Shaft, Drive
IAO-14	1	Bracket, Cap Spring & Locating	IGT-70	1	Spring, Anti-Rattle
IAR-9	1	Bracket, Breaker Plate Mtg.	SW-213	2	Rivet, Gear & Coupling
IBB-9	1	Bracket, Breaker Plate Mtg.	SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
IG-579A	2	BEARING, ABS. BRONZE	8X-86	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-382	1	Cup, Grease, 1/8 Pipe	12X-199	1	Lockwasher, Advance Arm, 1/4
X-525	4	Rivet, Tubular	X-294	1	Bearing, Ball, S. A. E. #202
IBB-2040	1	Plate Assy., Breaker	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IA-131	2	Clip, Spring, Contact Arm	X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
IAW-24	1	Lead Assembly			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGP-3028YS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6			
8X-350	2	Washer, Plain, Contact Lock Screw, #8			
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
IG-90	2	Washer, Thrust, Drive Shaft			
IG-644A	1	Coupling, Drive, Dist.			

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBB-4101A-1	IAZ-1021RG	IGB-362AS
IBB-4101B-1	IAZ-1021RH	IGB-336CS

UNIT	APPLICATION
IBB-4101A-1	Dodge Truck
IBB-4101B-1	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4101-1M DISTRIBUTOR PARTS LIST

IBB-4101-1M
(Issued 11-20-52)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-47	1	GEAR, TACHOMETER, DRIVER	IGS-39	1	Washer, Thrust, Tach. Drive Shaft
GE-48	1	GEAR, TACHOMETER, FOLLOWER	IGS-99	1	Spacer, Cam
IAK-40	1	Cap, Tachometer Shaft	IGS-114A	1	Arm, Advance
IAO-17M	1	Cover, Terminal Slot	IGS-148	1	Shaft, Drive Tachometer
IAR-1003	1	CAP ASSY., DIST.	IGS-1145R	1	Shaft, Drive
IAO-7	1	Contact, Plunger	IGT-70	1	Spring, Anti-Rattle
IAO-20	1	Spring, Contact	IGT-1021RD-1	1	Cam & Stop Plate, 8 Cyl. R. H.
IBB-2013AM	1	Base Assy., Dist.	SW-213	2	Rivet, Gear & Coupling
IAD-1014M	1	Spring & Hinge, Clamp, Cap	SW-634B	1	Washer, Plain, Advance Arm Mtg. Sc.
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating	12X-199	1	Lockwasher, Advance Arm, 1/4
IBB-9M	2	Bracket, Breaker Plate Mtg.	X-294	1	Bearing, Ball, S. A. E. #202
IG-579A	2	Bearing, Abs. Bronze	X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-382A	1	Cup, Grease, 1/8 Pipe	X-2929	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-2872	4	Rivet, Tubular			
IBB-2040M	1	Plate Assy., Breaker			
IAU-3076LA	1	CONDENSER			
IAW-24	1	Lead Assy.			
IBB-1040M	1	Plate, Breaker			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGP-60	2	Clamp, Spring, Contact Arm			
IGP-3028XS	1	CONTACT SET, BREAKER			
19X-59	2	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16			
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6			
19X-350	2	Washer, Plain, Contact Lock Screw, #8			
19X-353	2	Washer, Plain, Clamp Screw, #6			
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
IG-90	2	Washer, Thrust, Drive Shaft			
IG-644A	1	COUPLING; DRIVE, DIST.			
IG-680	1	Snap Ring, Cam Retaining			
IGB-208S	1	Spring Set, Gov. Weight			
IGC-2168R	2	Weight, Governor			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGP-1016B	1	ROTOR			
IGS-38	1	Cover, Housing, Tach. Shaft			

UNIT	APPLICATION
IBB-4101-1M	Chrysler Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4102-1, A-1 DISTRIBUTOR PARTS LIST

IBB-4102-1, A-1
(Issued 11-9-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IG-644A	1	Coupling, Drive, Dist.
IAO-17	1	Cover, Terminal Slot	IG-680	1	Snap Ring, Cam Retaining
IAR-1003	1	CAP ASSY., DISTRIBUTOR	**	1	SPRING SET, GOV. WEIGHT
IAO-7	1	Contact, Plunger	IGC-2168R	2	Weight, Governor
IAO-20	1	Spring, Contact	IGH-28	1	Wick, Felt, Cam Sleeve
**	1	Cam & Stop Plate, 8 Cyl. R. H. Shaft, Drive	IGP-1016B	1	ROTOR
IBB-1002R	1	Base Assembly, Distributor	IGS-99	1	Spacer, Cam
IBB-2014	1	Bracket, Cap Spring	IGS-114	1	Arm, Advance
IAD-14	1	Spring, Clamp, Cap	IGT-70	1	Spring, Anti-Rattle
IAO-9	2	Bracket, Cap Spring & Locating	SW-213	1	Rivet, Coupling
IAO-14	1	Bracket, Breaker Plate Mtg.	SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
IAR-9	1	Bracket, Breaker Plate Mtg.	8X-86	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
IBB-9	1	BEARING, ABS. BRONZE	12X-199	1	Lockwasher, Advance Arm Mtg. Sc., 1/4
IG-579A	2	Wick, Felt	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IGT-117	1	Rivet, Tubular	X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
X-525	4	Oiler			
X-1590	1	Plate Assy., Breaker			
IBB-2040	1	Clip, Breaker Arm Spring			
IA-131	2	Lead Assembly			
IAW-24	1	Plate, Breaker			
IBB-1040	1	CONDENSER			
IBB-2015RA	1	Screw, Spring Clamp, Hex. Hd. #6-32x5/16			
IGC-175	2	Washer, Plain, Clamp Screw, #6			
IGE-15	2	CONTACT SET, BREAKER			
IGP-3028YS	1	Lockwasher, Condenser & Clamp Screw, #6			
12X-194	3	Washer, Plain, Contact Lock Screw, #8			
8X-350	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16			
8X-884	2	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
8X-1546	1				

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set, Gov. Weight
IBB-4102-1	IAZ-1021RG	IG-913CS
IBB-4102A-1	IAZ-1021RH	IGB-336CS

UNIT	APPLICATION
IBB-4102-1	Chrysler (Industrial) Dodge Truck
IBB-4102A-1	Chrysler (Industrial)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4102-1M, A-1M DISTRIBUTOR PARTS LIST

IBB-4102-1M, A-1M
(Issued 6-29-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG-644A	1	COUPLING, DRIVE, DIST.
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IG-680	1	Snap Ring, Cam Retaining
IAO-17M	1	Cover, Terminal Slot	**	1	Spring Set, Gov. Weight
IAR-1003	1	CAP ASSEMBLY, DIST.	IGC-2168R	2	Weight, Governor
IAO-7	1	Contact, Plunger	IGH-28	1	Wick, Felt, Cam Sleeve
IAO-20	1	Spring, Contact	IGP-1016B	1	ROTOR
IBB-29	1	Advance Arm	IGS-99	1	Spacer, Cam
IBB-1002RM	1	Shaft, Drive	IGT-70	1	Spring, Anti-Rattle
IBB-2014M	1	Base Assembly, Distributor	**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAD-1014M	1	Spring & Hinge, Clamp, Cap	SW-213	1	Rivet, Coupling
IAO-1014M	1	Spring & Hinge, Clamp, Cap Locating	SW-634B	1	Washer, Plain, Advance Arm Mounting Screw
IBB-9M	2	Bracket, Breaker Plate Mounting	12X-199	1	Lockwasher, Advance Arm, 1/4
IG-579A	2	BEARING, ABSORBENT BRONZE	X-1270B	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
IGT-117	1	Wick, Felt	X-2862	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
X-1590	1	Oiler	X-2896	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-2872	4	Rivet, Tubular	** See table following parts list for part number applying to assembly wanted.		
IBB-2040M	1	Plate Assembly, Breaker	Assembly No.	Gov. Weight	Cam & Stop Plate
IAW-24	1	Lead Assembly	IBB-4102-1M	IGB-208S	IAZ-1021RF
IBB-1040M	1	Plate, Breaker	IBB-4102A-1M	IGC-200S	IAZ-1021RT
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15A	2	Washer, Plain, Clamp Screw, #6			
IGP-60	2	Clip, Breaker Arm Spring			
IGP-3028XS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6			
19X-350	2	Washer, Plain, Contact Lock Screw, #8			
19X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16			
19X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4103, A, B, C DISTRIBUTOR PARTS LIST

IBB-4103, A, B, C
(Issued 2-25-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IG-90	1	Washer, Thrust, Drive Shaft Lower
IAO-17	1	Cover, Terminal Slot	**	1	Spring Set, Gov. Weight
IAR-1003	1	CAP ASSY., DISTRIBUTOR	IG-680	1	Snap Ring, Cam Retaining
IAO-7	1	Contact, Plunger	IGB-199	1	Collar, Shaft, Distributor
IAO-20	1	Spring, Contact	IGC-2168R	2	Weight, Governor
**	1	Cam & Stop Plate, 8 Cyl. R.H.	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-1026RA	1	SHAFT, DRIVE	IGP-1016B	1	ROTOR
IBB-2012	1	Base Assy., Distributor	IGS-99	1	Spacer, Cam
IAD-14	1	Bracket, Cap Spring	IGT-70	1	Spring, Anti-Rattle
IAO-9	2	Spring, Clamp, Cap	SW-213	1	Rivet, Collar
IAO-14	1	Bracket, Cap Spring & Locating	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IAZ-30	1	Bearing, Abs. Bronze, Upper	X-1270	2	Washer, Breaker Plate Mtg. Screw, Skpf. #10
IAZ-31	1	Wick, Felt			
IAZ-32	1	Retainer, Felt Wick			
IBB-9	2	Bracket, Breaker Plate Mtg.			
IG-579A	2	Bearing, Abs. Bronze			
X-525	4	Rivet, Tubular			
X-1590	1	Oiler			
IBB-2040	1	Plate Assy., Breaker			
IA-131	2	Clip, Contact Arm Spring			
IAW-24	1	Lead Assembly			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGP-3028YS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6			
8X-350	2	Washer, Plain, Contact Lock Screw, #8			
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16			

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set
IBB-4103	IAZ-1021RD	IG-636XS
IBB-4103A	IAZ-1021RF	IG-913BS
IBB-4103B	IAZ-1021RN	IG-636ES
IBB-4103C	IAZ-1021RH	IG-636KS

UNIT	APPLICATION
IBB-4103	Dodge Tr., Fargo Tr.
IBB-4103A	Dodge Tr., Fargo Tr.
IBB-4103B, C	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4104 DISTRIBUTOR PARTS LIST

IBB-4104
(Issued 5-19-54)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver	8X-1546	1	Screw, Condenser Mtg. , Fill. Hd. #6-32x5/32
GE-48	1	Gear, Tachometer, Follower	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAK-40	1	Cap, Tachometer Shaft	IG-680	1	Snap Ring, Cam Retaining
IAO-17	1	Cover, Terminal Slot	IG-913BS	1	Spring Set, Gov. Weight
IAO-1003	1	CAP ASSEMBLY, DIST.	IGB-199	1	Collar, Shaft, Dist.
IAO-7	1	Contact, Plunger	IGC-2168R	2	Weight, Governor
IAO-20	1	Spring, Contact	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-1021RF	1	Cam & Stop Plate, 8 Cyl.R. H.	IGP-1016B	1	ROTOR
IBB-1024R	1	Shaft, Drive	IGS-38	1	Cover, Housing, Tach. Shaft
IBB-2023	1	Base Assy. , Dist.	IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IAD-14	1	Bracket, Cap Spring	IGS-99	1	Spacer, Cam
IAO-9	2	Spring, Clamp, Cap	IGS-148	1	Shaft, Drive , Tachometer
IAO-14	1	Bracket, Cap Spring & Locating	IGT-70	1	Spring, Anti-Rattle
IAZ-30	1	Bearing, Abs. Bronze Upper	IGW-213	2	Rivet, Gear & Collar
IBB-9	2	Bracket, Breaker Plate Mtg.	X-294	1	Bearing, Ball, S. A. E. #202
IG-579A	2	Bearing, Abs. Bronze	8X-870	2	Screw, Breaker Plate Mtg. , Fill. Hd. #10-32x5/16
X-382	1	Cup, Grease, 1/8 Pipe	X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
X-525	4	Rivet, Tubular			
IBB-2040	1	Plate Assy. , Breaker			
IA-131	2	Clip, Breaker Arm Spring			
IAW-24	1	Lead Assembly			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGP-3028YS	1	CONTACT SET, BREAKER			
8X-59	2	Screw, Lock, Breaker Contact, Rd. Hd. #8-32x3/16			
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6			
8X-350	2	Washer, Plain, Contact Lock Screw, #8			

UNIT	APPLICATION
IBB-4104	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4105A, B DISTRIBUTOR PARTS LIST

IBB-4105A, B
(Issued 6-29-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	12X-194	3	Lockwasher, Condenser & Clamp Screw, #6
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-350	2	Washer, Plain, Contact Lock Screw, #8
IAO-17	1	Cover, Terminal Slot	8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IAR-1003	1	CAP ASSEMBLY, DIST.	8X-1546	1	Screw, Condenser, Mtg., Fill. Hd. #6-32x5/32
IAO-7	1	Contact, Plunger	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-20	1	Spring, Contact	IG-680	1	Snap Ring, Cam Retaining
**	1	Shaft, Drive	IGB-199	1	Collar, Shaft, Distributor
**	1	Cam & Stop Plate, 8 Cyl. R. H.	**	1	Spring Set, Gov. Weight
IBB-2012	1	Base Assembly, Distributor	IGC-2168R	2	Weight, Governor
IAD-14	1	Bracket, Cap Spring	IGH-28	1	Wick, Felt, Cam Sleeve
IAO-9	2	Spring, Clamp, Cap	IGP-1016B	1	ROTOR
IAO-14	1	Bracket, Cap Spring & Locating	IGS-99	1	Spacer, Cam
IAZ-30	1	Bearing, Absorbent Bronze, Upper	**	1	Spring, Anti-Rattle
IAZ-31	1	Wick, Felt	SW-213	1	Rivet, Collar
IAZ-32	1	Retainer, Felt Wick	12X-196	1	Lockwasher, Terminal Screw, #10
IBB-9	2	Bracket, Breaker Plate Mounting	8X-870	2	Screw, Breaker Plate, Mtg., Fill. Hd. #10-32x5/16
IG-579A	1	BEARING, ABSORBENT BRONZE	8X-872	1	Screw, Terminal, Fill. Hd. #10-32x1/4
X-525	4	Rivet, Tubular	X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
X-1590	1	Oiler			
IBB-2040	1	Plate Assembly, Breaker			
IA-131	2	Clip, Breaker Arm Spring			
IAW-24	1	Lead Assembly			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGP-3028YS	1	CONTACT SET, BREAKER			

** See Table following parts list for part number applying to assembly wanted

Assembly Number	Drive Shaft	Cam & Stop Plate	Gov. Weight Spring Set	Anti-Rattle Spring
IBB-4105A	IAZ-1002RA	IAZ-1021RJ	IGC-198S	None
IBB-4105B	IAZ-1002R	IAZ-1021RH	IGB-336CS	IGT-70

UNIT	APPLICATION
IBB-4105A	Chrysler Industrial
IBB-4105B	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4107-1 DISTRIBUTOR PARTS LIST

IBB-4107-1
(Issued 4-26-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper	8X-350	2	Washer, Plain, Contact Lock Screw, #8
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-884	2	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16
IAO-17	1	Cover, Terminal Slot	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAR-1003	1	CAP ASSY., DISTRIBUTOR	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-7	1	Contact, Plunger	IG-644A	1	Coupling, Drive, Dist.
IAO-20	1	Spring, Contact	IG-680	1	Snap Ring, Cam Retaining
IAZ-1021RH	1	Cam & Stop Plate, 8 Cyl. R. H.	IGB-336CS	1	SPRING SET, GOV. WEIGHT
IBB-29	1	Arm, Advance	IGC-2168R	2	Weight, Governor
IBB-1002R	1	Shaft, Drive	IGH-28	1	Wick, Felt, Cam Sleeve
IBB-2014	1	Base Assy., Distributor	IGP-1016B	1	Rotor
IAD-14	1	Bracket, Cap Spring	IGS-99	1	Spacer, Cam
IAO-9	2	Spring, Clamp, Cap	IGT-70	1	Spring, Anti-Rattle
IAO-14	1	Bracket, Cap Spring & Locating	SW-213	1	Rivet, Coupling
IBB-9	2	Bracket, Breaker Plate Mtg.	SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
IG-579A	2	BEARING, ABS. BRONZE	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IGT-117	1	Wick, Felt	12X-199	1	Lockwasher, Advance Arm, 1/4
X-525	4	Rivet, Tubular	8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-1590	1	Oiler	X-1270	2	Washer, Brkr. Plate Mtg. Screw, Skpf. #10
IBB-2040	1	Plate Assy., Breaker			
IA-131	2	Clip, Spring, Contact Arm			
IAW-24	1	Lead Assembly			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGP-3028YS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Screw, #6			

UNIT	APPLICATION
IBB-4107-1	Chrysler (Industrial)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBB-4108 DISTRIBUTOR PARTS LIST

IBB-4108
(Issued 10-14-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver	IGC-2168R	2	Weight, Governor
GE-48	1	Gear, Tachometer, Follower	IGH-28	1	Wick, Felt, Cam Sleeve
IAK-40	1	Cap, Tachometer Shaft	IGP-1016B	1	ROTOR
IAO-17	1	Cover, Terminal Slot	IGS-37	1	Shaft, Drive, Tachometer
IAR-1003	1	CAP ASSY., DIST.	IGS-38	1	Cover, Housing, Tach. Shaft
IAO-7	1	Contact, Plunger	IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IAO-20	1	Spring, Contact	IGS-99	1	Spacer, Cam
IAZ-1021RF	1	Cam & Stop Plate, 8 Cyl. R. H.	IGT-70	1	Spring, Anti-Rattle
IBB-1024R	1	Shaft, Drive	SW-213	2	Rivet, Gear & Collar
IBB-2023	1	Base Assy., Dist.	X-294	1	Bearing, Ball, S. A. E. #202
IAD-14	1	Bracket, Cap Spring	8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
IAO-9	2	Spring, Clamp, Cap	X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IAO-14	1	Bracket, Cap Spring & Locating			
IAZ-30	1	Bearing, Abs. Bronze, Upper			
IBB-9	2	Bracket, Breaker Plate Mtg.			
IG-579A	1	Bearing, Abs. Bronze			
X-382	1	Cup, Grease, 1/8 Pipe			
X-525	4	Rivet, Tubular			
IBB-2040	1	Plate Assy., Breaker			
IA-131	2	Clip, Spring, Contact Arm			
IAW-24	1	Lead Assy.			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGP-3028YS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Sc., #6			
8X-350	2	Washer, Plain, Contact Lock Sc., #8			
8X-884	2	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
IG-90	2	Washer, Thrust, Drive Shaft			
IG-680	1	Snap Ring, Cam Retaining			
IG-913BS	1	Spring Set, Gov. Weight			
IGB-199	1	Collar, Shaft, Dist.			

UNIT	APPLICATION
IBB-4108	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBC-4018UT DISTRIBUTOR PARTS LIST

IBC-4018UT
(Issued 3-13-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil	IGS-19S	1	Collar, Shaft
GT-97	1	Wick, Felt	IGS-99	1	Spacer, Cam
IAU-6	2	Clamp, Lead	IGS-1100RAQ1	1	Cam & Stop Plate, 6 Cyl. R. H.
IAU-24	1	Lead Assy., Breaker Spring Clamp	SW-213	1	Rivet, Collar
IAU-29	1	Spring, Dist. Cap Contact	12X-194	1	Lockwasher, Brkr. Spring Clamp Screw, #6
IAU-39	2	Holder, Breaker Plate	12X-196	2	Lockwasher, Coil Terminal, #10
IAU-52	6	Washer, Cap Sealing	X-865A	1	Plug, Pipe, 1/8
IAU-54	1	Plug, Cap Cover	X-1270	6	Washer, Cover Screw, Skpf. #10
IAU-1004	1	Plate, Breaker	8X-1372	2	Nut, Coil Terminal, Hex, #10-32
IAU-1066	1	ROTOR	X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IAU-3076L	1	CONDENSER	X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
IBC-23	1	Seal, Filter Mtg.	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IBC-34	1	Cover, Dist. Cap	X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IBC-1025R	1	Shaft, Drive	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IBC-1035	1	CAP ASSEMBLY, DIST.	X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
IBC-2001	1	Base Assy., Dist.	X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
IAH-13	1	Washer, Thrust, Adaptor	XA-744G	1	Seal, "O" Ring, Cover, 4 1/2 inch O. D.
IAU-10	1	Washer, Drive Shaft Seal	XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4 inch O. D.
IAU-12	1	Washer, Adaptor Lock Screw, Skpf. 1/4	XA-823	1	Filter Assembly
IAU-41	1	Plug, Drain			
IAU-42	1	Washer, Plug, Drain			
IBC-1007	1	Adaptor			
IG-579A	2	Bearing, Abs. Bronze			
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4			
XA-751	1	Seal, Shaft			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-676	1	Clip, Breaker Arm Spring			
IG-680	1	Snap Ring, Cam Retaining			
IGB-292SS	1	Spring Set, Governor Weight			
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16			
IGC-2168R	2	Weight, Governor			
IGE-15	1	Washer, Breaker Spring Clamp Screw, #6			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGP-3028FS	1	CONTACT SET, BREAKER			

UNIT	APPLICATION
IBC-4018UT	Chrys. Industrial & Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBC-4019UT DISTRIBUTOR PARTS LIST

IBC-4019UT
(Issued 3-13-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil	IGS-99	1	Spacer, Cam
GT-97	1	Wick, Felt	IGS-1100RAQ1	1	Cam & Stop Plate, 6 Cyl. R. H.
IAU-6	2	Clamp, Lead	SW-213	1	Rivet, Collar
IAU-24	1	Lead Assy., Breaker Spring Clamp	12X-194	1	Lockwasher, Brkr. Spring Clamp Screw, #6
IAU-29	1	Spring, Dist. Cap Contact	12X-196	2	Lockwasher, Coil Terminal, #10
IAU-39	2	Holder, Breaker Plate	X-865A	1	Plug, Pipe, 1/8
IAU-52	6	Washer, Cap Sealing	X-1270	6	Washer, Cover Screw, Skpf. #10
IAU-54	1	Plug, Cap Cover	8X-1372	2	Nut, Coil Terminal, Hex. #10-32
IAU-1004	1	Plate, Breaker	X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IAU-1066	1	ROTOR	X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
IAU-3076L	1	CONDENSER	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IBC-23	1	Seal, Filter Mtg.	X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IBC-34	1	Cover, Dist. Cap	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IBC-1027R	1	Shaft, Drive	X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
IBC-1035	1	CAP ASSEMBLY, DIST.	X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
IBC-2001S-1	1	Base Assembly, Dist.	XA-744G	1	Seal, "O" Ring, Cover, 4 1/2 inch O. D.
IAH-13	1	Washer, Thrust Adaptor	XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4 inch O. D.
IAU-10	1	Washer, Drive Shaft Seal	XA-823	1	Filter Assembly
IAU-12	1	Washer, Adaptor Lock Screw, Skpf. 1/4			
IAU-41	1	Plug, Drain			
IAU-42	1	Washer, Plug, Drain			
IBC-1007	1	Adaptor			
IG-579A	2	Bearing, Abs. Bronze			
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4			
XA-751	1	Seal, Shaft			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-676	1	Clip, Breaker Arm Spring			
IG-680	1	Snap Ring, Cam Retaining			
IGB-292SS	1	Spring Set, Governor Weight			
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16			
IGC-2168R	2	Weight, Governor			
IGE-15	1	Washer, Breaker Spring Clamp Screw, #6			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGP-3028FS	1	CONTACT SET, BREAKER			
IGS-19S	1	Collar, Shaft			

UNIT	APPLICATION
IBC-4019UT	Chrys. Industrial & Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBC-4021UT DISTRIBUTOR PARTS LIST

IBC-4021UT
(Issued 3-13-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil	IGH-28	1	Wick, Felt, Cam Sleeve
GT-97	1	Wick, Felt	IGP-3028FS	1	CONTACT SET, BREAKER
IAU-6	2	Clamp, Lead	IGS-19S	1	Collar, Shaft
IAU-24	1	Lead Assy., Breaker Spring Clamp	IGS-99	1	Spacer, Cam
IAU-29	1	Spring, Dist. Cap Contact	IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
IAU-39	2	Holder, Breaker Plate	SW-213	1	Rivet, Collar
IAU-52	6	Washer, Cap Sealing	12X-194	1	Lockwasher, Breaker Spring Clamp Sc., #6
IAU-54	1	Plug, Cap Cover	12X-196	2	Lockwasher, Coil Terminal, #10
IAU-62	1	Seal, Receptacle	X-865A	1	Plug, Pipe, 1/8
IAU-1004	1	Plate, Breaker	X-1270	6	Washer, Cover Sc., Skpf. #10
IAU-1066	1	ROTOR	8X-1372	2	Nut, Coil Terminal, Hex. #10-32
IAU-1071	1	Capacitor, Dist. Primary	X-2878	2	Screw, Breaker Plate Mtg. Fill. Hd. #10-32x5/16
IAU-3076L	1	CONDENSER	X-3028	2	Screw, Coil Brkt. Mtg., Fill. Hd. #10-32x7/16
IBC-34	1	Cover, Dist. Cap	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IBC-1025R	1	Shaft, Drive	X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IBC-1035	1	CAP ASSY., DIST.	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IBC-2001	1	Base Assy., Dist.	X-3123	4	Screw, Receptacle Mtg., Fill. Hd. #6-32x15/32
IAH-13	1	Washer, Thrust, Adaptor	X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
IAU-10	1	Washer, Drive Shaft Seal	XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4	XA-744P	2	Seal, "O" Ring, Cover Plug & Receptacle Mtg., 3/4" O. D.
IAU-41	1	Plug, Drain			
IAU-42	1	Washer, Plug, Drain			
IBC-1007	1	Adaptor			
IG-579A	2	Bearing, Abs. Bronze			
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4			
XA-751	1	Seal, Shaft			
IBF-9	1	Receptacle			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-676	1	Clip, Breaker Arm Spring			
IG-680	1	Snap Ring, Cam Retaining			
IGB-292SS	1	Spring Set, Gov. Weight			
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGC-2168R	2	Weight, Governor			
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			

UNIT	APPLICATION
IBC-4021UT	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBD-4008UT DISTRIBUTOR PARTS LIST

IBD-4008UT
(Issued 10-14-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CW-4002	1	Ignition Coil	IGH-28	1	Wick, Felt, Cam Sleeve
GT-97	1	Wick, Felt	IGP-3028FS	1	CONTACT SET, BREAKER
IAU-6	2	Clamp, Lead	IGS-19S	1	Collar, Shaft
IAU-24	1	Lead Assy., Breaker Spring Clamp	IGS-99	1	Spacer, Cam
IAU-29	1	Spring, Dist. Cap Contact	IGS-1100RAQ	1	Cam & Stop Plate, 6 Cyl. R. H.
IAU-39	2	Holder, Breaker Plate	SW-213	1	Rivet, Collar
IAU-52	6	Washer, Cap Sealing	12X-194	1	Lockwasher, Brkr. Spring Clamp Sc., #6
IAU-54	1	Plug, Cap Cover	12X-196	2	Lockwasher, Coil Terminal, #10
IAU-1004	1	Plate, Breaker	X-865A	1	Plug, Pipe, 1/8
IAU-1066	1	ROTOR	X-1270	6	Washer, Cover Sc., Skpf. #10
IAU-3076L	1	CONDENSER	8X-1372	2	Nut, Coil Terminal, Hex. #10-32
IBC-23	1	Seal, Filter Mtg.	X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IBC-34	1	Cover, Dist. Cap	X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
IBC-1027R	1	Shaft, Drive	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IBC-1035	1	CAP ASSY., DIST.	X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IBC-2001A	1	Base Assy., Dist.	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IAH-13	1	Washer, Thrust, Adaptor	X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
IAU-10	1	Washer, Drive Shaft Seal	X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4	XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
IAU-41	1	Plug, Drain	XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
IAU-42	1	Washer, Plug, Drain	XA-823	1	Filter Assy.
IBC-1007	1	Adaptor			
IG-579A	2	Bearing, Abs. Bronze			
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4			
XA-751	1	Seal, Shaft			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-676	1	Clip, Breaker Arm Spring			
IG-680	1	Snap Ring, Cam Retaining			
IGB-292SS	1	Spring, Set, Governor Weight			
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16			
IGC-2168R	2	Weight, Governor			
IGE-15	1	Washer, Plain, Breaker Spring Clamp Sc., #6			

UNIT	APPLICATION
IBD-4008UT	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBD-4009UT DISTRIBUTOR PARTS LIST

IBD-4009UT
(Issued 10-14-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CW-4002	1	Ignition Coil	SW-213	1	Rivet, Collar
GT-97	1	Wick, Felt	12X-194	1	Lockwasher, Brkr. Spring Clamp Sc., #6
IAU-6	2	Clamp, Lead	12X-196	2	Lockwasher, Coil Terminal, #10
IAU-24	1	Lead Assy., Breaker Spring Clamp	X-865A	1	Plug, Pipe, 1/8
IAU-29	1	Spring, Dist. Cap Contact	X-1270	6	Washer, Cover Sc., Skpf. #10
IAU-39	2	Holder, Breaker Plate	8X-1372	2	Nut, Coil Terminal, Hex. #10-32
IAU-52	6	Washer, Cap Sealing	X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IAU-54	1	Plug, Cap Cover	X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
IAU-1004	1	Plate, Breaker	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IAU-1066	1	ROTOR	X-3031	1	Screw, Lock, Breaker Contact, Fill. Hd. #8-32x3/16
IAU-3076L	1	CONDENSER	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IBC-23	1	Seal, Filter Mtg.	X-3194	6	Screw, Cover Mtg., Socket Hex. Hd. #10-32x5/8
IBC-34	1	Cover, Dist. Cap	X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
IBC-1025R	1	Shaft, Drive	XA-744G	1	Seal, "O" Ring, Cover, 4 1/2" O. D.
IBC-1035	1	CAP ASSY., DIST.	XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
IBC-2001A	1	Base Assy., Dist.	XA-823	1	Filter Assy.
IAH-13	1	Washer, Thrust, Adaptor			
IAU-10	1	Washer, Drive Shaft Seal			
IAU-12	1	Washer, Adaptor Lock Sc., Skpf. 1/4			
IAU-41	1	Plug, Drain			
IAU-42	1	Washer, Plug, Drain			
IBC-1007	1	Adaptor			
IG-579A	2	Bearing, Abs. Bronze			
19X-464	1	Screw, Adaptor Lock, Hex. Hd. 1/4-20x3/4			
XA-751	1	Seal, Shaft			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-676	1	Clip, Breaker Arm Spring			
IG-680	1	Snap Ring, Cam Retaining			
IGB-292SS	1	Spring Set, Governor Weight			
IGC-175	1	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x5/16			
IGC-2168R	2	Weight, Governor			
IGE-15	1	Washer, Plain, Breaker Spring Clamp Sc., #6			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGP-3028FS	1	CONTACT SET, BREAKER			
IGS-19S	1	Collar, Shaft			
IGS-99	1	Spacer, Cam			
IGS-1100RAQ1	1	Cam & Stop Plate, 6 Cyl. R. H.			

UNIT	APPLICATION
IBD-4009UT	Chrysler Marine

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBF-4002AUT, BUT, UT DISTRIBUTOR PARTS LIST

IBF-4002AUT,
BUT, UT
(Issued 3-7-56)

Part No.	No. Used	Name of Part
CY-4002	1	Ignition Coil
GT-97	1	Wick, Felt
IAU-6	2	Clamp, Lead
IAU-12	1	Washer, Advance Arm Mtg. Screw, Skpf. 1/4
IAU-29	1	Spring, Dist. Cap Contact
IAU-39	2	Holder, Breaker Plate
IAU-52	8	Washer, Cap Sealing
IAU-54	1	Plug, Cap Cover
IAU-3076LB	1	CONDENSER
IAZ-24	1	Lead Assy., Breaker Arm
**	1	Cam & Stop Plate, 8Cyl. R. H.
IBC-23	1	Seal Filter Mounting
IBF-6	1	Lead Assembly, Breaker Spring Clamp
IBF-21	1	Arm, Advance
IBF-33	1	Cover, Distributor Cap
IBF-1002R	1	Shaft, Drive
IBF-1003	1	CAP ASSEMBLY, DIST.
IBF-1004R	1	Plate, Breaker
IBF-1066	1	ROTOR
IBF-2001	1	Base Assembly, Distributor
IAU-10	1	Washer, Drive Shaft Seal
IAU-41	1	Plug, Drain
IAU-42	1	Washer, Plug, Drain
IG-579A	2	Bearing, Absorbent Bronze
XA-751	1	Seal Shaft
IG-90	1	Washer, Thrust, Drive Shaft, Lower
IG-313	1	Washer, Thrust, Drive Shaft, Upper
IG-644A	1	Coupling, Drive, Distributor
IG-680	1	Snap Ring, Cam Retaining
**	1	SPRING SET, GOV. WEIGHT
IGC-175B	2	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x1/4
IGC-2168R	2	Weight, Governor
IGE-15	2	Washer, Plain, Breaker Spring Clamp Screw, #6
IGH-28	1	Wick, Felt, Cam Sleeve
IGP-3028ZS	1	CONTACT SET, BREAKER
IGS-99	1	Spacer, Cam

Part No.	No. Used	Name of Part
IGT-70	1	Spring, Anti-Rattle
SW-213	1	Rivet, Coupling
12X-196	2	Lockwasher, Coil Terminal, #10
8X-350	2	Washer, Plain, Breaker Contact, #8
19X-464	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20-3/4
X-865A	1	Plug, Pipe, 1/8
8X-884	2	Screw, Breaker, Contact, Fill. Hd. #8-32x3/16
X-1272	6	Washer, Cover Mtg. Screw, Skpf. 1/4
8X-1372	2	Nut, Coil Terminal, Hex. #10-32
X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
19X-3219	6	Screw, Cover Mtg., Socket Hd. 1/4-28x5/8
X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
XA-744F	1	Seal, "O" Ring, Cap Cover, 5 1/4" O. D.
XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
XA-823A	1	Filter Assembly

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Spring Set
IBF-4002AUT	IBJ-1021RR	IGC-200S
IBF-4002BUT	IBJ-1021RK	IG-636MS
IBF-4002UT	IBJ-1021RP	IGB-277BS

UNIT	APPLICATION
IBF-4002AUT	Chrysler Marine
IBF-4002BUT	Chrysler Industrial
IBF-4002UT	Chrysler Industrial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBG-4001AUT, UT DISTRIBUTOR PARTS LIST

IBG-4001AUT, UT
(Issued 3-7-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CAK-4001	1	Ignition Coil	SW-213	1	Rivet, Coupling
GT-97	1	Wick, Felt	12X-196	2	Lockwasher, Coil Terminal #10
IAU-6	2	Clamp, Lead	8X-350	2	Washer, Plain, Breaker Contact, #8
IAU-12	1	Washer, Advance Arm Mtg. Screw, Skpf. 1/4	19X-464	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x3/4
IAU-29	1	Spring, Distributor Cap Contact	X-865A	1	Plug, Pipe, 1/8
IAU-39	2	Holder, Breaker Plate	8X-884	2	Screw, Breaker Contact, Fill. Head #8-32x3/16
IAU-52	8	Washer, Cap Sealing	X-1272	6	Washer, Cover Mtg. Screw, Skpf. 1/4
IAU-54	1	Plug, Cap Cover	8X-1372	2	Nut, Coil Terminal, Hex. #10-32
IAU-3076LB	1	CONDENSER	X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IAZ-24	1	Lead Assy., Breaker Arm	X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
IBC-23	1	Seal, Filter Mounting	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IBF-6	1	Lead Assy., Breaker Spring Clamp	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IBF-21	1	Arm, Advance	19X-3219	6	Screw, Cover Mtg., Socket Hd. 1/4-28x5/8
IBF-33	1	Cover, Dist. Cap	X-3235	4	Screw, Filter Mtg., Fill. Head #6-32x1 1/2
IBF-1002R	1	Shaft, Drive	XA-744F	1	Seal, "O" Ring, Cap Cover, 5 1/4" O. D.
IBF-1003	1	CAP ASSEMBLY, DIST.	XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
IBF-1004R	1	Plate, Breaker	XA-823A	1	Filter Assembly
IBF-1066	1	ROTOR			
**	1	Base Assembly, Distributor			
IAU-10	1	Washer, Drive Shaft Seal			
IAU-41	1	Plug, Drain			
IAU-42	1	Washer, Plug, Drain			
IG-579A	2	Bearing, Absorbent Bronze			
XA-751	1	Seal, Shaft			
**	1	Cam & Stop Plate, 8Cyt. R. H.			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-644A	1	Coupling, Drive, Distributor			
IG-680	1	Snap Ring, Cam Retaining			
**	1	SPRING SET, GOV. WEIGHT			
IGC-175B	2	Screw, Breaker Spring Clamp, Hex. Hd. #6-32x1/4			
IGC-2168R	2	Weight, Governor			
IGE-15	2	Washer, Plain, Breaker Spring Clamp Screw, #6			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGP-3028ZS	1	CONTACT SET, BREAKER			
IGS-99	1	Spacer, Cam			
IGT-70	1	Spring, Anti-Rattle			

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Base Assy.	Cam & Stop Plate
IBG-4001AUT	IBF-2001AS-1	IBJ-1021RK
IBG-4001UT	IBF-2001AS	IBJ-1021RR

	Assembly No.	Base Assy.	Cam & Stop Plate
	IBG-4001AUT	IBF-2001AS-1	IBJ-1021RK
	IBG-4001UT	IBF-2001AS	IBJ-1021RR
		Gov. Weight Spring Set	IGB-336CS
			IGC-200S

UNIT	APPLICATION
IBG-4001AUT	Chrysler (Industrial)
IBG-4001UT	Chrysler (Marine)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBH-4001AUT, UT DISTRIBUTOR PARTS LIST

IBH-4001AUT, UT
(Issued 3-7-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
CAJ-4001	1	Ignition Coil	IGT-70	1	Spring, Anti-Rattle
GT-97	1	Wick, Felt	SW-213	1	Rivet, Coupling
IAU-6	2	Clamp, Lead	12X-196	2	Lockwasher, Coil Terminal, #10
IAU-12	1	Washer, Advance Arm Mtg. Screw, Skpf. 1/4	8X-350	2	Washer, Plain, Brkr. Contact, #8
IAU-29	1	Spring, Dist. Cap Contact	19X-464	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x3/4
IAU-39	2	Holder, Breaker Plate	X-865A	1	Plug, Pipe, 1/8
IAU-52	8	Washer, Cap Sealing	8X-884	2	Screw, Breaker Contact, Fill. Hd. #8-32x3/16
IAU-54	1	Plug, Cap Cover	X-1272	6	Washer, Cover Mtg. Screw Skpf. 1/4
IAU-3076LB	1	CONDENSER	8X-1372	2	Nut, Coil Terminal, Hex. #10-32
IAZ-24	1	Lead Assy., Breaker Arm	X-2878	2	Screw, Breaker Plate Mtg., Fill. Hd. #10-32x5/16
IBC-23	1	Seal, Filter Mounting	X-3028	2	Screw, Coil Bracket Mtg., Fill. Hd. #10-32x7/16
IBF-6	1	Lead Assy., Breaker Spring Clamp	X-3030	1	Screw, Condenser Mtg., Fill. Hd. #6-32x3/16
IBF-21	1	Arm, Advance	X-3032	3	Screw, Cap & Cover Attaching, Fill. Hd. #8-32x1
IBF-33	1	Cover, Dist. Cap	19X-3219	6	Screw, Cover Mtg., Socket Hd. 1/4-28x5/8
IBF-1002R	1	Shaft, Drive	X-3235	4	Screw, Filter Mtg., Fill. Hd. #6-32x1 1/2
IBF-1003	1	CAP ASSEMBLY, DIST.	XA-744F	1	Seal, "O" Ring, Distributor Cap Cover, 5 1/4" O. D.
IBF-1004R	1	Plate, Breaker	XA-744P	1	Seal, "O" Ring, Cover Plug, 3/4" O. D.
IBF-1066	1	ROTOR	XA-823A	1	Filter Assembly
**	1	Base Assembly, Distributor	** See table following parts list for part number applying to assembly wanted.		
IAU-10	1	Washer, Drive Shaft Seal			
IAU-41	1	Plug, Drain			
IAU-42	1	Washer, Plug, Drain			
IG-579A	2	Bearing, Absorbent Bronze			
XA-751	1	Seal, Shaft			
**	1	Cam & Stop Plate, 8Cyl. R. H.			
IG-90	1	Washer, Thrust Drive Shaft, Lower			
IG-313	1	Washer, Thrust, Drive Shaft, Upper			
IG-644A	1	Coupling, Drive, Distributor			
IG-680	1	Snap Ring, Cam Retaining			
**	1	SPRING SET, GOV. WEIGHT			
IGC-175B	2	Screw, Breaker Spring Clamp, #6-32x5/16			
IGC-2168R	2	Weight, Governor			
IGE-15	2	Washer, Plain, Breaker Spring Clamp Screw, #6			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGP-3028ZS	1	CONTACT SET, BREAKER			
IGS-99	1	Spacer, Cam			

Assembly No.	Base Assy.	Cam & Stop Plate	Gov. Weight Spring Set
IBH-4001AUT	IBF-2001BS-1	IBJ-1021RK	IGB-336CS
IBH-4001UT	IBF-2001BS	IBJ-1021RR	IGC-200S

UNIT	APPLICATION
IBH-4001AUT	Chrysler (Industrial)
IBH-4001UT	Chrysler (Marine)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ-4001, A, B, C, D, E DISTRIBUTOR PARTS LIST

IBJ-4001, A, B, C, D, E
(Issued 4-3-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GJ-236	1	Rivet, Gear	IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGW-3028HS	1	CONTACT SET, BREAKER
IAR-1003	1	CAP ASSY., DIST.	12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
IAO-7	1	Contact, Plunger	8X-350	1	Washer, Plain, Contact Brkt. Sc., #8
IAO-20	1	Spring, Contact	8X-884	1	Screw, Contact Brkt., Fill. Hd. #8-32x3/16
IAT-30	1	Gasket, 1/32" Thick	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAZ-17	1	Washer, Felt	IG-680	1	Snap Ring, Cam Retaining
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	**	1	Spring Set, Gov. Weight
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGC-2168L	2	Weight, Governor
**	1	VACUUM CHAMBER	IGH-28	1	Wick, Felt, Cam Sleeve
IBJ-17S	1	Gear	IGP-1016B	1	ROTOR
IBJ-18	1	Elbow Oiler	IGS-17	1	Ring, Lock
IBJ-1002L	1	Shaft, Drive	IGS-99	1	Spacer, Cam
**	1	Cam&Stop Plate, 8Cyl. L. H.	IGT-69	1	Spring, Anti-Rattle
**	1	Base Assy., Dist.	IGT-117	1	Wick, Felt
IAZ-7	1	Bushing, Insulation	VC-15	1	Plug, Vacuum Chamber
IAZ-13	1	Insulation, Term. Stud	VC-46	*	Washer, .032" Thick
IAZ-22	1	Washer, Ins., Term. Stud	VC-46A	*	Washer, .010" Thick
IAZ-34	1	Clip, Terminal	VC-46B	*	Washer, .065" Thick
IG-579A	2	BEARING, ABS. BRONZE	**	1	Spring
8X-173	2	Nut, Term. Stud, Hex. #10-32	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
8X-183A	1	Washer, Plain, Term. Stud, #10	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
12X-196	2	Lockwasher, Term. Stud, #10	12X-195	2	Lockwasher, Breaker Plate Sc., #8
X-3218	1	Stud, Terminal, Primary	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IBJ-2004L	1	Plate Assy., Breaker	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IBB-2015L	1	CONDENSER			
IBJ-6	1	Washer, Retaining			
IBJ-8	1	Washer, Bearing			
IBJ-9	1	Washer, Thrust, Bearing			
IBJ-10	1	Lead Assy., Primary			
IBJ-14	1	Spring, Tension			
IBJ-1004L	1	Plate, Breaker, Lower			
IBJ-1012L	1	Plate, Breaker, Upper			

* Use as required

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Base Assy.	Spring Set	Spring
IBJ-4001	IAZ-2023L	IBJ-1021L	IBJ-2001	IGC-205BS	VC-115
IBJ-4001A	IAZ-2023LA	IBJ-1021LA	IBJ-2001	IGB-328RS	VC-90
IBJ-4001B	IAZ-2023LB	IBJ-1021LA	IBJ-2001	IGC-78AS	VC-171
IBJ-4001C	IAZ-2023LA	IBJ-1021LB	IBJ-2001B	IGC-207AS	VC-175
IBJ-4001D	IAZ-2023LB	IBJ-1021LC	IBJ-2001	IGC-207AS	VC-171
IBJ-4001E	IAZ-2023LA	IBJ-1021LC	IBJ-2001C	IGB-379AS	VC-150

UNIT	APPLICATION
IBJ-4001, A, B	Clipper
IBJ-4001C	Clipper, Studebaker Speedhawk
IBJ-4001D	Hudson & Nash (8), Clipper
IBJ-4001E	Hudson & Nash (8), Clipper

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ-4001, A, B, C, D, E DISTRIBUTOR PARTS LIST

IBJ-4001, A, B, C, D, E
(Issued 4-3-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GJ-236	1	Rivet, Gear	IGC-175B	1	Screw, Brkr. Spring
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper			Clamp, Hex. Hd. #6-32x1/4
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IAR-1003	1	CAP ASSY., DIST.	IGW-3028HS	1	CONTACT SET, BREAKER
IAO-7	1	Contact, Plunger	12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
IAO-20	1	Spring, Contact	8X-350	1	Washer, Plain, Contact Brkt. Sc., #8
IAT-30	1	Gasket, 1/32" Thick	8X-884	1	Screw, Contact Brkt., Fill. Hd. #8-32x3/16
IAZ-17	1	Washer, Felt	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IG-680	1	Snap Ring, Cam Retaining
IAZ-1015	1	Spring & Hinge, Clamp, Cap	**	1	Spring Set, Gov. Weight
**	1	VACUUM CHAMBER	IGC-2168L	2	Weight, Governor
IBJ-17S	1	Gear	IGH-28	1	Wick, Felt, Cam Sleeve
IBJ-18	1	Elbow Oiler	IGP-1016B	1	ROTOR
IBJ-1002L	1	Shaft, Drive	IGS-17	1	Ring, Lock
**	1	Cam&Stop Plate, 8Cyl. L. H.	IGS-99	1	Spacer, Cam
**	1	Base Assy., Dist.	IGT-69	1	Spring, Anti-Rattle
IAZ-7	1	Bushing, Insulation	IGT-117	1	Wick, Felt
IAZ-13	1	Insulation, Term. Stud	VC-15	1	Plug, Vacuum Chamber
IAZ-22	1	Washer, Ins., Term. Stud	VC-46	*	Washer, .032" Thick
IAZ-34	1	Clip, Terminal	VC-46A	*	Washer, .010" Thick
IG-579A	2	BEARING, ABS. BRONZE	VC-46B	*	Washer, .065" Thick
8X-173	2	Nut, Term. Stud, Hex. #10-32	**	1	Spring
8X-183A	1	Washer, Plain, Term. Stud, #10	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
12X-196	2	Lockwasher, Term. Stud, #10	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
X-3218	1	Stud, Terminal, Primary	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IBJ-2004L	1	Plate Assy., Breaker	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IBB-2015L	1	CONDENSER	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IBJ-6	1	Washer, Retaining			
IBJ-8	1	Washer, Bearing			
IBJ-9	1	Washer, Thrust, Bearing			
IBJ-10	1	Lead Assy., Primary			
IBJ-14	1	Spring, Tension			
IBJ-1004L	1	Plate, Breaker, Lower			
IBJ-1012L	1	Plate, Breaker, Upper			

* Use as required

** See table following parts list for part number applying to assembly wanted.

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Base Assy.	Spring Set	Spring
IBJ-4001	IAZ-2023L	IBJ-1021L	IBJ-2001	IGC-205BS	VC-115
IBJ-4001A	IAZ-2023LA	IBJ-1021LA	IBJ-2001	IGB-328RS	VC-90
IBJ-4001B	IAZ-2023LB	IBJ-1021LA	IBJ-2001	IGC-78AS	VC-171
IBJ-4001C	IAZ-2023LA	IBJ-1021LB	IBJ-2001B	IGC-207AS	VC-175
IBJ-4001D	IAZ-2023LB	IBJ-1021LC	IBJ-2001	IGC-207AS	VC-171
IBJ-4001E	IAZ-2023LA	IBJ-1021LC	IBJ-2001C	IGB-379AS	VC-150

UNIT	APPLICATION
IBJ-4001, A, B	Clipper
IBJ-4001C	Clipper, Studebaker Speedhawk
IBJ-4001D	Hudson & Nash (8), Clipper
IBJ-4001E	Hudson & Nash (8), Clipper

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ-4301, A, B, DISTRIBUTOR PARTS LIST

IBJ-4301, A, B
(Issued 3-7-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	12X-195	1	Lockwasher, Ground Lead Sc., #8
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-350	1	Washer, Contact Brkt. Lock Sc., Plain #8
IAT-29	1	Plug, Vacuum Chamber	8X-884	2	Screw, Contact Brkt. & Grd. Lead, Fill. Hd. #8-32x3/16
IAT-30	1	Gasket, 1/32" Thick	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAZ-17	1	Washer, Felt	IBK-1003	1	CAP ASSY., DIST.
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IAO-7	1	Contact, Plunger
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IAO-20	1	Spring, Contact
IAZ-1026R	1	Shaft, Drive	IBK-1016	1	ROTOR
IAZ-2001	1	Base Assy., Dist.	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-7	1	Bushing, Insulation	**	1	Spring Set, Gov. Weight
IAZ-13	1	Insulation, Term. Stud	IG-680	1	Snap Ring, Cam Retaining
IAZ-22	1	Washer, Ins., Term. Stud	IGB-199	1	Collar, Shaft, Dist.
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	IGC-2168R	2	Weight, Governor
IAZ-31	1	Wick, Felt	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-32	1	Retainer, Felt Wick	IGS-17	1	Ring, Lock
IAZ-34	1	Clip, Terminal	IGS-99	1	Spacer, Cam
IG-579A	1	BEARING, ABS. BRONZE	IGT-70	1	Spring, Anti-Rattle
8X-173	2	Nut, Term. Stud, Hex. #10-32	VC-46	*	Washer, .032" Thick
8X-183A	1	Washer, Term. Stud, Plain #10	VC-46A	*	Washer, .010" Thick
12X-196	2	Lockwasher, Term. Stud #10	VC-46B	*	Washer, .065" Thick
X-1590	1	Oiler	**	1	Spring
X-3218	1	Stud, Terminal, Primary	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
**	1	VACUUM CHAMBER	8X-189B	1	Washer, Vac. Arm Pin, Plain #4
**	1	Cam & Stop Plate, 8 Cyl. R. H.	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IBJ-2048R	1	Plate Assy., Breaker	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IBB-2015R	1	CONDENSFR	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IBJ-24	1	Lead Assy., Breaker Arm	XA-830	1	Pin, Collar
IBJ-1048R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IGC-175B	1	Screw, Brkr. Spring Clamp Hex. Hd. #6-32x1/4			
IGE-15	1	Washer, Plain, Erkr. Spring Clamp Sc., #6			
IGW-3028MS	1	CONTACT SET, BREAKER			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			

* Use as required.

** See Table following parts list for part number applying to assembly wanted.


Assembly Number	Vacuum Chamber	Cam & Stop Plate	Spring Set	Spring
IBJ-4301	IAZ-2023RC	IBJ-1021RE	IG-636ES	VC-115
IBJ-4301A	IAZ-2023RD	IBJ-1021RH	IGC-154AS	VC-169
IBJ-4301B	IAZ-2023RA	IBJ-1021RE	IGC-42PS	VC-169

UNIT	APPLICATION
IBJ-4301	Dodge Truck
IBJ-4301A	Dodge, Plymouth
IBJ-4301B	Dodge, Plymouth

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ - 4302, A, B, C, D DISTRIBUTOR PARTS LIST

IBJ - 4302, A, B, C, D
(Issued 9 - 27 - 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO - 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGC - 175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6 - 32x1/4
IAO - 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGE - 15	1	Washer, Plain, Brkr. Spring Clamp Sc. , #6
IAT - 29	1	Plug, Vacuum Chamber	IGW - 3028MS	1	CONTACT SET, BREAKER
IAT - 30	1	Gasket, 1/32" Thick	12X - 194	1	Lockwasher, Condenser Mtg. Sc. #6
IAZ - 17	1	Washer, Felt	12X - 195	1	Lockwasher, Ground Lead Sc. , #8
IAZ - 1014	1	Spring & Hinge, Clamp, Cap Locating	8X - 350	1	Washer, Contact Brkt. Lock Sc. , Plain #8
IAZ - 1015	1	Spring & Hinge, Clamp, Cap	8X - 884	2	Screw, Contact Brkt. & Grd. Lead, Fill. Hd. #8 - 32x3/16
IAZ - 1025R	1	Shaft, Drive	8X - 1546	1	Screw, Condenser Mtg. , Fill. Hd. #6 - 32x5/32
IAZ - 2001	1	Base Assy. , Dist.	IBK - 1003	1	CAP ASSY. , DIST.
IAZ - 7	1	Bushing, Insulation	IAO - 7	1	Contact, Plunger
IAZ - 13	1	Insulation, Term. Stud	IAO - 20	1	Spring, Contact
IAZ - 22	1	Washer, Ins. , Term. Stud	IBK - 1016	1	ROTOR
IAZ - 30	1	BEARING, ABS. BRONZE, UPPER	IG - 90	1	Washer, Thrust, Drive Shaft, Lower
IAZ - 31	1	Wick, Felt	**	1	Spring Set, Gov. Weight
IAZ - 32	1	Retainer, Felt Wick	IG - 680	1	Snap Ring, Cam Retaining
IAZ - 34	1	Clip, Terminal	IGB - 199	1	Collar, Shaft, Dist.
IG - 579A	1	BEARING, ABS. BRONZE	IGC - 2168R	2	Weight, Governor
8X - 173	2	Nut, Term. Stud, Hex. #10 - 32	IGH - 28	1	Wick, Felt, Cam Sleeve
8X - 183A	1	Washer, Term. Stud, Plain #10	IGS - 17	1	Ring, Lock
12X - 196	2	Lockwasher, Term. Stud, #10	IGS - 99	1	Spacer, Cam
X - 1590	1	Oiler	IGT - 70	1	Spring, Anti - Rattle
X - 3218	1	Stud, Terminal, Primary	VC - 46	*	Washer, .032" Thick
**	1	VACUUM CHAMBER	VC - 46A	*	Washer, .010" Thick
**	1	Cam & Stop Plate, 8 Cyl. R. H.	VC - 46B	*	Washer, .065" Thick
IBJ - 2048R	1	Plate Assy. , Breaker	VC - 169	1	Spring, Vac. Chamber
IBB - 2015R	1	CONDENSER	8X - 55	2	Screw, Breaker Plate, Rd. Hd. #8 - 32x3/8
IBJ - 24	1	Lead Assy. , Breaker Arm	8X - 189B	1	Washer, Vac. Arm Pin, Plain #4
IBJ - 1048R	1	Plate, Breaker	12X - 195	2	Lockwasher, Breaker Plate Sc. , #8
IAZ - 11S	1	Lead Assy. , Ground	8X - 872	2	Screw, Vac. Chamber Mtg. , Fill. Hd. #10 - 32x1/4
			X - 1270	2	Washer, Vac. Chamber Mtg. Sc. , Skpf. #10
			XA - 839	1	Pin, Collar

* Use as required.

** See table following parts list for part number applying to assembly wanted.

(Continued on reverse side)

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ - 4302, A, B, C, D (Continued)

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Spring Set
IBJ - 4302	IAZ - 2023RD	IBJ - 1021RJ	IGC - 210AS
IBJ - 4302A	IAZ - 2023RA	IBJ - 1021RF	IG - 784S
IBJ - 4302B	IAZ - 2023RD	IBJ - 1021RD	IGB - 352S
IBJ - 4302C	IAZ - 2023RA	IBJ - 1021RF	IG - 784S
IBJ - 4302D	IAZ - 2023RA	IBJ - 1021RD	IGB - 352S

UNIT	APPLICATION
IBJ - 4302	DeSoto
IBJ - 4302A	DeSoto
IBJ - 4302B	DeSoto
IBJ - 4302C	DeSoto
IBJ - 4302D	DeSoto

Printed in U. S. A.

File in
Equipment & Parts List Binder

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed.”

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ - 4303, A, B, C DISTRIBUTOR PARTS LIST

IBJ - 4303, A, B, C
(Issued 9-25-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6
IAT-29	1	Plug, Vacuum Chamber	IGW-3028MS	1	CONTACT SET, BREAKER
IAT-30	1	Gasket, 1/32" Thick	12X-194	1	Lockwasher, Condenser Mtg. Sc., #6
IAZ-17	1	Washer, Felt	12X-195	1	Lockwasher, Ground Lead Sc., #8
IAZ-1002R	1	Shaft, Drive	8X-350	1	Washer, Contact Brkt. Lock Sc., Plain #8
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	8X-884	2	Screw, Contact Brkt. & Grd. Lead, Fill. Hd. #8-32x3/16
IAZ-1015	1	Spring & Hinge, Clamp, Cap	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAZ-2001	1	Base Assy., Dist.	IBK-1003	1	CAP ASSY., DIST.
IAZ-7	1	Bushing, Insulation	IAO-7	1	Contact, Plunger
IAZ-13	1	Insulation, Term. Stud	IAO-20	1	Spring, Contact
IAZ-22	1	Washer, Ins., Term. Stud	IBK-1016	1	ROTOR
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-31	1	Wick, Felt	IG-680	1	Snap Ring, Cam Retaining
IAZ-32	1	Retainer, Felt Wick	IGB-199	1	Collar, Shaft, Dist.
IAZ-34	1	Clip, Terminal	**	1	Spring Set, Gov. Weight
IG-579A	1	BEARING, ABS. BRONZE	IGC-2168R	2	Weight, Governor
8X-173	2	Nut, Term. Stud, Hex. #10-32	IGH-28	1	Wick, Felt, Cam Sleeve
8X-183A	1	Washer, Term. Stud, Plain #10	IGS-17	1	Ring, Lock
12X-196	2	Lockwasher, Term. Stud, #10	IGS-99	1	Spacer, Cam
X-1590	1	Oiler	IGT-70	1	Spring, Anti-Rattle
X-3218	1	Stud, Terminal, Primary	VC-46	*	Washer, .032" Thick
**	1	VACUUM CHAMBER	VC-46A	*	Washer, .010" Thick
**	1	Cam & Stop Plate, 8 Cyl. R. H.	VC-46B	*	Washer, .065" Thick
IBJ-2048R	1	Plate Assy., Breaker	**	1	Spring
IBB-2015R	1	CONDENSER	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
IBJ-24	1	Lead Assy., Breaker Arm	8X-189B	1	Washer, Vac. Arm Pin, Plain #4
IBJ-1048R	1	Plate, Breaker	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IAZ-11S	1	Lead Assy., Ground	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
			X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
			XA-839	1	Pin, Collar

* Use as Required.

** See table following parts list for part number applying to assembly wanted.

(Continued on reverse side)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBJ - 4303, A, B, C, (Continued)

Assembly Number	Vacuum Chamber	Cam & Stop Plate	Spring Set	Spring
IBJ - 4303	IAZ - 2023RE	IBJ - 1021RE	IGB - 266AS	VC - 169
IBJ - 4303A	IAZ - 2023RE	IBJ - 1021RC	IG - 636MS	VC - 169
IBJ - 4303B	IAZ - 2023RF	IBJ - 1021RH	IGC - 207BS	VC - 115
IBJ - 4303C	IAZ - 2023RA	IBJ - 1021RC	IG - 636MS	VC - 169

UNIT	APPLICATION
IBJ - 4303	Dodge
IBJ - 4303A	Chrysler
IBJ - 4303B	Dodge
IBJ - 4303C	Chrysler

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4001, A, B DISTRIBUTOR PARTS LIST

IBK-4001, A, B
(Issued 11-9-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GJ-236	1	Rivet, Gear	IGE-15	2	Washer, Plain, Brkr.
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGW-3028JS	1	Spring Clamp Screw, #6
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	12X-194	1	CONTACT SET, BREAKER
IAR-1003	1	CAP ASSEMBLY, DISTRIBUTOR	8X-350	2	Lockwasher, Condenser Mtg. Screw, #6
IAO-7	1	Contact, Plunger	8X-884	2	Washer, Plain, Contact Brkt. Screw, #8
IAO-20	1	Spring, Contact	8X-884	2	Screw, Contact Brkt., Fill. Hd. #8-32x3/16
IAT-29	1	Plug, Vacuum Chamber	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-30	1	Gasket, 1/32" Thick	IG-680	1	Snap Ring, Cam Retaining
IAZ-17	1	Washer, Felt	**	1	SPRING SET, GOV. WEIGHT
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IGC-2168L	2	Weight, Governor
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGH-28	1	Wick, Felt, Cam Sleeve
**	1	VACUUM CHAMBER	IGP-1016B	1	ROTOR
IBJ-17S	1	Gear	IGS-17	1	Ring, Lock
IBJ-18	1	Elbow Oiler	IGS-99	1	Spacer, Cam
IBJ-1002L	1	Shaft, Drive	IGT-69	1	Spring, Anti-Rattle
**	1	Cam & Stop Plate, 8 Cyl. L. H.	IGT-117	1	Wick, Felt
IBJ-2001A	1	Base Assembly, Distributor	VC-46	*	Washer, .032" Thick
IAZ-7	1	Bushing, Insulation	VC-46A	*	Washer, .010" Thick
IAZ-13	1	Insulation, Term. Stud	VC-46B	*	Washer, .065" Thick
IAZ-22	1	Washer, Ins., Term. Stud	**	1	Spring
IAZ-34	1	Clip, Terminal	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
IG-579A	2	BEARING, ABS. BRONZE	8X-189B	1	Washer, Vacuum Arm Pin, Plain #4
8X-173	2	Nut, Term. Stud, Hex. #10-32	12X-195	2	Lockwasher, Breaker Plate Screw, #8
8X-183A	1	Washer, Plain, Term. Stud, #10	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
12X-196	2	Lockwasher, Term. Stud, #10	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
X-3218	1	Stud, Terminal, Primary			
IBK-2004L	1	Plate Assy., Breaker			
IAZ-10	1	Lead Assy., Primary			
IAZ-24	1	Lead Assy., Breaker Arm			
IBB-2015L	1	CONDENSER			
IBJ-6	1	Washer, Retaining			
IBJ-8	1	Washer, Bearing			
IBJ-9	1	Washer, Thrust, Bearing			
IBJ-14	1	Spring, Tension			
IBJ-1004L	1	Plate, Breaker, Lower			
IBK-1012L	1	Plate, Breaker, Upper			
IGC-175B	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4			

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No. Cam & Stop Plate Vacuum Chamber Spring Set V. C. Spring

IBK-4001	IBJ-1021L	IAZ-2023L	IGC-205BS	VC-115
IBK-4001A	IBJ-1021LA	IAZ-2023LA	IGB-328RS	VC-90
IBK-4001B	IBJ-1021LA	IAZ-2023LB	IGC-78AS	VC-171

UNIT	APPLICATION
IBK-4001, A, B	Hudson & Nash 8

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4301A, C DISTRIBUTOR PARTS LIST

IBK-4301A, C
(Issued 4-4-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	8X-884	2	Screw, Contact Lead & Bracket, Fill. Hd. #8-32x3/16
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32
IAT-29	1	Plug, Vacuum Chamber	**	1	VACUUM CHAMBER
IAT-30	1	Gasket, 1/32" Thick	**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAZ-17	1	Washer, Felt	IBK-1003	1	CAP ASSEMBLY, DISTRIBUTOR
IAZ-1002R	1	Shaft, Drive	IAO-7	1	Contact, Plunger
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IAO-20	1	Spring, Contact
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IBK-1016	1	ROTOR
IAZ-2001	1	Base Assembly, Dist.	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-7	1	Bushing, Insulation	IG-680	1	Snap Ring, Cam Retaining
IAZ-13	1	Insulation, Term. Stud	IGB-199	1	Collar, Shaft, Distributor
IAZ-22	1	Washer, Ins., Term. Stud	**	1	Spring Set, Gov. Weight
IAZ-30	1	BEARING, ABSORBENT BRONZE, UPPER	IGC-2168R	2	Weight, Governor
IAZ-31	1	Wick, Felt	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-32	1	Retainer, Felt Wick	IGS-17	1	Ring, Lock
IAZ-34	1	Clip, Terminal	IGS-99	1	Spacer, Cam
IG-579A	1	BEARING, ABSORBENT BRONZE	IGT-70	1	Spring, Anti-Rattle
8X-173	2	Nut, Term. Stud, Hex. #10-32	VC-46	*	Washer, .032" Thick
8X-183A	1	Washer, Term. Stud, Plain #10	VC-46A	*	Washer, .010" Thick
12X-196	2	Lockwasher, Term. Stud, #10	VC-46B	*	Washer, .065" Thick
X-1590	1	Oiler	VC-174	1	Spring
X-3218	1	Stud, Terminal, Primary	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
IAZ-2004RA	1	Plate Assembly, Breaker	8X-189B	1	Washer, Vac. Arm Pin, Plain #4
IAZ-10	1	Lead Assembly, Primary	12X-195	2	Lockwasher, Breaker Plate Screw, #8
IAZ-24	1	Lead Assy., Breaker Arm	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IAZ-1004RA	1	Plate, Breaker	X-1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
IAZ-11S	1	Lead Assembly, Ground	XA-839	1	Pin, Collar
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			
IGW-3028KS	1	CONTACT SET, BREAKER			
12X-194	1	Lockwasher, Condenser Mtg. Screw, #6			
8X-350	1	Washer, Plain, Contact Bracket Screw, #8			

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Gov. Weight Spring Set
IBK-4301A	IAZ-2023RA	IBJ-1021RG	IGB-361AS
IBK-4301C	IAZ-2023RF	IBJ-1021RD	IGB-348AS

UNIT	APPLICATION
IBK-4301A	Chrysler, Imperial
IBK-4301C	Chrysler "300B"

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK-4302 DISTRIBUTOR PARTS LIST

IBK-4302
(Issued 3-27-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IBJ-1021R	1	Cam & Stop Plate, 8 Cyl. R. H.
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IBK-1003	1	CAP ASSY., DIST.
IAT-29	1	Plug, Vac. Chamber	IAO-7	1	Contact, Plunger
IAT-30	1	Gasket, 1/32" Thick	IAO-20	1	Spring, Contact
IAZ-17	1	Washer, Felt	IBK-1016	1	ROTOR
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IG-680	1	Snap Ring, Cam Retaining
IAZ-1026R	1	Shaft, Drive	IGB-199	1	Collar, Shaft, Dist.
IAZ-2001	1	Base Assy., Dist.	IGB-351AS	1	SPRING SET, GOV. WEIGHT
IAZ-7	1	Bushing, Insulation	IGC-2168R	2	Weight, Governor
IAZ-13	1	Insulation, Term. Stud	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-22	1	Washer, Ins., Term. Stud	IGS-17	1	Ring, Lock
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	IGS-99	1	Spacer, Cam
IAZ-31	1	Wick, Felt	IGT-70	1	Spring, Anti-Rattle
IAZ-32	1	Retainer, Felt Wick	VC-46	*	Washer, .032" Thick
IAZ-34	1	Clip, Terminal	VC-46A	*	Washer, .010" Thick
IG-579A	1	BEARING, ABS. BRONZE	VC-46B	*	Washer, .065" Thick
8X-173	2	Nut, Term. Stud, Hex. #10-32	VC-174	1	Spring
8X-183A	1	Washer, Plain, Term. Stud, #10	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
12X-196	2	Lockwasher, Term. Stud, #10	8X-189B	1	Washer, Vac. Arm Pin, Plain, #4
X-1590	1	Oiler	12X-195	2	Lockwasher, Breaker Plate Sc., #8
X-3218	1	Stud, Terminal, Primary	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IAZ-2004RA	1	Plate Assy., Breaker	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IAZ-10	1	Lead Assy., Primary	XA-839	1	Pin, Collar
IAZ-24	1	Lead Assy., Breaker Arm			
IAZ-1004RA	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IBB-2015R	1	CONDENSER			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			
IGW-3028KS	1	CONTACT SET, BREAKER			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X-350	1	Washer, Plain, Contact Brkt. Sc., #8			
8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
IAZ-2023RA	1	Vacuum Chamber			

* Use as required.

UNIT	APPLICATION
IBK-4302	Plymouth "Fury"

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

1

1

1

1

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBK - 4304 DISTRIBUTOR PARTS LIST

IBK - 4304
(Issued 9 - 28 - 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO - 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	12X - 194	1	Lockwasher, Condenser Mtg. Sc. , #6
IAO - 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X - 350	1	Washer, Plain, Contact Bracket Sc. , #8
IAT - 29	1	Plug, Vac. Chamber	8X - 884	2	Screw, Cont. Lead & Brkt. , Fill. Hd. #8 - 32x3/16
IAT - 30	1	Gasket, Vac. Chamber, 1/32" Thick	8X - 1546	1	Screw, Condenser Mtg. , Fill. Hd. #6 - 32x5/32
IAZ - 17	1	Washer, Felt	IG - 90	1	Washer, Thrust, Drive Shaft, Lower
IAZ - 1014	1	Spring & Hinge, Clamp, Cap Locating	IG - 680	1	Snap Ring, Cam Retaining
IAZ - 1015	1	Spring & Hinge, Clamp, Cap	IGB - 199	1	Collar, Shaft, Dist.
IAZ - 1021RU	1	Cam & Stop Plate, 8 Cyl. R. H.	IGB - 385AS	1	Spring Set, Gov. Weight
IAZ - 2023RE	1	VACUUM CHAMBER	IGC - 2168R	2	Weight, Governor
IBK - 1003	1	CAP ASSY. , DIST.	IGH - 28	1	Wick, Felt, Cam Sleeve
IAO - 7	1	Contact, Plunger	IGS - 17	1	Ring, Lock
IAO - 20	1	Spring, Contact	IGS - 99	1	Spacer, Cam
IBK - 1016	1	ROTOR	IGT - 70	1	Spring, Anti - Rattle
IBK - 1027R	1	Shaft, Drive	VC - 46	*	Washer, .032" Thick
IBK - 2001	1	Base Assy. , Dist.	VC - 46A	*	Washer, .010" Thick
IAZ - 7	1	Bushing, Insulation	VC - 46B	*	Washer, .065" Thick
IAZ - 13	1	Insulation, Term. Stud	VC - 174	1	Spring, Vac. Chamber
IAZ - 22	1	Washer, Ins. , Term. Stud	8X - 55	2	Screw, Breaker Plate, Rd. Hd. #8 - 32x3/8
IAZ - 30	1	BEARING, ABS. BRONZE, UPPER	8X - 189B	1	Washer, Plain, Vac. Arm Pin, #4
IAZ - 31	1	Wick, Felt	12X - 195	2	Lockwasher, Breaker Plate Sc. , #8
IAZ - 32	1	Retainer, Felt Wick	8X - 872	2	Screw, Vac. Chamber Mtg. , Fill. Hd. #10 - 32x1/4
IAZ - 34	1	Clip, Terminal	X - 1270	2	Washer, Vac. Chamber Mtg. Sc. , Skpf. #10
IG - 579A	1	BEARING, ABS. BRONZE	XA - 839	1	Pin, Collar
8X - 173	1	Nut, Term. Stud, Hex. #10 - 32			
8X - 183A	1	Washer, Plain, Term. Stud, #10			
12X - 196	1	Lockwasher, Term. Stud, #10			
X - 1590	1	Oiler			
X - 3218	1	Stud, Terminal, Primary			
IBS - 2004R	1	Plate Assy. , Breaker			
IAZ - 10	1	Lead Assy. , Primary			
IAZ - 24	1	Lead Assy. , Breaker Arm			
IBB - 2015R	1	CONDENSER			
IBS - 1004R	1	Plate, Breaker			
IAZ - 11S	1	Lead Assy. , Ground			
IGC - 175B	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6 - 32x1/4			
IGE - 15	2	Washer, Plain, Brkr. Spring Clamp Sc. , #6			
IGW - 3028KS	1	CONTACT SET, BREAKER			

* Use as required.

UNIT	APPLICATION
IBK - 4304	Chrysler, Imperial

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBL-4001A DISTRIBUTOR PARTS LIST

IBL-4001A
(Issued 10-14-55)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-105	1	Gear, Follower	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG-680	1	Snap Ring, Cam Retaining Collar, Shaft, Dist.
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGB-199	1	Collar, Shaft, Dist.
IAO-17	1	Cover, Terminal Slot	IGC-199S	1	Spring Set, Gov. Weight
IAR-1003	1	CAP ASSY., DIST.	IGC-2168L	2	Weight, Governor
IAO-7	1	Contact, Plunger	IGH-28	1	Wick, Felt, Cam Sleeve
IAO-20	1	Spring, Contact	IGP-1016B	1	ROTOR
IAZ-1021LA	1	Cam & Stop Plate, 8 Cyl. L. H.	IGS-99	1	Spacer, Cam
IBL-1002L	1	Shaft, Drive	IGT-69	1	Spring, Anti-Rattle
IBL-2001	1	Base Assy., Dist.	SW-213	2	Rivet, Gear & Collar
IAD-14	1	Bracket, Cap Spring	8X-321	2	Screw, Brkr. Plate Mtg., Rd. Hd. #10-32x5/16
IAO-9	2	Spring, Clamp, Cap	X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IAO-14	1	Bracket, Cap Spring & Locating			
IAZ-30	1	Bearing, Abs. Bronze, Upper			
IAZ-31	1	Wick, Felt			
IAZ-32	1	Retainer, Felt Wick			
IBB-9	2	Bracket, Breaker Plate Mtg.			
X-525	4	Rivet, Tubular			
X-1590	1	Oiler			
IBL-2040	1	Plate Assy., Breaker			
IA-131	1	Clip, Spring, Contact Arm			
IBB-2015L	1	CONDENSER			
IBL-1040	1	Plate, Breaker			
IGC-175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Screw #6			
IGP-3028PS	1	CONTACT SET, BREAKER			
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6			
8X-350	1	Washer, Plain, Contact Lock Sc., #8			
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			

UNIT	APPLICATION
IBL-4001A	Dearborn (Marine)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM-4001, A, B DISTRIBUTOR PARTS LIST

IBM-4001, A, B
(Issued 4-4-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	**	1	SPRING SET, GOVERNOR WEIGHT
IAO-17	1	Cover, Terminal Slot	IG-680	1	Snap Ring, Cam Retaining
IAZ-1026RA	1	Shaft, Drive	IGB-199	1	Collar, Shaft, Dist.
IBB-2012	1	Base Assy., Dist.	IGC-2168R	2	Weight, Governor
IAD-14	1	Bracket, Cap Spring	IGH-28	1	Wick, Felt, Cam Sleeve
IAO-9	2	Spring, Clamp, Cap	IGS-99	1	Spacer, Cam
IAO-14	1	Bracket, Cap Spring & Locating	IGT-70	1	Spring, Anti-Rattle
IAR-9	1	Bracket, Breaker Plate Mtg.	8X-321	2	Screw, Brkr. Plate Mtg. Rd. Hd. #10-32x5/16
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IAZ-31	1	Wick, Felt	XA-839	1	Pin, Collar
IAZ-32	1	Retainer, Felt Wick			
IBB-9	1	Bracket, Breaker Plate Mtg.			
IG-579A	1	BEARING, ABS. BRONZE			
X-525	4	Rivet, Tubular			
X-1590	1	Oiler			
**	1	Cam & Stop Plate, 8 Cyl. R. H.	**	See table following parts list for part number applying to assembly wanted.	
IBK-1003	1	CAP ASSY., DIST.	Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IAO-7	1	Contact, Plunger	IBM-4001	IBJ-1021RK	IG-636KS
IAO-20	1	Spring, Contact	IBM-4001A	IBJ-1021RL	IG-636ES
IBK-1016	1	ROTOR	IBM-4001B	IBJ-1021RM	IGC-200AS
IBM-2040	1	Plate Assy., Breaker			
IA-131	1	Clip, Spring, Contact Arm			
IBB-2015L	1	CONDENSER			
IBM-1040	1	Plate, Breaker			
IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			
IGW-3028NS	1	CONTACT SET, BREAKER			
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6			
8X-350	1	Washer, Plain, Contact Lock Sc., #8			
8X-884	1	Screw, Lock, Brkr. Contact Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			

UNIT	APPLICATION
IBM-4001	Dodge Truck
IBM-4001A	Dodge Truck
IBM-4001B	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking such parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM - 4003 DISTRIBUTOR PARTS LIST

IBM - 4003
(Issued 10-16-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IG-680	1	Snap Ring, Cam Retaining
IAO-17	1	Cover, Terminal Slot	IGB-199	1	Collar, Shaft, Dist.
IAZ-1002RB	1	Shaft, Drive	IGB-386S	1	Spring Set, Governor Weight
IBB-2012	1	Base Assy., Dist.	IGC-2168R	2	Weight, Governor
IAD-14	1	Bracket, Cap Spring	IGH-28	1	Wick, Felt, Cam Sleeve
IAO-9	2	Spring, Clamp, Cap	IGS-99	1	Spacer, Cam
IAO-14	1	Bracket, Cap Spring & Locating	IGT-70	1	Spring, Anti-Rattle
IAR-9	1	Bracket, Breaker Plate Mtg.	8X-321	2	Screw, Brkr. Plate Mtg., Rd. Hd. #10-32x5/16
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IAZ-31	1	Wick, Felt	XA-839	1	Pin, Collar
IAZ-32	1	Retainer, Felt Wick			
IBB-9	1	Bracket, Breaker Plate Mtg.			
IG-579A	1	BEARING, ABS. BRONZE			
X-525	4	Rivet, Tubular			
X-1590	1	Oiler			
IBJ-1021RT	1	Cam & Stop Plate, 8 Cyl. R. H			
IBK-1003	1	CAP ASSY., DIST.			
IAO-7	1	Contact, Plunger			
IAO-20	1	Spring, Contact			
IBK-1016	1	ROTOR			
IBM-2040	1	Plate Assy., Breaker			
IA-131	1	Clip, Spring, Contact Arm			
IBB-2015L	1	CONDENSER			
IBM-1040	1	Plate, Breaker			
IGC-175B	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			
IGW-3028NS	1	CONTACT SET, BREAKER			
12X-194	2	Lockwasher, Condenser & Clamp Sc., #6			
8X-350	1	Washer, Plain, Contact Lock Sc., #8			
8X-884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32			

UNIT	APPLICATION
IBM-4003	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM- 4101 DISTRIBUTOR PARTS LIST

IBM- 4101
(Issued 10- 11- 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG- 680	1	Snap Ring, Cam Retaining
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGB- 199	1	Collar, Shaft, Dist.
IAZ- 1002RB	1	Shaft, Drive	IGB- 386S	1	Spring Set, Gov. Weight
IBJ- 1021RT	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC- 2168R	2	Weight, Governor
IBK- 1003	1	CAP ASSY., DIST.	IGH- 28	1	Wick, Felt, Cam Sleeve
IAO- 7	1	Contact, Plunger	IGS- 99	1	Spacer, Cam
IAO- 20	1	Spring, Contact	IGT- 70	1	Spring, Anti- Rattle
IBK- 1016	1	ROTOR	8X- 870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10- 32x5/16
IBM- 2001	1	Base Assy., Dist.	X- 1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IAD- 14	1	Bracket, Cap Spring	XA- 839	1	Pin, Collar
IAO- 9	2	Spring, Clamp, Cap			
IAO- 14	1	Bracket, Cap Spring & Locating			
IAZ- 30	1	BEARING, ABS. BRONZE, UPPER			
IAZ- 31	1	Wick, Felt			
IAZ- 32	1	Retainer, Felt Wick			
IBB- 9	2	Bracket, Breaker Plate Mtg.			
IG- 579A	1	BEARING, ABS. BRONZE			
X- 525	4	Rivet, Tubular			
X- 1590	1	Oiler			
IBM- 2004R	1	Plate Assy., Breaker			
IBB- 2015L	1	CONDENSER			
IBM- 1004R	1	Plate, Breaker			
IBP- 17	1	Lead Assy., Primary			
IGC- 175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6- 32x5/16			
IGE- 15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			
IGW- 3028NS	1	CONTACT SET, BREAKER			
12X- 194	2	Lockwasher, Condenser & Clamp Sc., #6			
8X- 350	1	Washer, Plain, Contact Lock Sc., #8			
8X- 884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8- 32x3/16			
8X- 1546	1	Screw, Condenser Mtg., Fill. Hd. #6- 32x5/32			
IG- 90	1	Washer, Thrust, Drive Shaft, Lower			

UNIT	APPLICATION
IBM- 4101	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM- 4103 DISTRIBUTOR PARTS LIST

IBM- 4103
(Issued 10- 11- 56)


Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG- 680	1	Snap Ring, Cam Retaining
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGB- 199	1	Collar, Shaft, Dist.
IAZ- 1026RA	1	Shaft, Drive	IGB- 351BS	1	Spring Set, Gov. Weight
IBJ- 1021RU	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC- 2168R	2	Weight, Governor
IBK- 1003	1	CAP ASSY. , DIST.	IGH- 28	1	Wick, Felt, Cam Sleeve
IAO- 7	1	Contact, Plunger	IGS- 99	1	Spacer, Cam
IAO- 20	1	Spring, Contact	IGT- 70	1	Spring, Anti- Rattle
IBK- 1016	1	ROTOR	8X- 870	2	Screw, Brkr. Plate Mtg. , Fill. Hd. #10- 32x5/16
IBM- 2001	1	Base Assy. , Dist.	X- 1270	2	Washer, Brkr. Plate Mtg. Sc. , Skpf. #10
IAD- 14	1	Bracket, Cap Spring	XA- 839	1	Pin, Collar
IAO- 9	2	Spring, Clamp, Cap			
IAO- 14	1	Bracket, Cap Spring & Locating			
IAZ- 30	1	BEARING, ABS. BRONZE, UPPER			
IAZ- 31	1	Wick, Felt			
IAZ- 32	1	Retainer, Felt Wick			
IBB- 9	2	Bracket, Breaker Plate Mtg.			
IG- 579A	1	BEARING, ABS. BRONZE			
X- 525		Rivet, Tubular			
X- 1590	1	Oiler			
IBM- 2004R	1	Plate Assy. , Breaker			
IBB- 2015L	1	CONDENSER			
IBM- 1004R	1	Plate, Breaker			
IBP- 17	1	Lead Assy. , Primary			
IGC- 175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6- 32x5/16			
IGE- 15	1	Washer, Plain, Brkr. Spring Clamp Sc. #6			
IGW- 3028NS	1	CONTACT SET, BREAKER			
12X- 194	2	Lockwasher, Condenser & Clamp Sc. , #6			
8X- 350	1	Washer, Plain, Contact Lock Sc. , #8			
8X- 884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8- 32x3/16			
8X- 1546	1	Screw, Condenser Mtg. Fill. Hd. #6- 32X5/32			
IG- 90	1	Washer, Thrust, Drive Shaft, Lower			

UNIT	APPLICATION
IBM- 4103	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBM- 4104 DISTRIBUTOR PARTS LIST

IBM- 4104
(Issued 10- 12- 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG- 680	1	Snap Ring, Cam Retaining
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGB- 199	1	Collar, Shaft, Dist.
IAZ- 1028R	1	Shaft, Drive	IGB- 376AS	1	Spring Set, Gov. Weight
IBJ- 1021RN	1	Cam & Stop Plate, 8 Cyl. R. H.	IGC- 2168R	2	Weight, Governor
IBK- 1003	1	CAP ASSY., DIST.	IGH- 28	1	Wick, Felt, Cam Sleeve
IAO- 7	1	Contact, Plunger	IGS- 99	1	Spacer, Cam
IAO- 20	1	Spring, Contact	IGT- 70	1	Spring, Anti- Rattle
IBK- 1016	1	ROTOR	8X- 870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10- 32x5/16
IBM- 2004R	1	Plate Assy., Breaker	X- 1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IBB- 2015L	1	CONDENSER	XA- 839	1	Pin, Collar
IBM- 1004R	1	Plate, Breaker			
IBP- 17	1	Lead Assy., Primary			
IGC- 175	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6- 32x5/16			
IGE- 15	1	Washer, Plain, Brkr. Spring Clamp Sc., #6			
IGW- 3028NS	1	CONTACT SET, BREAKER			
12X- 194	2	Lockwasher, Condenser & Clamp Sc., #6			
8X- 350	1	Washer, Plain, Contact Lock Sc., #8			
8X- 884	1	Screw, Lock, Brkr. Contact, Fill. Hd. #8- 32x3/16			
8X- 1546	1	Screw, Condenser Mtg., Fill. Hd. #6- 32x5/32			
IBM- 2012	1	Base Assy., Dist.			
IAD- 14	1	Bracket, Cap Spring			
IAO- 9	2	Spring, Clamp, Cap			
IAO- 14	1	Bracket, Cap Spring & Locating			
IAZ- 30	1	BEARING, ABS. BRONZE, UPPER			
IAZ- 31	1	Wick, Felt			
IAZ- 32	1	Retainer, Felt Wick			
IBB- 9	2	Bracket, Breaker Plate Mtg.			
IG- 579A	1	BEARING, ABS. BRONZE			
X- 525	4	Rivet, Tubular			
X- 1590	1	Oiler			
IG- 90	1	Washer, Thrust, Drive Shaft, Lower			

UNIT	APPLICATION
IBM- 4104	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed.”

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBO-4001-1, A-1 DISTRIBUTOR PARTS LIST

IBO-4001-1, A-1
(Issued 4-4-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner Drive Shaft, Upper	IBK-1003	1	CAP ASSY., DIST.
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IAO-7	1	Contact, Plunger
IAO-17	1	Cover, Terminal Slot	IAO-20	1	Spring, Contact
IBB-1002R	1	Shaft, Drive	IBK-1016	1	ROTOR
IBB-2014	1	Base Assy., Dist.	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAD-14	1	Bracket, Cap Spring	IG-644A	1	Coupling, Drive, Dist.
IAO-9	2	Spring, Clamp, Cap	IG-680	1	Snap Ring, Cam Retaining
IAO-14	1	Bracket, Cap Spring & Locating	**	1	SPRING SET, GOV. WEIGHT
IAR-9	1	Bracket, Breaker Plate Mtg.	IGC-2168R	2	Weight, Governor
IBB-9	1	Bracket, Breaker Plate Mtg.	IGH-28	1	Wick, Felt, Cam Sleeve
IG-579A	2	BEARING, ABS. BRONZE	IGS-99	1	Spacer, Cam
IGT-117	1	Wick, Felt	IGS-114	1	Arm, Advance
X-525	4	Rivet, Tubular	IGT-70	1	Spring, Anti-Rattle
X-1590	1	Oiler	SW-634	1	Washer, Plain, Advance Arm, Mtg. Sc.
IBB-2040A	1	Plate Assy., Breaker	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IA-131	2	Clip, Spring, Contact Arm	12X-199	1	Lockwasher, Advance Arm, 1/4
IAW-24	1	Lead Assy.	8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
IBB-1040	1	Plate, Breaker	X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. #10
IBB-2015RA	1	CONDENSER	XA-839	1	Pin, Coupling
IGC-175	2	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGW-3028PS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Sc., #6			
8X-350	2	Washer, Plain, Contact Lock Sc., #8			
8X-884	2	Screw, Lock, Brkr. Contact Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			
**	1	Cam & Stop Plate, 8 Cyl. R. H.			

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBO-4001-1	IBJ-1021RM	IG-913CS
IBO-4001A-1	IBJ-1021RN	IG-636YS

UNIT	APPLICATION
IBO-4001-1	Dodge Truck
IBO-4001A-1	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBO-4002-1 DISTRIBUTOR PARTS LIST

IBO-4002-1
(Issued 6-18-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-47	1	Gear, Tachometer, Driver	IBJ-1021RN	1	Cam & Stop Plate, 8 Cyl. R. H.
GE-48	1	Gear, Tachometer, Follower	IBK-1003	1	CAP ASSY., DIST.
IAK-40	1	Cap, Tachometer Shaft	IAO-7	1	Contact, Plunger
IAO-17	1	Cover, Terminal Slot	IAO-20	1	Spring, Contact
IBB-2013	1	Base Assy., Dist.	IBK-1016	1	ROTOR
IAD-14	1	Bracket, Cap Spring	IG-90	2	Washer, Thrust, Drive Shaft
IAO-9	2	Spring, Clamp, Cap	IG-644A	1	Coupling, Drive, Dist.
IAO-14	1	Bracket, Cap Spring & Locating	IG-680	1	Snap Ring, Cam Retaining
IAR-9	1	Bracket, Breaker Plate Mtg.	IGB-376AS	1	SPRING SET, GOV. WEIGHT
IBB-9	1	Bracket, Breaker Plate Mtg.	IGC-2168R	2	Weight, Governor
IG-579A	2	BEARING, ABS. BRONZE	IGH-28	1	Wick, Felt, Cam Sleeve
X-382	1	Cup, Grease, 1/8 Pipe	IGS-37	1	Shaft, Drive, Tachometer
X-525	4	Rivet, Tubular	IGS-38	1	Cover, Housing, Tach. Shaft
IBB-2040A	1	Plate Assy., Breaker	IGS-39	1	Washer, Thrust, Tach. Drive Shaft
IA-131	2	Clip, Spring, Contact Arm	IGS-99	1	Spacer, Cam
IAW-24	1	Lead Assy.	IGS-114	1	Arm, Advance
IBB-1040	1	Plate, Breaker	IGS-1145RA	1	Shaft, Drive
IBB-2015RA	1	CONDENSER	IGT-70	1	Spring, Anti-Rattle
IGC-175	2	Screw, Brkr. Spr. Clamp, Hex. Hd. 6-32x5/16	SW-213	2	Rivet, Gear & Coupling
IGE-15	2	Washer, Plain, Clamp Screw, 6	SW-634	1	Washer, Plain, Advance Arm Mtg. Sc.
IGW-3028PS	1	CONTACT SET, BREAKER	8X-86	1	Screw, Advance Arm Mtg., Hex. Hd. 1/4-20x5/8
12X-194	3	Lockwasher, Condenser & Clamp Screw, 6	12X-199	1	Lockwasher, Advance Arm, 1/4
8X-350	2	Washer, Plain, Contact Lock Screw, 8	X-294	1	Bearing, Ball, S. A. E. 202
8X-884	2	Screw, Lock, Breaker Contact, Fill. Hd. 8-32x3/16	8X-870	2	Screw, Breaker Plate Mtg., Fill. Hd. 10-32x5/16
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. 6-32x5/32	X-1270	2	Washer, Brkr. Plate Mtg. Sc., Skpf. 10

UNIT	APPLICATION
IBO-4002-1	Dodge (Truck)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBO-4003 DISTRIBUTOR PARTS LIST

IBO-4003
(Issued 3-27-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IBJ-1021RN	1	Cam & Stop Plate, 8 Cyl. R. H.
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IBK-1003	1	CAP ASSY., DIST.
IAO-17	1	Cover, Terminal Slot	IAO-7	1	Contact, Plunger
IAZ-1002RB	1	Shaft, Drive	IAO-20	1	Spring, Contact
IBB-2012	1	Base Assy., Dist.	IBK-1016	1	ROTOR
IAD-14	1	Bracket, Cap Spring	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-9	2	Spring, Clamp, Cap	IG-636YS	1	SPRING SET, GOV. WEIGHT
IAO-14	1	Bracket, Cap Spring & Locating	IG-680	1	Snap Ring, Cam Retaining
IAR-9	1	Bracket, Breaker Plate Mtg.	IGB-199	1	Collar, Shaft, Dist.
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	IGC-2168R	2	Weight, Governor
IAZ-31	1	Wick, Felt	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-32	1	Retainer, Felt Wick	IGS-99	1	Spacer, Cam
IBB-9	1	Bracket, Breaker Plate Mtg.	IGT-70	1	Spring, Anti-Rattle
IG-579A	1	BEARING, ABS. BRONZE	8X-870	2	Screw, Brkr. Plate Mtg., Fill. Hd. #10-32x5/16
X-525	4	Rivet, Tubular	X-1270	2	Washer, Brkr. Plate Mtg.Sc., Skpf. #10
X-1590	1	Oiler	XA-839	1	Pin, Collar
IBB-2040A	1	Plate Assy., Breaker			
IA-131	2	Clip, Spring, Contact Arm			
IAW-24	1	Lead Assy.			
IBB-1040	1	Plate, Breaker			
IBB-2015RA	1	CONDENSER			
IGC-175	2	Screw, Brkr.- Spring Clamp, Hex. Hd. #6-32x5/16			
IGE-15	2	Washer, Plain, Clamp Screw, #6			
IGW-3028PS	1	CONTACT SET, BREAKER			
12X-194	3	Lockwasher, Condenser & Clamp Sc., #6			
8X-350	2	Washer, Plain, Contact Lock Sc., #8			
8X-884	2	Screw, Lock, Brkr. Cont., Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			

UNIT	APPLICATION
IBO-4003	Dodge Truck

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBP - 4001, A DISTRIBUTOR PARTS LIST

IBP - 4001, A
(Issued 9 - 28 - 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO - 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGS - 99	1	Spacer, Cam
IAO - 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGT - 70	1	Spring, Anti - Rattle
IAT - 29	1	Plug, Vac. Chamber	VC - 46	*	Washer, .032" Thick
IAT - 30	1	Gasket, Vac. Chamber, 1/32" Thick	VC - 46A	*	Washer, .010" Thick
IAZ - 17	1	Washer, Felt	VC - 46B	*	Washer, .065" Thick
IAZ - 1014	1	Spring & Hinge, Clamp, Cap Locating	VC - 179	1	Spring, Vac. Chamber
IAZ - 1015	1	Spring & Hinge, Clamp, Cap	8X - 55	2	Screw, Breaker Plate, Rd. Hd. #8 - 32x3/8
IAZ - 1025RA	1	Shaft, Drive	8X - 189B	1	Washer, Plain, Vacuum Arm Pin, #4
IBK - 1003	1	CAP ASSY., DIST;	12X - 195	2	Lockwasher, Breaker Plate Sc., #8
IAO - 7	1	Contact, Plunger	8X - 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10 - 32x1/4
IAO - 20	1	Spring, Contact	X - 1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IBK - 1016	1	ROTOR	XA - 839	1	Pin, Collar
IBP - 2001	1	Base Assy., Dist.			
IAZ - 30		BEARING, ABS.			
		BRONZE, UPPER			
IAZ - 31	1	Wick, Felt			
IAZ - 32	1	Retainer, Felt Wick			
IG - 579A	1	BEARING, ABS.			
		BRONZE			
X - 1590	1	Oiler			
IBP - 2004R	1	Plate Assy., Breaker			
IAT - 2015RA	1	CONDENSER			
IBP - 17	1	Lead Assy., Primary			
IBP - 2004RS	1	Plate, Breaker			
IBP - 3028AS	1	CONTACT SET, BREAKER			
IGC - 175A	1	Screw, Spring Clamp, Hex. Hd. #6 - 32x3/16			
IGE - 15	1	Washer, Plain, Spring Clamp Sc., #6			
SSB - 38	1	Washer, Plain, Contact Lock Sc., #8			
12X - 194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X - 884	1	Screw, Contact Lock, Fill. Hd. #8 - 32x3/16			
8X - 1546	1	Screw, Condenser Mtg., Fill. Hd. #6 - 32x5/32			
IBP - 2023RC	1	VACUUM CHAMBER			
**	1	Cam & Stop Plate, 8 Cyl. R. H.			
IG - 90	1	Washer, Thrust, Drive Shaft, Lower			
IG - 680	1	Snap Ring, Cam Retaining			
**	1	Spring Set, Gov. Weight			
IGB - 199	1	Collar, Shaft, Dist.			
IGC - 2168R	2	Weight, Governor			
IGH - 28	1	Wick, Felt, Cam Sleeve			
IGS - 17	1	Ring, Lock			

	* Use as required.	
	** See table following parts list for part number applying to assembly wanted.	

Assembly No.	Cam & Stop Plate	Gov. Weight Spring Set
IBP - 4001	IBP - 2209RF	IG - 863AS
IBP - 4001A	IBP - 2209RG	IGB - 388AS

UNIT	APPLICATION
IBP - 4001	DeSoto
IBP - 4001A	DeSoto

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBP- 4002, A, B, C, D DISTRIBUTOR PARTS LIST

IBP- 4002, A, B, C, D
(Issued 4-9-57)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	8X-884	1	Screw, Contact Lock Fill. Hd. #8-32x3/16
IAO-11	1	Washer, Thrust, Outer Drive Shaft, Upper	8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32
IAT-29	1	Plug, Vac. Chamber	**	1	VACUUM CHAMBER
IAT-30	1	Gasket, Vac. Chamber, 1/32" Thick	**	1	Cam & Stop Plate, 8Cyl. R. H.
IAZ-17	1	Washer, Felt	IG-90	1	Washer, Thrust Drive Shaft, Lower
IAZ-1002RC	1	Shaft, Drive	IG-680	1	Snap Ring, Cam Retaining
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IGB-199	1	Collar, Shaft, Dist.
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGC-2168R	2	Weight, Governor
IBK-1003	1	CAP ASSY., DIST.	**	1	Spring Set, Gov. Weight
IAO-7	1	Contact, Plunger	IGH-28	1	Wick, Felt, Cam Sleeve
IAO-20	1	Spring Contact	IGS-17	1	Ring Lock
IBK-1016	1	ROTOR	IGS-99	1	Spacer, Cam
IBP-2001	1	Base Assy., Dist.	IGT-70	1	Spring, Anti-Rattle
IAZ-30	1	BEARING: ABS. BRONZE, UPPER	VC-46	*	Washer, .032" Thick
IAZ-31	1	Wick, Felt	VC-46A	*	Washer, .010" Thick
IAZ-32	1	Retainer, Felt Wick	VC-46B	*	Washer, .065" Thick
IG-579A	1	BEARING, ABS. BRONZE	**	1	Spring, Vac. Chamber
X-1590	1	Oiler	8X-55	2	Screw, Breaker Plate Rd. Hd. #8-32x3/8
IBP-2004R	1	Plate Assy., Breaker	8X-189B	1	Washer, Plain, Vacuum Arm Pin, #4
IBB-2042SS-1	1	CONDENSER PACKAGE	12X-195	2	Lockwasher Breaker Plate Sc., #8
IBP-17	1	Lead Assy., Primary	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IBP-2004RS	1	Plate, Breaker	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IBP-3028AS	1	Contact Set, Breaker	XA-839	1	Pin, Collar
IGC-175A	1	Screw, Spring Clamp, Hex. Hd. #6-32x3/16			
IGE-15	1	Washer, Plain, Spring Clamp Sc., #6			
SSB-38	1	Washer, Plain, Contact Lock Sc., #8			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			

* Use as required.

** See table following parts list for part number applying to assembly wanted.

Assembly No.	Vacuum Chamber	Cam & Stop Plate	Gov. Weight Spring Set	Vac. Chamber Spring
IBP-4002	IBP-2023R	IBP-2209RA	IGE-29AS	VC-177
IBP-4002A	IBP-2023RB	IBP-2209RD	IGC-154BS	VC-178
IBP-4002B	IBP-2023R	IBP-2209RB	IGB-389AS	VC-177
IBP-4002C	IBP-2023RA	IBP-2209RB	IG-776AS	VC-177
IBP-4002D	IBP-2023R	IBP-2209RG	IGB-385BS	VC-155

UNIT	APPLICATION
IBP-4002	Dodge, DeSoto
IBP-4002A	Chrysler
IBP-4002B	Dodge, DeSoto
IBP-4002C	Dodge Truck
IBP-4002D	Dodge D500

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBP- 4003, A, B, C DISTRIBUTOR PARTS LIST

IBP- 4003, A, B, C
(Issued 9- 28 - 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	**	1	VACUUM CHAMBER
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	**	1	Cam & Stop Plate, 8 Cyl. R. H.
IAT- 29	1	Plug, Vac. Chamber	IG- 90	1	Washer, Thrust, Drive Shaft, Lower
IAT- 30	1	Gasket, Vac. Chamber, 1/32" Thick	IG- 680	1	Snap Ring, Cam Retaining
IAZ- 17	1	Washer, Felt	IGB- 199	1	Collar, Shaft, Dist.
IAZ- 1014	1	Spring & Hinge, Clamp, Cap Locating	**	1	Spring Set, Gov. Weight
IAZ- 1015	1	Spring & Hinge, Clamp, Cap	IGC- 2168R	2	Weight, Governor
IAZ- 1026RB	1	Shaft, Drive	IGH- 28	1	Wick, Felt, Cam Sleeve
IBK- 1003	1	CAP ASSY., DIST.	IGS- 17	1	Ring, Lock
IAO- 7	1	Contact, Plunger	IGS- 99	1	Spacer, Cam
IAO- 20	1	Spring, Contact	IGT- 70	1	Spring, Anti- Rattle
IBK- 1016	1	ROTOR	VC- 46	*	Washer, .032" Thick
IBP- 2001	1	Base Assy., Dist.	VC- 46A	*	Washer, .010" Thick
IAZ- 30	1	BEARING, ABS.	VC- 46B	*	Washer, .065" Thick
IAZ- 31	1	Wick, Felt	**	1	Spring, Vac. Chamber
IAZ- 32	1	Retainer, Felt Wick	8X- 55	2	Screw, Breaker Plate, Rd. Hd. #8- 32x3/8
IG- 579A	1	BEARING, ABS.	8X- 189B	1	Washer, Plain, Vacuum Arm Pin, #4
X- 1590	1	Oiler	12X- 195	2	Lockwasher, Breaker Plate Sc., #8
IBP- 2004R	1	Plate Assy., Breaker	8X- 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10- 32x1/4
IAT- 2015RA	1	CONDENSER	X- 1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IBP- 17	1	Lead Assy., Primary	XA- 839	1	Pin, Collar
IBP- 2004RS	1	Plate, Breaker			
IBP- 3028AS	1	CONTACT SET, BREAKER			
IGC- 175A	1	Screw, Spring Clamp, Hex. Hd. #6- 32x3/16			
IGE- 15	1	Washer, Plain, Spring Clamp Sc., #6			
SSB- 38	1	Washer, Plain, Contact Lock Sc., #8			
12X- 194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X- 884	1	Screw, Cont. Lock, Fill. Hd. #8- 32x3/16			
8X- 1546	1	Screw, Condenser Mtg., Fill. Hd. #6- 32x5/32			

* Use as required.

** See table following parts list for part number applying to assembly wanted.


Assembly No.	Vacuum Chamber	Cam & Stop Plate	Gov. Weight Spring Set	Vac. Chamber Spring
IBP- 4003	IBP- 2023R	IBP- 2209R	IGE- 29BS	VC- 177
IBP- 4003A	IBP- 2023RA	IBP- 2209RC	IGC- 200BS	VC- 177
IBP- 4003B	IBP- 2023R	IBP- 2209RE	IGB- 351BS	VC- 177
IBP- 4003C	IBP- 2023RD	IBP- 2209RH	IGC- 154AS	VC- 55

UNIT	APPLICATION
IBP- 4003	Dodge 8(Canada), Plymouth 8
IBP- 4003A	Plymouth 8
IBP- 4003B	
IBP- 4003C	Plymouth 8

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

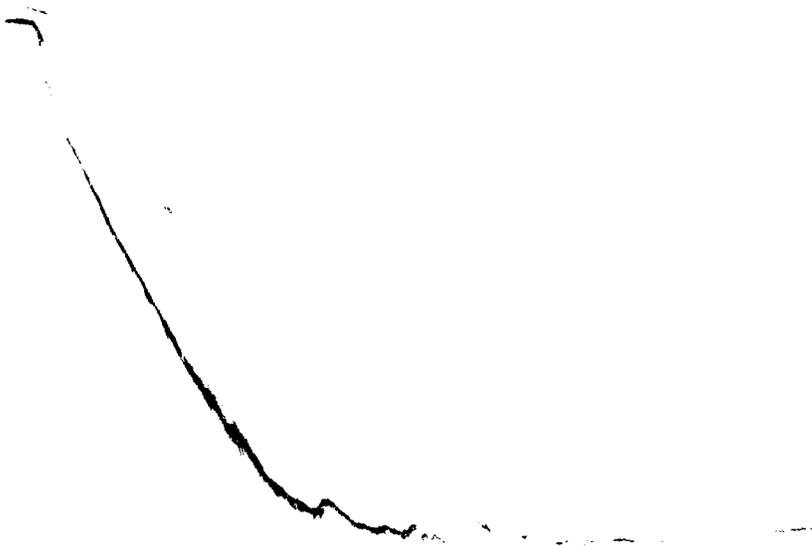

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBR- 4001 DISTRIBUTOR PARTS LIST

IBR- 4001
(Issued 9- 28- 56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGS- 114	1	Arm, Advance
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGS- 1100RBB	1	Cam & Stop Plate, 6 Cyl. R. H.
IAT- 29	1	Plug, Vacuum Chamber	IGS- 1113RD	1	Shaft, Drive
IAT- 30	1	Gasket, 1/32" Thick	IGT- 70	1	Spring, Anti- Rattle
IAT- 1033	1	CAP ASSY., DIST.	IGT- 117	1	Wick, Felt
IAO- 7	1	Contact, Plunger	SW- 634	1	Washer, Plain, Advance Arm Mtg. Screw
IAO- 20	1	Spring, Contact	VC- 46	*	Washer, .032" Thick
IAT- 2023RJ	1	VACUUM CHAMBER	VC- 46A	*	Washer, .010" Thick
IAU- 1016A	1	ROTOR	VC- 46B	*	Washer, .065" Thick
IBR- 2035	1	Base Assy., Dist.	VC- 76	1	Spring, Vac. Chamber
IG- 579A	2	BEARING, ABS. BRONZE	8X- 86	1	Screw, Advance Arm. Hex. Hd. 1/4- 20x5/8
IBR- 2050R	1	Plate Assy., Breaker	12X- 195	2	Lockwasher, Breaker Plate Sc., #8
IAT- 2015RA	1	CONDENSER	12X- 199	1	Lockwasher, Advance Arm, 1/4
IBP- 17A	1	Lead Assy., Primary	8X- 304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8- 32x5/16
IBR- 2050RS	1	Plate, Breaker	8X- 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10- 32x1/4
IGC- 175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6- 32x3/16	X- 1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IGE- 15	1	Washer, Plain, Brkr. Spring Clamp Screw, #6	X- 1590	1	Oiler
IGW- 3028BS	1	CONTACT SET, BREAKER	XA- 839	1	Pin, Collar
SSB- 38	1	Washer, Plain, Contact Lock Screw, #8			
12X- 194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X- 884	1	Screw, Contact Lock, Fill. Hd. #8- 32x3/16			
8X- 1546	1	Screw, Condenser Mtg., Fill. Hd. #6- 32x5/32			
IG- 90	1	Washer, Thrust, Drive Shaft, Lower			
IG- 680	1	Snap Ring, Cam Retaining			
IGB- 199	1	Collar, Shaft, Dist.			
IGB- 381AS	1	Spring Set, Gov. Weight			
IGB- 1007	2	Spring & Hinge, Clamp, Cap			
IGC- 2168R	2	Weight, Governor			
IGH- 28	1	Wick, Felt, Cam Sleeve			
IGS- 17	1	Ring, Lock			
IGS- 99	1	Spacer, Cam			

* Use as required.

UNIT	APPLICATION
IBR- 4001	Dodge 6, DeSoto 6 (Canada), Plymouth 6

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBR - 4002 DISTRIBUTOR PARTS LIST

IBR - 4002
(Issued 10-12-56)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGS-114	1	Arm, Advance
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGS-1100RQ	1	Cam & Stop Plate, 6 Cyl. R. H.
IAT-29	1	Plug. Vacuum Chamber	IGS-1112RD	1	Shaft, Drive
IAT-30	1	Gasket, 1/32" Thick	IGT-70	1	Spring, Anti-Rattle
IAT-1033	1	CAP ASSY., DIST.	IGT-117	1	Wick, Felt
IAO-7	1	Contact, Plunger	SW-634	1	Washer, Plain, Advance Arm Mtg. Screw
IAO-20	1	Spring, Contact	VC-46	*	Washer, .032" Thick
IAT-2023RK	1	VACUUM CHAMBER	VC-46A	*	Washer, .010" Thick
IAU-1016A	1	ROTOR	VC-46B	*	Washer, .065" Thick
IBR-2035	1	Base Assy., Dist.	VC-76	1	Spring, Vac. Chamber
IG-579A	2	BEARING, ABS. BRONZE	8X-86	1	Screw, Advance Arm, Hex. Hd. 1/4-20x5/8
IBR-2050RA	1	Plate Assy., Breaker	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IAT-2015RA	1	CONDENSER	12X-199	1	Lockwasher, Advance Arm, 1/4
IBP-17D	1	Lead Assy., Primary	8X-304	2	Screw, Breaker Plate Mtg., Rd. Hd. #8-32x5/16
IBR-2050RS	1	Plate, Breaker	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IGC-175A	1	Screw, Brkr. Spring Clamp, Hex. Hd. #6-32x3/16	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IGE-15	1	Washer, Plain, Brkr. Spring Clamp Screw #6	X-1590	1	Oiler
IGW-3028BS	1	CONTACT SET, BREAKER	XA-839	1	Pin, Collar
SSB-38	1	Washer, Plain, Contact Lock Screw, #8			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X-884	1	Screw, Contact Lock, Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg. Fill. Hd. #6-32x5/32			
IG-90	1	Washer, Thrust, Drive Shaft, Lower			
IG-680	1	Snap Ring, Cam Retaining			
IGB-199	1	Collar, Shaft, Dist.			
IGB-336CS	1	Spring Set, Gov. Weight			
IGB-1007	2	Spring & Hinge, Clamp, Cap			
IGC-2168R	2	Weight, Governor			
IGH-28	1	Wick, Felt, Cam Sleeve			
IGS-17	1	Ring, Lock			
IGS-99	1	Spacer, Cam			

* Use as required.

UNIT	APPLICATION
IBR-4002	Dodge Truck (Canada) Dodge (Canada) Plymouth (Canada)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBS-4003 DISTRIBUTOR PARTS LIST

IBS-4003
(Issued 4-9-57)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO-10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IG-90	1	Washer, Thrust, Drive Shaft, Lower
IAO-11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IG-680	1	Snap Ring, Cam Retaining
IAT-29	1	Plug, Vac. Chamber	IGB-199	1	Collar, Shaft, Dist.
IAT-30	1	Gasket, 1/32" Thick	IGB-250AS	1	Spring Set, Gov. Weight
IAZ-17	1	Washer, Felt	IGC-2168R	2	Weight, Governor
IAZ-1014	1	Spring & Hinge, Clamp, Cap Locating	IGH-28	1	Wick, Felt, Cam Sleeve
IAZ-1015	1	Spring & Hinge, Clamp, Cap	IGS-17	1	Ring, Lock
IAZ-1021RK	1	Cam & Stop Plate, 8 Cyl. R. H.	IGS-99	1	Spacer, Cam
IAZ-1026RC	1	Shaft, Drive	IGT-70	1	Spring, Anti-Rattle
IAZ-2023RG	1	VACUUM CHAMBER	VC-46	*	Washer, .032" Thick
IBK-1003	1	CAP ASSY., DIST.	VC-46A	*	Washer, .010" Thick
IAO-7	1	Contact, Plunger	VC-46B	*	Washer, .065" Thick
IAO-20	1	Spring, Contact	VC-180	1	Spring
IBK-1016	1	ROTOR	8X-55	2	Screw, Breaker Plate, Rd. Hd. #8-32x3/8
IBK-2001	1	Base Assy., Dist.	8X-189B	1	Washer, Plain, Vac. Arm Pin, #4
IAZ-7	1	Bushing, Insulation	12X-195	2	Lockwasher, Breaker Plate Sc., #8
IAZ-13	1	Insulation, Term. Stud	8X-872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10-32x1/4
IAZ-22	1	Washer, Ins., Term. Stud	X-1270	2	Washer, Vac. Chamber Mtg. Sc., Skpf. #10
IAZ-30	1	BEARING, ABS. BRONZE, UPPER	XA-839	1	Pin, Collar
IAZ-31	1	Wick, Felt			
IAZ-32	1	Retainer, Felt Wick			
IAZ-34	1	Clip, Terminal			
IG-579A	1	BEARING, ABS. BRONZE			
8X-173	1	Nut, Term. Stud, Hex. 10-32			
8X-183A	1	Washer, Plain, Term. Stud, #10			
12X-196	1	Lockwasher, Term. Stud, #10			
X-1590	1	Oiler			
X-3218	1	Stud Terminal, Primary			
IBS-2004R	1	Plate Assy., Breaker			
IAZ-10	1	Lead Assy., Primary			
IAZ-24	1	Lead Assy., Breaker Arm			
IBB-2042SS-1	1	CONDENSER PACKAGE			
IBS-1004R	1	Plate, Breaker			
IAZ-11S	1	Lead Assy., Ground			
IGC-175B	2	Screw, Spring Clamp, Hex. Hd. #6-32x1/4			
IGE-15	2	Washer, Plain, Spring Clamp Screw, #6			
IGW-3028KS	1	Contact Set, Breaker			
12X-194	1	Lockwasher, Condenser Mtg. Sc., #6			
8X-350	1	Washer, Plain, Contact Brkt. Sc., #8			
8X-884	2	Screw, Contact Lead & Brkt., Fill. Hd. #8-32x3/16			
8X-1546	1	Screw, Condenser Mtg., Fill. Hd. #6-32x5/32			

* Use as required.

UNIT	APPLICATION
IBS-4003	Plymouth Fury

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking such parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBS- 4004 DISTRIBUTOR PARTS LIST

IBS- 4004
(Issued 4-9-57)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	8X- 884	2	Screw, Cont. Lead & Brkt., Fill. Hd. #8 - 32x3/16
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	8X- 1546	1	Screw, Condenser Mtg., Fill. Hd. #6 - 32x5/32
IAT- 29	1	Plug, Vacuum Chamber	IG- 90	1	Washer, Thrust, Drive Shaft, Lower
IAT- 30	1	Gasket, 1/32" Thick	IG- 680	1	Snap Ring, Cam Retaining
IAZ- 17	1	Washer, Felt	IGB- 199	1	Collar, Shaft, Dist.
IAZ- 1014	1	Spring & Hinge, Clamp, Cap Locating	IGB- 352S	1	Spring Set, Gov. Weight
IAZ- 1015	1	Spring & Hinge, Clamp, Cap	IGC- 2168R	2	Weight, Governor
IAZ- 1021RK	1	Cam & Stop Plate, 8Cyl. R. H.	IGH- 28	1	Wick, Felt, Cam Sleeve
IAZ- 1025RB	1	Shaft, Drive	IGS- 17	1	Ring, Lock
IAZ- 2023RG	1	VACUUM CHAMBER	IGS- 99	1	Spacer, Cam
IBK- 1003	1	CAP ASSY., DIST.	IGT- 70	1	Spring, Anti - Rattle
IAO- 7	1	Contact, Plunger	VC- 46	*	Washer, .032" Thick
IAO- 20	1	Spring, Contact	VC- 46A	*	Washer, .010" Thick
IBK- 1016	1	ROTOR	VC- 46B	*	Washer, .065" Thick
IBK- 2001	1	Base Assy., Dist.	VC- 180	1	Spring
IAZ- 7	1	Bushing, Insulation	8X- 55	2	Screw, Breaker Plate, Rd. Hd. #8 - 32x3/8
IAZ- 13	1	Insulation, Term. Stud	8X- 189B	1	Washer, Plain, Vac. Arm Pin #4
IAZ- 22	1	Washer, Ins., Term. Stud	12X- 195	2	Lockwasher, Breaker Plate Screw, #8
IAZ- 30	1	BEARING, ABS. BRONZE UPPER	8X- 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10 - 32x1/4
IAZ- 31	1	Wick, Felt	X- 1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
IAZ- 32	1	Retainer, Felt Wick	XA- 839	1	Pin, Collar
IAZ- 34	1	Clip, Terminal			
IG- 579A	1	BEARING, ABS. BRONZE			
8X- 173	1	Nut, Term. Stud, Hex. #10-32			
8X- 183A	1	Washer, Plain, Term. Stud, #10			
12X- 196	1	Lockwasher, Term. Stud, #10			
X- 1590	1	Oiler			
X- 3218	1	Stud, Terminal, Primary			
IBS- 2004R	1	Plate Assy., Breaker			
IAZ- 10	1	Lead Assy., Primary			
IAZ- 24	1	Lead Assy., Breaker Arm			
IBB- 2042SS-1	1	CONDENSER PACKAGE			
IBS- 1004R	1	Plate, Breaker			
IAZ- 11S	1	Lead Assy., Ground			
IGC- 175B	2	Screw, Spring Clamp, Hex. Hd. #6 - 32x1/4			
IGE- 15	2	Washer, Plain, Spring Clamp Screw #6			
IGW- 3028KS	1	CONTACT SET, BREAKER			
12X- 194	1	Lockwasher, Condenser Mtg. Screw, #6			
8X- 350	1	Washer, Plain, Contact Bracket Screw, #8			

* Use as required.

UNIT	APPLICATION
IBS- 4004	DeSoto Adventurer

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IBS- 4005 DISTRIBUTOR PARTS LIST

IBS- 4005
(Issued 4- 10-57)

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IAO- 10	1	Washer, Thrust, Inner, Drive Shaft, Upper	IGE- 15	2	Washer, Plain, Spring Clamp Screw, #6
IAO- 11	1	Washer, Thrust, Outer, Drive Shaft, Upper	IGW- 3028KS	1	CONTACT SET, BREAKER
IAT- 29	1	Plug, Vacuum Chamber	12X- 194	1	Lockwasher, Condenser Mtg. Screw, #6
IAT- 30	1	Gasket, 1/32" Thick	8X- 350	1	Washer, Plain, Contact Bracket Screw #8
IAZ- 17	1	Washer, Felt	8X- 884	2	Screw, Cont. Lead & Brkt. Fill. Hd. #8- 32x3/16
IAZ- 1002RD	1	Shaft, Drive	8X- 1546	1	Screw, Condenser Mtg., Fill. Hd. #6- 32x5/32
IAZ- 1014	1	Spring & Hinge Clamp, Cap Locating	IG- 90	1	Washer, Thrust, Drive Shaft Lower
IAZ- 1015	1	Spring & Hinge, Clamp, Cap	IG- 680	1	Snap Ring, Cam Retaining
IAZ- 1021RK	1	Cam & Stop Plate, 8Cyl. R. H.	IGB- 199	1	Collar, Shaft, Dist.
IAZ- 2023RG	1	VACUUM CHAMBER	IGB- 348AS	1	Spring Set, Gov. Weight
IBK- 1003	1	CAP ASSY., DIST.	IGC- 2168R	2	Weight, Governor
IAO- 7	1	Contact, Plunger	IGH- 28	1	Wick, Felt, Cam Sleeve
IAO- 20	1	Spring, Contact	IGS- 17	1	Ring, Lock
IBK- 1016	1	ROTOR	IGS- 99	1	Spacer, Cam
IBK- 2001	1	Base Assy., Dist.	IGT- 70	1	Spring, Anti- Rattle
IAZ- 7	1	Bushing, Insulation	VC- 46	*	Washer, .032" Thick
IAZ- 13	1	Insulation, Term. Stud	VC- 46A	*	Washer, .010" Thick
IAZ- 22	1	Washer, Ins., Term. Stud	VC- 46B	*	Washer, .065" Thick
IAZ- 30	1	BEARING, ABS. BRONZE, UPPER	VC- 180	1	Spring
IAZ- 31	1	Wick, Felt	8X- 55	2	Screw, Breaker Plate, Rd. Hd. #8- 32x3/8
IAZ- 32	1	Retainer, Felt Wick	8X- 189B	1	Washer, Plain, Vac. Arm Pin #4
IAZ- 34	1	Clip, Terminal	12X- 195	2	Lockwasher, Breaker, Plate Screw, #8
IG- 579A	1	BEARING, ABS. BRONZE	8X- 872	2	Screw, Vac. Chamber Mtg., Fill. Hd. #10- 32x1/4
8X- 173	1	Nut, Term. Stud, Hex.#10-32	X- 1270	2	Washer, Vac. Chamber Mtg. Screw, Skpf. #10
8X- 183A	1	Washer, Plain, Term. Stud, #10	XA- 839	1	Pin, Collar
12X- 196	1	Lockwasher, Term. Stud,#10			
X- 1590	1	Oiler			
X- 3218	1	Stud, Terminal, Primary			
IBS- 2004R	1	Plate Assy., Breaker			
IAZ- 10	1	Lead Assy., Primary			
IAZ- 24	1	Lead Assy., Breaker Arm			
IBB- 2042SS-1	1	CONDENSER PACKAGE			
IBS- 1004R	1	Plate, Breaker			
IAZ- 11S	1	Lead Assy., Ground			
IGC- 175B	2	Screw, Spring Clamp, Hex. Hd. #6- 32x1/4			

* Use as required

UNIT	APPLICATION
IBS- 4005	Dodge D500

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4005A-B-C DISTRIBUTOR PARTS LIST
-D-E-F-G-H
-J

IGB-4005A-B-C
-D-E-F-G-H
-J

Part No.	No. Used	Name of Part				
		1	2	3	4	5
*	1	Dist. Gear - Follower				
*	1	Dist. Drive Rivet				
IG-90	2	Thrust Washer				
IG-94	5	H.T. Wire Terminal				
IG-686	1	Advance Control Screw - 1/4-28				
IG-687	1	Spring Washer				
IG-688	2	Advance Control Washer				
*	1	Advance Control Arm				
IG-816	1	Thrust Washer				
IGB-1001	1	Dist. Cap Assembly				
IGB-24	1	Contact Plunger				
IGB-1002	1	Rotor				
IGB-1035RA	1	Breaker Cam & Shaft - 4 cyl. R.H.				
IGB-3037	1	Dist. Base Assembly				
IB-23	1	Breaker Point Lock Nut				
IB-24	1	Breaker Screw Point				
IGB-20	1	Terminal Post - #10-32				
IGB-21	1	Terminal Post Ins.				
IGB-22	1	Insulating Washer				
IGB-89	1	Insulating Bushing				
IGB-220	1	Lock Spring				
IGB-1007	2	Dist. Cap Spring & Hinge Assembly				
IGB-1025B	1	Condenser Assembly				
IGB-2037	1	Dist. Base Part Assy.				
IG-511	1	Name Plate				
IGB-38	1	Breaker Point Screw Bracket				
X-278	2	3/32x3/16 Tubular Rivet				
8X-302	2	#6-32x1/4 Rd. Hd. Screw				
X-490	1	Press in-Sleeve Oiler				
X-1012	2	#6 Lock Washer				
IGP-3028	1	Breaker Arm Assembly				
IGP-30	1	Breaker Arm Spring				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-173	2	#10-32 Hex. Nut				
8X-183	1	#10 Plain Washer				
X-195	2	#8 Lock Washer				
X-196	2	#10 Lock Washer				
8X-884	3	#8-32x3/16 Fill. Hd. Sc.				
X-1276	1	#8 Skpf. Washer				
X-199	1	1/4 Lock Washer				
8X-794	1	#10-32 Square Nut				
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.				
8X-1063	1	1/4-28 Hex. Nut				
		1	2	3	4	5

(Issued 4-26-33)
(R-12-27-35)


Assembly No.	Advance Arm	Dist. Gear	Drive Rivet
IGB-4005A	IG-806A	GJ-168	GJ-306
IGB-4005B	IG-806A	IG-261	IGB-247
IGB-4005C	IG-806A	GK-36	IGB-247
IGB-4005D	IG-806	GK-36	IGB-247
IGB-4005E	IG-806	IG-261	IGB-247
IGB-4005F	IG-806	GE-30	IGB-247
IGB-4005G	IG-806A	GE-20	IGB-247
IGB-4005H	IG-806C	IG-261	IGB-247
IGB-4005J	IG-806C	GK-36	IGB-247

* See table following parts list for part number applying to assembly wanted.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."



ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4019A-B DISTRIBUTOR PARTS LIST

IGB-4019A-B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
*	1	Dist. Gear - Follower	6X-173	2	#10-32 Hex. Nut
IG-90	2	Thrust Washer	6X-183	1	#10 Brass Washer
*	1	Dist. Drive Rivet	X-195	3	#8 Lock Washer
IG-686	1	Advance Control Screw - 1/4-28	X-196	2	#10 Lock Washer
IG-687	1	Spring Washer	X-199	1	1/4 Lock Washer
IG-688	2	Advance Control Washer	6X-304	3	#8-32x5/16 Rd. Hd. Screw
IG-808	1	Advance Control Arm	6X-794	1	#10-32 Square Nut
IG-816	1	Thrust Washer	6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
IGB-20	1	Terminal Post - #10-32	6X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-21	1	Terminal Post Insulation	X-1063	1	1/4-28 Hex. Nut
IGB-22	1	Insulating Washer	X-1276	1	#8 Skpf. Washer
IGB-89	1	Insulating Bushing			1 2 3 4 5
IGB-1001	1	Dist. Cap Assembly			(Issued 8-17-28)
IGB-24	1	Contact Plunger			(R-7-9-36)
IGB-1002	1	Rotor			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-2009RJ	1	Drive Shaft & Gov. Assy.			
IA-77	2	Weight Spring			
IGB-14B	2	Weight			
IGB-1009R	1	Drive Shaft Assembly			
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.			
IGB-2010	1	Breaker Plate Assembly			
IB-23	1	Breaker Point Lock Nut			
IB-24	1	Breaker Point Screw			
IGB-1010	1	Breaker Plate Part Assy.			
IGB-2041	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579	2	Bronze Graphite Brg.			
X-247	2	3/32x3/16 Split Rivet			
X-490	1	Press in - Sleeve Oiler			
IGB-3664	1	Breaker Arm Assembly			
		1 2 3 4 5			

	Assembly No.	Dist. Gear	Drive Rivet
	IGB-4019A	GJ-168	GJ-306
	IGB-4019B	GK-36	IGB-247

* See table following parts list for part number applying to assembly wanted.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4041A,
B,C,D,E,F DISTRIBUTOR PARTS LIST

IGB-4041A,
B,C,D,E,F

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGP-3028	1	Breaker Arm Assy.
IG-94	5	H. T. Wire Terminal	IGP-30	1	Breaker Arm Spring
*	1	Dist. Gear - Follower	8X-163	1	1/4-20 Hex. Nut
IG-816	1	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IG-860A	1	Hold Down Arm	8X-183	1	#10 Brass Washer
IGB-20	1	Terminal Post - #10-32	X-195	3	#8 Lock Washer
IGB-21	1	Terminal Post Insulation	X-196	2	#10 Lock Washer
IGB-22	1	Insulating Washer	X-199	1	1/4 Lock Washer
IGB-89	1	Insulating Bushing	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-162	1	Thrust Washer	8X-794	1	#10-32 Square Nut
IGB-220	1	Lock Spring	8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-247	1	Dist. Drive Rivet	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-1001	1	Dist. Cap Assembly	8X-905	1	1/4-20x7/16 Fill. Hd. Sc.
IGB-24	1	Contact Plunger	X-1276	1	#8 Skpf. Washer
IGB-1002	1	Rotor			1 2 3 4 5
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 5-25-36)
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight			
IGB-1175R	1	Drive Shaft Assy.			
*	1	Cam & Stop Plate - 4 cyl. R.H.			
IGB-2176	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Cam Assy.	Weight Spring	Weight Assy.	Gear - Follower	Weight Spr. Set
IGB-4041A	IGB-2175R	IGB-2017RA	IG-863	IGB-14B	IG-261	IG-863S
IGB-4041B	IGB-2175RB	IGB-2017R	IG-776	IGB-14D	GK-36	IG-776S
IGB-4041C	IGB-2175RE	IGB-2017R	IGC-78	IGB-14F	GK-36	IGC-78S
IGB-4041D	IGB-2175R	IGB-2017RA	IG-863	IGB-14B	GK-36	IG-863S
IGB-4041E	IGB-2175RL	IGB-2017R	IA-77	IGB-14B	IG-261	IA-77S
IGB-4041F	IGB-2175RR	IGB-2017R	IG-775	IGB-14D	GK-36	IG-775S

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4041A,B,C,D,E,F DISTRIBUTOR ILLUSTRATION

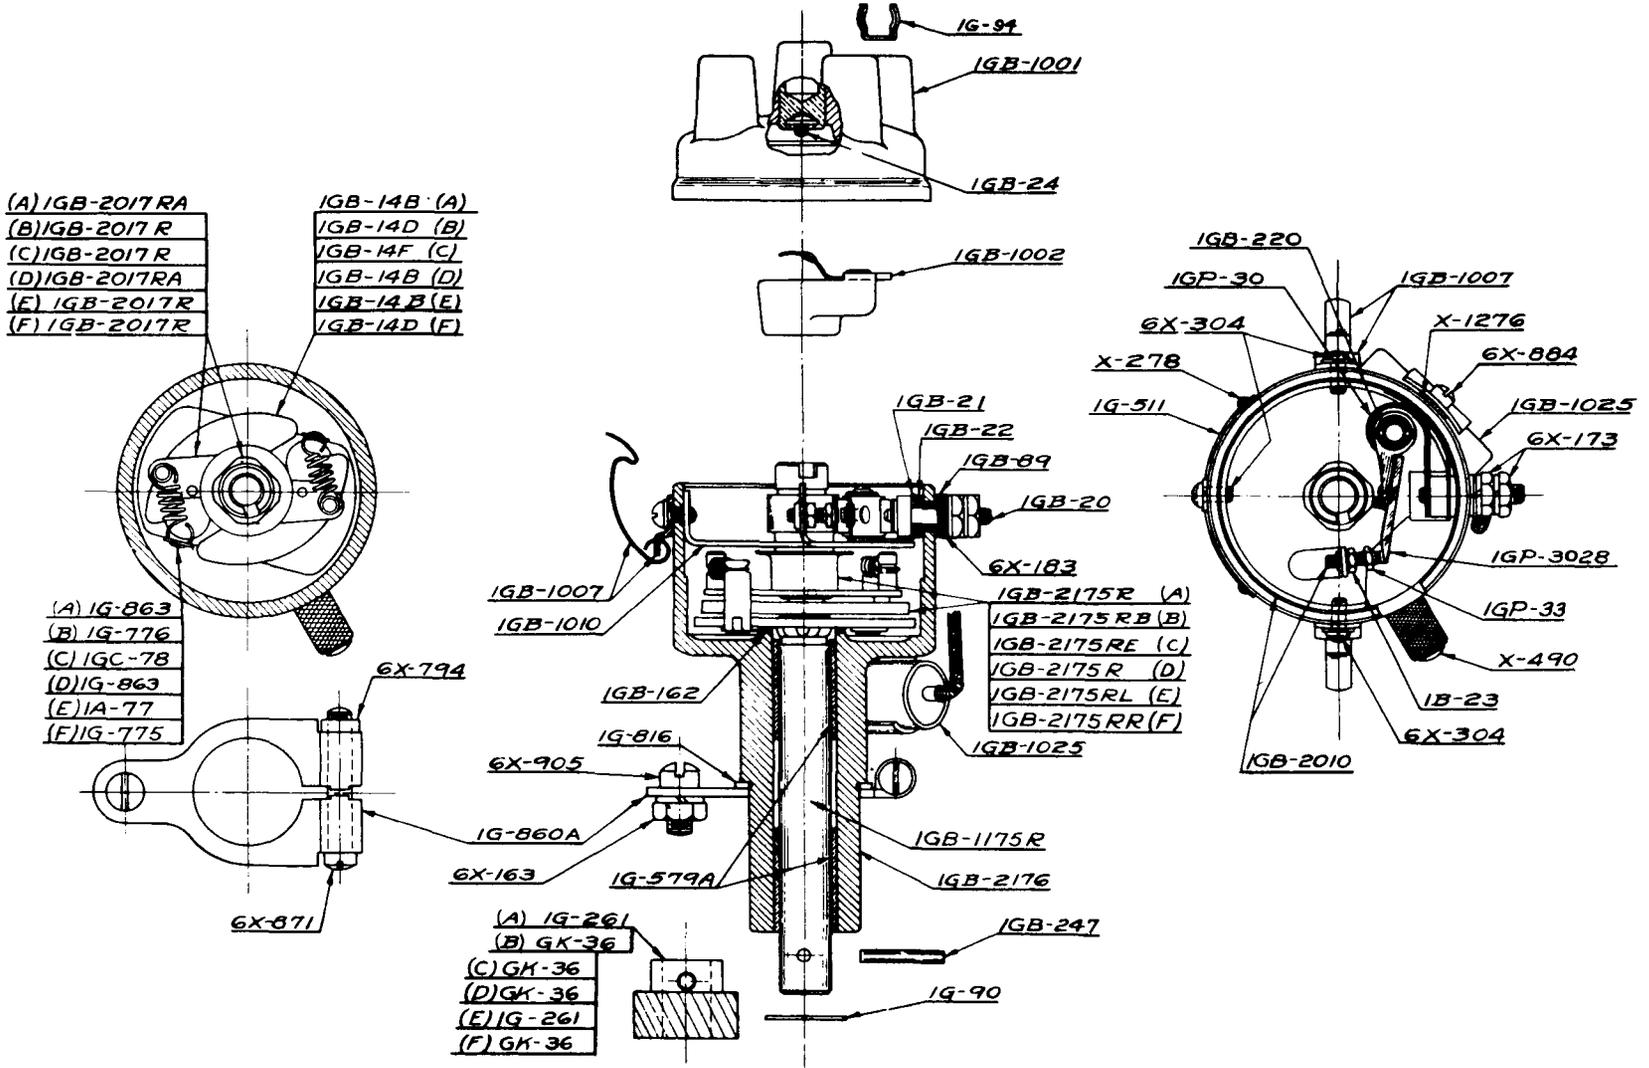

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4045,A DISTRIBUTOR PARTS LIST

IGB-4045,A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 2 3 4 5 Thrust Washer	X-173	2	1 2 3 4 5 #10-32 Hex. Nut
IG-94	5	H.T. Wire Terminal	6X-183	1	#10 Brass Washer
IG-644	1	Distributor Drive Coupling	X-195	3	#8 Lock Washer
IG-816	1	Thrust Washer	X-196	2	#10 Lock Washer
IGB-20	1	Terminal Post - #10-32	6X-304	3	#8-32x5/16 Rd. Hd. Sc.
IGB-21	1	Terminal Post Ins.	6X-794	1	#10-32 Square Nut
IGB-22	1	Insulating Washer	6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
IGB-89	1	Insulating Bushing	6X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-184	1	Advance Control Arm			1 2 3 4 5
IGB-220	1	Lock Spring			
IGB-1001	1	Dist. Cap Assy.			(Issued 1-11-38)
IGB-24	1	Contact Plunger			
IGB-1002	1	Rotor			
IGB-1007	2	Dist.Cap Spring & Hinge Assy.			
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Erg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight			
IGB-1181R	1	Drive Shaft Assy.			
*	1	Cam & Stop Plate - 4 cyl. R.H.			
IGP-3028†	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
SW-213	1	Dist. Drive Rivet			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Sp. Set	Weight	Cam Assembly
IGB-4045	IGB-2181R	IG-913	IG-913S	IGB-14B	IGB-2017RA
IGB-4045A	IGB-2181RS	IG-654	IG-654S	IGB-14J	IGB-2017R


* See table following parts list for part number applying to assembly wanted.

† Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts List Binder

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking such parts the complete part can be assembled as needed.”

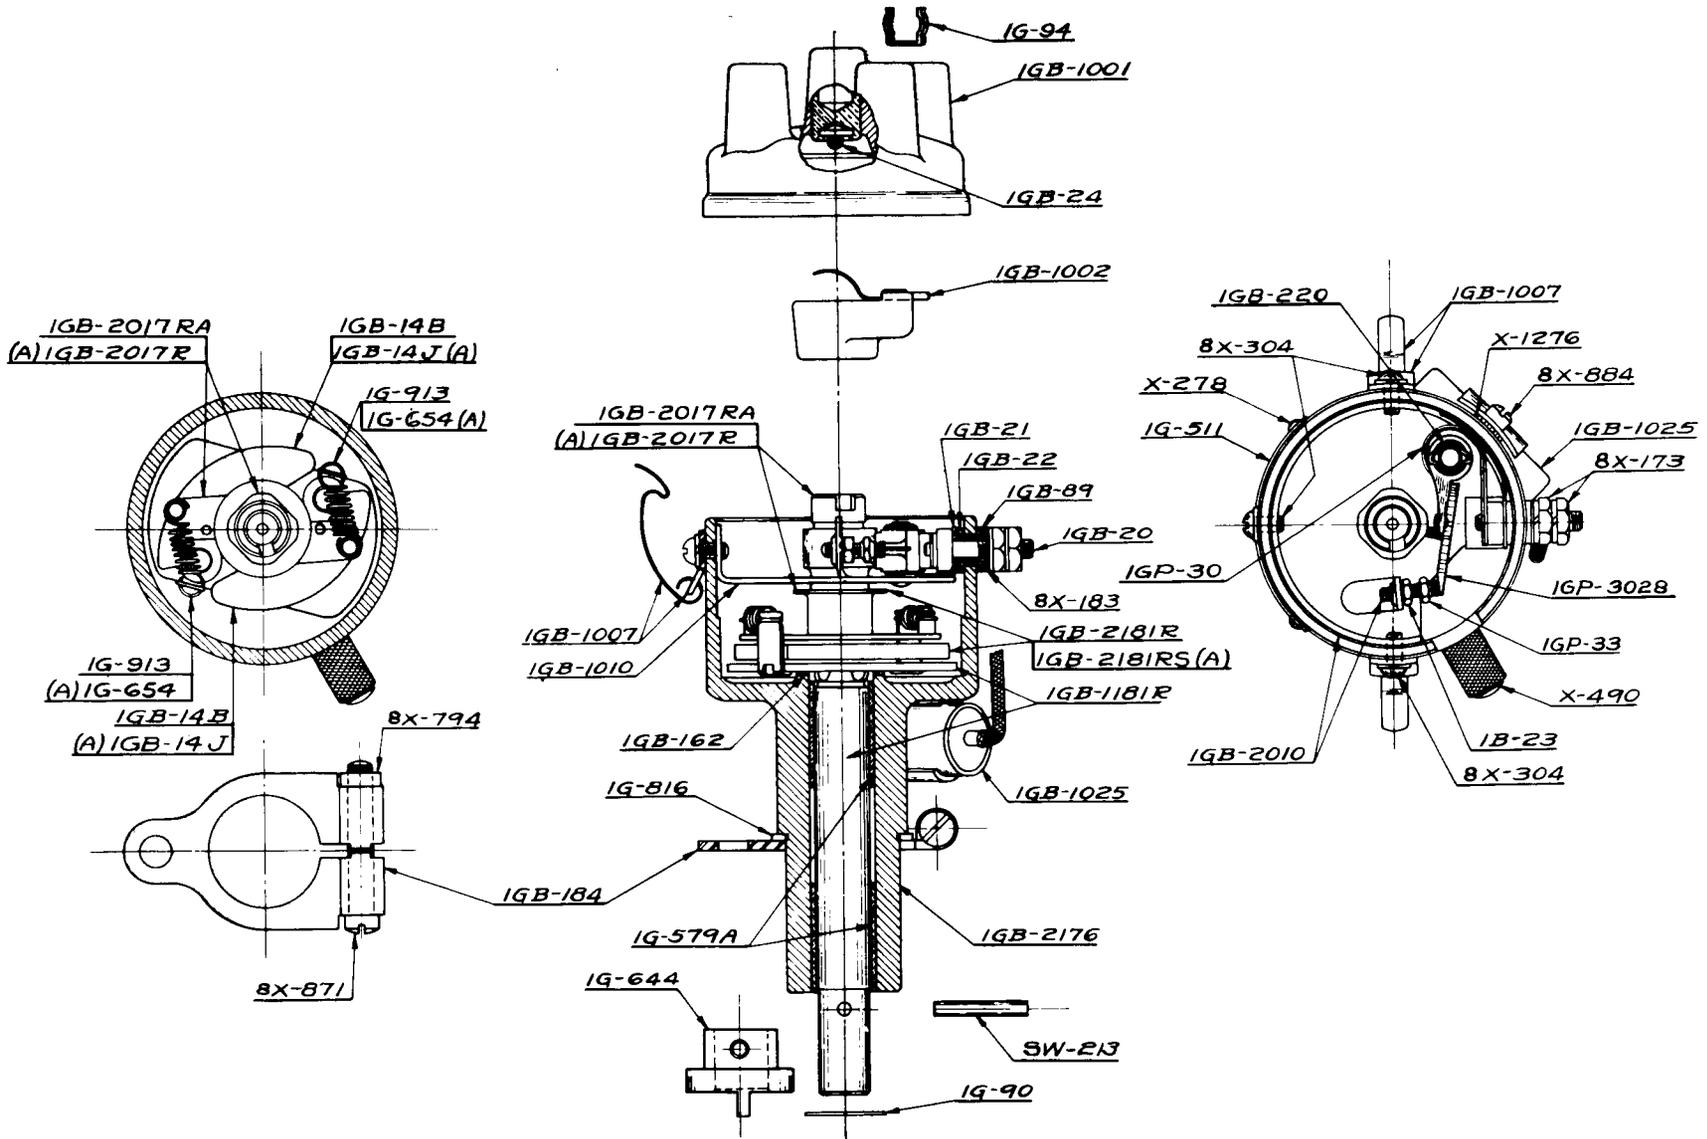

IGB-4045,A DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4057,
A,B,C DISTRIBUTOR PARTS LIST

IGB-4057,
A,B,C

Part No.	No. Used	Name of Part 1 2 3 4 5	Part No.	No. Used	Name of Part 1 2 3 4 5
*	1	Gear, Dist., Follower	8X-173	2	Nut, Terminal Stud, Hex., #10-32
IB-23	1	Nut, Lock, Contact Screw	8X-183A	1	Washer, Plain, Term. Stud, #10
IG-90	1	Washer, Thrust, Drive Shaft, Lower	X-195	3	Washer, Lock, Breaker Plate, #8
IG-94	5	Terminal, H. T. Wire	X-196	2	Washer, Lock, Term. Stud, #10
IGB-20	1	Post, Primary Terminal, #10-32x3/4	8X-304	3	Screw, Attaching, Breaker Plate, Rd. hd., #8-32x5/16
IGB-21	1	Insulation, Term. Stud, Inner	8X-722	1	Screw, Attaching, Condenser, Bdg. hd., #8-32x3/16
IGB-22	1	Washer, Ins., Term. Stud	X-1270	1	Washer, Skpf., Term. Stud, #10
IGB-89	1	Bushing, Insulating, Term. Post	X-1276	1	Washer, Skpf., Attaching Condenser #8
IGB-1001	1	Cap			1 2 3 4 5
IGB-1002	1	Rotor			
IGB-1007	2	Spring & Hinge, Clamp, Cap			
IGB-1010	1	Plate, Breaker			(Issued 4-27-44)
IGB-1025	1	Condenser			
IGB-2176	1	Base Assy., Dist.			
IG-579A	2	Bearing, Absorbent Bronze			
X-490	1	Oiler, Sleeve, Press in, 1/4			
*	1	Shaft & Gov. Assy.			
*	2	Weight, Governor			
*	1	Shaft, Drive			
IGB-2017R	1	Cam, & Stop Plate, 4 Cyl., R.H.			
*	1	Spring Set, Gov. Weight			
IGP-33†	1	Contact Breaker Screw			
IGP-3028†	1	Arm Assy., Breaker			
IGP-30	1	Spring			
*	1	Rivet, Gear			
IGW-46	1	Washer, Thrust			

Assembly No.	Gear, Dist., Follower	Shaft & Gov. Assy.	Weight, Governor	Shaft, Drive	Spring Set, Gov. Weight	Rivet, Gear
IGB-4057	None	IGB-2181RD	IGB-14B	IGB-1181RA	IGC-78S	None
IGB-4057A	GE-36	IGB-2251RB	IGB-14B	IGB-1251R	IGC-78S	SW-213
IGB-4057B	None	IGB-2251RA	IGB-14A	IGB-1251R	IGB-202S	None
IGB-4057C	None	IGB-2251RC	IGB-14C	IGB-1251R	IG-817S	None

* See table following parts list for part number applying to assembly wanted.


† Contact Set, Service, IGP-3028A.

Printed in U. S. A. 1-7

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4057 A,B C DISTRIBUTOR ILLUSTRATION

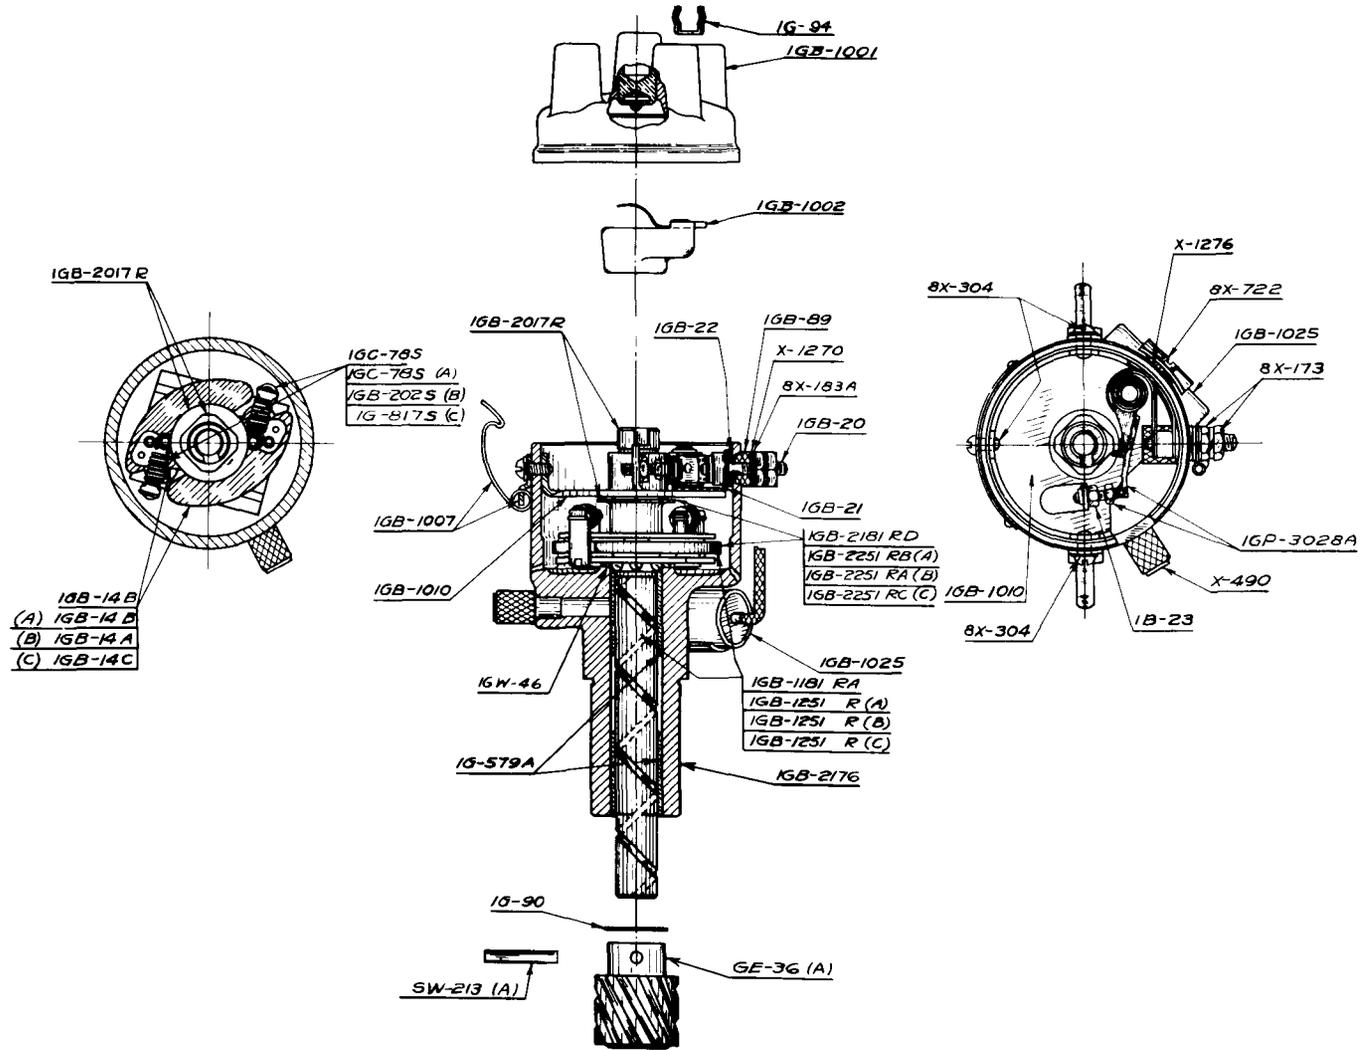

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4064 DISTRIBUTOR PARTS LIST

IGB-4064

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	2	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IG-94	5	H.T. Wire Terminal	8X-183	1	#10 Plain Washer
IG-687	1	Spring Washer	X-195	2	#8 Lock Washer
IG-688	2	Advance Control Washer	X-196	2	#10 Lock Washer
IG-750	1	Advance Control Screw - 1/4-20	8X-724	3	#8-32x3/16 Bdg. Hd. Sc.
IG-806	1	Advance Control Arm	X-1276	1	#8 Skpf. Washer
IG-816	1	Thrust Washer	8X-163	1	1/4-20 Hex. Nut
IGB-1001	1	Dist. Cap Assembly	8X-794	1	#10-32 Square Nut
IGB-24	1	Contact Plunger	8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-1002	1	Rotor			1 2 3 4 5
IGB-2253R	1	Breaker Cam & Shaft			(Issued 5-25-37)
IGB-3037	1	Dist. Ease Assembly			
IB-23	1	Breaker Point Lock Nut			
IGB-20	1	Terminal Post - #10-32			
IGB-21	1	Terminal Post Ins.			
IGB-22	1	Insulating Washer			
IGB-89	1	Insulating Bushing			
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025E	1	Condenser Assembly			
IGB-2037	1	Dist. Base Part Assy.			
IG-511	1	Name Plate			
IGB-38	1	Breaker Arm Bracket			
X-278	2	3/32x3/16 Tubular Rivet			
8X-302	2	#6-32x1/4 Rd. Hd. Sc.			
X-490	1	Press in - Sleeve Oiler			
X-1012	2	#6 Lock Washer			
IGP-33†	1	Breaker Screw Point			
IGP-3028†	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			


† Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4064 DISTRIBUTOR ILLUSTRATION

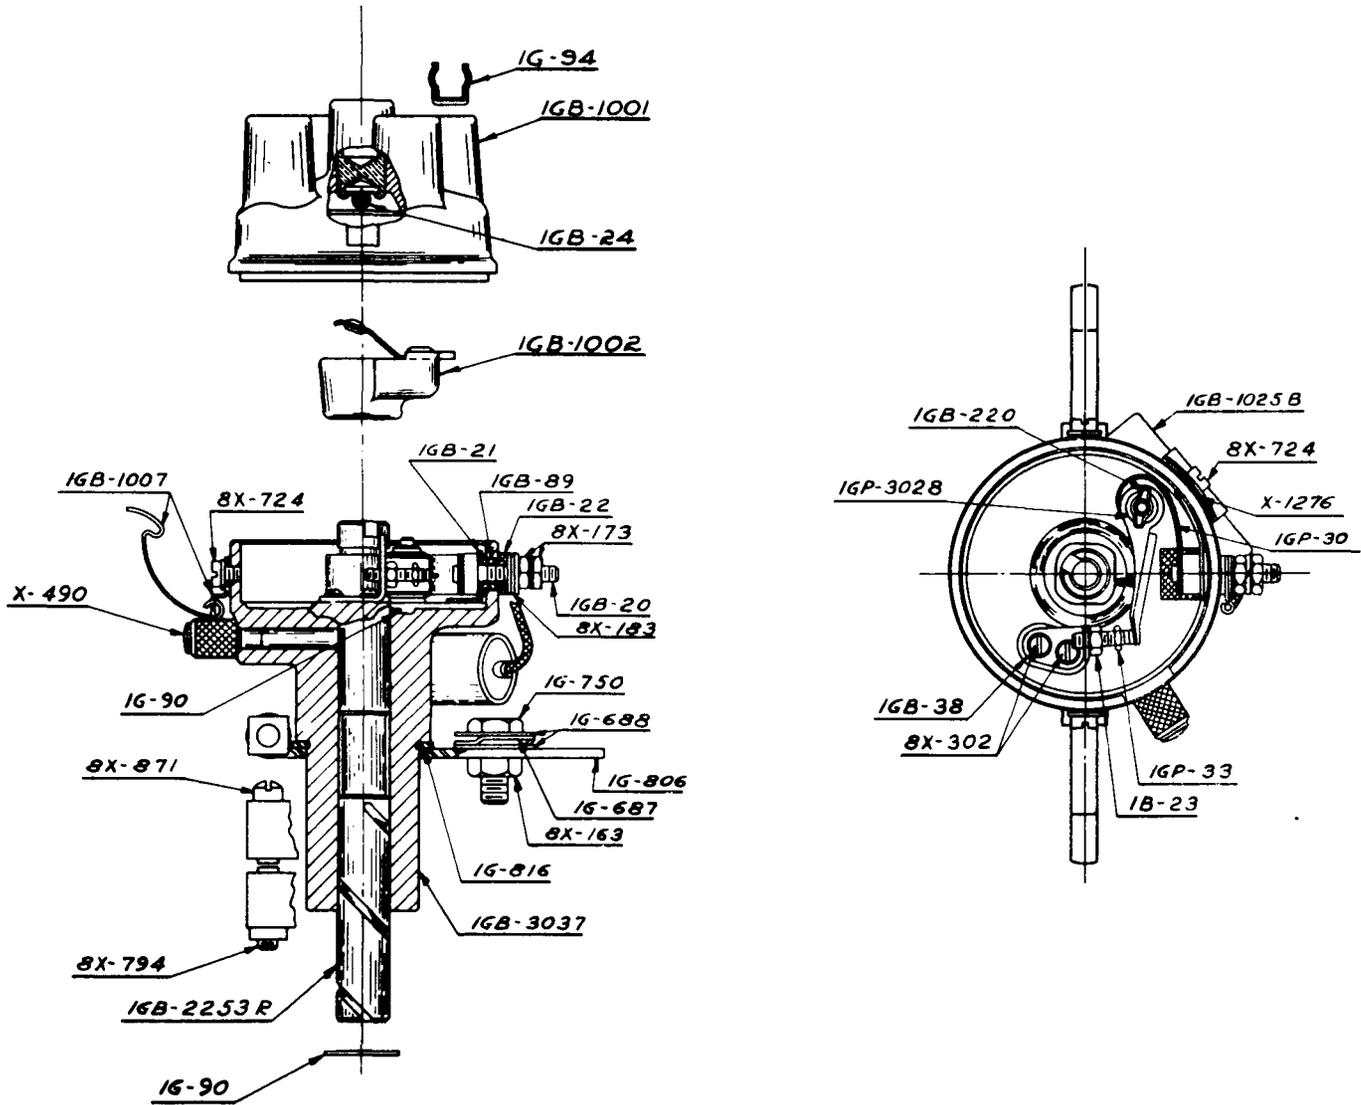

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4064 DISTRIBUTOR PARTS LIST

IGB-4064

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	2					Thrust Washer
IG-94	5					H.T. Wire Terminal
IG-687	1					Spring Washer
IG-688	2					Advance Control Washer
IG-750	1					Advance Control Screw - 1/4-20
IG-806	1					Advance Control Arm
IG-816	1					Thrust Washer
IGB-1001	1					Dist. Cap Assembly
IGB-24	1					Contact Plunger
IGB-1002	1					Rotor
IGB-2253R	1					Breaker Cam & Shaft
IGB-3037	1					Dist. Ease Assembly
IB-23	1					Breaker Point Lock Nut
IGB-20	1					Terminal Post - #10-32
IGB-21	1					Terminal Post Ins.
IGB-22	1					Insulating Washer
IGB-89	1					Insulating Bushing
IGB-220	1					Lock Spring
IGB-1007	2					Dist. Cap Spring & Hinge Assembly
IGB-1025E	1					Condenser Assembly
IGB-2037	1					Dist. Base Part Assy.
IG-511	1					Name Plate
IGB-38	1					Breaker Arm Bracket
X-278	2					3/32x3/16 Tubular Rivet
8X-302	2					#6-32x1/4 Rd. Hd. Sc.
X-490	1					Press in - Sleeve Oiler
X-1012	2					#6 Lock Washer
IGP-33†	1					Breaker Screw Point
IGP-3028†	1					Breaker Arm Assy.
IGP-30	1					Breaker Arm Spring
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-173	2					#10-32 Hex. Nut
8X-183	1					#10 Plain Washer
X-195	2					#8 Lock Washer
X-196	2					#10 Lock Washer
8X-724	3					#8-32x3/16 Bdg. Hd. Sc.
X-1276	1					#8 Skpf. Washer
8X-163	1					1/4-20 Hex. Nut
8X-794	1					#10-32 Square Nut
8X-871	1					#10-32x1 3/8 Fill. Hd. Sc.
		1	2	3	4	5



(Issued 5-25-37)

† Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

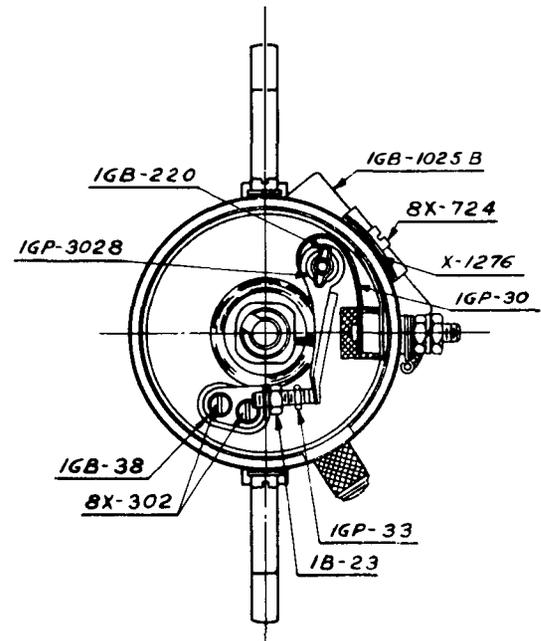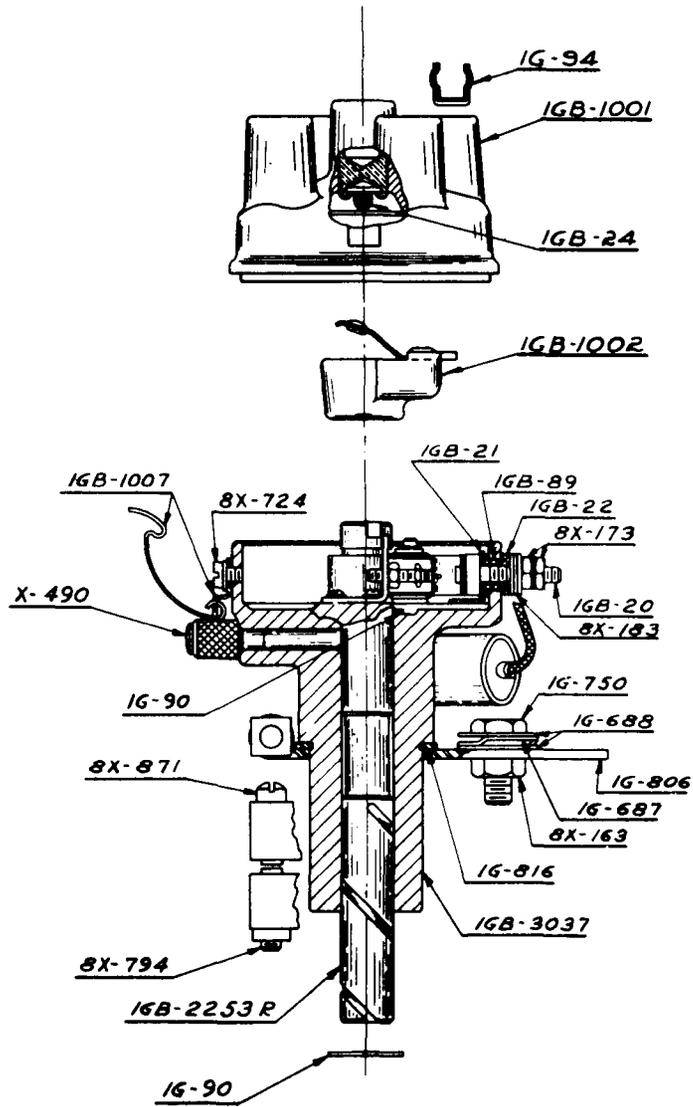

IGB-4064 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4065A, DISTRIBUTOR PARTS LIST
B,D

IGB-4065A,
B,D

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
GE-36	1	Dist. Gear - Follower	8X-173	2	#10-32 Hex. Nut
IG-90	1	Thrust Washer	8X-183	1	#10 Brass Washer
IG-94	5	H.T. Wire Terminal	X-195	3	#8 Lock Washer
IGB-20	1	Terminal Post - #10-32	X-196	2	#10 Lock Washer
IGB-21	1	Terminal Post Insulation	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-89	1	Insulating Bushing	X-1276	1	#8 Skpf. Washer
IGB-162	1	Thrust Washer		1 2 3 4 5	
IGB-220	1	Lock Spring			
IGB-247	1	Dist. Drive Rivet			(Issued 5-26-36)
IGB-1001	1	Dist. Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-1002	1	Rotor			
IGB-1007	2	Dist. Cap Spring & Hinge Assy.			
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight			
*	1	Drive Shaft Assy.			
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.			
*	2	Weight Spring			
IGP-3028	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight	Weight Spring	Weight Sp. Set
IGB-4065A	IGB-2201R	IGB-1201R	IGB-14B	IGC-78	IGC-78S
IGB-4065B	IGB-2262R	IGB-1262R	IGB-14A	IGB-202	IGB-202S
IGB-4065D	IGB-2201RC	IGB-1201R	IGB-14F	IG-817	IG-817S


* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

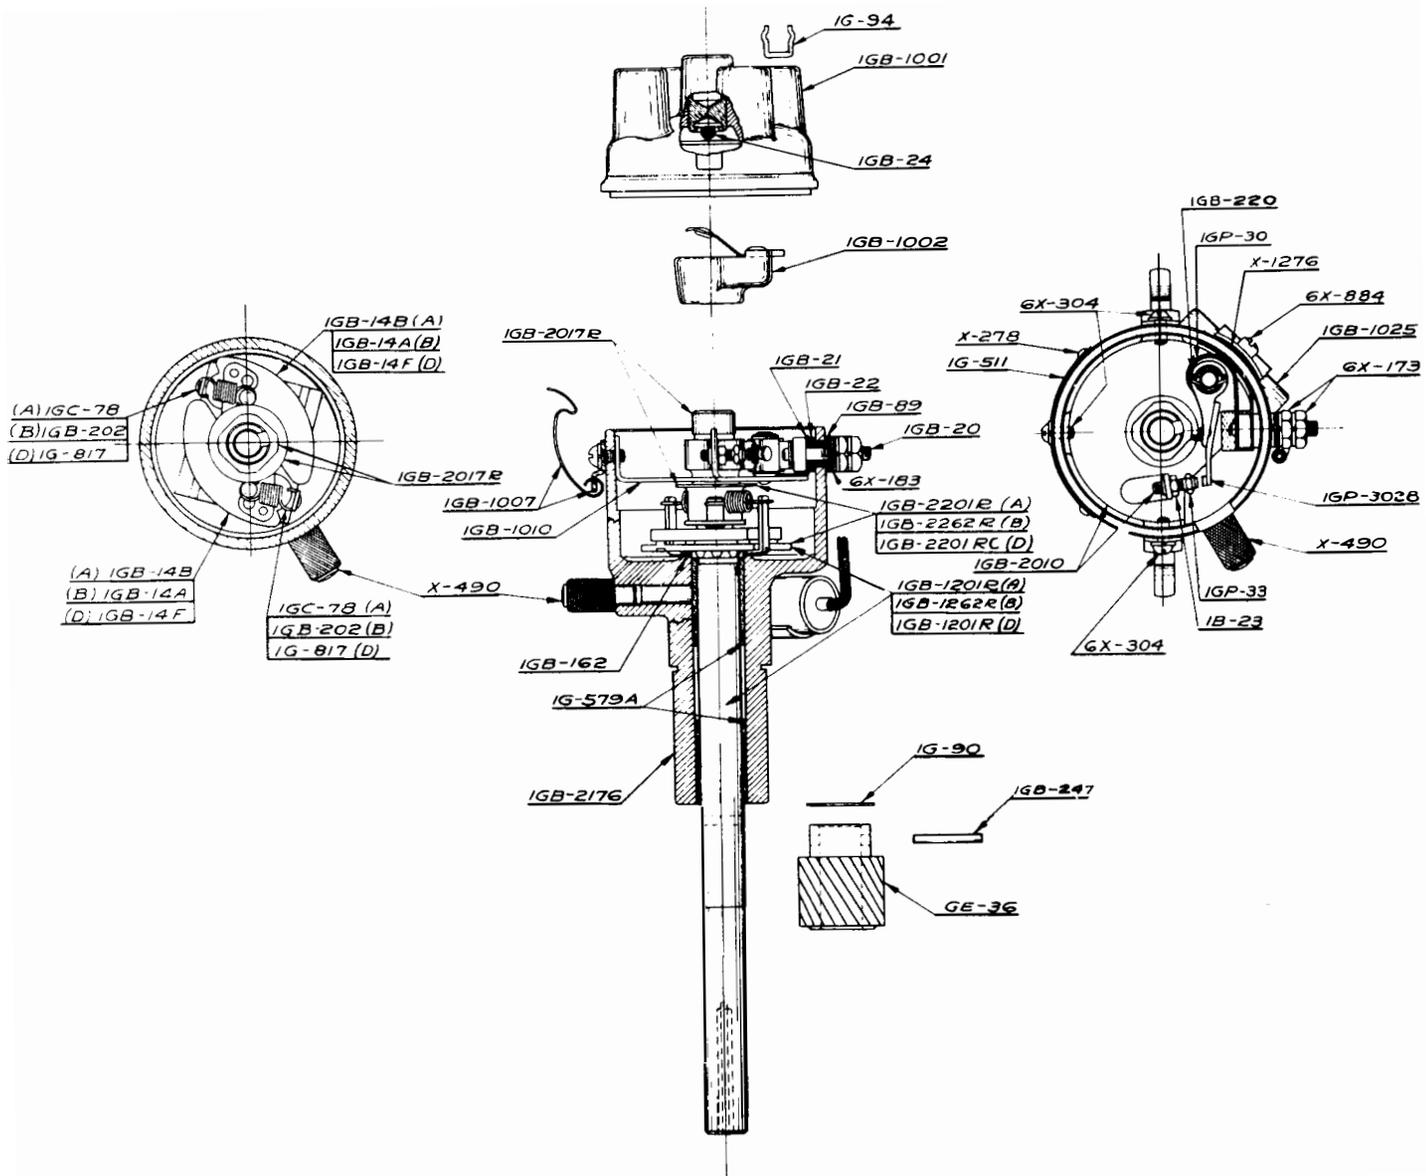

IGB-4065A,B,D DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4068,A DISTRIBUTOR PARTS LIST

IGB-4068,A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 2 3 4 5 Thrust Washer	8X-146	1	1/4-20 Hex. Nut
IG-94	5	H.T. Wire Terminal	8X-163	1	1/4-20 Hex. Nut
IG-687	1	Spring Washer	8X-173	2	#10-32 Hex. Nut
IG-688	1	Advance Control Washer	8X-183	1	#10 Brass Washer
IG-688A	1	Advance Control Washer	X-195	3	#8 Lock Washer
IG-750	1	Advance Control Screw - 1/4-20	X-196	2	#10 Lock Washer
IG-816A	1	Thrust Washer	X-199	1	1/4 Lock Washer
IGB-20	1	Terminal Post - #10-32	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-21	1	Terminal Post Insulation	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-89	1	Insulating Bushing	X-1276	1	#8 Skpf. Washer
IGB-162	1	Thrust Washer			1 2 3 4 5
IGB-220	1	Lock Spring			(Issued 5-26-36)
IGB-1001	1	Dist. Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-1002	1	Rotor			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Assembly			
*	2	Weight Spring			
*	1	Drive Shaft Assy.			
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.			
IGC-24K	1	Advance Control Arm			
IGP-3028	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight Spring	Weight Assy.	Weight Sp. Set
IGB-4068	IGB-2251RA	IGB-1251R	IGB-202	IGB-14A	IGB-202S
IGB-4068A	IGB-2181RU	IGB-1181RA	IG-796	IGB-1014RE	IG-796S

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4068-A DISTRIBUTOR ILLUSTRATION

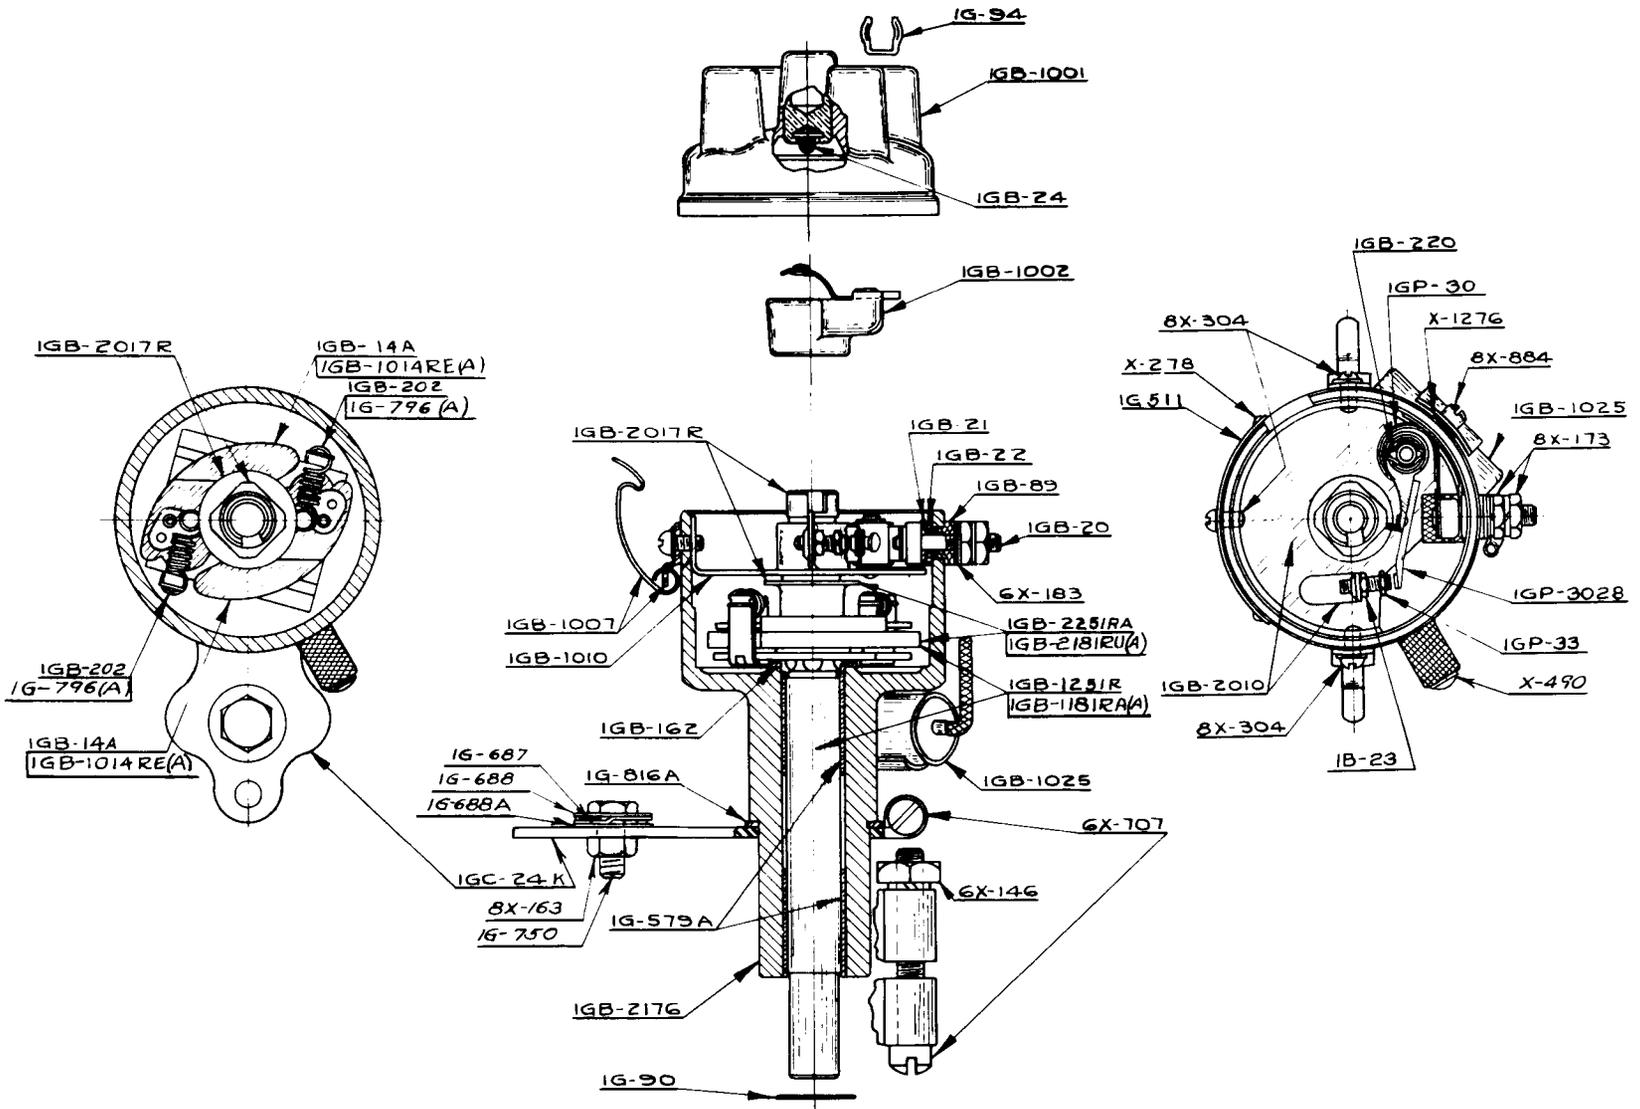

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4082 DISTRIBUTOR PARTS LIST

IGB-4082


Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGC-24N	1	Advance Control Arm
IG-94	5	H. T. Wire Terminal	6X-146	1	1/4-20 Hex. Nut
IG-816A	1	Thrust Washer	6X-173	2	#10-32 Hex. Nut
IGB-20	1	Terminal Post - #10-32	6X-183	1	#10 Brass Washer
IGB-21	1	Terminal Post Insulation	X-195	3	#8 Lock Washer
IGB-22	1	Insulating Washer	X-196	2	#10 Lock Washer
IGB-89	1	Insulating Bushing	X-199	1	1/4 Lock Washer
IGB-162	1	Thrust Washer	6X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-220	1	Lock Spring	6X-707	1	1/4-20x1 7/8 Fill. Hd. Screw
IGB-1001	1	Dist. Cap Assembly	6X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-24	1	Contact Plunger	X-1276	1	#8 Skpf. Washer
IGB-1002	1	Rotor			1 2 3 4 5
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 10-11-34) (R-8-7-36)
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IB-24	1	Breaker Point Screw			
IGB-1010	1	Breaker Plate Part Assy.			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGB-2181RU	1	Drive Shaft & Gov. Assy.			
IG-796	2	Weight Spring			
IGB-1014RE	2	Weight Assembly			
IGB-1181RA	1	Drive Shaft Assy.			
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.			
IGB-3664	1	Breaker Arm Assembly			
IGB-209	1	Breaker Arm Spring			
		1 2 3 4 5			

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4082 DISTRIBUTOR PARTS LIST

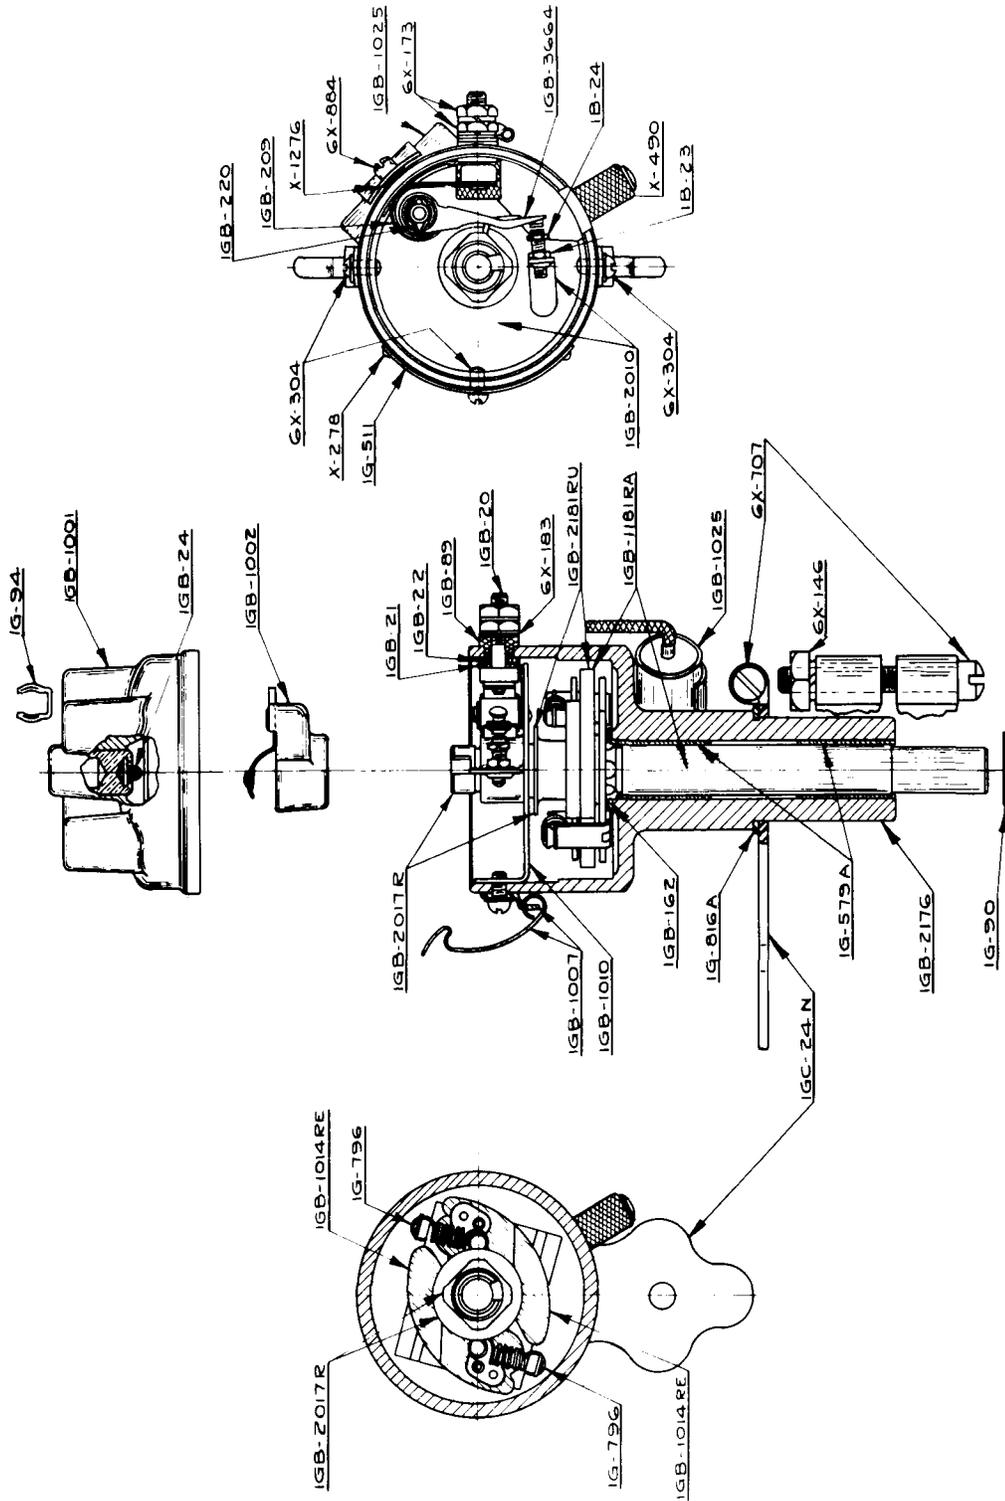

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4095 DISTRIBUTOR PARTS LIST

IGB-4095

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	2	Thrust Washer	IGB-2037	1	Dist. Base Part Assembly
IG-94	5	H. T. Wire Terminal	IG-511	1	Name Plate
IG-644	1	Dist. Drive Coupling	IGB-38	1	Brkr. Arm Bracket
IG-816	1	Thrust Washer	X-278	2	3/32x3/16 Tubular Rivet
IG-2806J	1	Advance Control Arm Assy.	8X-302	2	#6-32x1/4 Rd. Hd. Sc.
IG-686	1	Advance Control Screw	X-490	1	Press in - Sleeve oiler
IG-687	1	Spring Washer	X-1012	2	#6 Lock Washer
IG-688	2	Advance Control Washer	IGP-334	1	Breaker Screw Point
X-199	1	1/4 Lock Washer	IGP-3028†	1	Breaker Arm Assembly
8X-794	1	#10-32 Square Nut	IGP-30	1	Breaker Arm Spring
8X-871	1	#10-32x1 3/8 Fill.Hd.Sc.	8X-173	2	#10-32 Hex. Nut
8X-1063	1	1/4-28 Hex. Nut	8X-183	1	#10 Plain Washer
IGB-1001	1	DISTRIBUTOR CAP ASSEMBLY	X-195	2	#8 Lock Washer
IGB-24	1	Contact Plunger	X-196	2	#10 Lock Washer
IGB-1002	1	ROTOR	8X-722	3	#8-32x3/16 Bdg. Hd. Screw
IGB-1125R	1	Breaker Cam & Shaft - 4 Cyl. R. H.	X-1270	1	#10 Skpf. Washer
IGB-3037	1	Distributor Base Assembly	X-1276	1	#8 Skpf. Washer
CB-140	1	Insulating Bushing	SW-213	1	Distributor Drive Rivet
IB-23	1	Breaker Point Lock Nut			1 2 3 4 5
IGB-20	1	Terminal Post - #10-32			
IGB-21	1	Terminal Post Insulation			
IGB-22	2	Insulating Washer			
IGB-1007	2	Dist. Cap Spring & Hinge Assy.			
IGB-1025B	1	CONDENSER ASSEMBLY			
		1 2 3 4 5			

† Service BREAKER POINT SET IGP-3028A.

UNIT	APPLICATION
IGB-4095	J. W. Lathrop


(Issued 12-7-39)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4095 DISTRIBUTOR ILLUSTRATION

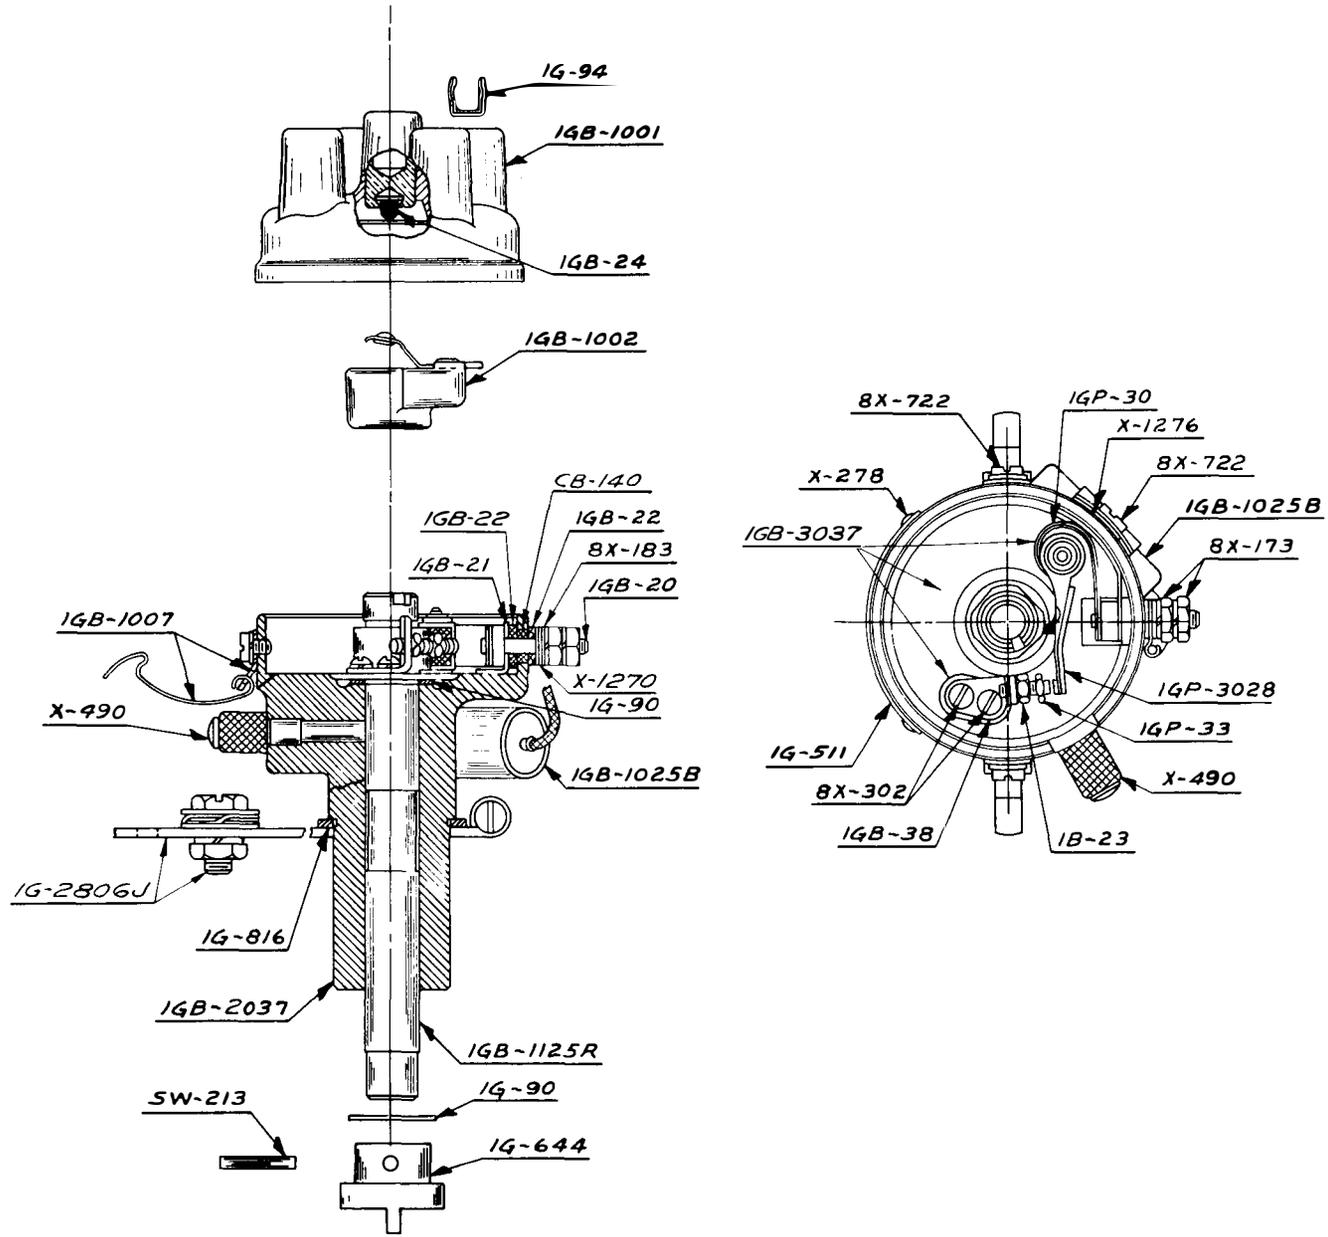

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4096,A,B DISTRIBUTOR PARTS LIST

IGB-4096,A,B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IG-94	5	H.T. Wire Terminal	8X-183	1	#10 Brass Washer
IGB-20	1	Terminal Post - #10-32	X-195	3	#8 Lock Washer
IGB-21	1	Terminal Post Insulation	X-196	2	#10 Lock Washer
IGB-22	1	Insulating Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-89	1	Insulating Bushing	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-220	1	Lock Spring			1 2 3 4 5
IGB-247	1	Dist. Drive Rivet			
IGB-1001	1	Dist. Cap Assembly			(Issued 10-1-36)
IGB-24	1	Contact Plunger			
IGB-1002	1	Rotor			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight			
*	2	Weight Spring			
IGB-1249R	1	Drive Shaft Assy.			
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.			
IGB-2254	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGP-3028	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set
IGB-4096	IGB-2249R	IGB-14A	IGB-202 (2)	IGB-202S
IGB-4096A	IGB-2249RA	IGB-14G	IGB-202 (2)	IGB-202S
IGB-4096B	IGB-2249RB	IGB-14	IG-775 IG-784 1 ea.	IG-775SS

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4096-A-B DISTRIBUTOR ILLUSTRATION

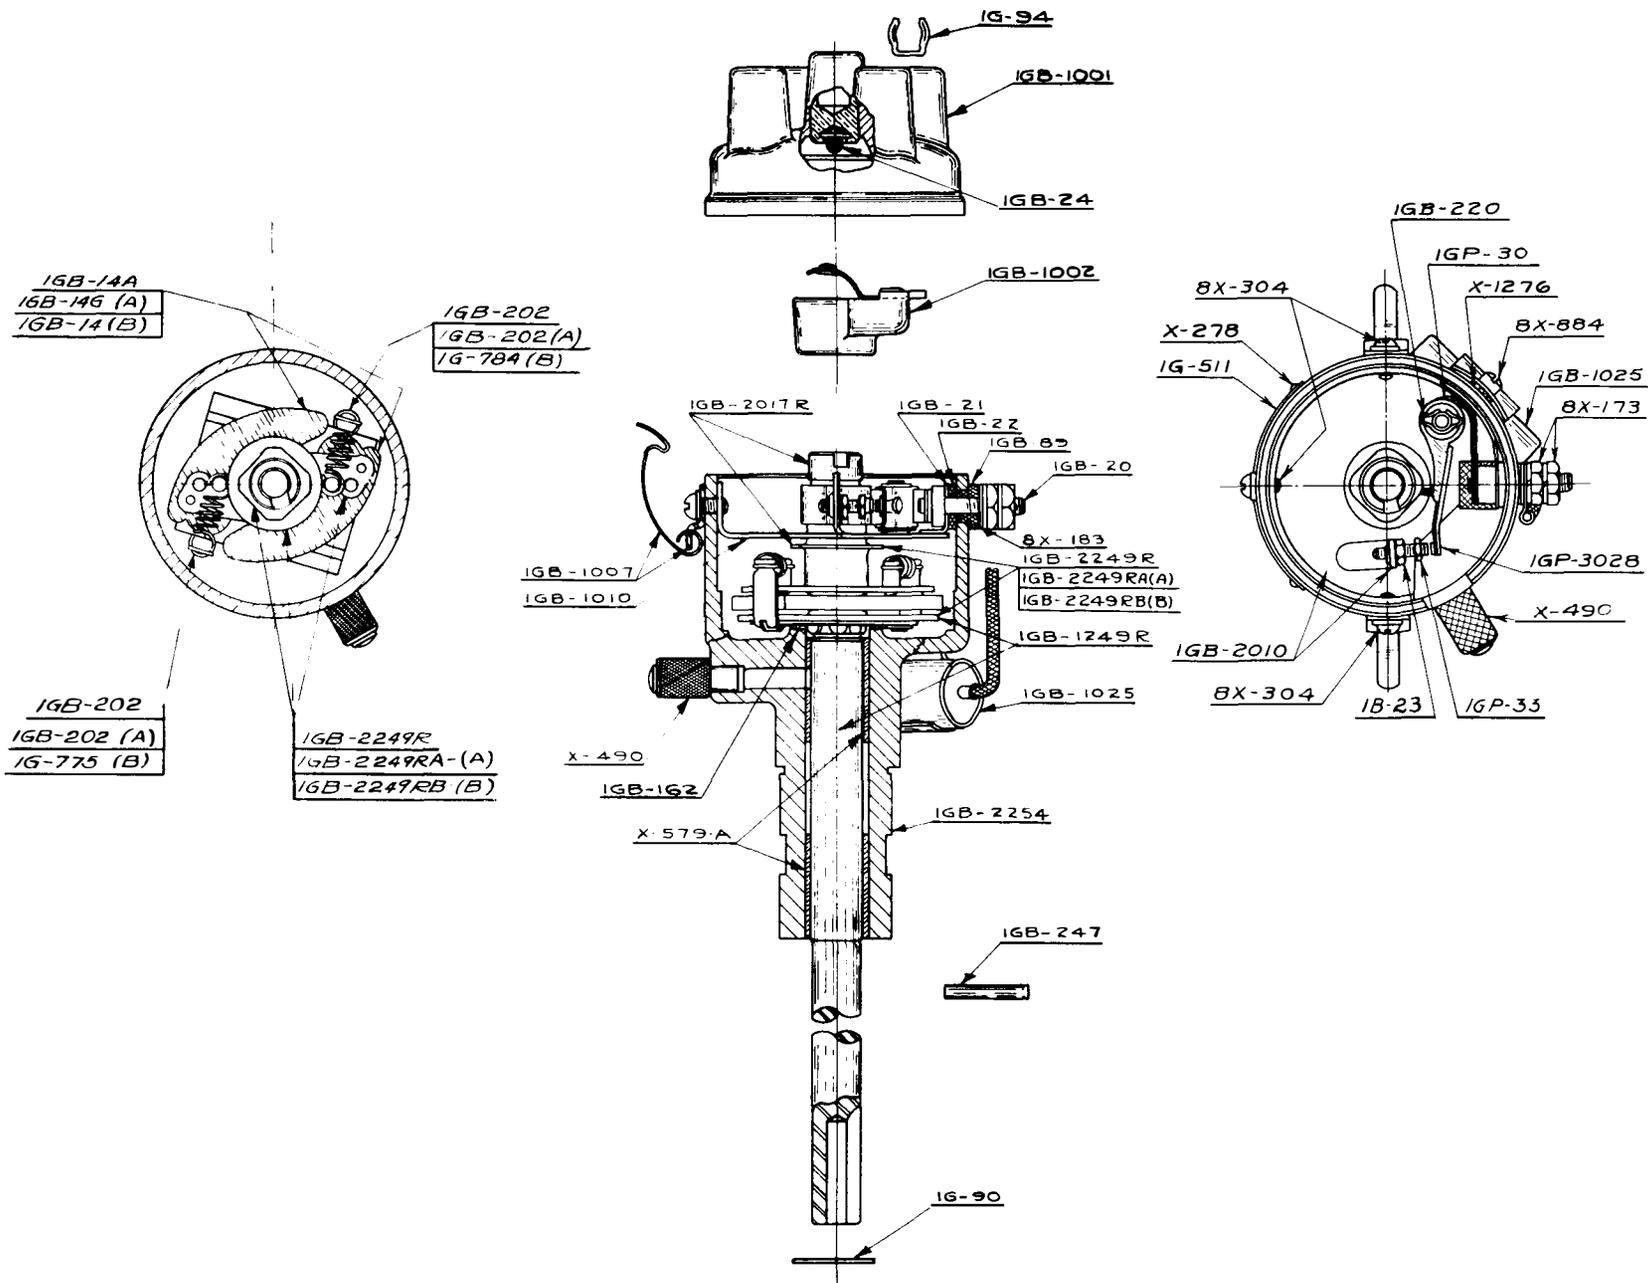

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4099 DISTRIBUTOR PARTS LIST

IGB-4099

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	2	Thrust Washer	IGC-24N	1	Advance Control Arm
IG-94	5	H.T. Wire Terminal	6X-86	1	1/4-20x5/8 Hex. Hd. Screw
IG-816A	1	Thrust Washer	8X-146	1	1/4-20 Hex. Nut
IGB-1001	1	Dist. Cap Assembly	8X-163	1	1/4-20 Hex. Nut
IGB-24	1	Contact Plunger	X-199	2	1/4 Lock Washer
IGB-1002	1	Rotor	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-2253R	1	Breaker Cam & Shaft			1 2 3 4 5
IGB-3037	1	Dist. Base Assy.			(Issued 12-2-35)
IB-23	1	Breaker Point Lock Nut			
IB-24	1	Breaker Screw Point			
IGB-20	1	Terminal Post - #10-32			
IGB-21	1	Terminal Post Ins.			
IGB-22	1	Insulating Washer			
IGB-89	1	Insulating Bushing			
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025B	1	Condenser Assy.			
IGB-2037	1	Dist. Base Part Assy.			
IG-511	1	Name Plate			
IGB-38	1	Breaker Point Screw Bracket			
X-278	2	3/32x3/16 Tub. Rivet			
8X-302	2	#6-32x1/4 Rd. Hd. Sc.			
X-490	1	Press in-Sleeve Oiler			
X-1012	2	#6 Lock Washer			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
8X-173	2	#10-32 Hex. Nut			
8X-183	1	#10 Plain Washer			
X-195	2	#8 Lock Washer			
X-196	2	#10 Lock Washer			
8X-884	3	#8-32x3/16 Fill. Hd. Sc.			
X-1276	1	#8 Skpf. Washer			
		1 2 3 4 5			

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4100 DISTRIBUTOR PARTS LIST

IGB-4100

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1					Thrust Washer
IG-94	3					H.T. Wire Terminal
IG-816	1					Thrust Washer
IGB-20	1					Terminal Post - #10-32
IGB-21	1					Terminal Post Insulation
IGB-22	1					Insulating Washer
IGB-89	1					Insulating Bushing
IGB-162	1					Thrust Washer
IGB-220	1					Lock Spring
IGB-1C02	1					Rotor
IGB-1007	2					Dist. Cap Spring & Hinge Assembly
IGB-1025	1					Condenser Assembly
IGB-1065	1					Dist. Cap Assembly
IGB-24	1					Contact Plunger
IGB-2010	1					Breaker Plate Assy.
IB-23	1					Breaker Point Lock Nut
IGB-1010	1					Breaker Plate Part Assy.
IGP-33†	1					Breaker Screw Point
IGB-2175RO	1					Drive Shaft & Gov. Assy.
IG-817	2					Weight Spring
IGB-14B	2					Weight
IGB-1066R	1					Cam & Stop Plate - 2 cyl. R.H.
IGB-1175R	1					Drive Shaft Assy.
IGB-2279	1					Dist. Base Assy.
IG-511	1					Name Plate
IG-579A	2					Absorbent Bronze Brg.
X-278	2					3/32x3/16 Tubular Rivet
X-490	1					Press in - Sleeve Oiler
IGP-3028†	1					Breaker Arm Assembly
IGP-30	1					Breaker Arm Spring
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-173	2					#10-32 Hex. Nut
8X-183	1					#10 Brass Washer
X-195	3					#8 Lock Washer
X-196	2					#10 Lock Washer
8X-304	3					#8-32x5/16 Rd. Hd. Screw
8X-884	1					#8-32x3/16 Fill. Hd. Sc.
X-1276	1					#8 Skpf. Washer
		1	2	3	4	5


(Issued 12-14-36)

† Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

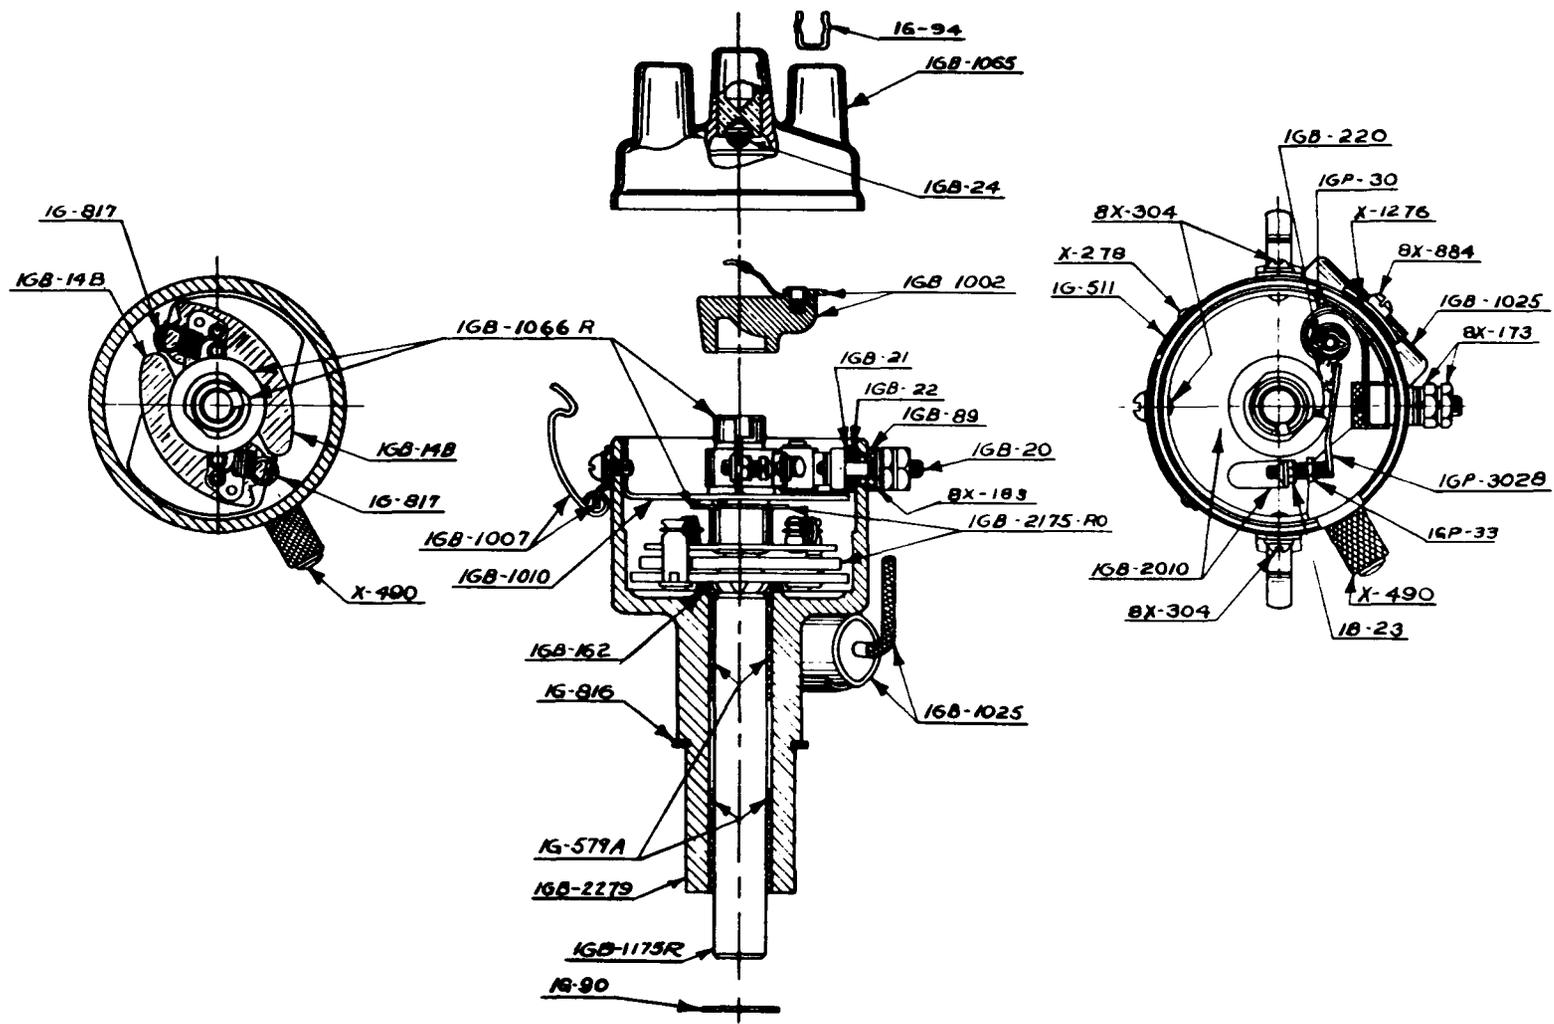

IGB-4100 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4102
1GB-4102-1 DISTRIBUTOR PARTS LIST

IGB-4102
IGB-4102-1

Part No.	No. Used	Name of Part				
		1	2	3	4	5
GG-133	1	Dist. Drive Rivet				
IG-90	1	Thrust Washer				
IG3-20	1	Terminal Post - #10-32				
IGB-21	1	Terminal Post Insulation				
IG3-22	1	Insulating Washer				
IG3-29	1	Insulating Bushing				
IGB-162	1	Thrust Washer				
IG3-220	1	Lock Spring				
IG3-1001A	1	Dist. Cap Assembly				
IG3-24	1	Contact Plunger				
IGB-1002C	1	Rotor				
IGB-1007	2	Dist. Cap Spring & Hinge Assy.				
IG3-1025	1	Condenser Assy.				
IGB-2010	1	Breaker Plate Assy.				
IB-23	1	Breaker Point Lock Nut				
IGB-1010	1	Breaker Plate Part Assy.				
IGP-33	1	Breaker Screw Point				
IGB-2268	1	Dist. Base Assy.				
IG-579A	2	Absorbent Bronze Brg.				
IGS-16	1	Name Plate				
K-278	2	3/32x3/16 Tubular Rivet				
K-382	1	1/8 Grease Cup				
IGB-2276R	1	Drive Shaft & Gov. Assy.				
IGE-14K	2	Weight				
IGB-1276R	1	Drive Shaft Assy.				
IGB-2017R	1	Cam & Stop Plate - 4 cyl. R.H.				
IGE-29	2	Weight Spring				
IGP-3028	1	Breaker Arm Assy.				
IGP-30	1	Breaker Arm Spring				
IGB-19	1	Drive Shaft Collar				
IG3-1020S†	1	Advance Control Arm Assy.				
IG-616C†	1	Thrust Washer				
EX-135†	1	1/4-20x2 Fill. Hd. Screw				
8X-146†	1	1/4-20 Hex. Nut				
12X-199†	1	1/4 Lock Washer				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-173	1	#10-32 Hex. Nut				
8X-183	1	#10 Brass Washer				
12X-195	3	#8 Lock Washer				
12X-196	1	#10 Lock Washer				
8X-304	3	#8-32x5/16 Rd. Hd. Screw				
8X-884	1	#8-32x3/16 Fill. Hd. Screw				
X-1276	1	#8 Skpf. Washer				
		1	2	3	4	5

(Issued 7-19-35)
(R-5-10-37)

† Assemblies having a "-1" suffix are the same as an assembly having an identical assembly number with the "-1" omitted except that the "-1" assembly includes the parts indicated with a "†".


NOTE:- Use IGP-3028A breaker point set and IGE-29S weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4102, -1 DISTRIBUTOR ILLUSTRATION

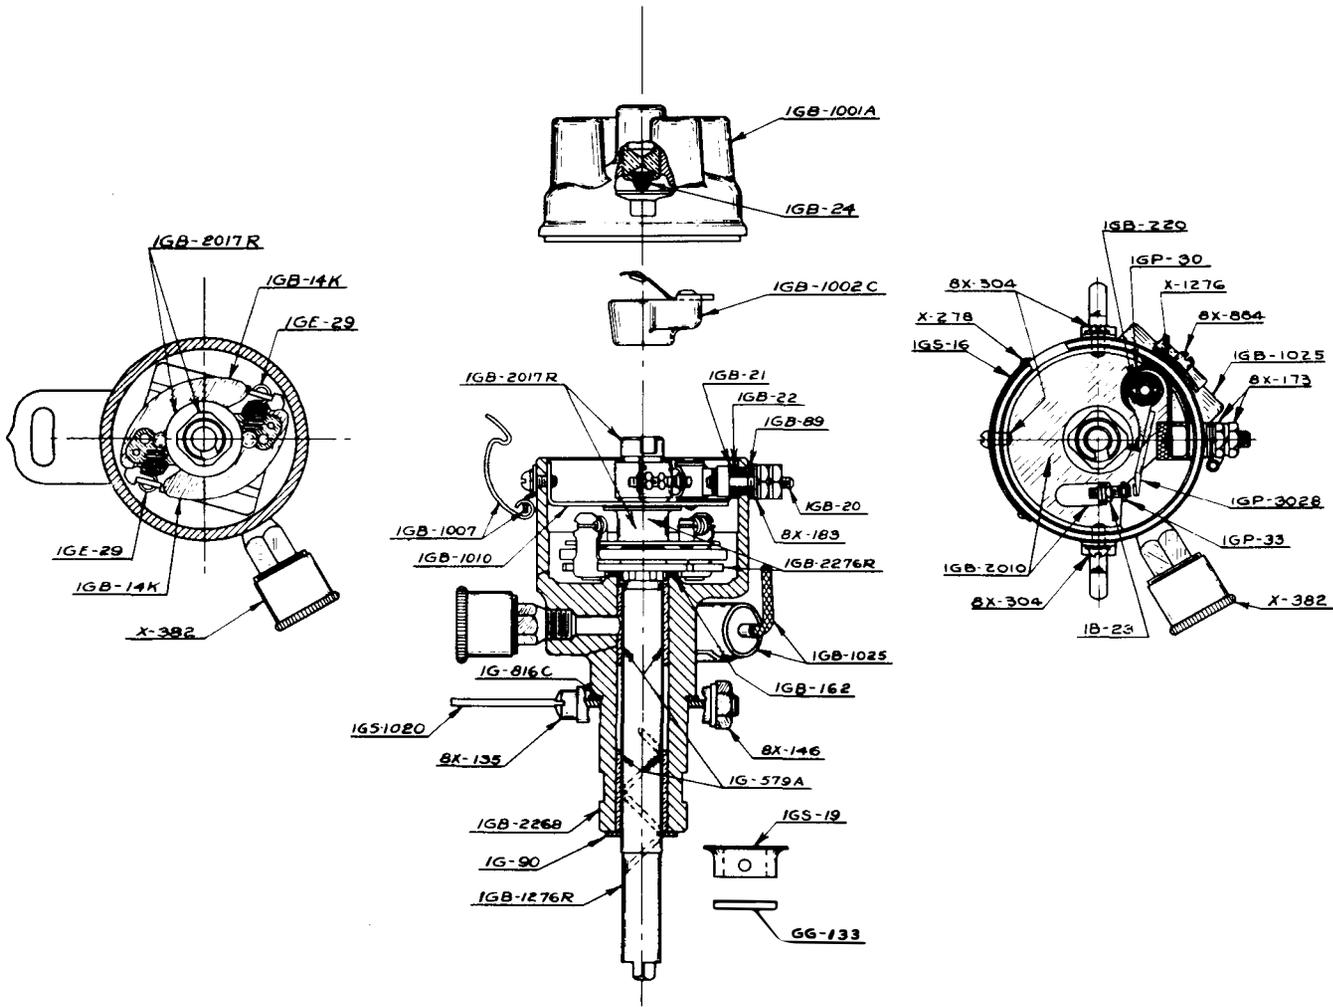

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4105A DISTRIBUTOR PARTS LIST



IGB-4105A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
GE-5C	1	Dist. Gear - Follower	8X-183	1	#10 Brass Washer
IG-9C	2	Thrust Washer	X-195	2	#8 Lock Washer
IG-34	3	H.T. Wire Terminal	X-196	2	#10 Lock Washer
IG-636	1	Advance Control Screw - 1/4-28	8X-884	3	#8-32x3/16 Fill. Hd. Sc.
			X-1276	1	#8 Skpf. Washer
IG-637	1	Spring Washer	SW-213	1	Dist. Drive Rivet
IG-638	2	Advance Control Washer	X-199	1	1/4 Lock Washer
IG-806	1	Advance Control Arm	8X-794	1	#10-32 Square Nut
IG-816	1	Thrust Washer	8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-199	1	Dist. Shaft Collar	8X-1063	1	1/4-28 Hex. Nut
IGB-247	1	Dist. Drive Rivet			1 2 3 4 5
IGB-1002D	1	Rotor			
IGB-1065	1	Dist. Cap Assembly			(Issued 12-4-35)
IGB-24	1	Contact Plunger			
IGB-1287R	1	Drive Shaft Assy.			
IGB-3290	1	Dist. Base Assembly			
IB-23	1	Breaker Point Lock Nut			
IB-24	1	Breaker Screw Point			
IGB-20	1	Terminal Post - #10-32			
IGB-21	1	Terminal Post Insulation			
IGB-22	1	Insulating Washer			
IGB-89	1	Insulating Bushing			
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Sp. & Hinge Assembly			
IGB-1025B	1	Condenser Assy.			
IGB-2290	1	Dist. Base Part Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
IGB-38	1	Breaker Arm Bracket			
X-278	2	3/32x3/16 Tubular Rivet			
8X-302	2	#6-32x1/4 Rd. Hd. Sc.			
X-490	1	Press in - Sleeve Oiler			
X-1012	2	#6 Lock Washer			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
8X-173	2	#10-52 Hex. Nut			
		1 2 3 4 5			

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

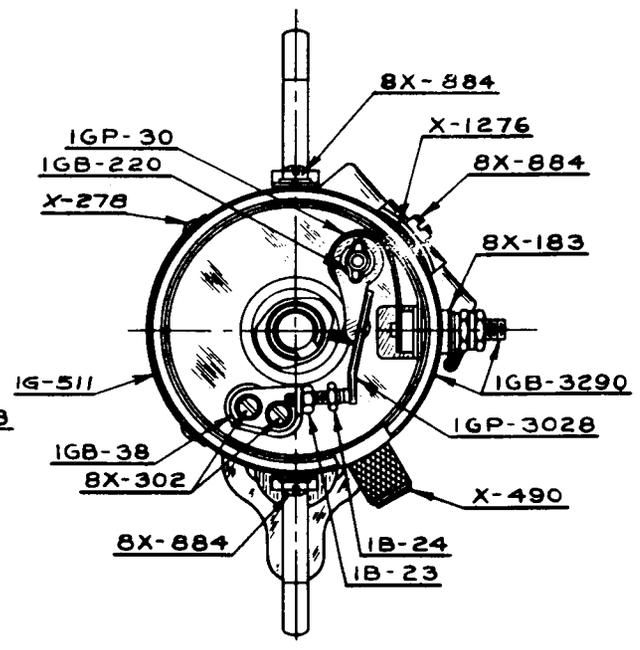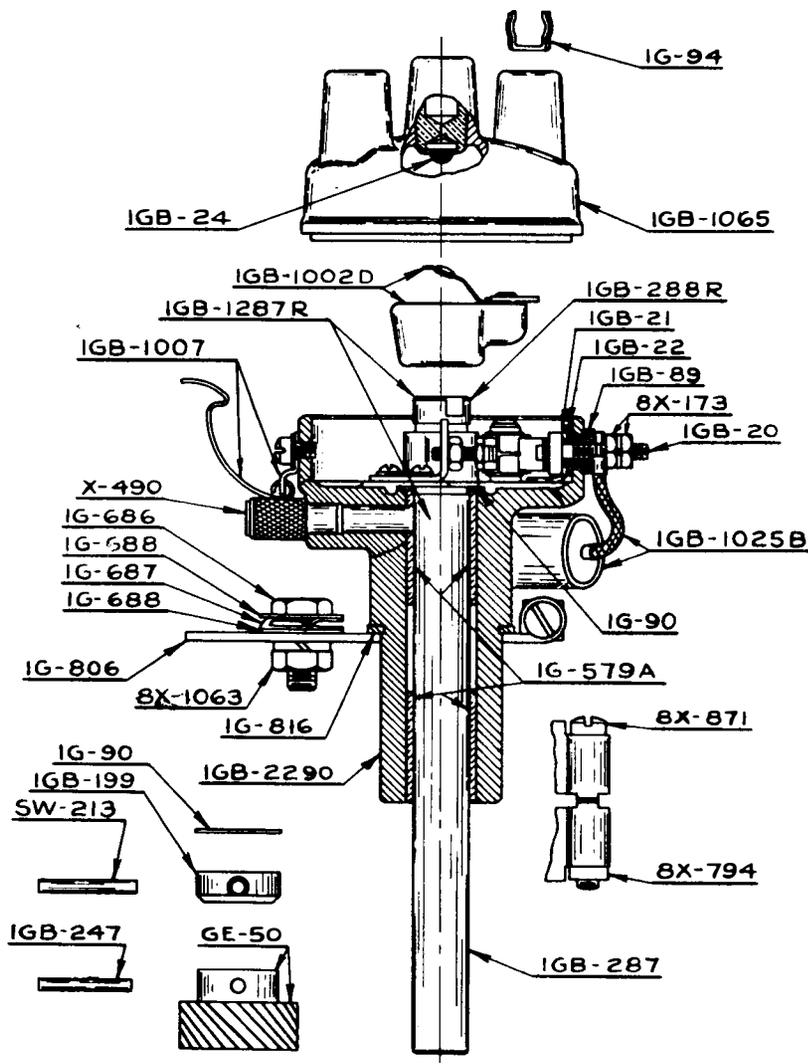

IGB-4105A DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4106 DISTRIBUTOR PARTS LIST


IGB-4106

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-86	1	1/4-20x5/8 Hex. Hd. Screw
IG-94	5	H.T. Wire Terminal	8X-146	1	1/4-20 Hex. Nut
IG-216A	1	Thrust Washer	8X-163	1	1/4-20 Hex. Nut
IGB-20	1	Terminal Post - #10-32	8X-173	2	#10-32 Hex. Nut
IGB-21	1	Terminal Post Insulation	8X-183	1	#10 Brass Washer
IGB-22	1	Insulating Washer	X-195	3	#8 Lock Washer
IGB-29	1	Insulating Bushing	X-195	2	#10 Lock Washer
IGB-162	1	Thrust Washer	X-199	2	1/4 Lock Washer
IGB-199	1	Dist. Shaft Collar	8X-304	3	#8-32x5/16 Hd. Hd. Screw
IGB-220	1	Lock Spring	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-1001	1	Dist. Cap Assembly	8X-384	1	#8-32x3/16 Fill. Hd. Screw
IGB-24	1	Contact Plunger	X-1276	1	#8 Skpf. Washer
IGB-1002	1	Rotor			1 2 3 4 5
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 12-23-36)
IGB-1025	1	Condenser Assembly			
IGB-2010	1	Breaker Plate Assembly			
IE-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGB-2295L	1	Drive Shaft & Gov. Assy.			
IG-784†	2	Weight Spring			
IGB-14D	2	Weight Assembly			
IGB-1295L	1	Drive Shaft Assy.			
IGB-2017L	1	Cam & Stop Plate - 4 cyl. L.H.			
IGC-24N	1	Advance Control Arm			
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
SW-213	1	Dist. Drive Rivet			
		1 2 3 4 5			

† Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-784S.

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed.”

IGB-4106 DISTRIBUTOR ILLUSTRATION

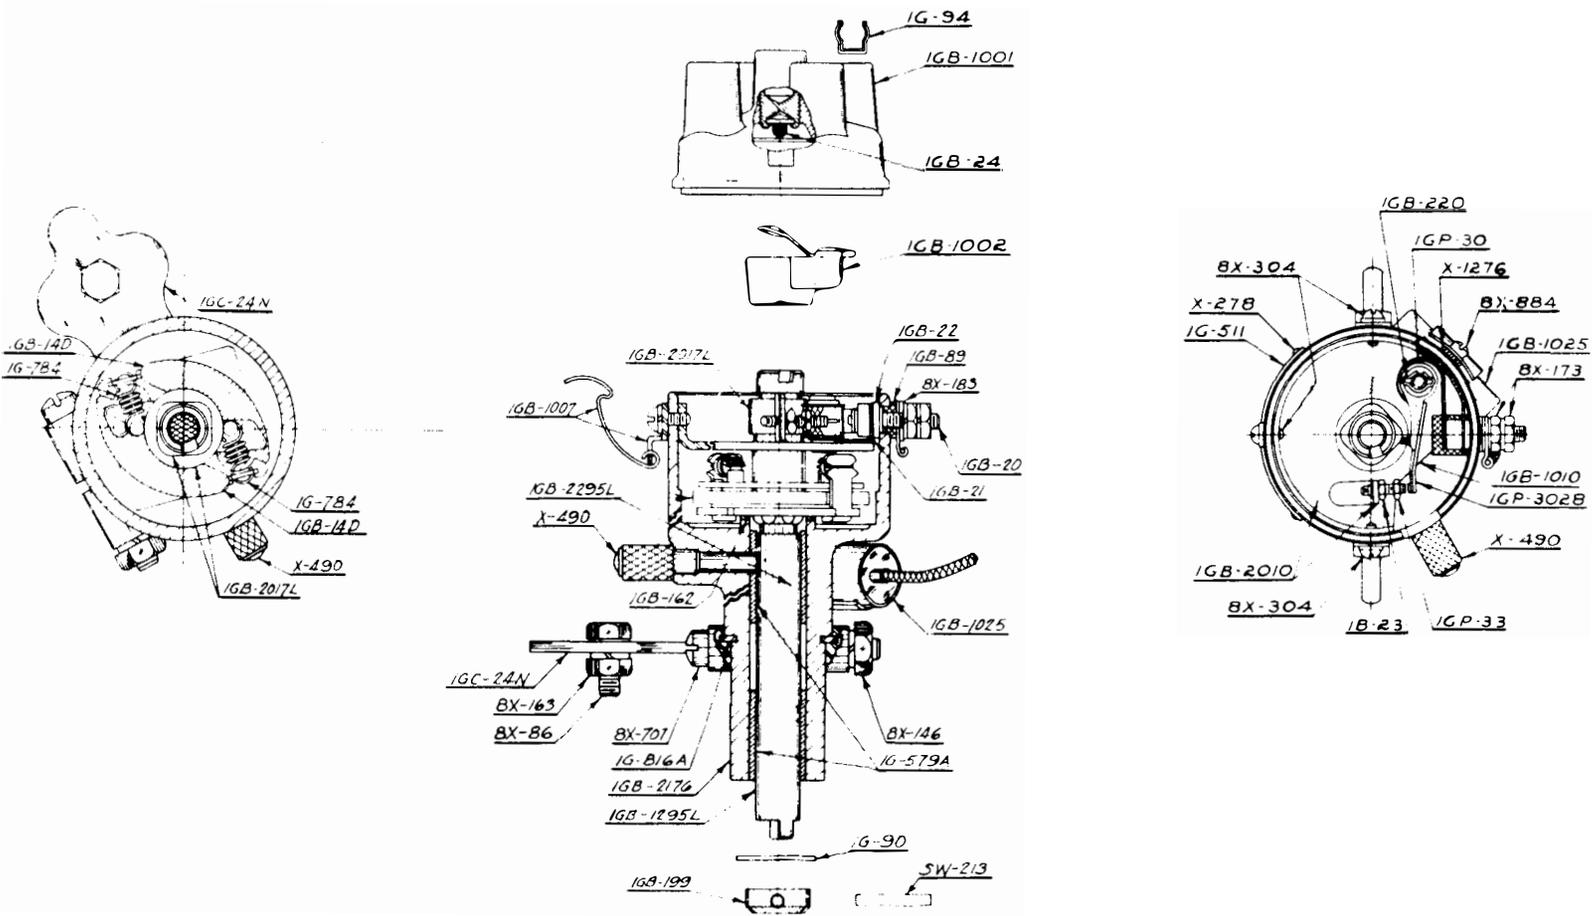

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4201,A DISTRIBUTOR PARTS LIST

IGB-4201,A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
GJ-60	1	C.B. Lead Assy.	8X-163	1	1/4-20 Hex. Nut
X-606	1	Terminal	8X-173	2	#10-32 Hex. Nut
X-755	1	Terminal	8X-183	1	#10 Brass Washer
IG-90	1	Thrust Washer	X-195	3	#8 Lock Washer
IG-644	1	Dist. Drive Coupling	X-196	2	#10 Lock Washer
IG-688	1	Advance Control Washer	X-199	1	1/4 Lock Washer
IG-816	1	Thrust Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-20	1	Terminal Post - #10-32	8X-794	1	#10-32 Square Nut
IGB-21	1	Terminal Post Insulation	8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-89	1	Insulating Bushing	8X-902	1	#10-32x3/8 Fill. Hd. Screw
IGB-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-220	1	Lock Spring	8X-1407	2	#8-32x9/16 Ctsk. Hd. Screw
IGB-224	1	Dist. Cap Cover			1 2 3 4 5
IGB-227	1	Advance Control Screw - 1/4-20			(Issued 9-29-36)
IGB-247	1	Dist. Drive Rivet			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-1223	1	Rotor			
IGB-1225	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-230	2	Rubber Gasket			
IGB-1231	1	Advance Control Arm			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight			
*	2	Weight Spring			
*	1	Drive Shaft Assy.			
IGB-2232L	1	Cam & Stop Plate - 4 cyl. L.H.			
IGB-2233	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight	Weight Spring	Weight Sp. Set
IGB-4201	IGB-2181LD	IGB-1181LB	IGB-14L	IGB-208 1 ea. IGB-234	IGB-208SS
IGB-4201A	IGB-2181LG	IGB-1181L	IGB-14B	IGC-78 (2)	IGC-78S


* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

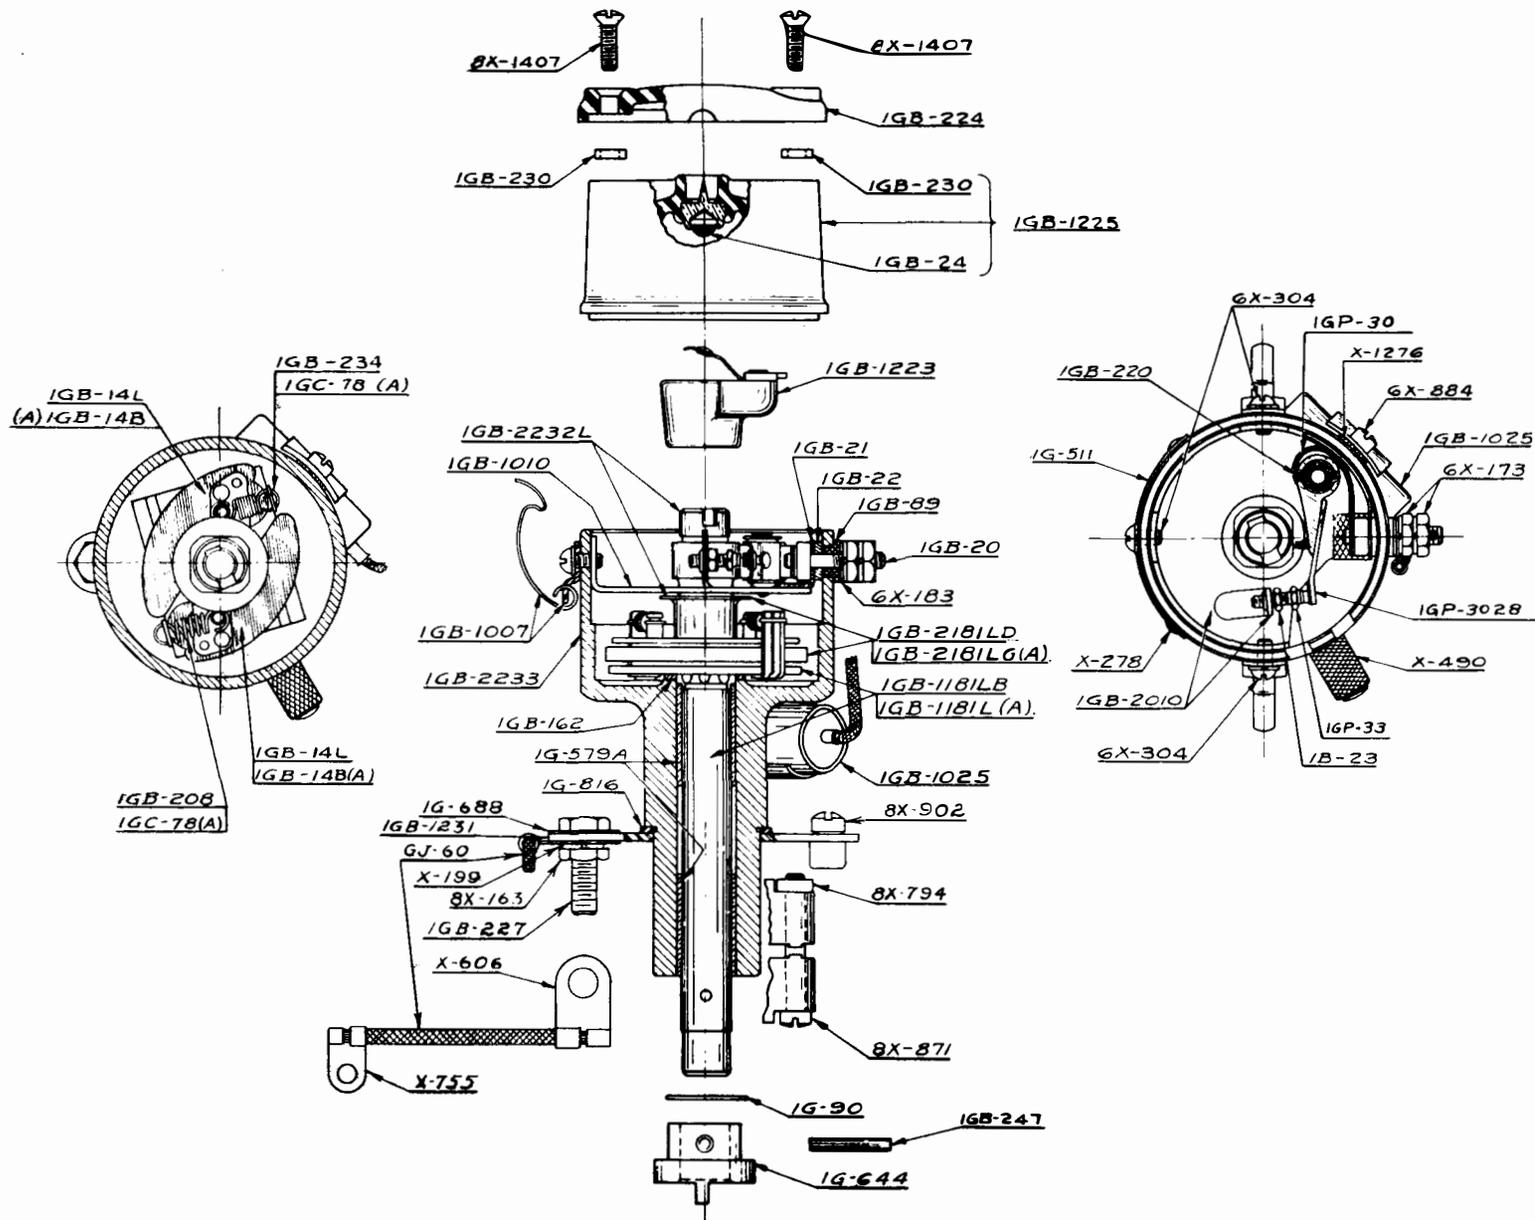

IGB-4201-A DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4203 DISTRIBUTOR PARTS LIST

IGB-4203

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	2					Thrust Washer
IG-816	1					Thrust Washer
IG-2806-1	1					Advance Control Arm Assy.
IG-687	1					Spring Washer
IG-688	2					Advance Control Washer
IG-750	1					Advance Control Screw
8X-163	1					1/4-20 Hex. Nut
8X-794	1					#10-32 Square Nut
8X-871	1					#10-32x1 3/8 Fill. Hd. Sc.
IGB-224	1					DISTRIBUTOR CAP COVER
IGB-1225	1					DISTRIBUTOR CAP ASSY.
IGB-24	1					Contact Plunger
IGB-230	2					Rubber Gasket
IGB-1239	1					ROTOR
IGB-1305L	1					Brkr. Cam & Shaft - 2 Cyl. - L.H.
IGB-3303	1					Distributor Base Assy.
DH-11	1					Insulating Bushing
IB-23	1					Brkr. Point Lock Nut
IGB-21	1					Terminal Post Insulation
IGB-1007	1					Dist. Cap Spr. & Hinge Assembly
IGB-1025B	1					CONDENSER ASSY.
IGB-2303	1					Dist. Base Part Assy.
IG-511	1					Name Plate
IG-579A	2					Absorbent Bronze Brg.
IGB-38	1					Breaker Arm Bracket
X-278	2					3/32x3/16 Tubular Rivet
8X-302	2					#6-32x1/4 Rd. Hd. Sc.
X-490	1					Press In - Sleeve Oiler
X-1012	2					#6 Lock Washer
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IGP-33*	1					Breaker Screw Point
IGW-39	1					Terminal Post - #10-32
IGW-54	1					Washer
IGW-68	1					Insulating Washer
IGW-69	1					Insulating Washer
IGW-3028*	1					Breaker Arm Assy.
8X-173	2					#10-32 Hex. Nut
8X-183	1					#10 Brass Washer
X-195	2					#8 Lock Washer
X-196	2					#10 Lock Washer
8X-724	3					#8-32x3/16 Bdg. Hd. Sc.
X-1276	1					#8 Skpf. Washer
8X-1340	2					#8-32x3/4 Ctsk. Hd. Screw
		1	2	3	4	5

(Issued 5-22-39)



* Service BREAKER POINT SET IGW-3028S.

UNIT	APPLICATION
IGB-4203	Easthope, Ltd.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

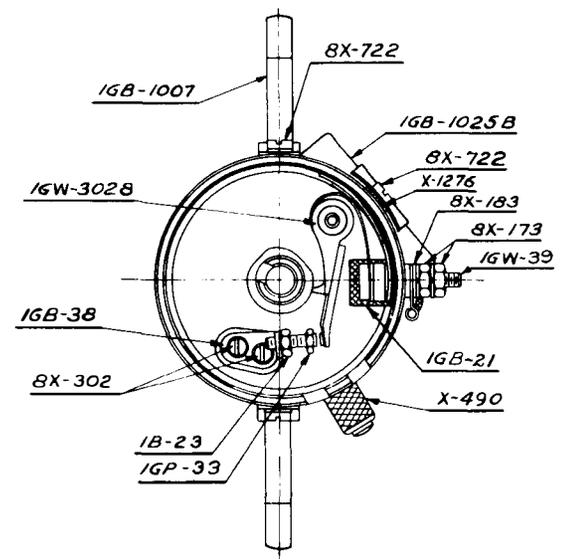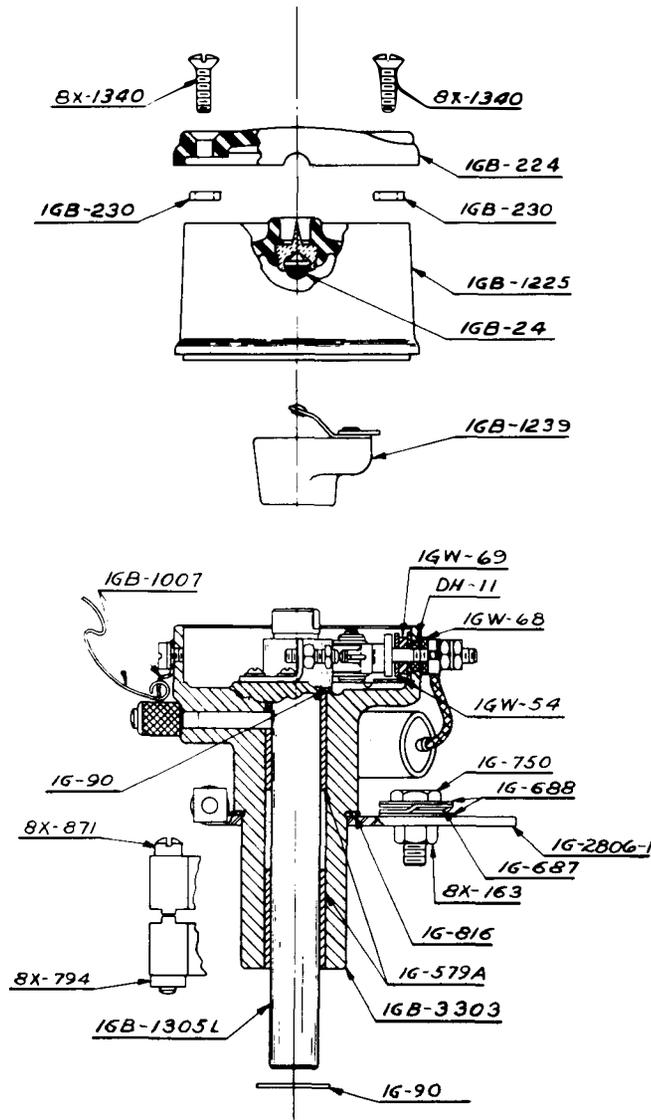

1GB-4203 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4204 DISTRIBUTOR PARTS LIST

IGB-4204

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	2					Thrust Washer
IG-816	1					Thrust Washer
IG-2806-1	1					Advance Control Arm Assy.
IG-687	1					Spring Washer
IG-688	2					Advance Control Washer
IG-750	1					Advance Control Screw
8X-163	1					1/4-20 Hex. Nut
8X-794	1					#10-32 Square Nut
8X-871	1					#10-32x1 3/8 Fill. Hd. Sc.
IGB-1305LA	1					Brkr. Cam & Shaft - 1 Cyl. - L.H.
IGB-3303	1					Distributor Base Assy.
DH-11	1					Insulating Bushing
IB-23	1					Brkr. Point Lock Nut
IGB-21	1					Terminal Post Insulation
IGB-1007	1					Dist. Cap Spr. & Hinge Assembly
IGB-1025B	1					CONDENSER ASSY.
IGB-2303	1					Dist. Base Part Assy.
IG-511	1					Name Plate
IG-579A	2					Absorbent Bronze Brg.
IGB-38	1					Breaker Arm Bracket
X-278	2					3/32x3/16 Tubular Rivet
8X-302	2					#6-32x1/4 Rd. Hd. So.
X-490	1					Press In - Sleeve Oiler
X-1012	2					#6 Lock Washer
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IGP-33*	1					Breaker Screw Point
IGW-39	1					Terminal Post - #10-32
IGW-54	1					Washer
IGW-68	1					Insulating Washer
IGW-69	1					Insulating Washer
IGW-3028*	1					Breaker Arm Assy.
8X-173	2					#10-32 Hex. Nut
8X-183	1					#10 Brass Washer
X-195	2					#8 Lock Washer
X-196	2					#10 Lock Washer
8X-724	3					#8-32x3/16 Bdg. Hd. Sc.
X-1276	1					#8 Skpf. Washer
		1	2	3	4	5

(Issued 5-22-39)



* Service BREAKER POINT SET IGW-3028S.

UNIT	APPLICATION
IGB-4204	Easthope, Ltd.

Printed in U. S. A.

File in
Equipment & Parts List Binder

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking su -parts the comp ete part can be assembled as needed.”

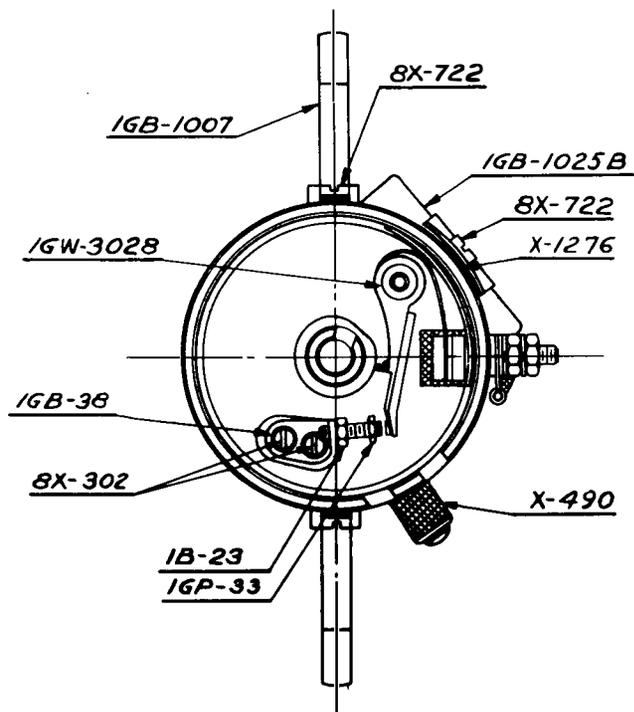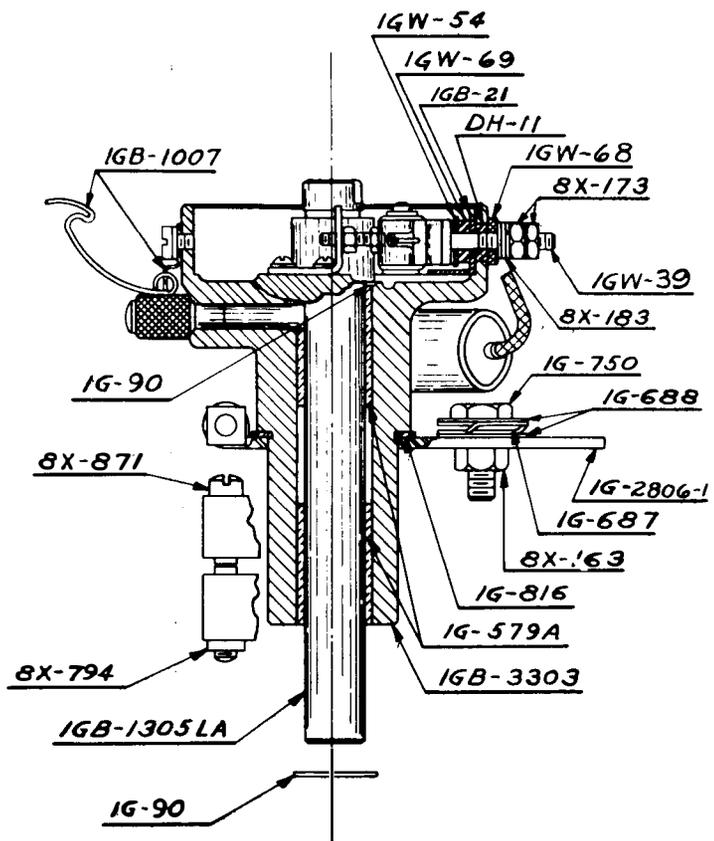

1GB-4204 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4301A DISTRIBUTOR PARTS LIST
-B

IGB-4301A
-B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
CE-40	1	Dist. Gear - Follower	6X-173	2	#10-32 Hex. Nut
IA-278	7	Secondary Term. Rubber Cap	6X-183	1	#10 Brass Washer
IG-90	1	Thrust Washer	X-195	3	#8 Lock Washer
IG-94	7	H. T. Wire Terminal	X-196	3	#10 Lock Washer
IGB-20	1	Terminal Post - #10-32	6X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-21	1	Terminal Post Insulation	6X-321	1	#10-32x5/16 Rd. Hd. Screw
IGB-22	1	Insulating Washer	6X-794	1	#10-32 Square Nut
IGB-89	1	Insulating Bushing	6X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-162	1	Thrust Washer	6X-891	1	#10-32x1 1/2 Fill Hd. Screw
IGB-216	1	Advance Control Arm	X-999	1	Terminal
IGB-220	1	Lock Spring	X-1276	1	#8 Skpf. Washer
IGB-247	1	Dist. Drive Rivet			1 2 3 4 5
IGB-264	1	Rubber Plug			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 7-10-35) (R-1-11-37)
IGB-1025J	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Distributor Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
IGB-14	2	Weight			
*	1	Cam & Stop Plate - 6 cyl. R.H.			
*	1	Drive Shaft Assy.			
IGB-2214	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-488	1	1/4 Oiler - Press in Elbow			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
SP-4008	1	Resistance Unit Assy.			
8X-196	1	#10 Lock Washer			
6X-321	1	#10-32x5/16 Rd. Hd. Screw			
		1 2 3 4 5			


Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Cam & Stop Plate	Weight Spring
IGB-4301A	IGB-2158R	IGB-1158R	IGB-1032RB	IG-913 (2)
IGB-4301B	IGB-2158RA	IGB-1158RA	IGB-1032R	IG-796 & IGE-30 (1 ea.)

* See table following parts list for part number applying to assembly wanted.

Printed in U.S.A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

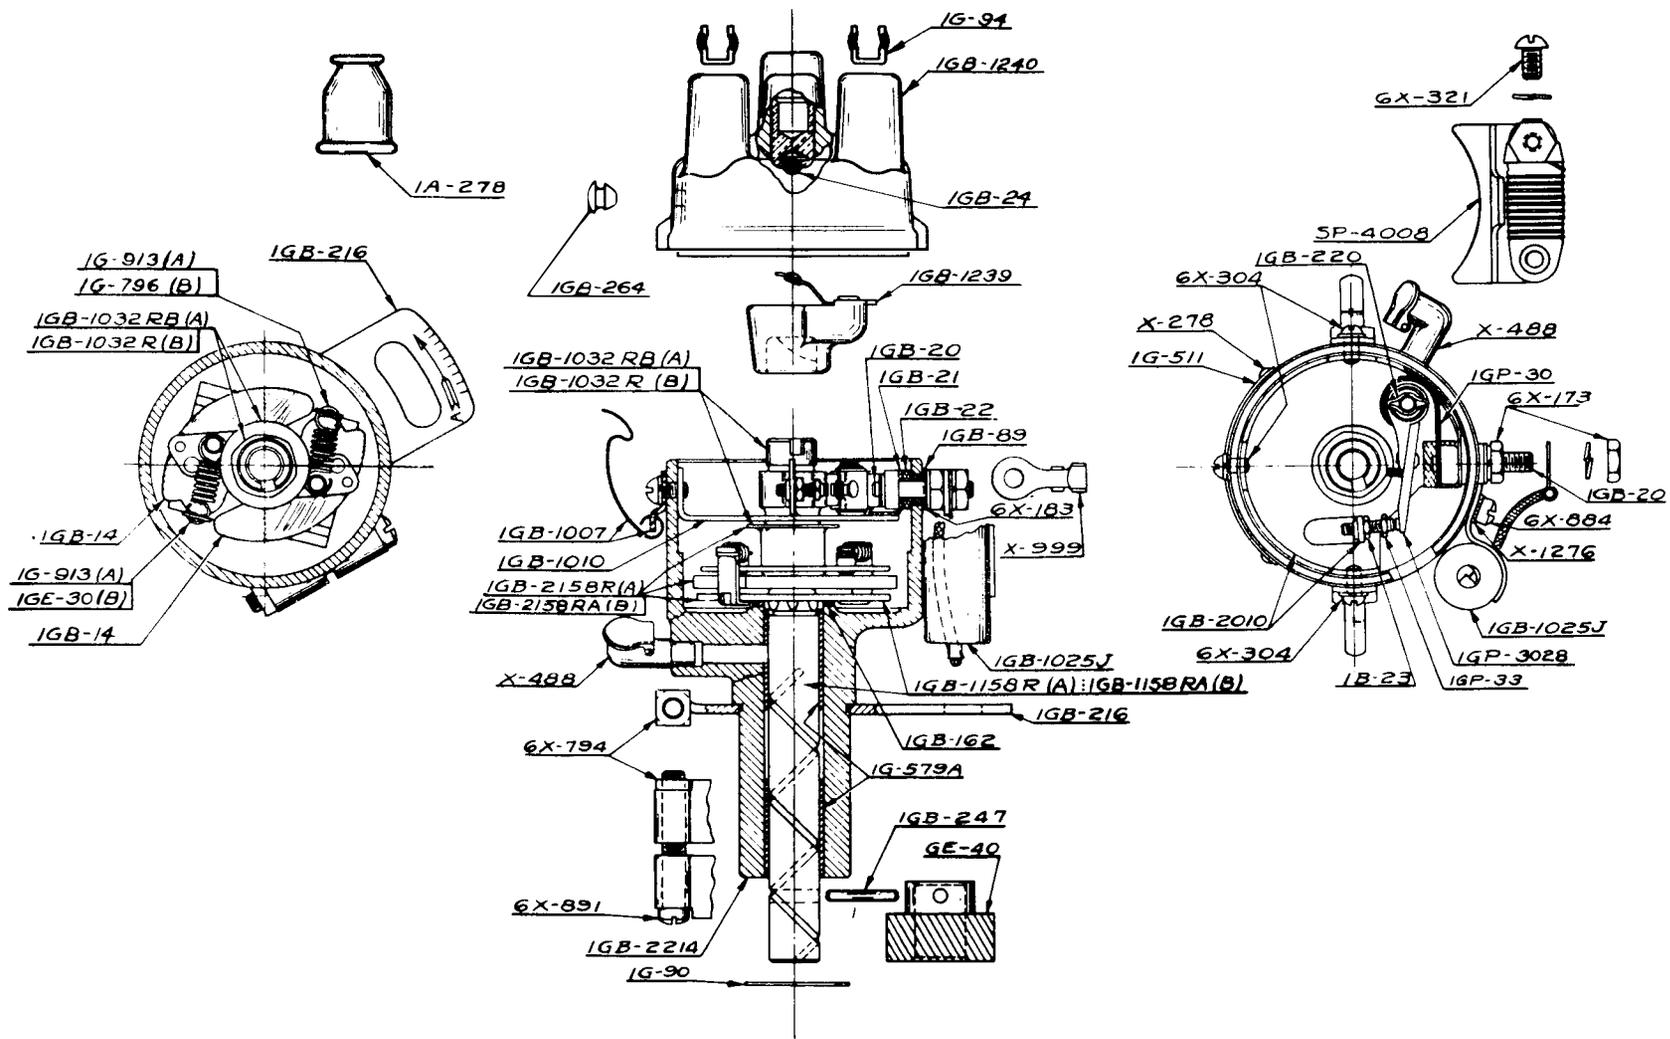

IGB-4301A-B DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4303-
D-E DISTRIBUTOR PARTS LIST

IGB-4303-
D-E

Part No.	No. Used	Name of Part				
		1	2	3	4	5
*	1	Dist. Gear Rivet				
*	1	Dist. Gear - Follower				
IG-90	1	Thrust Washer				
IG-94	7	H. T. Wire Terminal				
IG-687	1	Spring Washer				
IG-688	1	Advance Control Washer				
IG-688A	1	Advance Control Washer				
IG-750	1	Advance Control Screw - 1/4-20				
IG-816A	1	Thrust Washer				
IGB-20	1	Terminal Post - #10-32				
IGB-21	1	Terminal Post Insulation				
IGB-22	1	Insulating Washer				
IGB-89	1	Insulating Bushing				
IGB-162	1	Thrust Washer				
IGB-220	1	Lock Spring				
IGB-1007	2	Dist. Cap Spring & Hinge Assembly				
IGB-1025	1	Condenser Assembly				
IGB-1171	1	Advance Control Arm				
IGB-1239	1	Rotor				
IGB-1240	1	Distributor Cap Assy.				
IGB-24	1	Contact Plunger				
IGB-2010	1	Breaker Plate Assy.				
IB-23	1	Breaker Point Lock Nut				
IB-24	1	Breaker Point Screw				
IGB-1010	1	Breaker Plate Part Assy.				
IGB-2176	1	Dist. Base Assembly				
IG-511	1	Name Plate				
IG-579A	2	Absorbent Bronze Brg.				
X-278	2	3/32x3/16 Tubular Rivet				
X-490	1	Press in - Sleeve Oiler				
IGB-2251R	1	Drive Shaft & Gov. Assy.				
IGB-1014RC	2	Weight Assy.				
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.				
IGB-1251R	1	Drive Shaft Assy.				
IGC-78	2	Weight Spring				
IGB-3664	1	Breaker Arm Assembly				
IGB-209	1	Breaker Arm Spring				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
6X-146	1	1/4-20 Hex. Nut				
6X-163	1	1/4-20 Hex. Nut				
6X-173	2	#10-32 Hex. Nut				
6X-183	1	#10 Brass Washer				
X-195	3	#8 Lock Washer				
X-196	2	#10 Lock Washer				
X-199	1	1/4 Lock Washer				
6X-304	3	#8-32x5/16 Rd. Hd. Screw				
6X-707	1	1/4-20x1 7/8 Fill. Hd. So.				
6X-870	1	#10-32x5/16 Fill. Hd. So.				
6X-884	1	#8-32x3/16 Fill. Hd. Screw				
X-1276	1	#8 Skpf. Washer				
		1	2	3	4	5

(Issued 3-1-34)
(R-8-7-36)

Assembly No.	Gear Follower	Gear Rivet
IGB-4303	None	None
IGB-4303D	GE-41	GB-31
IGB-4303E	**	GB-31


* See table following parts list for part number applying to assembly wanted.

** Assembly "E" is identical with assembly "D" except that Hercules gear #22335 is used. This gear is identical with our GE-41 listed above.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

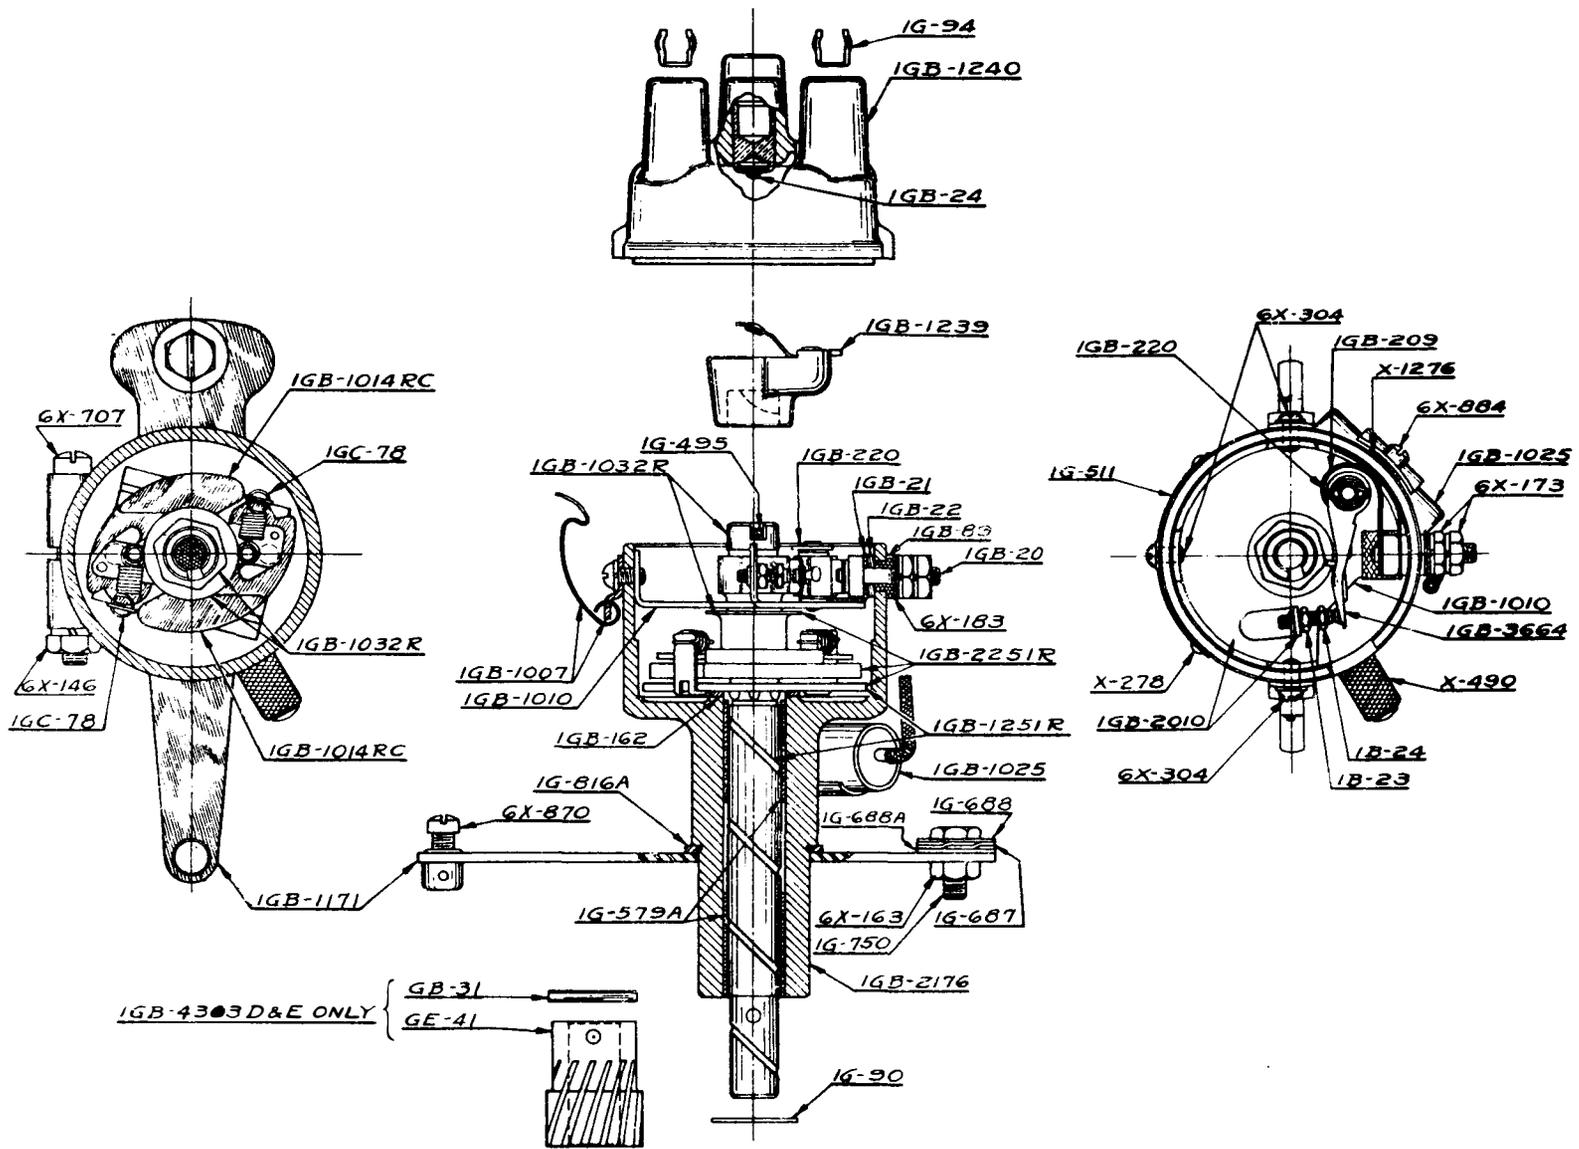

IGB-4303-D-E DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4304-
A-B-C-D DISTRIBUTOR PARTS LIST

IGB-4304-
A-B-C-D

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	6X-86	1	1/4-20x5/8 Hex. Hd. Screw
IG-94	7	H. T. Wire Terminal	6X-163	1	1/4-20 Hex. Nut
IG-644	1	Dist. Drive Coupling	6X-173	2	#10-32 Hex. Nut
IG-616	1	Thrust Washer	6X-183	1	#10 Brass Washer
IG-860A	1	Hold Down Arm	X-195	3	#8 Lock Washer
IGB-20	1	Terminal Post - #10-32	X-196	2	#10 Lock Washer
IGB-21	1	Terminal Post Insulation	X-199	1	1/4 Lock Washer
IGB-22	1	Insulating Washer	6X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-89	1	Insulating Bushing	6X-794	1	#10-32 Square Nut
IGB-162	1	Thrust Washer	6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
IGB-220	1	Lock Spring	6X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-1007	2	Dist. Cap Spring & Hinge Assembly	X-1276	1	#8 Skpf. Washer
IGB-1025	1	Condenser Assembly			1 2 3 4 5
IGB-1239	1	Rotor			(Issued 12-29-36)
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-331	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight			
IGB-1061L	1	Cam & Stop Plate - 6 cyl. L.H.			
IGB-1181L	1	Drive Shaft Assy.			
IGP-3028A	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
SW-213	1	Dist. Drive Rivet			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set
IGB-4304	IGB-2181LE	IGB-14G	IG-775	IG-775S
IGB-4304A	IGB-2181LE	IGB-14B	IGC-78	IGC-78S
IGB-4304B	IGB-2181LK	IGB-14B	IG-776	IG-776S
IGB-4304C	IGB-2181LL	IGB-14K	IGC-78	IGC-78S
IGB-4304D	IGB-2181LN	IGB-14F	IGE-29	IGE-29S


* See table following parts list for part number applying to assembly wanted. † Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4304,A,B,C,D DISTRIBUTOR ILLUSTRATION

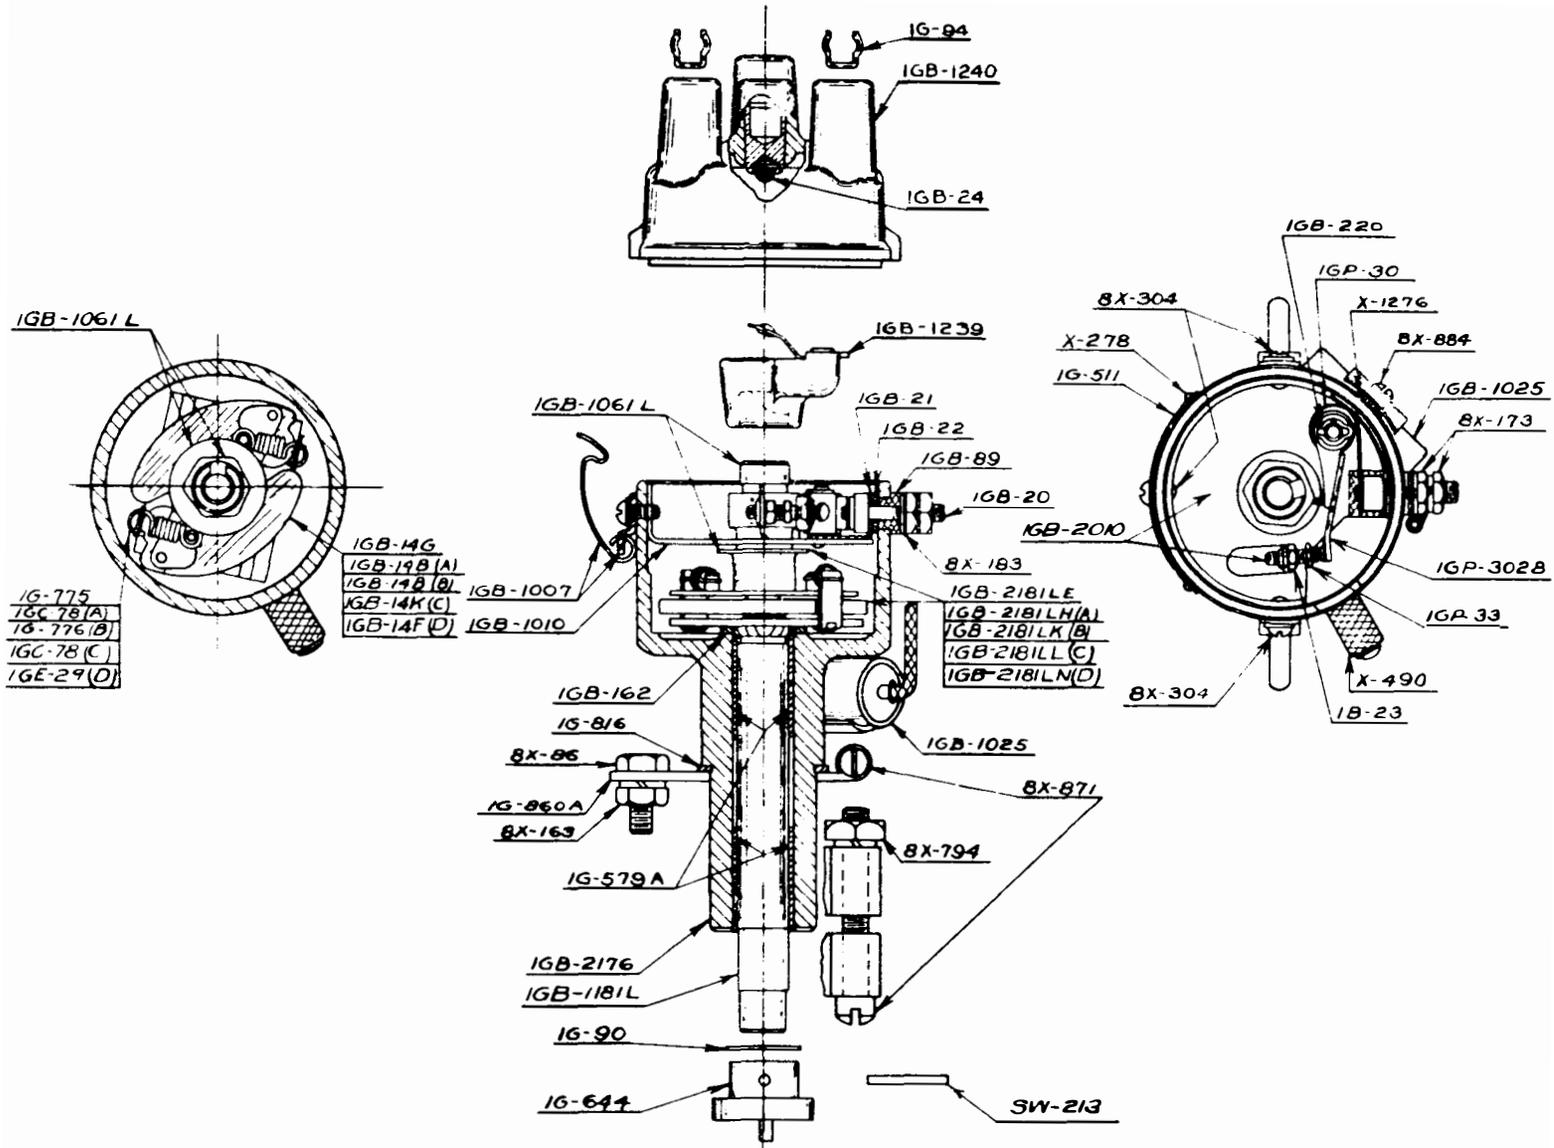

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4305A, DISTRIBUTOR PARTS LIST
B,C

IGB-4305A,
B,C

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-163	1	1/4-20 Hex. Nut
IG-94	7	H.T. Wire Terminal	8X-173	2	#10-32 Hex. Nut
*	1	Dist. Gear - Follower	8X-183	1	#10 Brass Washer
IG-816	1	Thrust Washer	X-195	3	#8 Lock Washer
IG-860A	1	Hold Down Arm	X-196	2	#10 Lock Washer
IGB-20	1	Terminal Post - #10-32	X-199	1	1/4 Lock Washer
IGB-21	1	Terminal Post Insulation	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-22	1	Insulating Washer	8X-794	1	#10-32 Square Nut
IGB-89	1	Insulating Bushing	8X-871	1	#10-32x1 3/8 Ffill. Hd. Sc.
IGB-162	1	Thrust Washer	8X-884	1	#8-32x3/16 Ffill. Hd. Sc.
IGB-220	1	Lock Spring	8X-905	1	1/4-20x7/16 Ffill. Hd. Sc.
IGB-247	1	Dist. Drive Rivet	X-1276	1	#8 Skpf. Washer
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			1 2 3 4 5
IGB-1025	1	Condenser Assembly			(Issued 9-29-36)
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight			
*	2	Weight Spring			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1175R	1	Drive Shaft Assy.			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set	Dist. Gear - Follower
IGB-4305A	IGB-2175RF	IGB-14C	IGC-81	IGC-81S	IG-261
IGB-4305B	IGB-2175RK	IGB-14G	IG-775	IG-775S	GK-36
IGB-4305C	IGB-2175RF	IGB-14C	IGC-81	IGC-81S	GK-36


* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

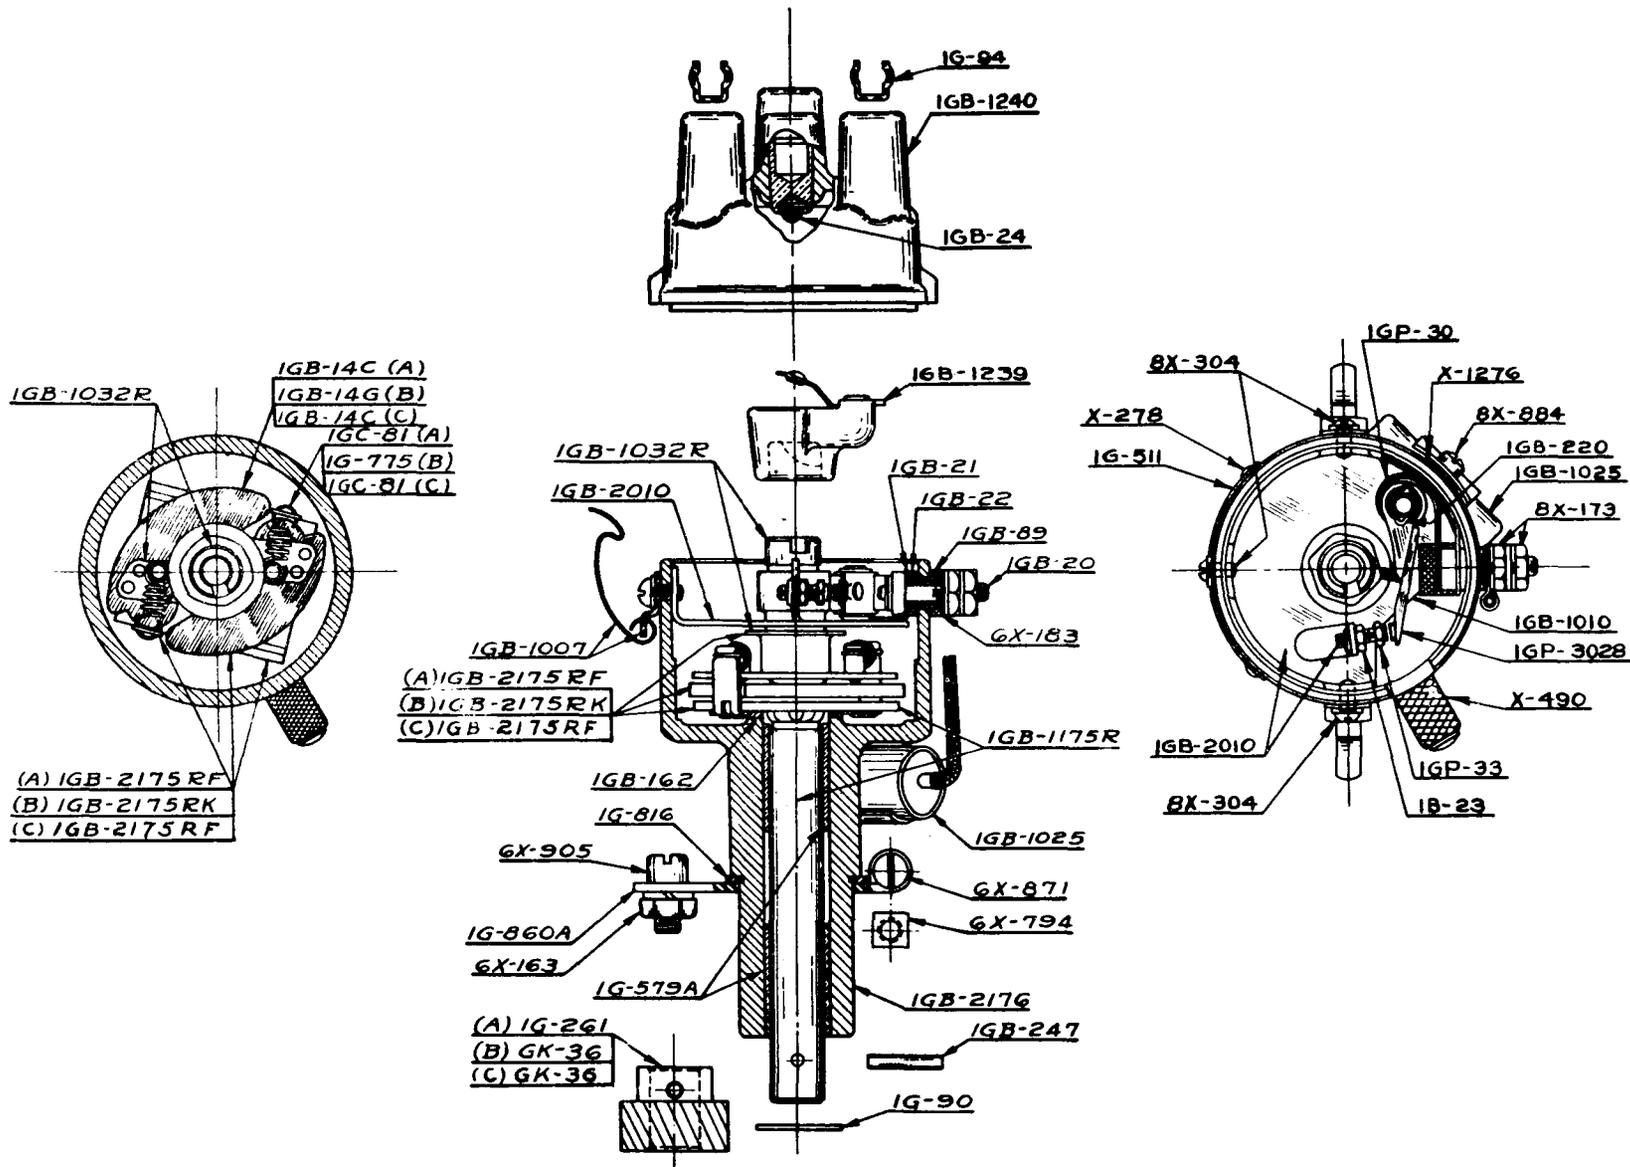

IGB-4305A-B-C DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4306 DISTRIBUTOR PARTS LIST

IGB-4306

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-86	1	1/4-20x5/8 Hex. Hd. Screw
IG-94	7	H.T. Wire Terminal	8X-146	1	1/4-20 Hex. Nut
IG-544	1	Dist. Drive Coupling	8X-163	1	1/4-20 Hex. Nut
IG-816A	1	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IGB-20	1	Terminal Post - #10-32	8X-183	1	#10 Brass Washer
IGB-21	1	Terminal Post Insulation	X-195	3	#8 Lock Washer
IGB-22	1	Insulating Washer	X-196	2	#10 Lock Washer
IGB-89	1	Insulating Bushing	X-199	2	1/4 Lock Washer
IGB-162	1	Thrust Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-220	1	Lock Spring	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-247	1	Dist. Drive Rivet	8X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-1007	2	Dist. Cap Spring & Hinge Assembly	X-1276	1	#8 Skpf. Washer
IGB-1025	1	Condenser Assembly			1 2 3 4 5
IGB-1239	1	Rotor			(Issued 9-29-36)
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGB-2181RG	1	Drive Shaft & Gov. Assy.			
IGB-208	2	Weight Spring			
IGB-1014RB	2	Weight Assembly			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1181R	1	Drive Shaft Assy.			
IGC-24N	1	Advance Control Arm			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

NOTE:- Use IGP-3028A breaker point set and IGB-208S weight spring set in servicing this unit.

Printed in U.S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4307A, B,
C, D, E, F, G, H, DISTRIBUTOR PARTS LIST
J, K, L, M

IGB-4307A, B,
C, D, E, F, G, H,
J, K, L, M

Part No.	No. Used	Name of Part				
		1	2	3	4	5
*	1	Dist. Gear - Follower				
*	1	Dist. Drive Rivet				
IG-90	2	Thrust Washer				
IG-94	7	H.T. Wire Terminal				
IG-686	1	Advance Control Screw - 1/4-28				
IG-687	1	Spring Washer				
IG-688	2	Advance Control Washer				
*	1	Advance Control Arm				
IG-816	1	Thrust Washer				
IGB-1035R	1	Breaker Cam & Shaft - 6 cyl. R.H.				
IGB-1239	1	Rotor				
IGB-1240	1	Dist. Cap Assembly				
IGB-24	1	Contact Plunger				
IGB-3037	1	Dist. Base Assy.				
IB-23	1	Breaker Point Lock Nut				
IGB-20	1	Terminal Post - #10-32				
IGB-21	1	Terminal Post Ins.				
IGB-22	1	Insulating Washer				
IGB-89	1	Insulating Bushing				
IGB-220	1	Lock Spring				
IGB-1007	2	Dist. Cap Spring & Hinge Assembly				
IGB-1025B	1	Condenser Assembly				
IGB-2037	1	Dist. Base Part Assy.				
IG-511	1	Name Plate				
IGB-38	1	Breaker Point Screw Bracket				
X-278	2	3/32x3/16 Tubular Rivet				
8X-302	2	#6-32x1/4 Rd. Hd. Sc.				
X-490	1	Press in - Sleeve Oiler				
X-1012	2	#6 Lock Washer				
IGP-33	1	Breaker Screw Point				
IGP-3028	1	Breaker Arm Assembly				
IGP-30	1	Breaker Arm Spring				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-173	2	#10-32 Hex. Nut				
8X-183	1	#10 Plain Washer				
X-195	2	#8 Lock Washer				
X-196	2	#10 Lock Washer				
8X-884	3	#8-32x3/16 Fill. Hd. Sc.				
X-1276	1	#8 Skpf. Washer				
X-199	1	1/4 Lock Washer				
8X-794	1	#10-32 Square Nut				
8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.				
8X-1063	1	1/4-28 Hex. Nut				
		1	2	3	4	5

(Issued 10-1-36)

Assembly No.	Dist. Gear	Drive Rivet	Advance Arm
IGB-4307A	GJ-168	GJ-306	IG-806A
IGB-4307B	GE-6	IGB-247	IG-806
IGB-4307C	GT-92	IGB-247	IG-806A
IGB-4307D	GG-9B	IGB-247	IG-806
IGB-4307E	GG-9A	IGB-247	IG-806
IGB-4307F	GT-92	IGB-247	IG-806
IGB-4307G	IG-261	IGB-247	IG-806
IGB-4307H	GE-28	IGB-247	IG-806
IGB-4307J	GE-20	IGB-247	IG-806
IGB-4307K	GK-36	IGB-247	IG-806
IGB-4307L	GK-36	IGB-247	IG-806C
IGB-4307M	IG-261	IGB-247	IG-806C

* See table following parts list for part number applying to assembly wanted.


NOTE:- Use IGP-3028A breaker point set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part number are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4307A-B-C-D-E-
F-G-H-J-K-L-M
DISTRIBUTOR ILLUSTRATION

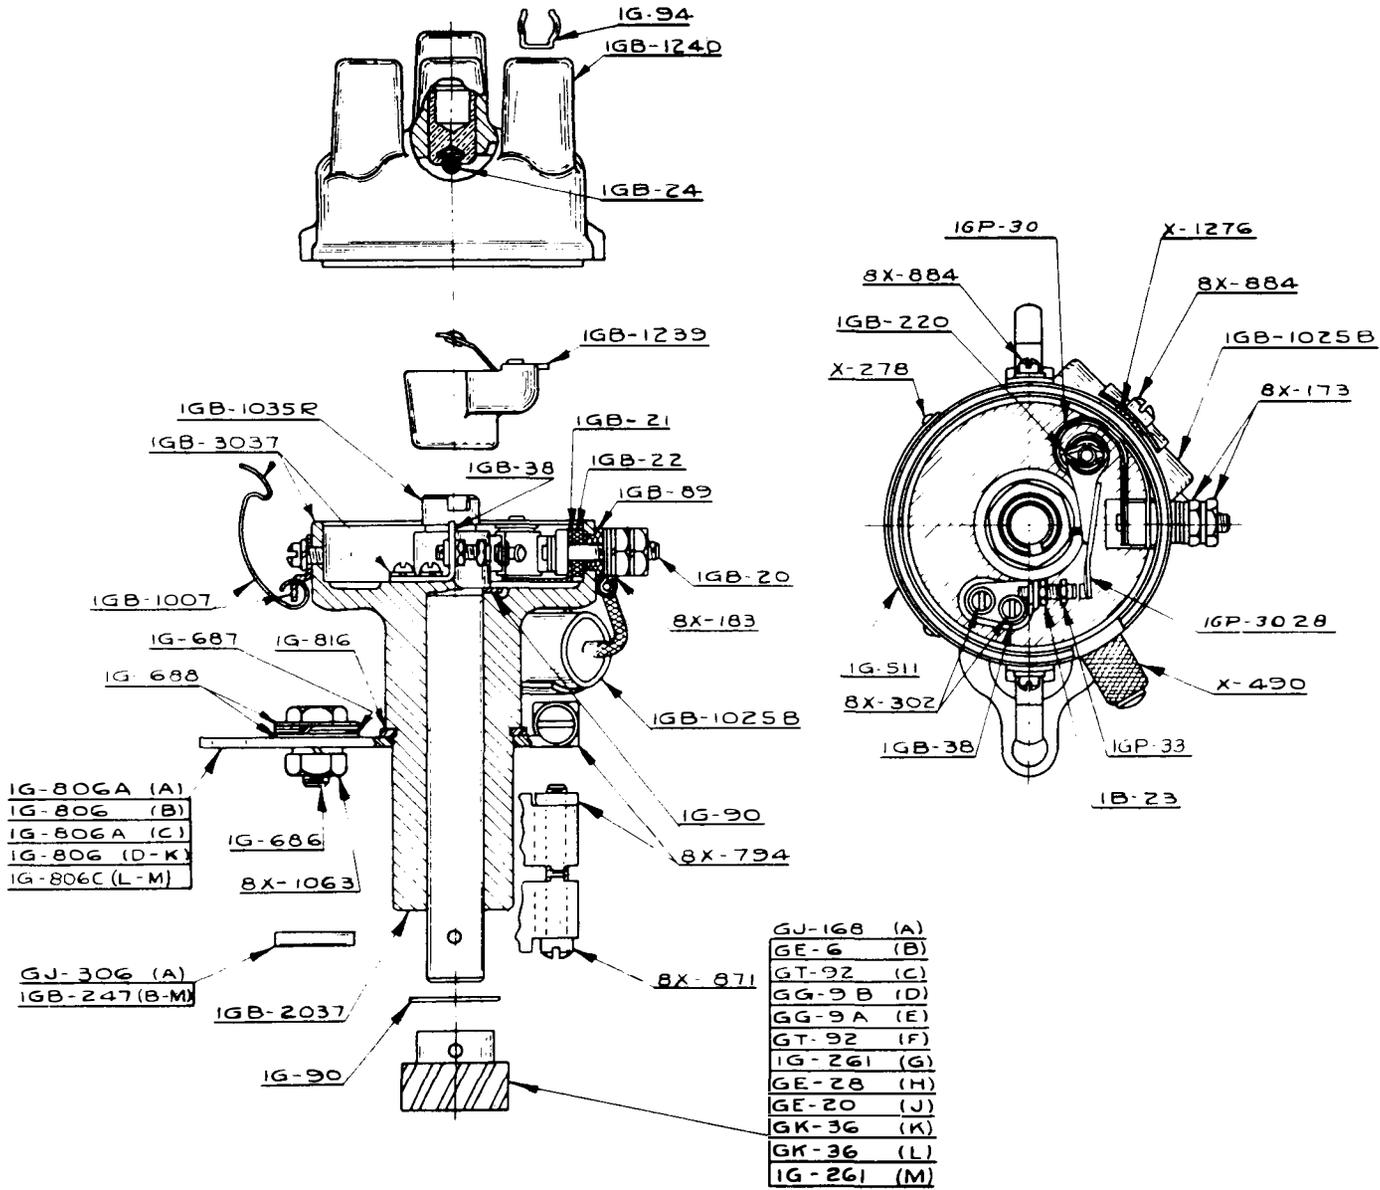

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4309A DISTRIBUTOR PARTS LIST

IGB-4309A

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1					Thrust Washer
IG-94	7					H. T. Wire Terminal
IG-687	1					Spring Washer
IG-688	1					Advance Control Washer
IG-688A	1					Advance Control Washer
IG-750	1					Advance Control Screw - 1/4-20
IG-816A	1					Thrust Washer
IGB-20	1					Terminal Post - #10-32
IGB-21	1					Terminal Post Insulation
IGB-22	1					Insulating Washer
IGB-89	1					Insulating Bushing
IGB-162	1					Thrust Washer
IGB-220	1					Lock Spring
IGB-1007	2					Dist. Cap Spring & Hinge Assembly
IGB-1025	1					Condenser Assembly
IGB-1239	1					Rotor
IGB-1240	1					Dist. Cap Assembly
IGB-24	1					Contact Plunger
IGB-2010	1					Breaker Plate Assy.
IB-23	1					Breaker Point Lock Nut
IGB-1010	1					Breaker Plate Part Assy.
IGP-33	1					Breaker Screw Point
IGB-2176	1					Dist. Base Assembly
IG-511	1					Name Plate
IG-579A	2					Absorbent Bronze Brg.
X-278	2					3/32x3/16 Tubular Rivet
X-490	1					Press in - Sleeve Oiler
IGB-2251R	1					Drive Shaft & Gov. Assy.
IGB-1014RC	2					Weight Assembly
IGB-1032R	1					Cam & Stop Plate - 6 cyl. R.H.
IGB-1251R	1					Drive Shaft Assy.
IGC-78	2					Weight Spring
IGC-24F	1					Advance Control Arm
IGP-3028	1					Breaker Arm Assembly
IGP-30	1					Breaker Arm Spring
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
6X-146	1					1/4-20 Hex. Nut
6X-163	1					1/4-20 Hex. Nut
6X-173	2					#10-32 Hex. Nut
6X-183	1					#10 Brass Washer
X-195	3					#8 Lock Washer
X-196	2					#10 Lock Washer
X-199	1					1/4 Lock Washer
6X-304	3					#8-32x5/16 Rd. Hd. Screw
6X-707	1					1/4-20x1 7/8 Fill. Hd. Screw
6X-884	1					#8-32x3/16 Fill. Hd. Screw
X-1276	1					#8 Skpf. Washer
		1	2	3	4	5

(Issued 2-26-35)
(R-12-10-36)

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4310 DISTRIBUTOR PARTS LIST

IGB-4310

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	6X-173	2	#10-32 Hex. Nut
IG-94	7	H.T. Wire Terminal	6X-183	1	#10 Brass Washer
IGB-20	1	Terminal Post - #10-32	X-195	3	#8 Lock Washer
IGB-21	1	Terminal Post Insulation	X-196	2	#10 Lock Washer
IGB-22	1	Insulating Washer	6X-304	3	#8-32x5/16 Rd. Hd. Sc.
IGB-89	1	Insulating Bushing	6X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-220	1	Lock Spring			1 2 3 4 5
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 4-8-37)
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assembly			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGB-2183RB	1	Drive Shaft & Gov. Assy.			
IGB-208†	2	Weight Spring			
IGB-1014RB	2	Weight Assembly			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1183R	1	Drive Shaft Assembly			
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			


† Service Breaker Point Set IGP-3028A &
Service Weight Spring Set IGB-208S.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4310 DISTRIBUTOR ILLUSTRATION

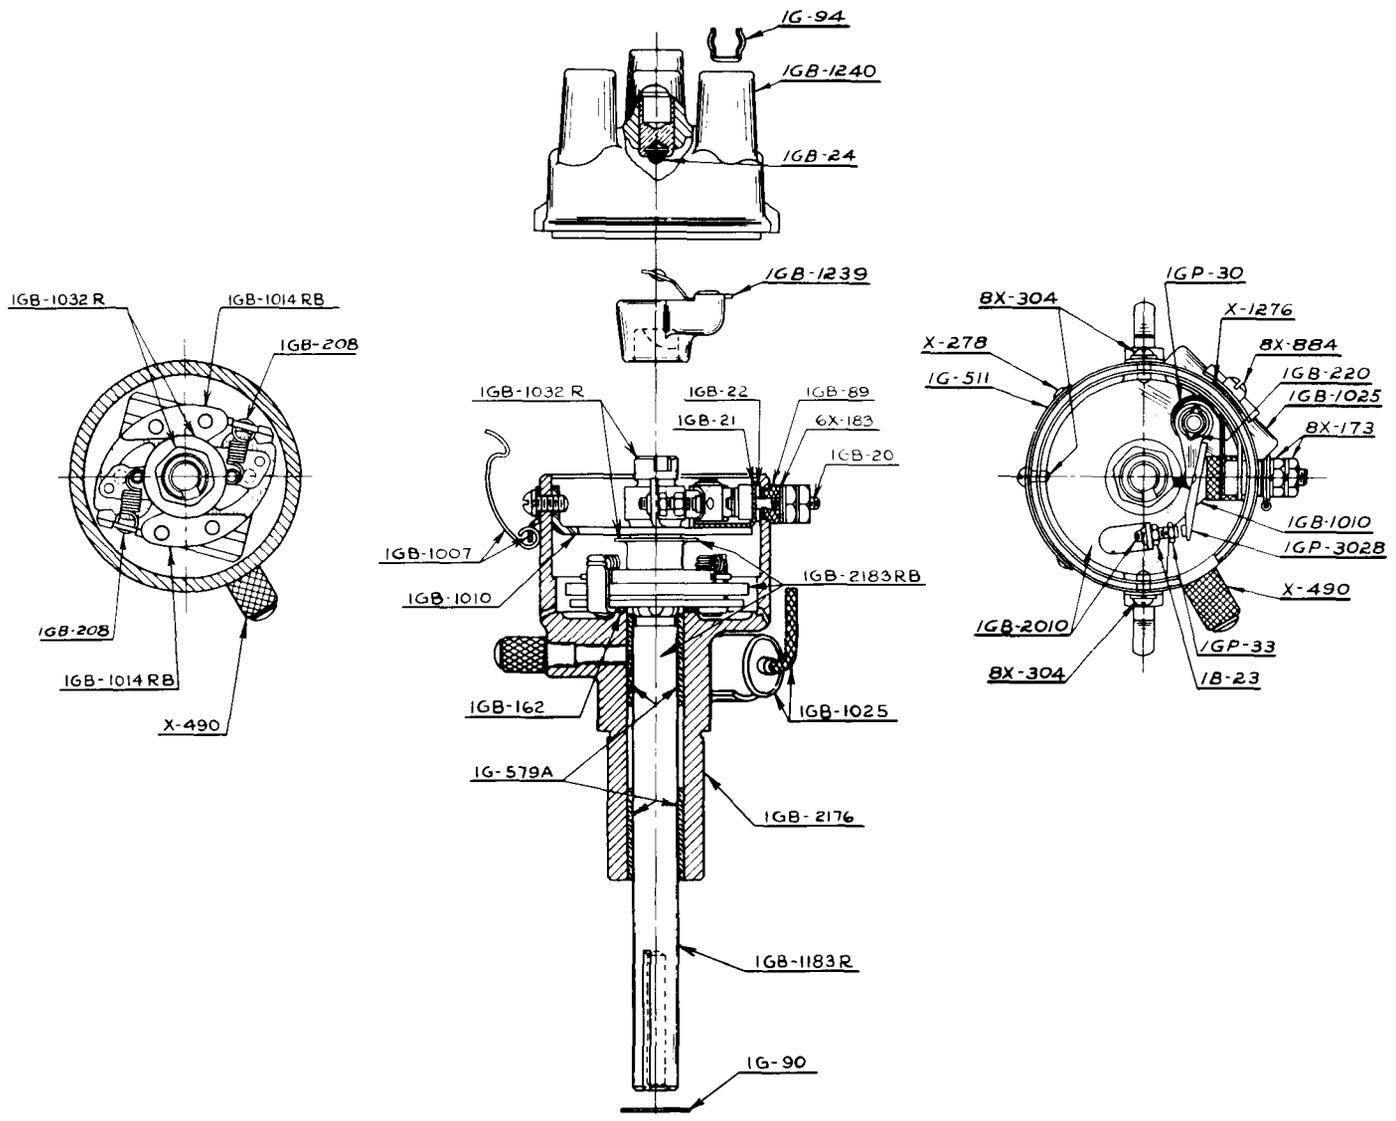

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4312, DISTRIBUTOR PARTS LIST
A,B

IGB-4312,
A,B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-146	1	1/4-20 Mex. Nut
IG-94	7	H. T. Wire Terminal	8X-173	2	#10-32 Hex. Nut
IG-644	1	Dist. Drive Coupling	8X-183	1	#10 Brass Washer
IG-686	1	Advance Control Screw - 1/4-28	X-195	3	#8 Lock Washer
IG-687	1	Spring Washer	X-196	2	#10 Lock Washer
IG-688	1	Advance Control Washer	X-199	1	1/4 Lock Washer
IG-816A	1	Thrust Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-20	1	Terminal Post - #10-32	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-21	1	Terminal Post Insulation	8X-870	1	#10-32x5/16 Fill. Hd. Sc.
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-89	1	Insulating Bushing	8X-1063	1	1/4-28 Mex. Nut
IGB-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-220	1	Lock Spring			1 2 3 4 5
IGB-247	1	Dist. Drive Rivet			(Issued 3-19-36)
IGB-1007	2	Dist. Cap Spring & Minge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Distributor Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Distributor Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight Assembly			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.M.			
IGB-1181R	1	Drive Shaft Assy.			
IGC-1024E	1	Advance Control Arm			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			


Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Assy.
IGB-4312	IGB-2181RH	IG-775	IGB-1014RD
IGB-4312A	IGB-2181RJ	IGC-78	IGB-14F
IGB-4312B	IGB-2181RY	IGE-29	IGB-14F

* See table following parts list for part number applying to assembly wanted.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

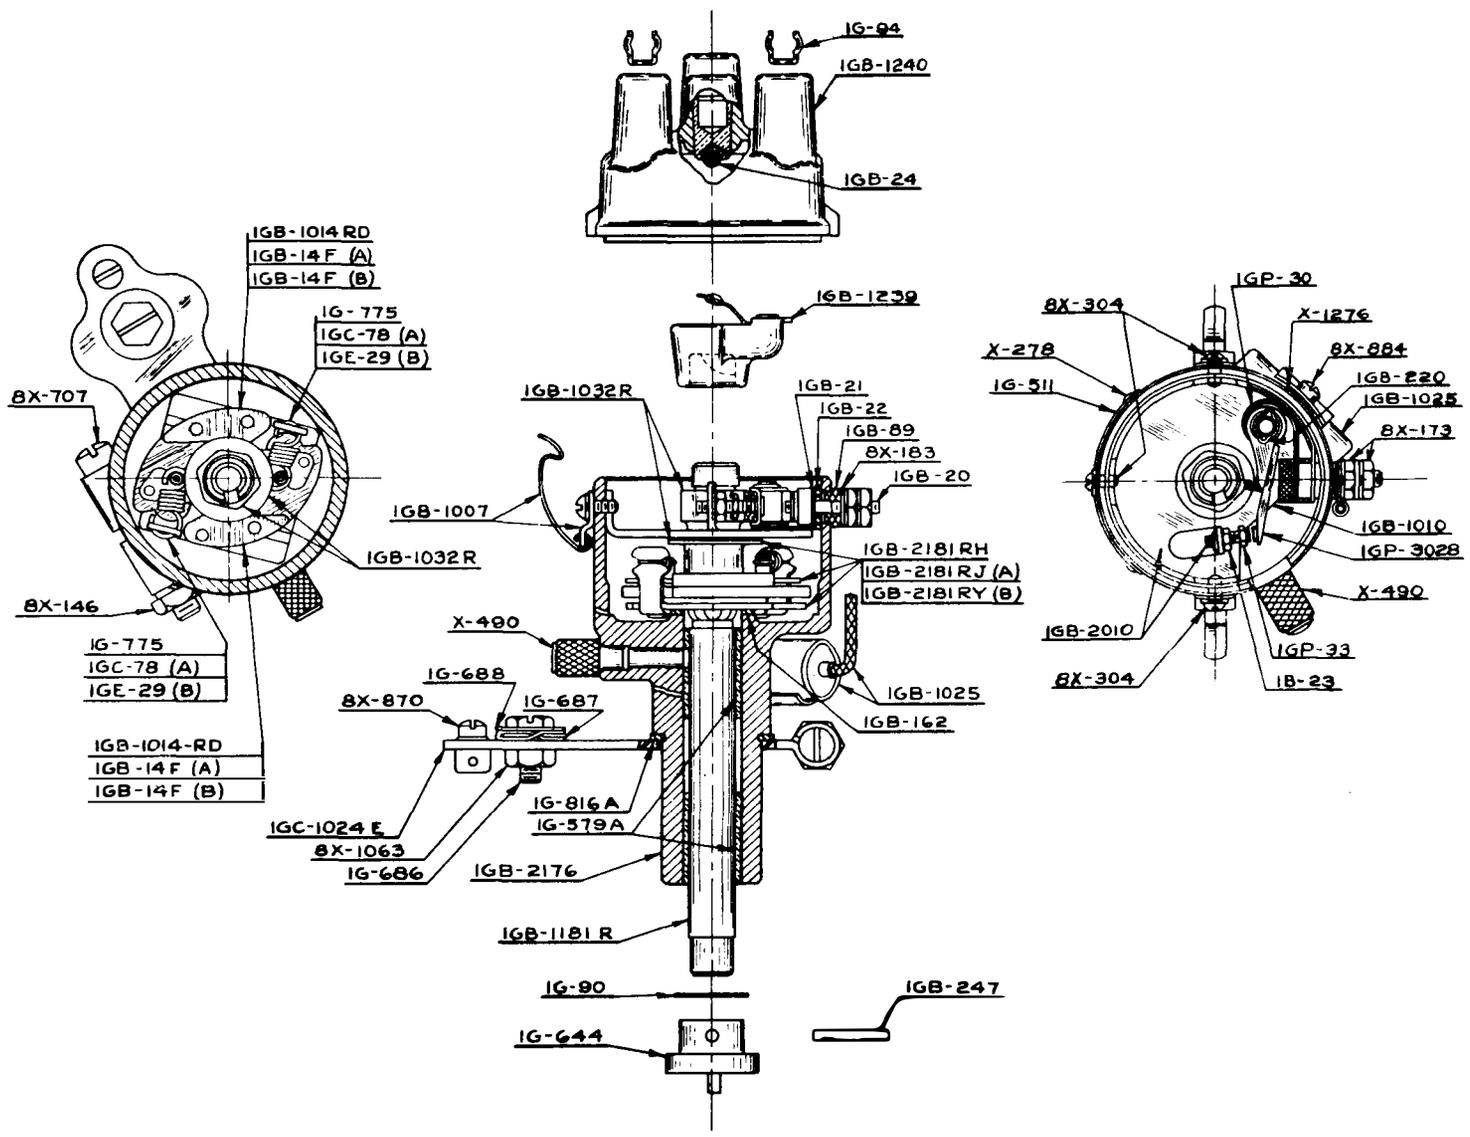

IGB-4312A,B DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4312, DISTRIBUTOR PARTS LIST
A,B


IGB-4312,
A,B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-146	1	1/4-20 Hex. Nut
IG-94	7	H. T. Wire Terminal	8X-173	2	#10-32 Hex. Nut
IG-644	1	Dist. Drive Coupling	8X-183	1	#10 Brass Washer
IG-686	1	Advance Control Screw - 1/4-28	X-195	3	#8 Lock Washer
IG-687	1	Spring Washer	X-196	2	#10 Lock Washer
IG-688	1	Advance Control Washer	X-199	1	1/4 Lock Washer
IG-816A	1	Thrust Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-20	1	Terminal Post - #10-32	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-21	1	Terminal Post Insulation	8X-870	1	#10-32x5/16 Fill. Hd. Sc.
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-89	1	Insulating Bushing	8X-1063	1	1/4-28 Hex. Nut
IGB-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-220	1	Lock Spring			1 2 3 4 5
IGB-247	1	Dist. Drive Rivet			(Issued 3-19-36)
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Distributor Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Distributor Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight Assembly			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1181R	1	Drive Shaft Assy.			
IGC-1024E	1	Advance Control Arm			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Assy.
IGB-4312	IGB-2181RH	IG-775	IGB-1014RD
IGB-4312A	IGB-2181RJ	IGC-78	IGB-14F
IGB-4312B	IGB-2181RY	IGE-29	IGB-14F

* See table following parts list for part number applying to assembly wanted.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

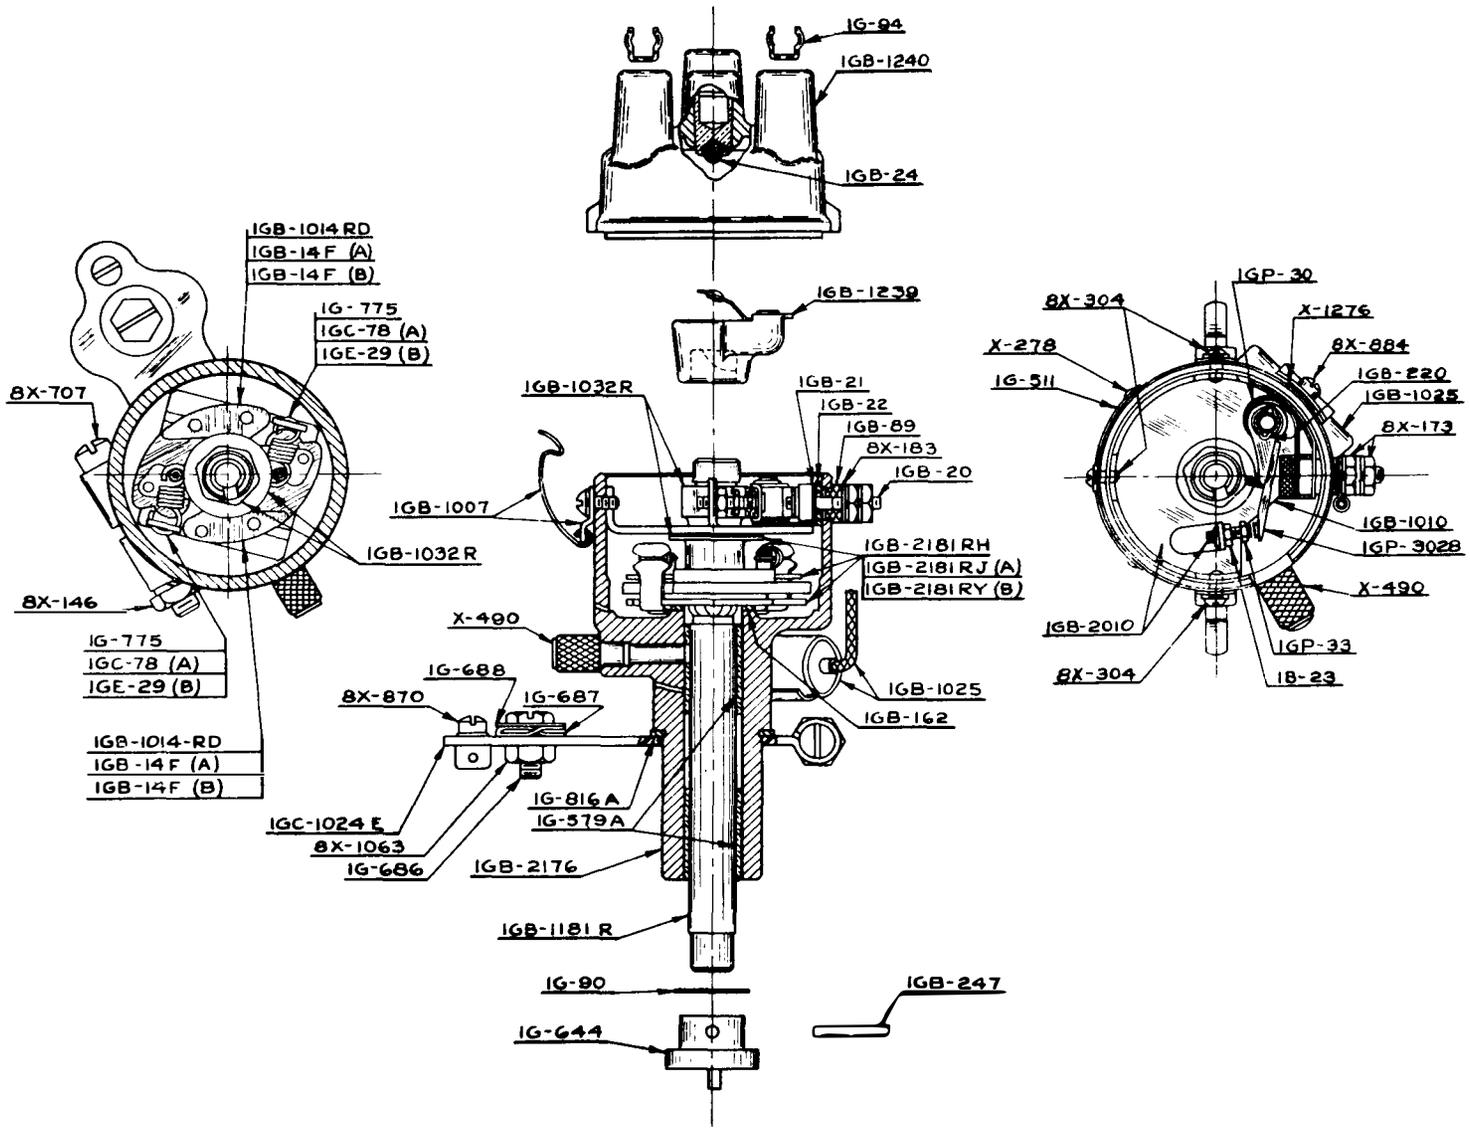

IGB-4312A,B DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4315A DISTRIBUTOR PARTS LIST
-B

IGB-4315A
-B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
*	1	1 2 3 4 5 Dist. Gear - Follower	6X-86	1	1 2 3 4 5 1/4-20x5/8 Hex. Hd. Screw
IGB-90	1	Thrust Washer	6X-163	1	1/4-20 Hex. Nut
IG-94	7	H. T. Wire Terminal	6X-173	2	#10-32 Hex. Nut
IG-816	1	Thrust Washer	6X-183	1	#10 Brass Washer
IG-860A	1	Hold Down Arm	X-195	3	#8 Lock Washer
IGB-20	1	Terminal Post - #10-32	X-196	2	#10 Lock Washer
IGB-21	1	Terminal Post Insulation	X-199	1	1/4 Lock Washer
IGB-22	1	Insulating Washer	6X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-89	1	Insulating Bushing	6X-794	1	#10-32 Square Nut
IGB-162	1	Thrust Washer	6X-871	1	#10-32x1 3/8 Fill. Hd. Screw
IGB-220	1	Lock Spring	6X-884	1	#8-32x3/16 Fill. Hd. Screw
*	1	Dist. Drive Rivet	X-1276	1	#8 Skpf. Washer
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			1 2 3 4 5
IGB-1025	1	Condenser Assembly			(Issued 2-28-35)
IGB-1239	1	Rotor			(R-10-30-36)
IGB-1240	1	Distributor Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight Assy.			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1183R	1	Drive Shaft Assy.			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			


Assembly No.	Dr. Shaft & Gov.	Weight Spring	Weight Assy.	Gear Follower	Drive Rivet
IGB-4315A	IGB-2183RA	IG-884	IGB-1014RF	GK-36	IGB-247
IGB-4315B	IGB-2183RC	IG-775	IGB-14G	GJ-168	GJ-306

* See table following parts list for part number applying to assembly wanted.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

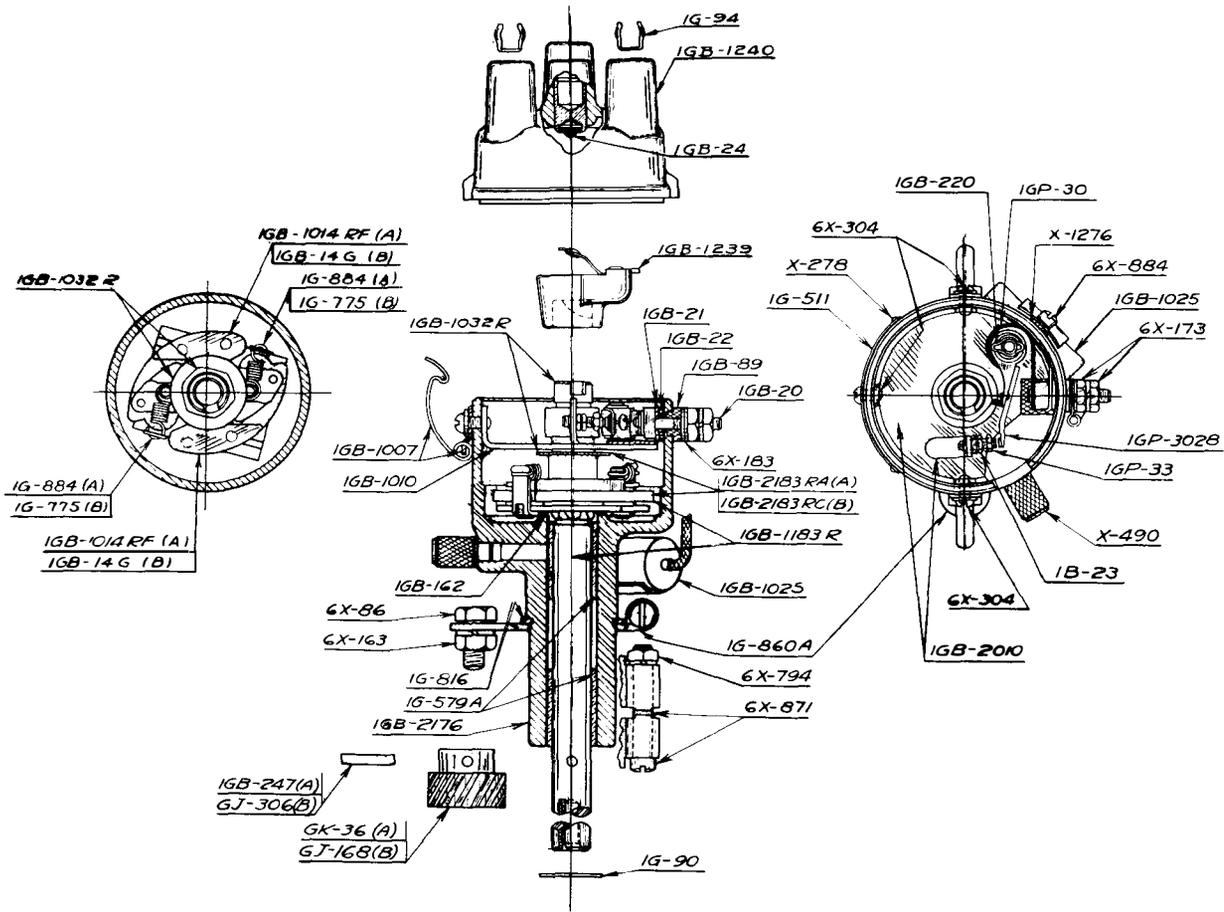

IGB-4315A-B DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4317, DISTRIBUTOR PARTS LIST
A,B

IGB-4317,
A,B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 2 3 4 5 Thrust Washer	8X-173	2	1 2 3 4 5 #10-32 Hex. Nut
IG-94	7	H.T. Wire Terminal	8X-183	1	#10 Brass Washer
IG-447	1	Dist. Drive Sleeve	X-195	3	#8 Lock Washer
*	1	Resistance Unit Assy.	X-196	2	#10 Lock Washer
GK-151	1	Plain Steel Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
8X-173	1	#10-32 Hex. Nut	8X-884	1	#8-32x3/16 Fill. Hd. Screw
X-196	1	#10 Lock Washer	X-1276	1	#8 Skpf. Washer
8X-318	1	#10-32x5/8 Rd. Hd. Screw			1 2 3 4 5
IGB-20	1	Terminal Post - #10-32			
IGB-21	1	Terminal Post Insulation			(Issued 12-14-36)
IGB-22	1	Insulating Washer			
IGB-89	1	Insulating Bushing			
IGB-162	1	Thrust Washer			
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
*	1	Dist. Base Assembly			
*	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight Assembly			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1205R	1	Drive Shaft Assembly			
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
SW-213	1	Dist. Drive Rivet			
		1 2 3 4 5			

Assembly No.	Dist. Base Assy.	Name Plate	Dr. Shaft & Gov.	Weight	Weight Spring	Weight Sp. Set	Resistance Unit Assy.
IGB-4317	IGB-2204	IG-511	IGB-2205RA	IGB-1014RB	IGB-208	IGB-208S	None
IGB-4317A	IGB-2204A	IG-511A	IGB-2205RD	IGB-14A	IGB-202	IGB-202S	None
IGB-4317B	IGB-2204	IG-511	IGB-2205RA	IGB-1014RB	IGB-208	IGB-208S	IG-1205


† Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4317-A-B DISTRIBUTOR ILLUSTRATION

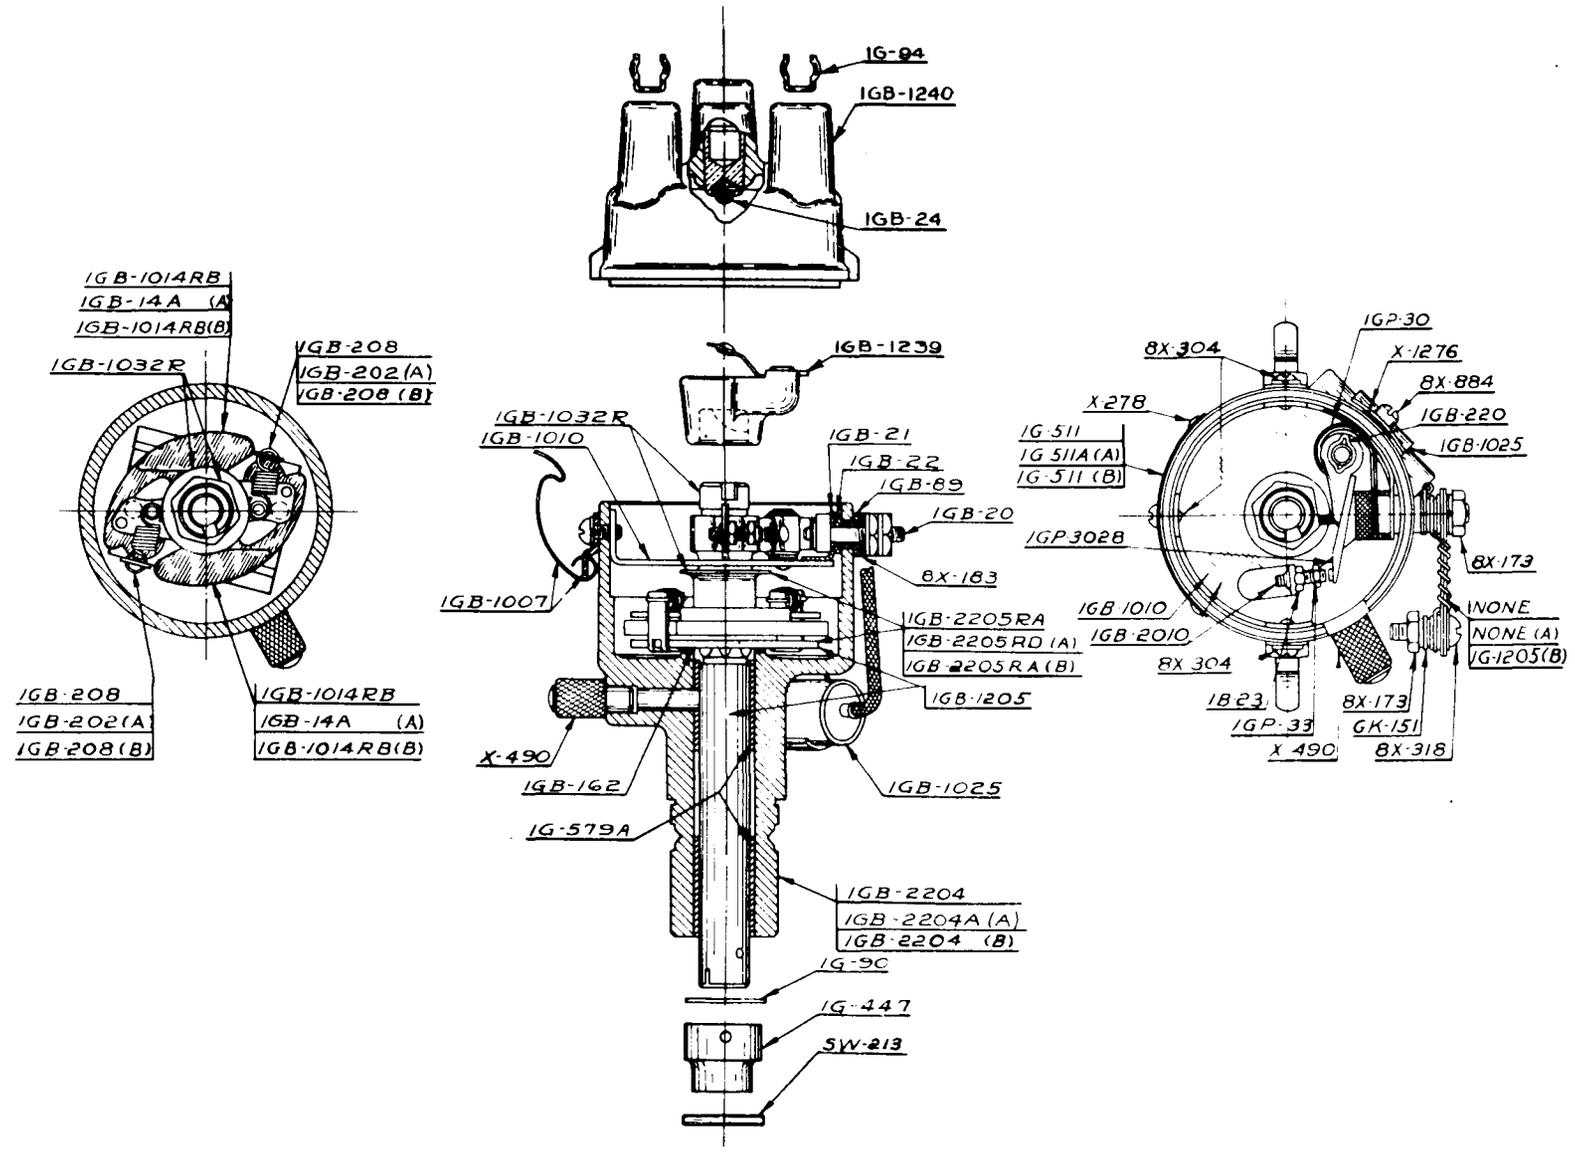

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4320 DISTRIBUTOR PARTS LIST

IGB-4320

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Thrust Washer	8X-86	1	1/4-20x5/8 Hex. Hd. Screw
IG-94	7	H.T. Wire Terminal	8X-146	1	1/4-20 Hex. Nut
IG-816A	1	Thrust Washer	8X-163	1	1/4-20 Hex. Nut
IGB-20	1	Terminal Post - #10-32	8X-173	2	#10-32 Hex. Nut
IGB-21	1	Terminal Post Insulation	8X-183	1	#10 Brass Washer
IGB-22	1	Insulating Washer	X-195	3	#8 Lock Washer
IGB-89	1	Insulating Bushing	X-196	2	#10 Lock Washer
IGB-162	1	Thrust Washer	X-199	2	1/4 Lock Washer
IGB-220	1	Lock Spring	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-1007	2	Dist. Cap Spring & Hinge Assembly	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-1025	1	Condenser Assembly	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-1239	1	Rotor	X-1276	1	#8 Skpf. Washer
JGB-1240	1	Dist. Cap Assy.		1	2 3 4 5
IGB-24	1	Contact Plunger			(Issued 11-18-36)
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGB-2251R	1	Drive Shaft & Gov. Assy.			
IGB-1014RC	2	Weight Assy.			
IGB-1032R	1	Cam & Stop Plate - 6 Cyl. R.H.			
IGB-1251R	1	Drive Shaft Assy.			
IGC-78†	2	Weight Spring			
IGC-24N	1	Advance Control Arm			
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

† Service Weight Spring Set IGC-78S & Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4322,A DISTRIBUTOR PARTS LIST

IGB-4322,A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	IGP-3028	1	Breaker Arm Assy.
IG-94	7	H.T. Wire Terminal	IGP-30	1	Breaker Arm Spring
IG-687	1	Spring Washer	8X-146	1	1/2-20 Hex. Nut
IG-688	1	Advance Control Washer	8X-163	1	1/4-20 Hex. Nut
IG-688A	1	Advance Control Washer	8X-173	2	#10-32 Hex. Nut
IG-750	1	Advance Control Screw - 1/4-20	8X-183	1	#10 Brass Washer
IG-816A	1	Thrust Washer	X-195	3	#8 Lock Washer
IGB-20	1	Terminal Post - #10-32	X-196	2	#10 Lock Washer
IGB-21	1	Terminal Post Insulation	X-199	1	1/4 Lock Washer
IGB-22	1	Insulating Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-89	1	Insulating Bushing	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-162	1	Thrust Washer	8X-870	1	#10-32x5/16 Fill. Hd. Sc.
IGB-220	1	Lock Spring	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-1007	2	Dist. Cap Spring & Hinge Assembly	X-1276	1	#8 Skpf. Washer
					1 2 3 4 5
IGB-1025	1	Condenser Assembly			(Issued 5-29-36)
IGB-1171	1	Advance Control Arm			
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight			
IGB-1061L	1	Cam & Stop Plate - 6 Cyl. L.H.			
*	1	Drive Shaft Assy.			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight Assy.	Weight Spring	Weight Sp. Set
IGB-4322	IGB-2181LA	IGB-1181LA	IGB-14C	IG-776	IG-776S
IGB-4322A	IGB-2251L	IGB-1251L	IGB-1014LC	IGC-78	IGC-78S


* See table following parts list for part number applying to assembly wanted.

NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Printed in U.S.A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

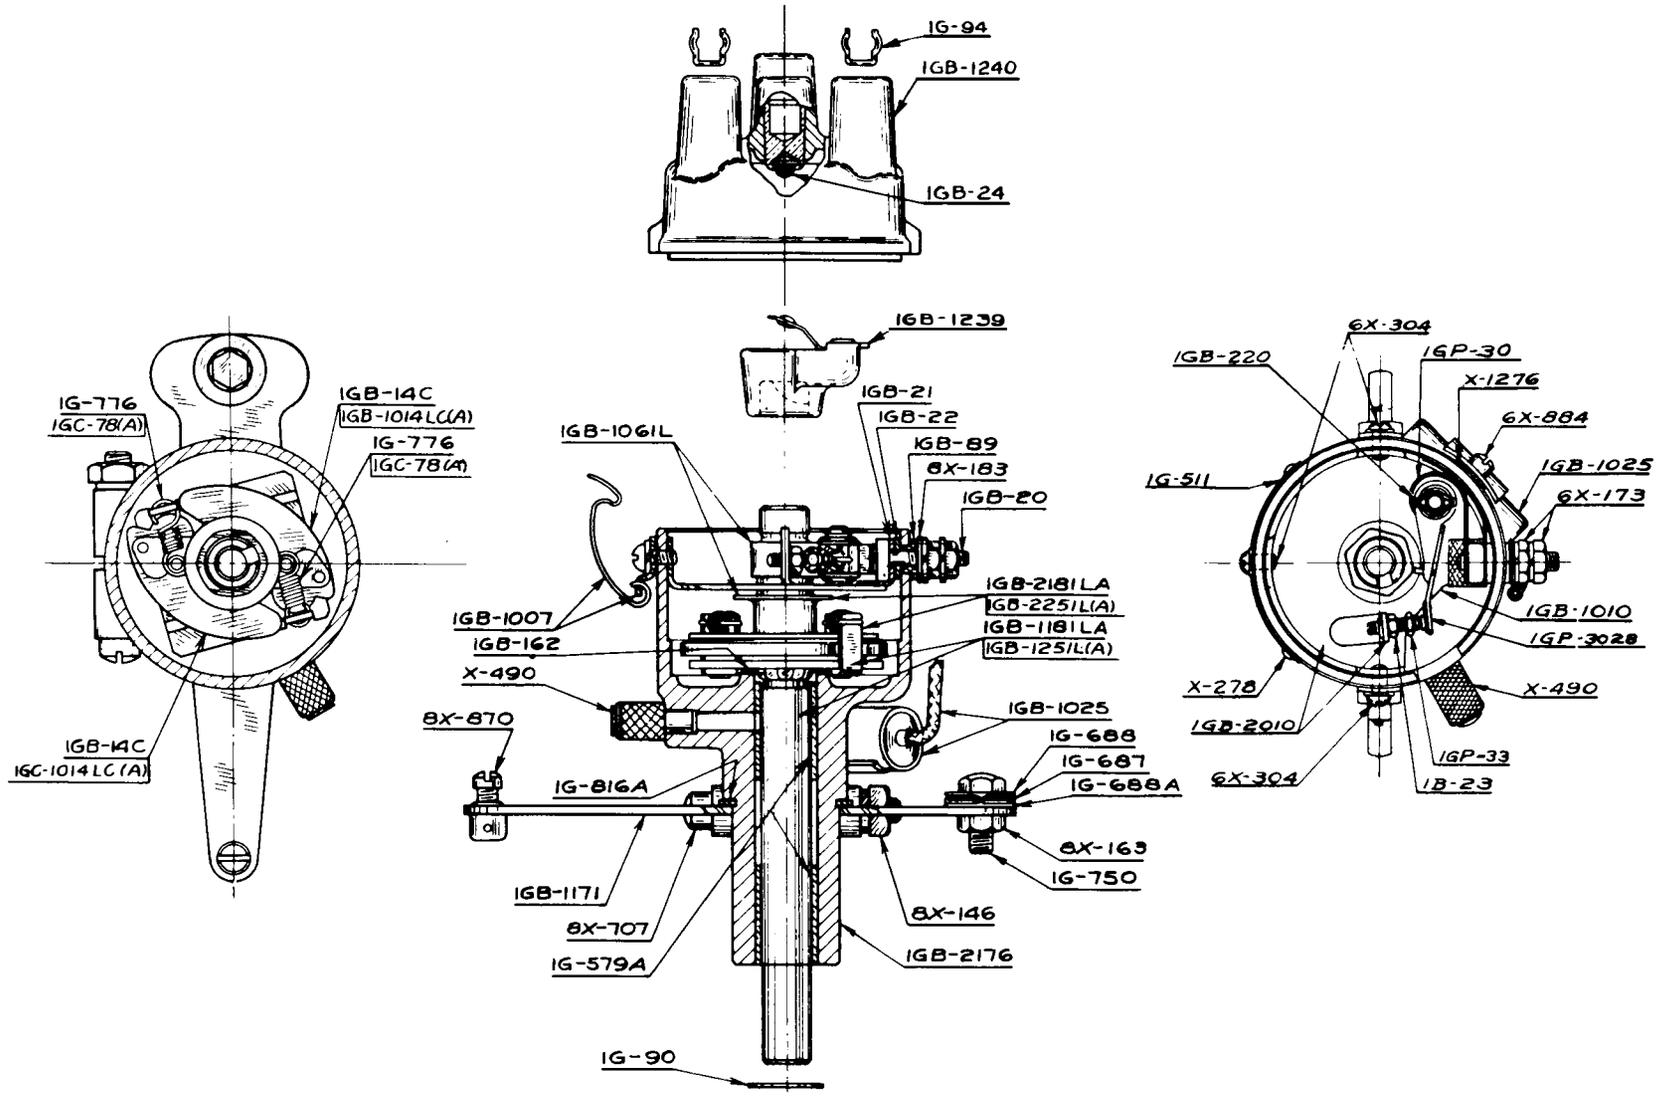

IGB-4322A DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4323 DISTRIBUTOR PARTS LIST

IGB-4323

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	2	Thrust Washer	IGB-2037	1	Dist. Base Part Assy.
IG-94	7	H. T. Wire Terminal	IG-511	1	Name Plate
IG-644	1	Dist. Drive Coupling	IGB-38	1	Breaker Arm Bracket
IG-816	1	Thrust Washer	X-278	2	3/32x3/16 Tubular Rivet
IG-2806J	1	Advance Control Arm Assy.	8X-302	2	#6-32x1/4 Rd. Hd. Sc.
IG-686	1	Advance Control Screw	X-490	1	Press in - Sleeve Oiler
IG-687	1	Spring Washer	X-1012	2	#6 Lock Washer
IG-688	2	Advance Control Washer	IGP-331	1	Breaker Screw Point
X-199	1	1/4 Lock Washer	IGP-3028†	1	Breaker Arm Assembly
8X-794	1	#10-32 Square Nut	IGP-30	1	Breaker Arm Spring
8X-871	1	#10-32x1 3/8 Fill.Hd.Sc.	8X-173	2	#10-32 Hex. Nut
8X-1063	1	1/4-28 Hex. Nut	8X-183	1	#10 Plain Washer
IGB-1125L	1	Breaker Cam & Shaft - 6 Cyl. L. H.	X-195	2	#8 Lock Washer
IGB-1239	1	ROTOR	X-196	2	#10 Lock Washer
IGB-1240	1	DISTRIBUTOR CAP ASSEMBLY	8X-722	3	#8-32x3/16 Bdg. Hd. Sc.
IGB-24	1	Contact Plunger	X-1270	1	#10 Skpf. Washer
IGB-3037	1	Distributor Base Assembly	X-1276	1	#8 Skpf. Washer
CB-140	1	Insulating Bushing	SW-213	1	Dist. Drive Rivet
IB-23	1	Breaker Point Lock Nut			1 2 3 4 5
IGB-20	1	Terminal Post			
IGB-21	1	Terminal Post Ins.			
IGB-22	2	Insulating Washer			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025B	1	CONDENSER ASSEMBLY			
		1 2 3 4 5			

† Service BREAKER POINT SET IGP-3028A.



UNIT	APPLICATION
IGB-4323	J. W. Lathrop

(Issued 12-7-39)

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

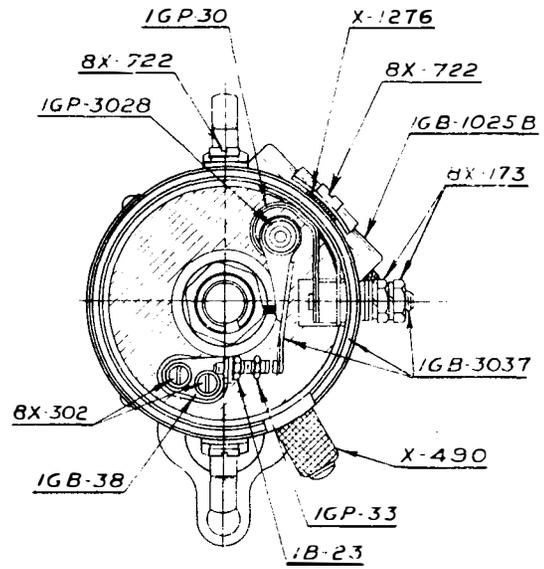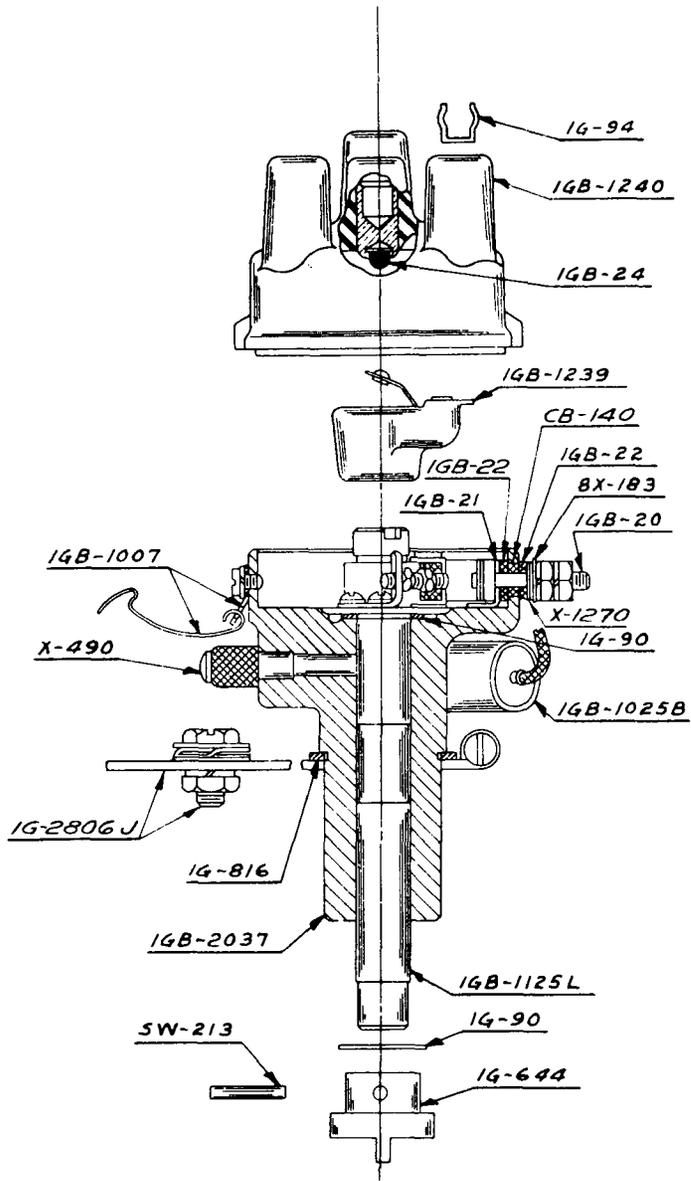

1GB-4323 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4325 DISTRIBUTOR PARTS LIST

IGB-4325

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1					Thrust Washer
IG-644	1					Dist. Drive Coupling
IG-816A	1					Thrust Washer
IGB-20	1					Terminal Post - #10-32
IGB-21	1					Terminal Post Insulation
IGB-22	1					Insulating Washer
IGB-89	1					Insulating Bushing
IGB-162	1					Thrust Washer
IGB-220	1					Lock Spring
IGB-247	1					Dist. Drive Rivet
IGB-1007	2					Dist. Cap Spring & Hinge Assembly
IGB-1025	1					Condenser Assembly
IGB-1239	1					Rotor
IGB-1240	1					Dist. Cap Assembly
IGB-24	1					Contact Plunger
IGB-2010	1					Breaker Plate Assy.
IB-23	1					Breaker Point Lock Nut
IGB-1010	1					Breaker Plate Part Assy.
IGP-33	1					Breaker Screw Point
IGB-2176	1					Dist. Base Assembly
IG-511	1					Name Plate
IG-579A	2					Absorbent Bronze Brg.
X-278	2					3/32x3/16 Tubular Rivet
X-490	1					Press in - Sleeve Oiler
IGB-2181RX	1					Drive Shaft & Gov. Assy.
IGB-14K	2					Weight
IGB-1032R	1					Cam & Stop Plate - 6 cyl. R.H.
IGB-1181R	1					Drive Shaft Assy.
IGC-78	2					Weight Spring
IGC-24N	1					Advance Control Arm
IGP-3028	1					Breaker Arm Assembly
IGP-30	1					Breaker Arm Spring
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-86	1					1/4-20x5/8 Hex. Hd. Screw
8X-146	1					1/4-20 Hex. Nut
8X-163	1					1/4-20 Hex. Nut
8X-173	2					#10-32 Hex. Nut
8X-183	1					#10 Brass Washer
X-195	3					#8 Lock Washer
X-196	2					#10 Lock Washer
X-199	2					1/4 Lock Washer
8X-304	3					#8-32x5/16 Rd. Hd. Screw
8X-707	1					1/4-20x1 7/8 Fill. Hd. Sc.
8X-884	1					#8-32x3/16 Fill. Hd. Screw
X-1276	1					#8 Skpf. Washer
		1	2	3	4	5

(Issued 9-30-36)


NOTE:- Use IGP-3028A breaker point set and IGC-78S weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4325 DISTRIBUTOR ILLUSTRATION

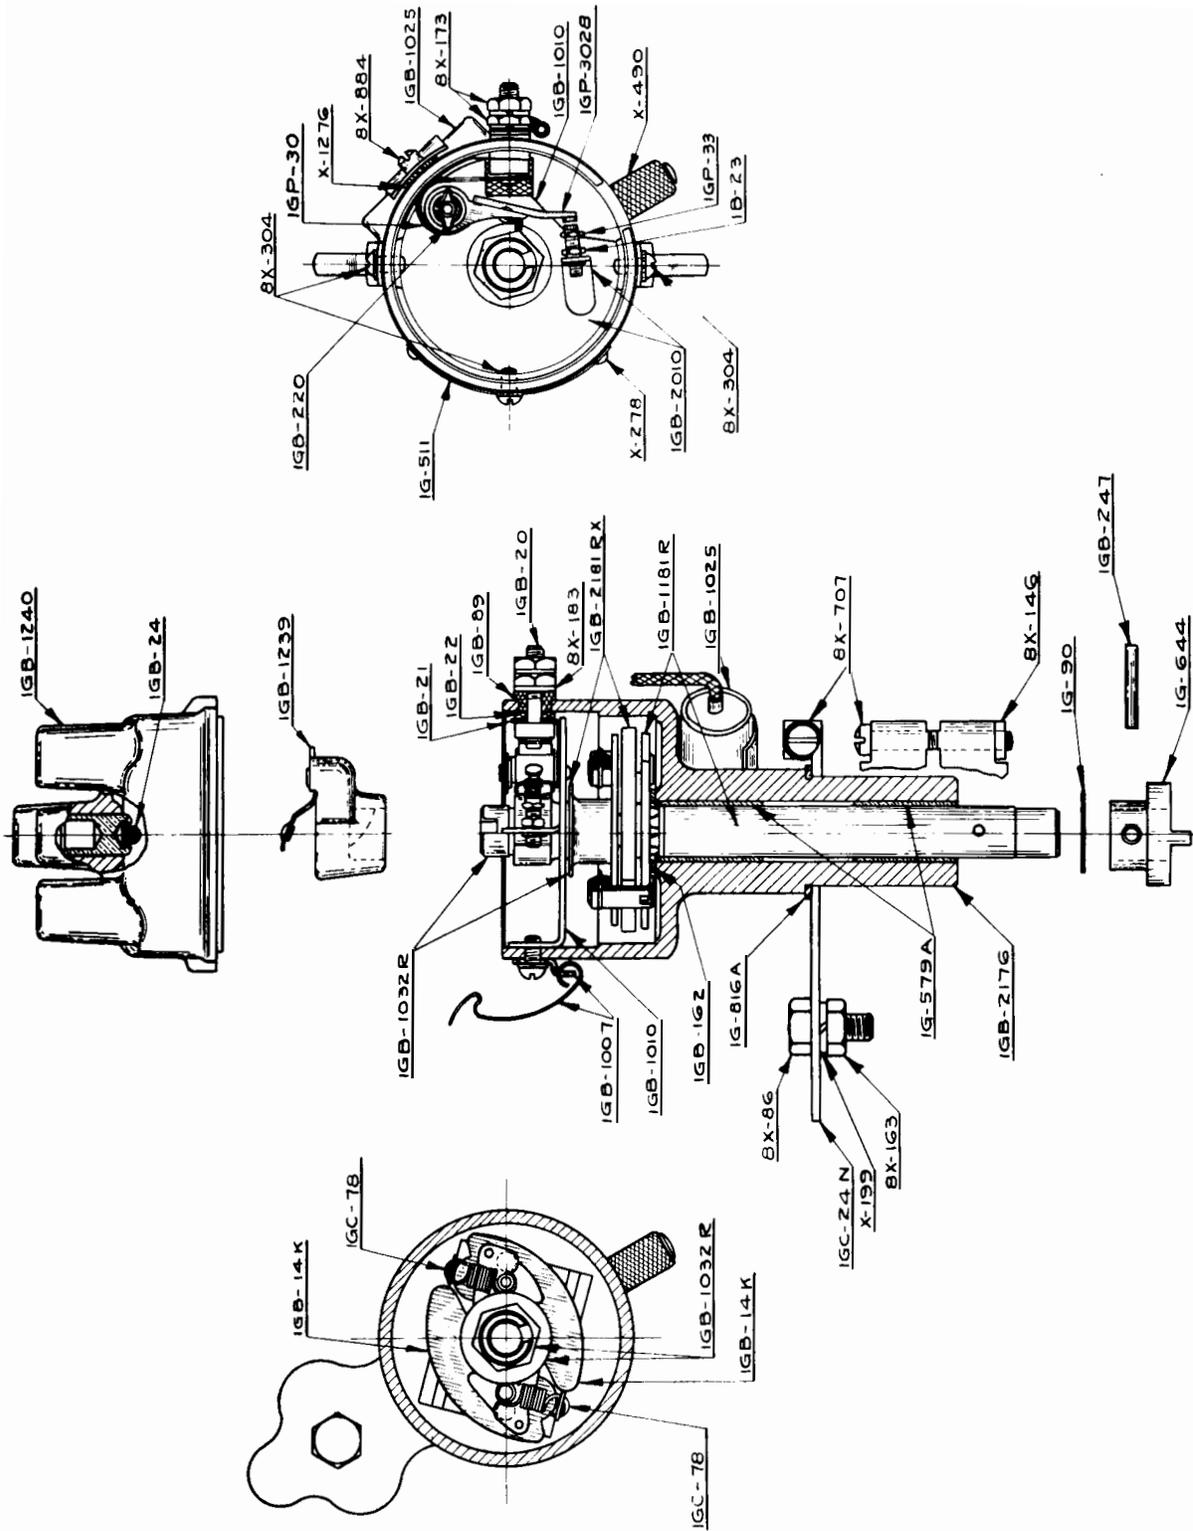

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4325 DISTRIBUTOR PARTS LIST

IGB-4325

Part No.	No. Used	Name of Part				
		1	2	3	4	5
IG-90	1	Thrust Washer				
IG-644	1	Dist. Drive Coupling				
IG-816A	1	Thrust Washer				
IGB-20	1	Terminal Post - #10-32				
IGB-21	1	Terminal Post Insulation				
IGB-22	1	Insulating Washer				
IGB-89	1	Insulating Bushing				
IGB-162	1	Thrust Washer				
IGB-220	1	Lock Spring				
IGB-247	1	Dist. Drive Rivet				
IGB-1007	2	Dist. Cap Spring & Hinge Assembly				
IGB-1025	1	Condenser Assembly				
IGB-1239	1	Rotor				
IGB-1240	1	Dist. Cap Assembly				
IGB-24	1	Contact Plunger				
IGB-2010	1	Breaker Plate Assy.				
IB-23	1	Breaker Point Lock Nut				
IGB-1010	1	Breaker Plate Part Assy.				
IGP-33	1	Breaker Screw Point				
IGB-2176	1	Dist. Base Assembly				
IG-511	1	Name Plate				
IG-579A	2	Absorbent Bronze Brg.				
X-278	2	3/32x3/16 Tubular Rivet				
X-490	1	Press in - Sleeve Oiler				
IGB-2181RX	1	Drive Shaft & Gov. Assy.				
IGB-14K	2	Weight				
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.				
IGB-1181R	1	Drive Shaft Assy.				
IGC-78	2	Weight Spring				
IGC-24N	1	Advance Control Arm				
IGP-3028	1	Breaker Arm Assembly				
IGP-30	1	Breaker Arm Spring				
		1	2	3	4	5

Part No.	No. Used	Name of Part				
		1	2	3	4	5
8X-86	1	1/4-20x5/8 Hex. Hd. Screw				
8X-146	1	1/4-20 Hex. Nut				
8X-163	1	1/4-20 Hex. Nut				
8X-173	2	#10-32 Hex. Nut				
8X-183	1	#10 Brass Washer				
X-195	3	#8 Lock Washer				
X-196	2	#10 Lock Washer				
X-199	2	1/4 Lock Washer				
8X-304	3	#8-32x5/16 Rd. Hd. Screw				
8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.				
8X-884	1	#8-32x3/16 Fill. Hd. Screw				
X-1276	1	#8 Skpf. Washer				
		1	2	3	4	5

(Issued 9-30-36)


NOTE:- Use IGP-3028A breaker point set and IGC-78S weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4325 DISTRIBUTOR ILLUSTRATION

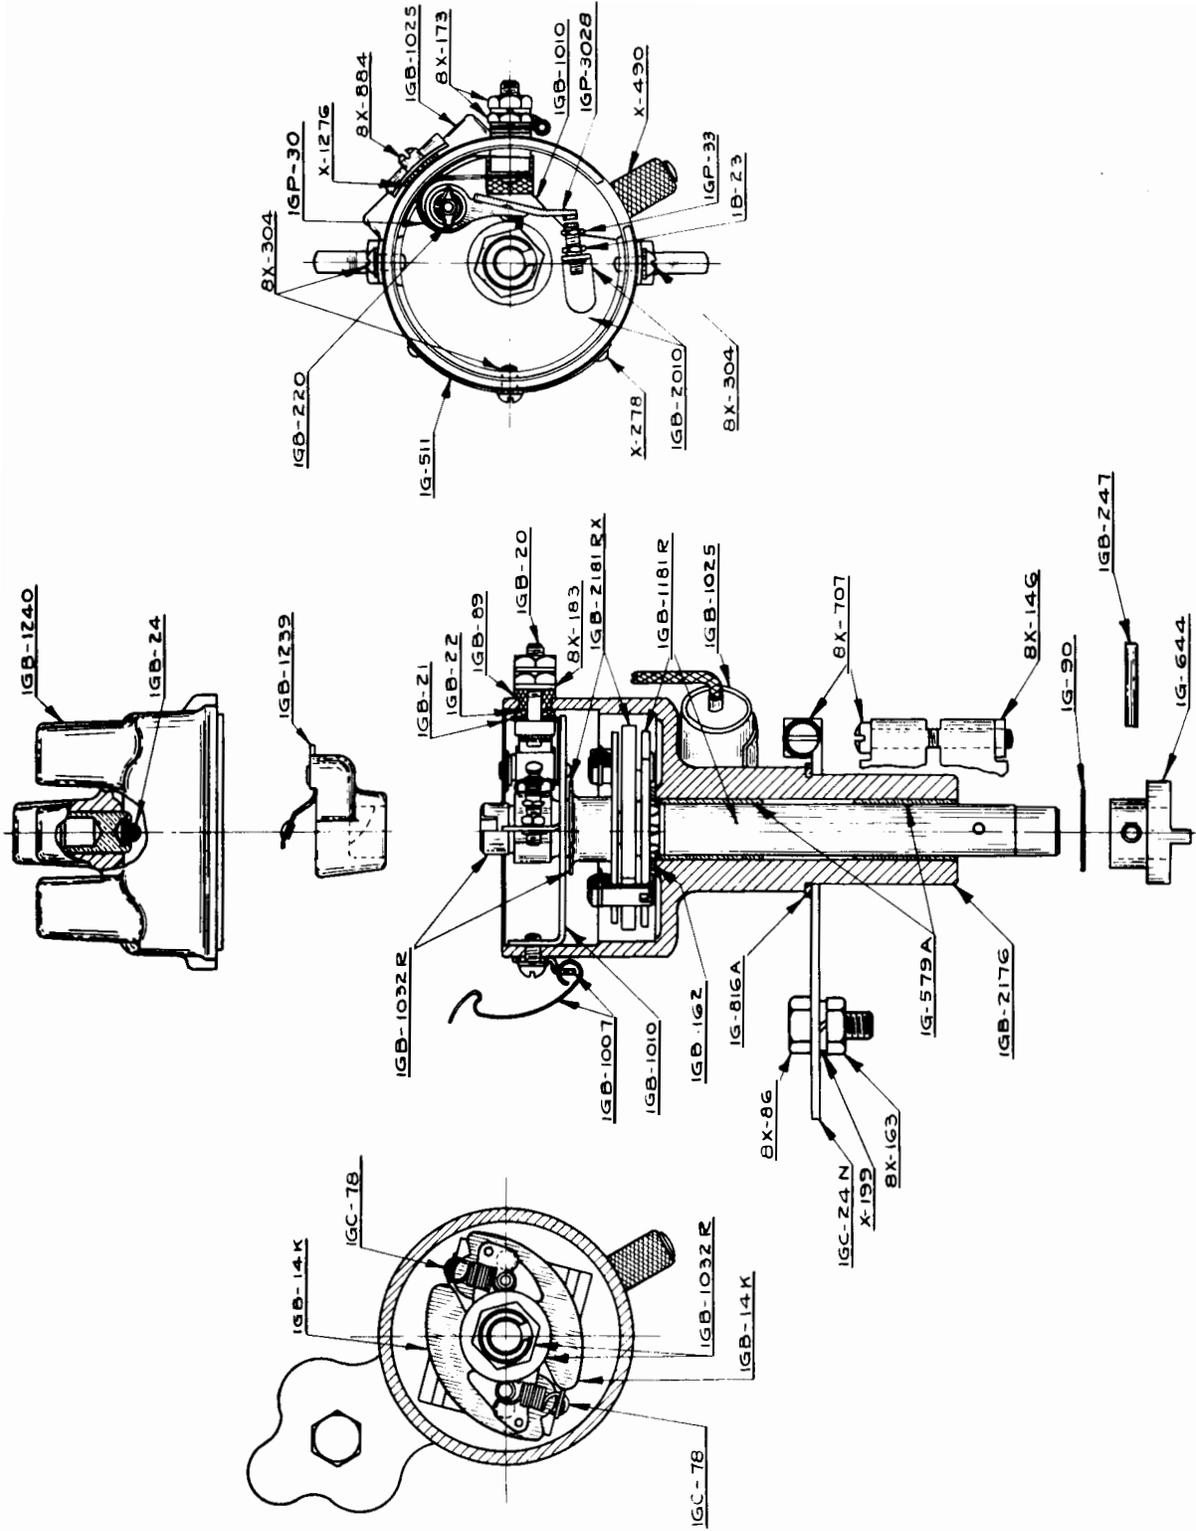

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS


IGB-4326, -1 DISTRIBUTOR PARTS LIST

IGB-4326, -1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
GG-133	1	Dist. Drive Rivet	8X-173	1	#10-32 Hex. Nut
IG-90	1	Thrust Washer	8X-183	1	#10 Brass Washer
IG-3927B	1	Condenser Assembly	12X-195	3	#8 Lock Washer
IGB-20	1	Terminal Post - #10-32	12X-196	1	#10 Lock Washer
IGB-21	1	Terminal Post Insulation	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-99	1	Insulating Bushing	X-1276	1	#8 Skpf. Washer
IGB-152	1	Thrust Washer			1 2 3 4 5
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 12-23-36)
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
IGB-2258	1	Dist. Base Assy.			
IG-579A	2	Absorbent Bronze Brg.			
IGS-15	1	Name Plate			
X-278	2	3/32x3/16 Tubular Rivet			
X-382	1	1/8 Grease Cup			
IGB-2269R	1	Drive Shaft & Gov. Assy.			
IG-775‡	2	Weight Spring			
IGP-14K	2	Weight Assembly			
IGB-1239R	1	Drive Shaft Assy.			
IGB-2267R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGP-3028†	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
IGS-19	1	Drive Shaft Collar			
IGS-1027S†	1	Advance Control Arm Assy.			
IG-816C†	1	Thrust Washer			
8X-135†	1	1/4-20x2 Fill. Hd. Screw			
8X-146†	1	1/4-20 Hex. Nut			
12X-199†	1	1/4 Lock Washer			
		1 2 3 4 5			

† Used with assemblies having a suffix "-1".

‡ Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-775S.

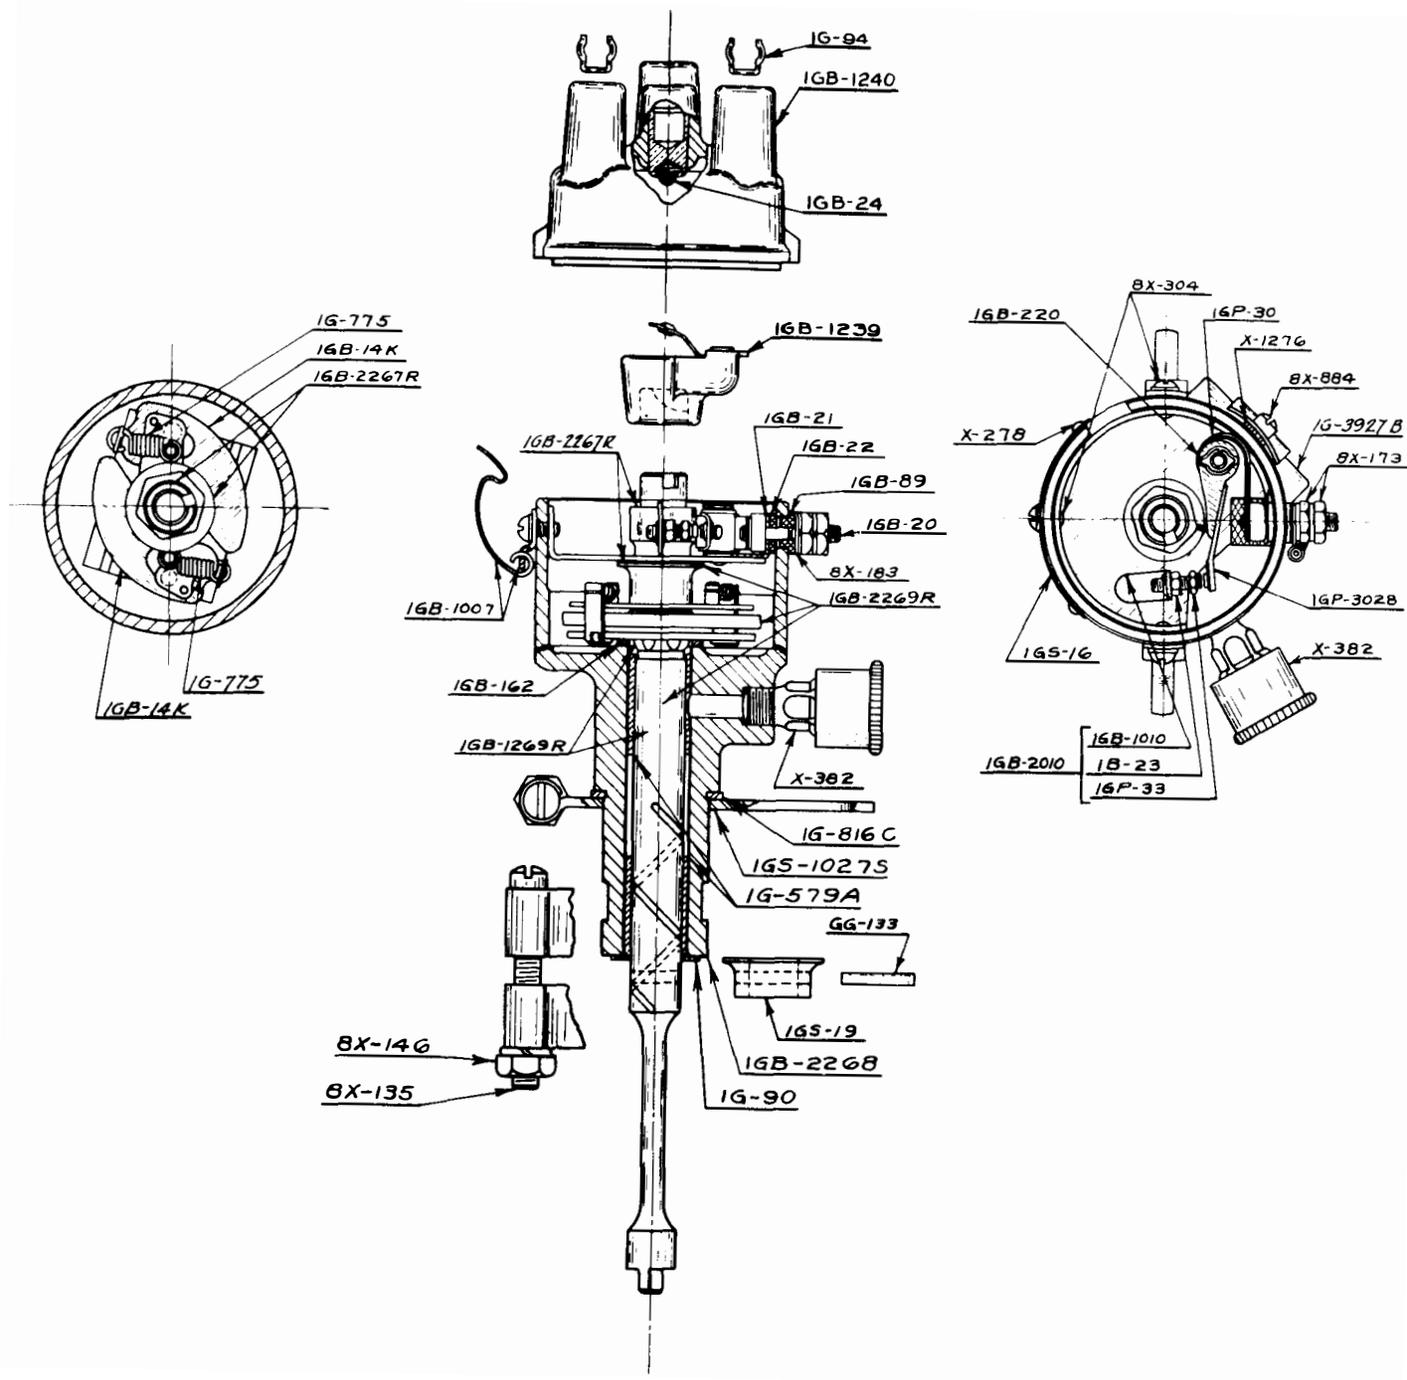

IGB-4326 & -1 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS


IGB-4327A DISTRIBUTOR PARTS LIST

IGB-4327A

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
IG-90	1	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IG-94	7	H.T. Wire Terminal	8X-183	1	#10 Brass Washer
IG-517	1	Dist. Gear - Follower	X-195	3	#8 Lock Washer
IG-686	1	Advance Control Screw - 1/4-28	X-196	2	#10 Lock Washer
IG-687	1	Spring Washer	8X-304	3	#8-32x5/16 Rd. Hd. Sc.
IG-688	2	Advance Control Washer	8X-794	1	#10-32 Square Nut
IG-816	1	Thrust Washer	8X-870	1	#10-32x5/16 Fill. Hd. Sc.
IGB-20	1	Terminal Post - #10-32	8X-871	1	#10-32x1 3/8 Fill. Hd. Sc.
IGB-21	1	Terminal Post Insulation	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-22	1	Insulating Washer	8X-1063	1	1/4-28 Hex. Nut
IGB-89	1	Insulating Bushing	X-1276	1	#8 Skpf. Washer
IGB-162	1	Thrust Washer			1 2 3 4 5
IGB-220	1	Lock Spring			(Issued 8-5-35)
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(R-3-24-37)
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assembly			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33†	1	Breaker Screw Point			
IGB-2175RD	1	Drive Shaft & Gov. Assy.			
IG-775†	2	Weight Spring			
IGB-14J	2	Weight			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1175R	1	Drive Shaft Assembly			
IGB-2176	1	Dist. Base Assembly			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGC-1053A	1	Advance Control Arm			
IGP-3028†	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
SW-213	1	Dist. Drive Rivet			
		1 2 3 4 5			

† Service Breaker Point Set IGP-3028A & Service Weight Spring Set IG-775S.

“NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed.”

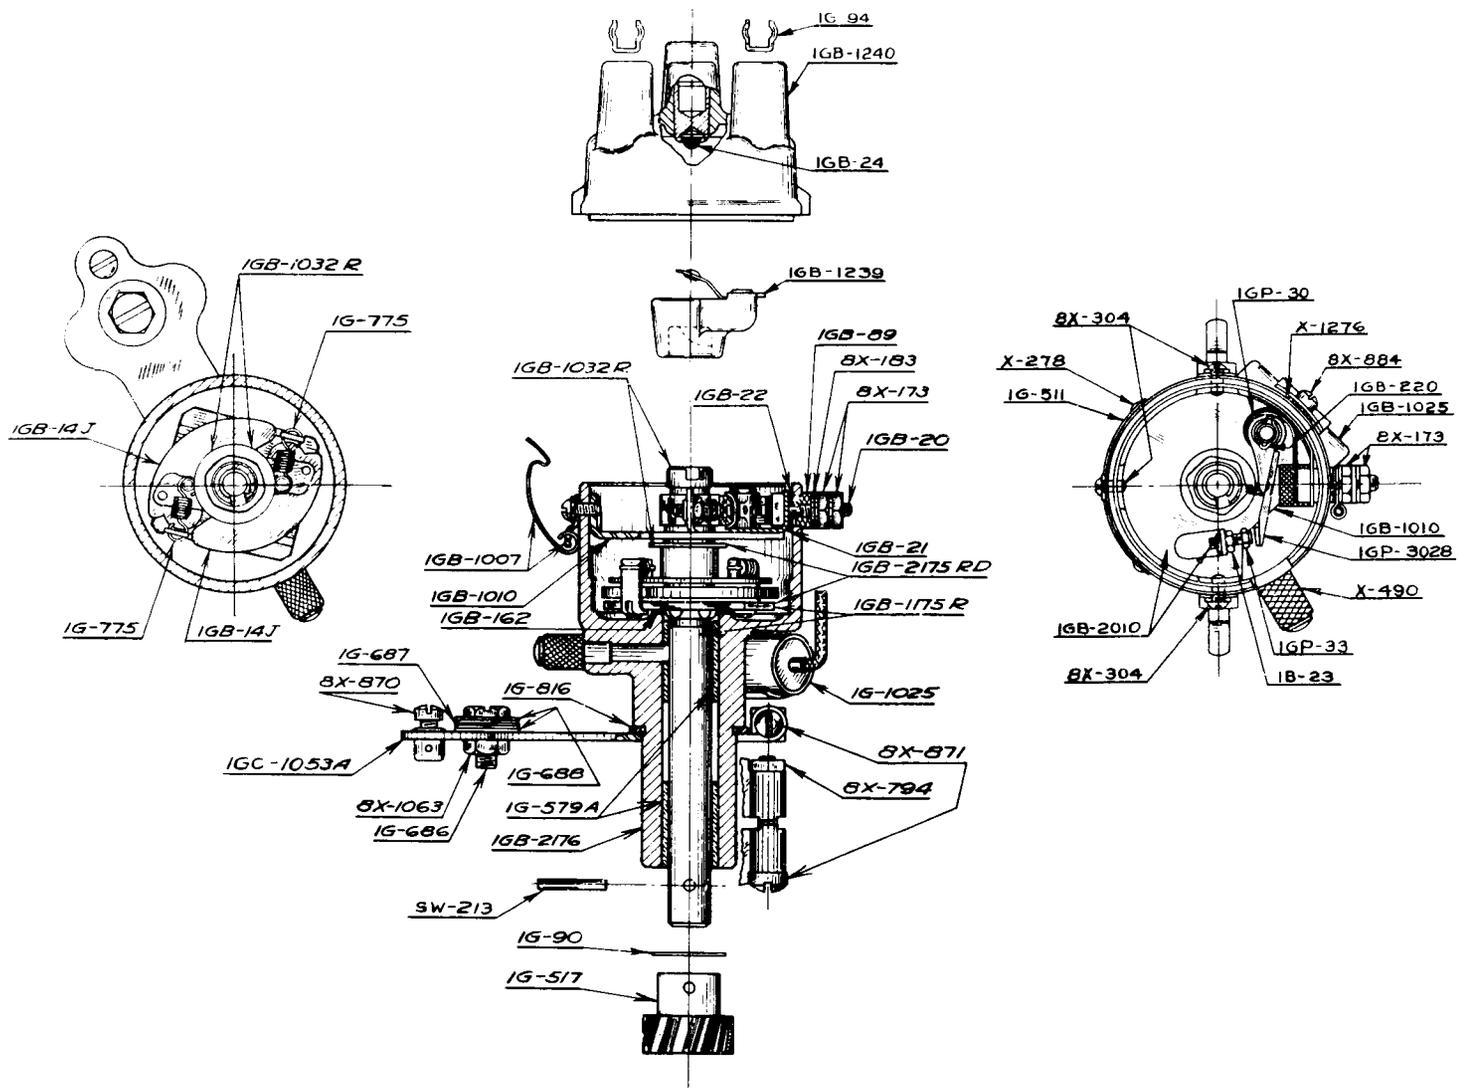

IGB-4327A DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4328, DISTRIBUTOR PARTS LIST
A,B

IGB-4328,
A,B

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	1 2 3 4 5 Thrust Washer	8X-146	1	1/4-20 Hex. Nut
IG-94	7	H.T. Wire Terminal	8X-173	2	#10-32 Hex. Nut
IG-447	1	Dist. Drive Sleeve	8X-183	1	#10 Brass Washer
IGB-20	1	Terminal Post - #10-32	X-195	3	#8 Lock Washer
IGB-21	1	Terminal Post Insulation	X-196	2	#10 Lock Washer
IGB-22	1	Insulating Washer	8X-199	1	1/4 Lock Washer
IGB-89	1	Insulating Bushing	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-162	1	Thrust Washer	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-220	1	Lock Spring	8X-884	1	#8-32x3/16 Fill. Hd. Sc.
IGB-271	1	Advance Control Arm	X-1276	1	#8 Skpf. Washer
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			1 2 3 4 5
IGB-1025	1	Condenser Assembly			(Issued 5-8-36)
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
*	1	Drive Shaft Assy.			
*	2	Weight Spring			
*	1	Dist. Base Assembly			
*	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGP-3028	1	Breaker Arm Assembly			
IGP-30	1	Breaker Arm Spring			
SN-213	1	Dist. Drive Rivet			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Dr. Shaft Assy.	Weight	Weight Spring	Dist. Base Assy.	Name Plate	Weight Sp. Set
IGB-4328	IGB-2205RE	IGB-1205R	IGB-14F	IGE-29 (2)	IGB-2270	IG-511	IGE-29S
IGB-4328A	IGB-2205RF	IGB-1205RA	IGB-14D	IGE-30 IGB-281 1 ea.	IGB-2270A	IG-511B	IGB-281SS
IGB-4328B	IGB-2205RF	IGB-1205RA	IGB-14D	IGE-30 IGB-281 1 ea.	IGB-2270A	IG-511B	IGB-281SS


* See table following parts list for part number applying to assembly wanted. NOTE:- Use IGP-3028A breaker point set and * weight spring set in servicing this unit.

Print in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4328,A,B DISTRIBUTOR ILLUSTRATION

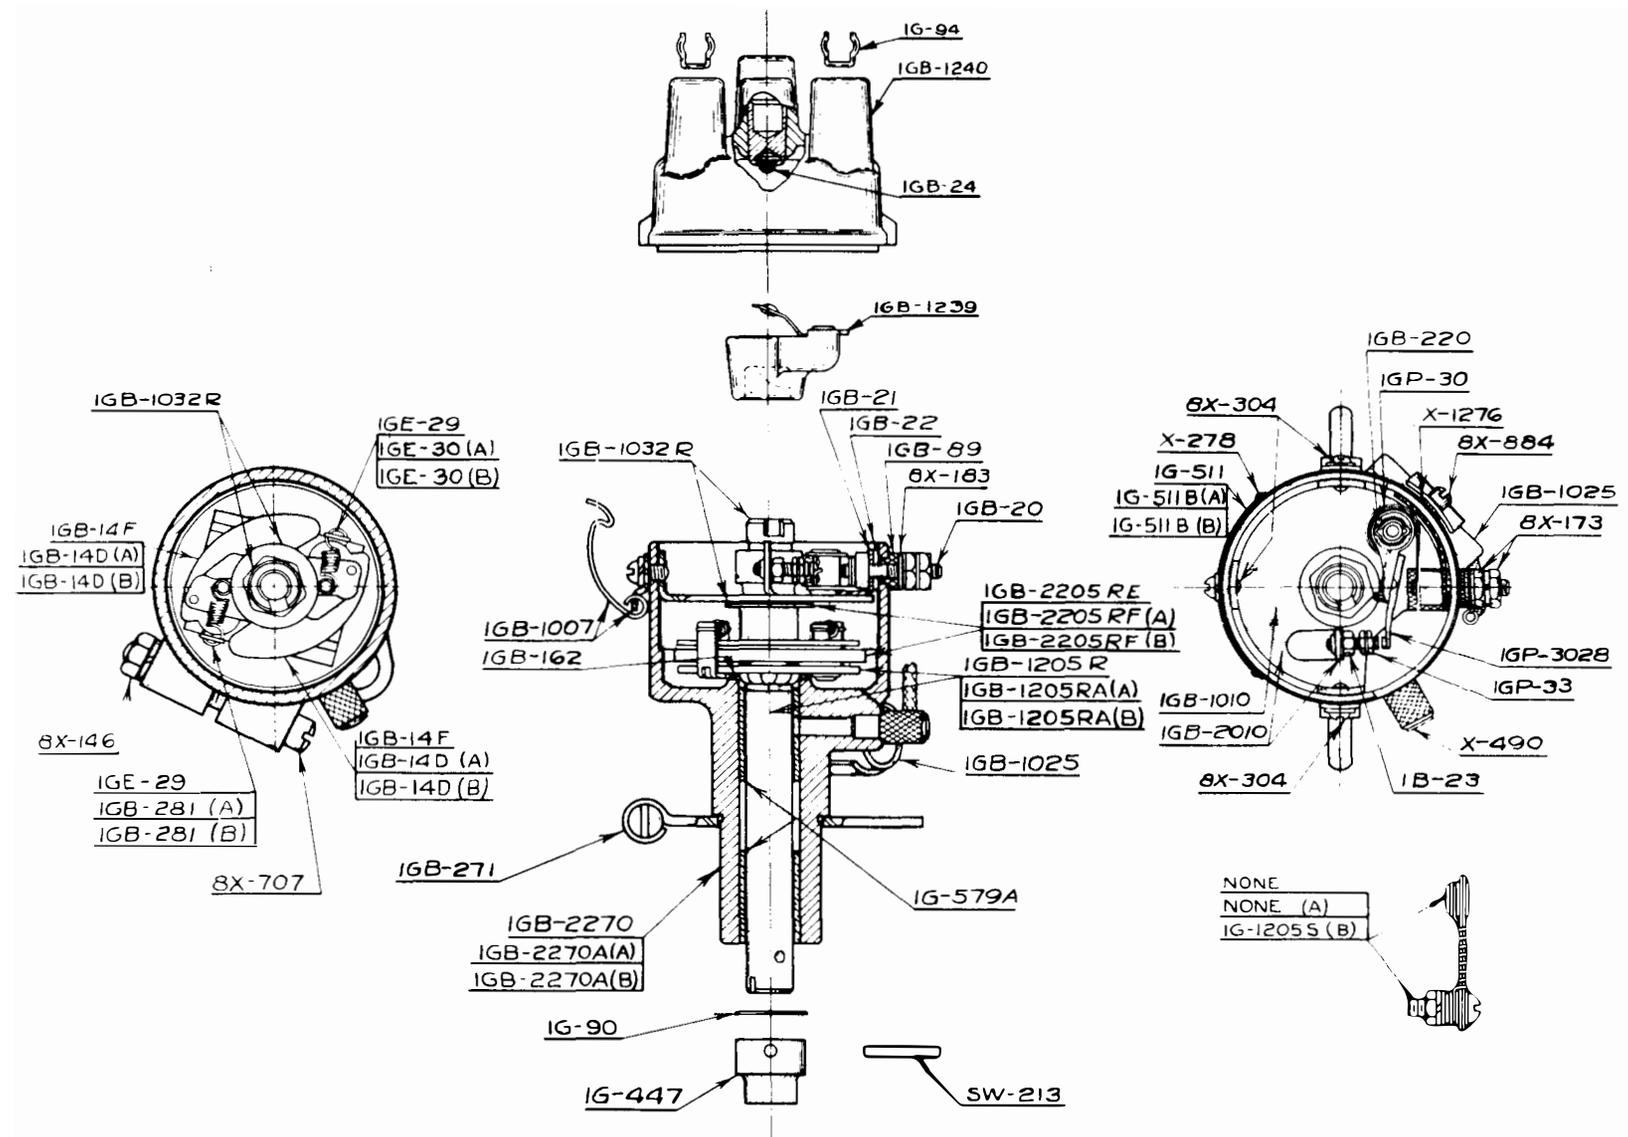

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4330 DISTRIBUTOR PARTS LIST
IGB-4330-1

IGB-4330
IGB-4330-1

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
		1 2 3 4 5			1 2 3 4 5
GG-133	1	Dist. Drive Rivet	8X-173	1	#10-32 Hex. Nut
IG-90	1	Thrust Washer	8X-183	1	#10 Brass Washer
IG-3927B	1	Condenser Assembly	12X-195	3	#8 Lock Washer
IGB-20	1	Terminal Post - #10-32	12X-196	1	#10 Lock Washer
IGB-21	1	Terminal Post Insulation	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-22	1	Insulating Washer	8X-884	1	#8-32x3/16 Fill. Hd. Screw
IGB-89	1	Insulating Bushing	X-1276	1	#8 Skpf. Washer
IGB-162	1	Thrust Washer			1 2 3 4 5
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			(Issued 9-1-37)
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assy.			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2268	1	Dist. Base Assy.			
IG-579A	2	Absorbent Bronze Brg.			
IGS-16	1	Name Plate			
X-278	2	3/32x3/16 Tubular Rivet			
X-382	1	1/8 Grease Cup			
IGB-2272R	1	Drive Shaft & Gov. Assy.			
IG-775	2	Weight Spring			
IGB-14K	2	Weight			
IGB-1272R	1	Drive Shaft Assy.			
IGB-2267R	1	Cam & Stop Plate - 6 Cyl. R.H.			
IGP-3028	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
IGS-19	1	Drive Shaft Collar			
IGS-1027S†	1	Advance Control Arm Assy.			
IG-816C†	1	Thrust Washer			
8X-135†	1	1/4-20x2 Fill. Hd. Sc.			
8X-146†	1	1/4-20 Hex. Nut			
12X-199†	1	1/4 Lock Washer			
		1 2 3 4 5			

† Assemblies having a "-1" suffix are the same as an assembly having an identical assembly number with the "-1" omitted except that the "-1" assembly includes the parts indicated with a "†".

NOTE:- Use IGP-3028A breaker point set and IG-775S weight spring set in servicing this unit.

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4332 DISTRIBUTOR PARTS LIST

IGB-4332


Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
IG-90	1	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IG-94	7	H.T. Wire Terminal	8X-183	1	#10 Brass Washer
IGB-20	1	Terminal Post - #10-32	X-195	3	#8 Lock Washer
IGB-21	1	Terminal Post Insulation	X-196	2	#10 Lock Washer
IGB-22	1	Insulating Washer	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IGB-39	1	Insulating Bushing	8X-884	1	#8-32x3/16 Fill. Hd. Screw
IGE-162	1	Thrust Washer	X-1276	1	#8 Skpf. Washer
IGB-220	1	Lock Spring		1 2 3 4 5	
IGB-247	1	Dist. Drive Rivet			(Issued 5-8-36)
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33	1	Breaker Screw Point			
IGB-2249RC	1	Drive Shaft & Gov. Assy.			
IG-775	1	Weight Spring			
IG-784	1	Weight Spring			
IGB-14	2	Weight			
IGB-1032R	1	Cam & Stop Plate - 6 cyl. R.H.			
IGB-1249R	1	Drive Shaft Assy.			
IGB-2254	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
IGP-3028	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
	1	2 3 4 5			

NOTE:- Use IGP-3028A breaker point set and IG-775SS weight spring set in servicing this unit.

Printed in U. S. A.

File in
Equipment & Parts Lists Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

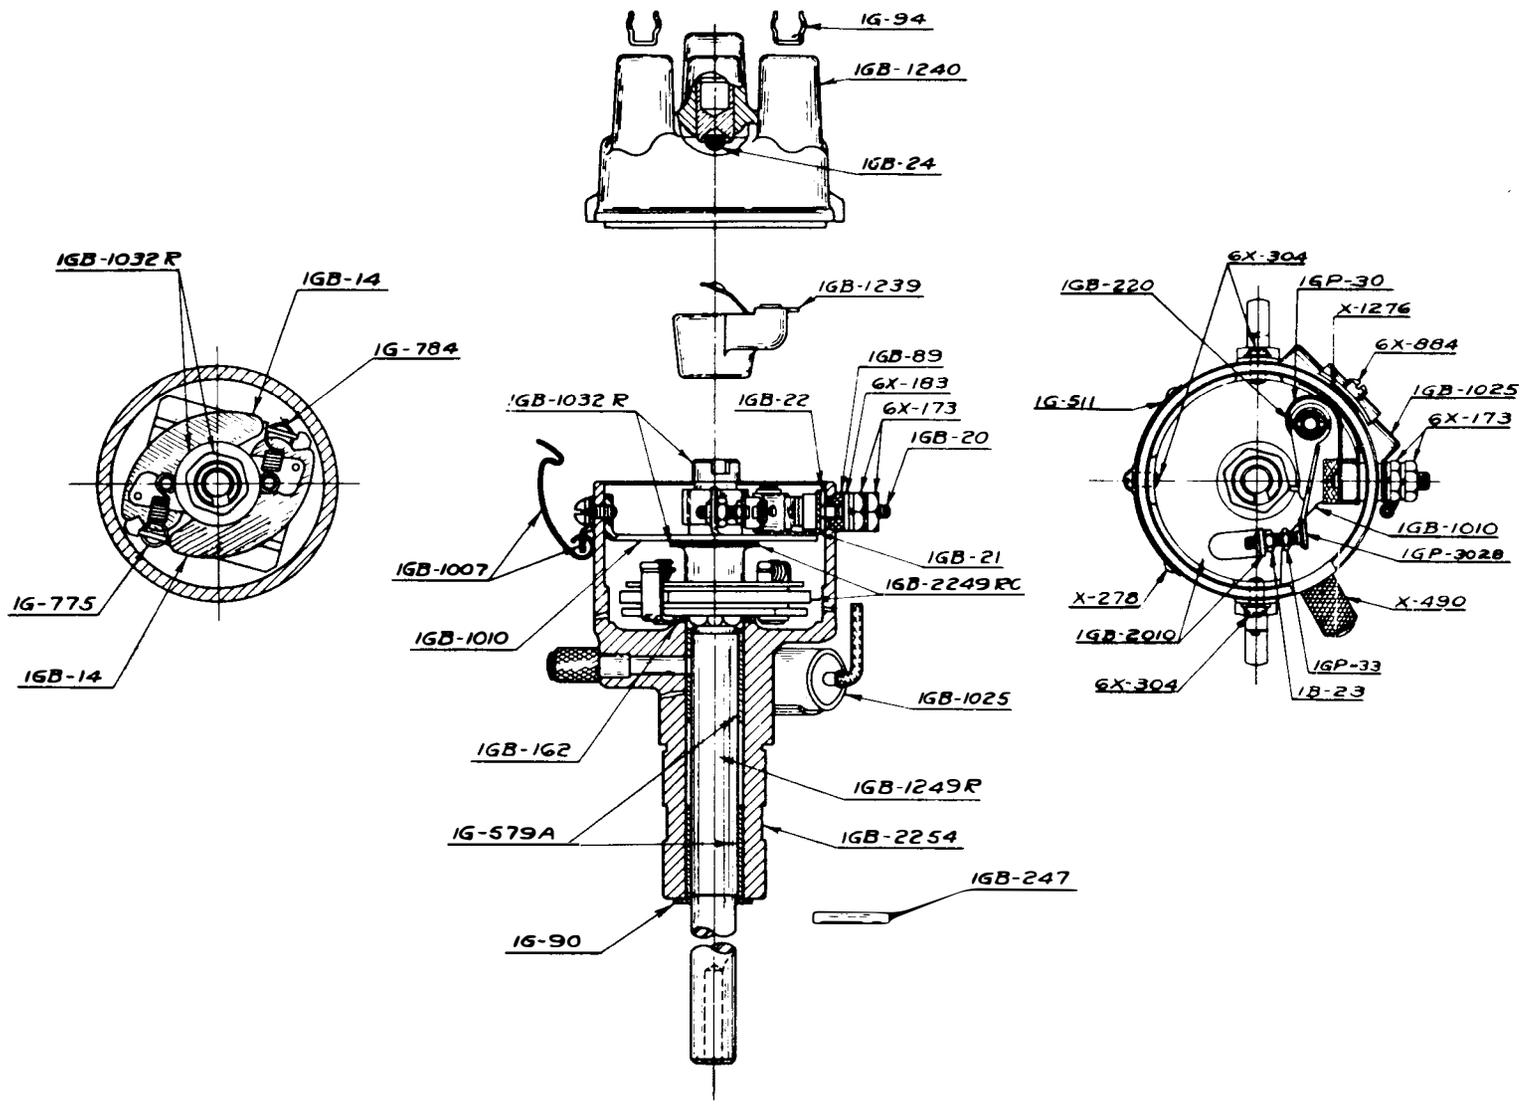

IGB-4332 DISTRIBUTOR ILLUSTRATION

ELECTRIC AUTO-LITE EQUIPMENT & PARTS LISTS

IGB-4337A,B,
C DISTRIBUTOR PARTS LIST

IGB-4337A,B,
C

Part No.	No. Used	Name of Part	Part No.	No. Used	Name of Part
*	1	Dist. Gear - Follower	8X-146	1	1/4-20 Hex. Nut
*	1	Dist. Drive Rivet	8X-163	1	1/4-20 Hex. Nut
IG-90	1	Thrust Washer	8X-173	2	#10-32 Hex. Nut
IG-94	7	H.T. Wire Terminal	8X-183	1	#10 Brass Washer
IG-687	1	Spring Washer	X-195	3	#8 Lock Washer
IG-688	1	Advance Control Washer	X-196	2	#10 Lock Washer
IG-688A	1	Advance Control Washer	X-199	1	1/4 Lock Washer
IG-750	1	Advance Control Screw - 1/4-20	8X-304	3	#8-32x5/16 Rd. Hd. Screw
IG-816A	1	Thrust Washer	8X-707	1	1/4-20x1 7/8 Fill. Hd. Sc.
IGB-20	1	Terminal Post - #10-32	8X-870	1	#10-32x5/16 Fill. Hd. Sc.
IGB-21	1	Terminal Post Insulation	8X-984	1	#8-32x3/16 Fill. Hd. Sc.
IGB-22	1	Insulating Washer	X-1276	1	#8 Skpf. Washer
IGB-89	1	Insulating Bushing			1 2 3 4 5
IGB-162	1	Thrust Washer			(Issued 11-1-37)
IGB-220	1	Lock Spring			
IGB-1007	2	Dist. Cap Spring & Hinge Assembly			
IGB-1025	1	Condenser Assembly			
IGB-1239	1	Rotor			
IGB-1240	1	Dist. Cap Assembly			
IGB-24	1	Contact Plunger			
IGB-2010	1	Breaker Plate Assy.			
IB-23	1	Breaker Point Lock Nut			
IGB-1010	1	Breaker Plate Part Assy.			
IGP-33‡	1	Breaker Screw Point			
IGB-2176	1	Dist. Base Assy.			
IG-511	1	Name Plate			
IG-579A	2	Absorbent Bronze Brg.			
X-278	2	3/32x3/16 Tubular Rivet			
X-490	1	Press in - Sleeve Oiler			
*	1	Drive Shaft & Gov. Assy.			
*	2	Weight Spring			
*	2	Weight Assy.			
IGB-1032R	1	Cam & Stop Plate - 6 Cyl. R.H.			
IGB-1251R	1	Drive Shaft Assy.			
*	1	Advance Control Arm			
IGP-3028‡	1	Breaker Arm Assy.			
IGP-30	1	Breaker Arm Spring			
		1 2 3 4 5			

Assembly No.	Dr. Shaft & Gov.	Weight	Weight Spring	Advance Arm Assy.	Weight Sp. Set	Gear	Gear Rivet
IGB-4337A	IGB-2251RD	IGB-14A	IG-727	IGC-1024AC	IG-727S	GE-56	GJ-236
IGB-4337B	IGB-2251RE	IGB-14J	IGE-29	IGC-1024AE	IGE-29S	None	None
IGB-4337C	IGB-2251RE	IGB-14J	IGE-29	IGC-1024AC	IGE-29S	GE-56	GJ-236

* See table following parts list for part number applying to assembly wanted.

‡ Service Breaker Point Set IGP-3028A.

Printed in U. S. A.

File in
Equipment & Parts List Binder

"NOTE: Where part numbers are shown in parenthesis they are for reference only. By stocking sub-parts the complete part can be assembled as needed."

IGB-4337A,B,C DISTRIBUTOR ILLUSTRATION

